Osborne 1 Technical Manual

By Thom Hogan and Mike Iannamico

Part No. 2F00153-01

This manual describes the Osborne 1 computer, its software, and its specifications. The material presented is the proprietary information of Osborne Computer Corporation, and is intended for the personal use of the purchaser. Incorporation of the material described herein in any product or use in any commercial endeavor is strictly prohibited.

copyright $^{\circ}$ 1982 by Osborne Computer Corporation all rights reserved

This document may not be copied by any means or using any medium without the express written permission of Osborne Computer Corporation. Violators will be prosecuted to the full extent of the law.

Osborne Computer Corporation 26538 Danti Court Hayward, CA 94545 415-887-8080

Contents

1.0	Perspective 1
	1.1 INTRODUCTION 1
	1.2 POWER ON 2
	1.3 VARIATIONS IN DESIGN 2
2.0	Logic Board And CPU 3
	2.1 OSBORNE 1 MAIN LOGIC BOARD 3
	2.2 BOARD REVISIONS 3
	2.3 MAIN BOARD LAYOUT 4
	2.4 CENTRAL PROCESSOR 4
3.0	Osborne 1 Memory Scheme 7
	3.1 MEMORY BANKS 7
	3.2 CP/M MEMORY ALLOCATION 7
	3.3 MAIN MEMORY 9
	3.4 MEMORY-MAPPED I/O 9
	3.5 MEMORY ACCESS TIME 9
4.0	Osborne 1 Interface Design 13
	4.1 IEEE-488 INTERFACE 13 4.1.1 IEEE-488 Signal Direction 13 4.1.2 IEEE-488 Pinouts 14 4.1.3 IEEE-488 Jump Vectors 15 4.1.4 IEEE-488 Communication Protocol 15
	4.1.5 IEEE-488 As A Parallel Port 16
	4.2 SERIAL RS232 INTERFACE 17 4.2.1 RS232 Signal Direction 18 4.2.2 RS232 Pinouts 18
	 4.3 MODEM 19 4.3.1 Modem Signal Direction 19 4.3.2 Modem Pin Connections 19 4.3.3 Modem Status 20
	A A DATIO DATE OF

5.0	Video Attributes 23
	5.1 VIDEO DISPLAY 23
	5.2 VIDEO MEMORY 23
	5.3 CHARACTER GENERATION 24
	5.4 DISPLAY LOGIC 25
	5.5 BLOCK GRAPHICS 25
	5.6 VIDEO SIGNALS AND PINOUTS 27 5.6.1 Video In-Line Connector 27
	5.7 VIDEO CONNECTIONS AND CIRCUITRY 28
	5.8 VIDEO TIMING 30
6.0	Power Specifications 31
	6.1 POWER SUPPLY 31
	6.2 SWITCHING VOLTAGE 31
	6.3 POWER BOARD LAYOUT 32
7.0	Disk Drives 33
	7.1 DRIVES USED 33
	7.2 DISK DRIVE INTERFACE BOARD 33
	7.3 DISK CONTROLLER AND PINOUTS 37
	7.4 CP/M BIOS DISK ADDRESSING 38
	7.5 DISK INTERFACE 38
	7.6 DISK DRIVE SPECIFICATIONS 38
	7.7 DISK FORMAT 39
	7.7.1 CP/M File Control Block 39
8.0	Keyboard 41
	8.1 THE KEYBOARD 41
	8.2 KEYBOARD PINOUTS 41
	8.3 KEYBOARD LAYOUT 42
	0.5 REIDOMAD EATOUT 42
	8.4 KEYSWITCH MATRIX 42

9.0	Assembly And Disassembly 45
	9.1 VARIATIONS IN DESIGN 45
	9.2 KEYBOARD 45 9.2.1 Keyboard Disassembly 45 9.2.2 Keyboard Assembly 46
	9.3 ORIGINAL AND NEW BEZEL/CHASSIS 47 9.3.1 Original Bezel And Chassis Disassembly 9.3.2 Original Case Assembly 48 9.3.3 New Case Disassembly 49 9.3.4 New Case Assembly 50
	9.4 LOGIC BOARD 52 9.4.1 Logic Board Disassembly 52 9.4.2 Logic Board Assembly 53
	 9.5 ORIGINAL AND NEW VIDEO MONITOR 9.5.1 Original Monitor Disassembly 9.5.2 Original Monitor Assembly 9.5.3 Blue Case Monitor Disassembly 9.5.4 Blue Case Monitor Assembly 55
•	9.6 POWER SUPPLY 559.6.1 Power Supply Disassembly 559.6.2 Power Supply Assembly 56
	9.7 DISK DRIVE 57 9.7.1 Disk Drive Disassembly 57 9.7.2 Disk Drive Assembly 58
	9.8 POWER PANEL 59 9.8.1 Power Panel Disassembly 59 9.8.2 Power Panel Assembly 61
10.0	Osborne 1 Software 63
	10.1 SOFTWARE REVISIONS 63
	10.2 THE MONITOR ROM 64 10.2.1 Console Routines 65 10.2.2 Other Interface Routines 66 10.2.3 ROM Listings 66
	10.3 BDOS CALLS 66
	10.4 OSBORNE 1 BIOS ROUTINES 68 10.4.1 The IOBYTE 68 10.4.2 BIOS Listings 69

11.0 Theory of Operations 71
11.1 INTRODUCTION 71
11.2 FUNCTIONAL OPERATION 71
11.3 MNEMONIC CODES 72
11.4 BASIC TIMING 73
11.5 ROM 75
11.6 RAM 77 11.6.1 Address Lines 77 11.6.2 RAM Data Output 77 11.6.3 RAM Refresh Operation 77 11.6.4 Write Enable Signal WE* 77 11.6.5 CPU Write Operations 78 11.6.6 Memory Multiplexing 78 11.7 CHARACTER GENERATOR 78 11.8 I/O SERIAL PORT 79 11.9 VIDEO DISPLAY 79 11.10 VIDEO SCAN GENERATOR 80 11.11 KEYBOARD AND ASSOCIATED BUFFERS 81 11.12 DISK DRIVE AND DISK CONTROLLER 81 11.13 RESET AND NMI 83
12.0 Osborne 1 Schematics 85
12.1 MAIN LOGIC BOARD SCHEMATICS 85
12.2 DISK ELECTRONICS BOARD SCHEMATICS 105
Appendices
A. Z80 INSTRUCTION SET 113
B. 6821 PIA REGISTERS/INSTRUCTIONS 121
C. 6850 ACIA REGISTERS/INSTRUCTIONS 135
D. MB8877A DISK CONTROLLER REGISTERS/INSTRUCTIONS 14:
E. OSBORNE 1 SYSTEM SPECIFICATIONS 161
ROM/BIOS 1.3
ROM/BIOS 1.4

Perspective

- 1.1 INTRODUCTION 1 1.2 POWER ON 2
- 1.3 VARIATIONS IN DESIGN 2

1.0 Perspective

1.1 INTRODUCTION

The Osborne 1 computer is a completely integrated computer unit. Designed to be portable, the entire computer weighs 24 pounds including a weather-resistant case and handle which facilitate moving it from one location to another.

The primary hardware components of the Osborne 1 are:

- 1. Dual 5 1/4-inch disk drives
- 2. Built-in 5" black and white monitor
- 3. Single-board computer
- 4. Z80A central processor
- 5. 64K bytes
- 6. 4K bytes ROM
- 7. Floppy disk interface
- 8. IEEE-488 interface
- 9. RS-232C interface
- 10. Modem (communications) interface option
- 11. 32 x 128 character memory-mapped video
- 12. Battery-pack option
- 13. 69-key detachable keyboard/numeric keypad
- 14. Lightweight, switching power supply

The design philosophy used in creating the Osborne 1 was twofold: 1) get all of the user controls and interface options up front where the user can see and manipulate them; and 2) make sure all of the components are integrated in such a way so that the case becomes a protective shell when the unit is closed up for traveling.

Upon receiving an Osborne 1, the user merely lays the unit on a flat surface, plugs it in, unlocks two latches to pull the keyboard unit from the rest of the computer, then begins using the computer. In normal operation, the main computer housing is propped onto the back lip of the keyboard, so the video display is tilted at a comfortable working angle.

1.2 POWER ON

When the Osborne 1 is powered ON, a sign-on message is displayed on the video monitor prompting the user to insert a diskette and press the RETURN key. This same message is displayed immediately following the depression of the RESET button located on the front panel of the Osborne 1.

The current revision of the monitor ROM is identified within the box under "OSBORNE 1" in the sign on message. There have been a number of hardware and software modifications during the ongoing refinement of the computer. Improvements have been made and features have been added in four distinct catagories; the main logic board, the disk interface board, the monitor ROM, and BIOS. Also, the latest Osborne 1 has a blue injection-molded case with a covered vent and fixed lid that covers the power well.

1.3 VARIATIONS IN DESIGN

Since there are some subtle differences between the various releases of the Osborne 1, this manual attempts to point out discrepancies between these versions whenever possible. For instance, as of this writing, there are currently six revisions of the main assembly logic board (A-F) which is further complicated by eight revisions of the board with components (A-H). There have also been numerous revisions of the disk interface board, four revisions of the monitor ROM (A, 1.2, 1.3, 1.4), and five revisions of BIOS (A, 1.2, 1.2.1, 1.3, 1.4). Version A software (ROM and BIOS) were upgraded to 1.2 free of charge by Osborne Computer Corp in November of 81.

The ROM monitor, which takes control of the machine at power on and reset (and displays the "Insert Disk" message described earlier), contains the diskette boot loader and extensions to the CP/M BIOS routines. There are no machine-level byte entry, examination, or modification routines in the ROM monitor. Such routines are unnecessary, given the utility software supplied with the Osborne 1.

Single density versions of the Osborne 1 prior to the 1.3 ROM and BIOS include a set of built-in diagnostics which are accessible by pressing ^D when the sign-on message is displayed.

Further discussion of the main hardware and software will be found in the following detailed descriptions of each module.

Logic Board and CPU

2.1 OSBORNE 1 MAIN LOGIC BOARD
2.2 BOARD REVISIONS
3
2.3 MAIN BOARD LAYOUT
4
2.4 CENTRAL PROCESSOR
4

2.0 Logic Board And CPU

2.1 OSBORNE 1 MAIN LOGIC BOARD

The main logic board—as already described—contains all of the electronics necessary to provide a 64K, Z80A-based computer, including the additional interfaces required to run the disk drives, video display, and external communications ports.

2.2 BOARD REVISIONS

Six revisions of the bare main logic board have been made:

Revision A — prototype, not released

Revision B — first release, requires wirir

Revision B — first release, requires wiring changes

Revision C — incorporates all wiring changes, requires additional

changes to correct layout problems

Revision D — requires no wiring changes Revision E — complete relayout of board

Revision F — revision E board with clock modification added

Boards at levels B through F are in the field. Current production (15 June 1982) is at the Revision F level.

Boards loaded with parts are given a separate revision level:

Revision A — prototype, not released

Revision B — memory

Revision C — first revision shipped, Revision B bare board

Revision D — incorporates rework required by Revision C bare board Revision E — same as Revision D loaded board, but assembled with-

out rework

Revision F — first incorporation of Revision E bare board, not

released

Revision G — primary production board through 3 November 1981,

incorporates Revision E bare board

Revision H-N — released

NOTE

As of 9/82 a multilayer main logic PC Board which conforms to F.C.C. regulations is in production.

Beginning in January 1982, an international version of the Osborne 1 was in production. The difference in this international version is the character generator ROM and the primary power supply which is configured to accomodate the international voltages being used.

Also, future Osborne 1's which have been upgraded to double density, feature a 1.4 ROM. The double density option includes a small add-on component board mounted above the main logic board. This option will be described more thoroughly, later in this manual.


2.3 BOARD LAYOUT

The layout for the current revision and future multilayer main logic board are both shown in Figure 2.3:

2.4 CENTRAL PROCESSOR

The central processor used is the NEC C780C, which is equivalent to the Zilog Z80A.

The CPU uses a clock of 4-megahertz, generated from a 15.9744-megahertz crystal run through a 74LS161 binary counter.

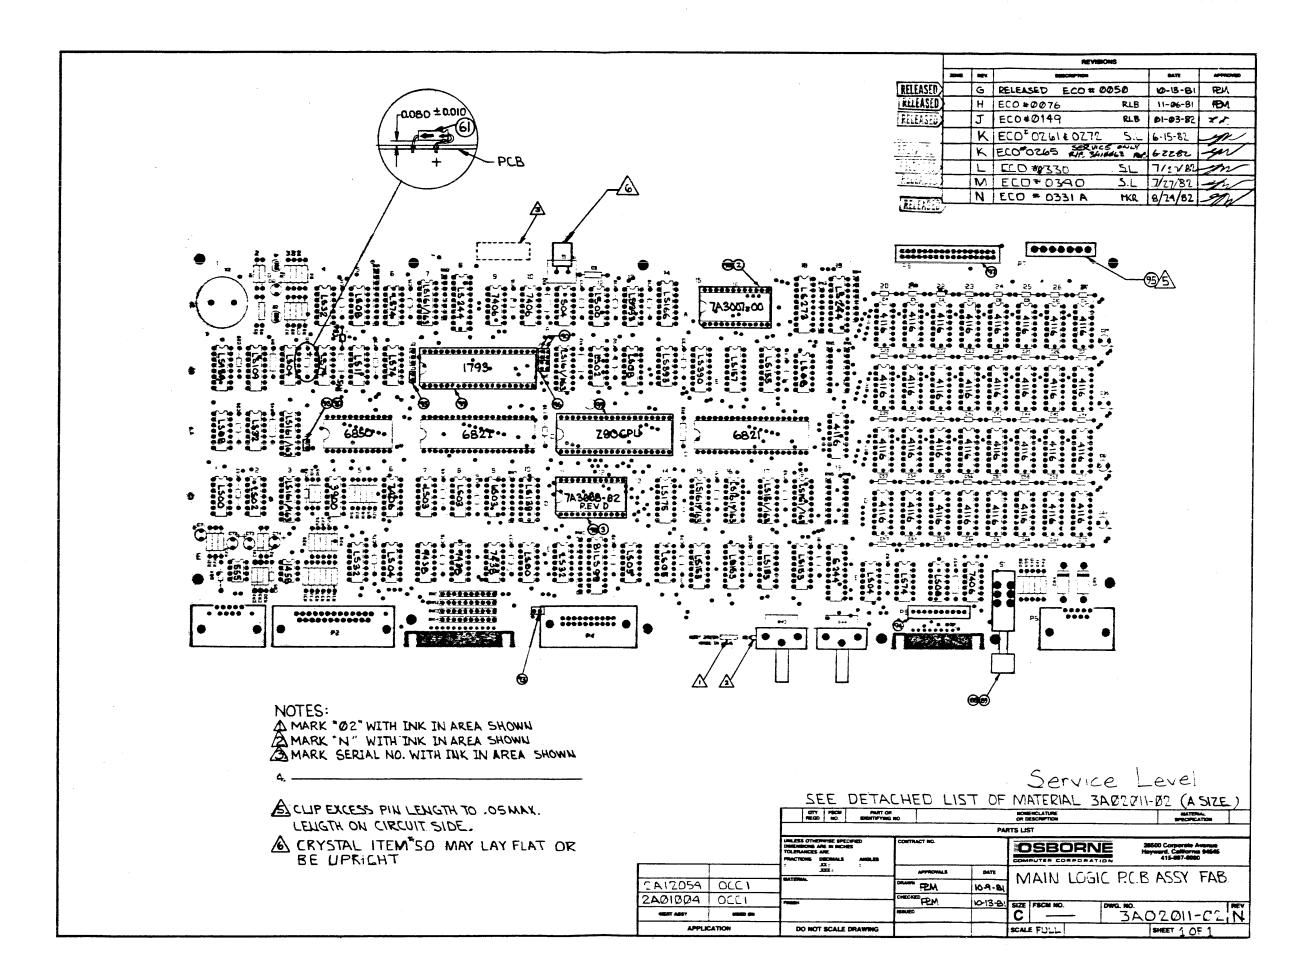

Osborne 1 Memory Scheme

- 3.1 MEMORY BANKS 7
- 3.2 CP/M MEMORY ALLOCATION 7
- 3.3 MAIN MEMORY 9
- 3.4 MEMORY-MAPPED I/O
- 3.5 MEMORY ACCESS TIME 9

3.0 Osborne 1 Memory Scheme

3.1 MEMORY BANKS

Four rows of eight 4116 dynamic RAM chips provide the Osborne 1 with 64K of main memory. The memory on the Osborne 1 main logic board is mapped into three logical banks. The first bank of memory is 64K by 8 bits of dynamic RAM (4116 chips). The second bank of memory consists of 4K of ROM (currently a 2732 chip; formerly two 2716 chips), 16K of RAM, and memory-mapped I/O . A "mimicking" of the first bank's dynamic RAM provides the top 48K. The third bank of memory is 16K by 1 bit worth of dynamic RAM memory used for storing the dim character video attribute. Figure 3.1 below shows the Osborne 1 memory map:

The addresses shown on this memory map pertain to the 1.4 ROM and BIOS. Software released prior to 1.4 has different addresses for BIOS, BDOS, and CCP. Consult the Software section for more information.

3.2 CP/M MEMORY ALLOCATION

```
0000 - 0002 Jump to BIOS warm start entry
0003
            IOBYTE
0004
            Drive number/current user
0005 - 0007
            Jump to BDOS entry
0008 - 0037
            Reserved for interrupts
0038 - 003A RST7 (used by DDT)
003B - 003F Reserved for interrupts
0040 - 004F Scratch area used by BIOS
0050 - 005B Not used
005C - 007C File control block
007D - 007F Random record position
0080 - 00FF Default DMA buffer area
0100 - CEFF Transient program area
CB00 - E0FF CCP/BDOS (CP/M)
E100 - EFFF BIOS and Osborne buffer area
F000 - FFFF Memory mapped video display
```

Note: 1.2 and 1.3 software have CCP/BDOS located from CF00 to E4FF and BIOS from E500 to EFFF.

FFFF	Normal mode bank 1	Shadow mode bank 2	Video with dim bit bank 3
	video display 128 x 32	video display 128 x 32	video attributes 4k x 1
F000	BMRAM	BMRAM	
EA80	BIOS	BIOS	
E100			
CB00	BDOS/CCP	BDOS/CCP	
OBOO	RAM	RAM	not used
	used for programs	used as buffer	
4000			
		not used	
3000		I/O ports	
2000		170 ports	
		not used	
1000		ROM	
0000	bank 1	bank 2	bank 3

Figure 3.1 Osborne 1 Memory Map

3.3 MAIN MEMORY

Bank 1 of memory is used mainly for programming. CP/M, for instance, loads itself into the uppermost free area—just below the video display memory—with the Basic Input Output System (BIOS), the Basic Disk Operating System (BDOS) and the Console Command Processor (CCP). As with all CP/M systems, the memory area from 0000 hex to 0100—commonly referred to as "page 1" of memory—is reserved for use by CP/M. Overall, about 51K bytes of usable memory are available to the programmer.

As you can see from Figure 3.1, the primary bank of memory is divided into 60K of user memory and 4K of video display memory. The video display memory layout is discussed in an upcoming section.

3.4 MEMORY-MAPPED I/O

The second bank of memory consists of the monitor ROM and memory-mapped I/O. Specifically, the serial/modem port, IEEE-488 port, disk interface, and keyboard are all addressed through the memory-mapped I/O section. The memory-mapped I/O is detailed in Figure 3.4 and 3.4.1.

Use of each of the I/O memory locations will be discussed in conjunction with the specific peripheral being addressed.

3.5 MEMORY ACCESS TIME

The memory access time is 250 nanoseconds for programmable memory and 350 nanoseconds for the read-only memory. Programs in read-only memory execute without delay, while programmable memory has delay times added as follows:

First M1 cycle — 188 nanoseconds Subsequent consecutive M1 cycles — 0 nanoseconds Non-M1 cycles — 375 nanoseconds

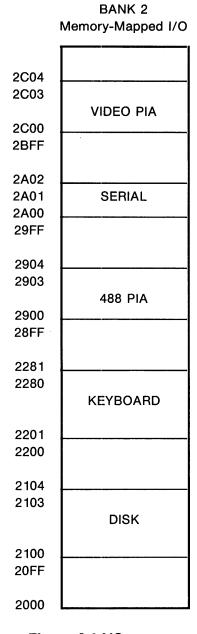


Figure 3.4 I/O memory map

OSBORNE 1 I/O Port Assignment (Shadow Mode)

	Address	Read	Write
Disk	2100 2101 2102 2103	Status Register Track Register Sector Register Data Register	Control Register Track Register Sector Register Data Register
Keyboard	2201 2202 2204 2208 2210 2220 2240 2280	Row 0 Row 1 Row 2 Row 3 Row 4 Row 5 Row 6 Row 7	
488 PIA	2900 2901 2902 2903	Port A Direction/Data Port B Direction/Data	Port A Direction/Data Port A Control Register Port B Direction/Data Port B Control Register
Serial	2A00 2A01	Status Register Receive Buffer	Control Register Transmit Buffer
Videc PIA	2C00 2C01 2C02 2C03	Port A Direction/Data Port B Direction/Data	Port A Direction/Data Port A Control Register Port B Direction/Data Port B Control

Figure 3.4.1 I/O Port Assignments In Bank 2

Osborne 1 Interface Design

4.1	IEEE-48S INTERFACE 13
	4.1.1 IEEE-488 Signal Direction 13
	4.1.2 IEEE-488 Pinouts 14
	4.1.3 IEEE-488 Jump Vectors 15
	4.1.4 IEEE-488 Communication Protocol 15
	4.1.5 IEEE-488 As A Parallel Port 16
4.2	SERIAL RS232 INTERFACE 17
	4.2.1 RS232 Signal Direction 18
	4.2.2 RS232 Pinouts 18
4.3	MODEM 19
	4.3.1 Modem Signal Direction 19
	4.3.2 Modem Pin Connections 19
	4.3.3 Modem Status 20
4.4	BAUD RATE 21

4.0 Osborne 1 Interface Design

4.1 IEEE-488 INTERFACE

The IEEE-488 interface is created using a 6821 PIA. The IEEE-488 implementation, as described in the Osborne 1 User Guide's Appendix, is a subset of the complete IEEE specification. Specifically, no provision has been made for controlling multiple devices on the interface.

4.1.1 IEEE-488 Signal Direction

The Osborne 1 IEEE-488 signal directions are provided here:

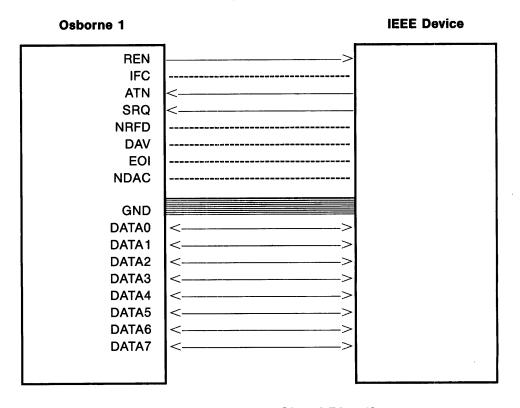



Figure 4.1.1 IEEE-488 Signal Direction

4.1.2 IEEE-488 Pinouts

Any IEEE 488-compatible device can connect to the Osborne 1 through the IEEE connector. Because this port is used for more than just IEEE 488 signals, we've declined to use a standard IEEE connector. The following table shows the pin assignments for both the IEEE standard connector and the Osborne 1 edge connector:

IEEE_	OSBORNE	SIGNAL NAME		
1	1	Data bit 1	(DIO1)	
2	3	Data bit 2	(DIO2)	
3	5	Data bit 3	(DIO3)	
4	7	Data bit 4	(DIO4)	
5	9	End or Identify	(EOI)	
6	11	Data valid	(DAV)	
7	13	Not ready for data	(NRFD)	
8	15	No data accepted	(NDAC)	
9	17	Interface clear	(IFC)	
10	19	Service request	(SRQ)	
11	21	Attention	(ATN)	
12	23	Cable shield + GND	(SHIELD)	
13	2	Data bit 5	(DIO5)	
14	4	Data bit 6	(DIO6)	
15	6	Data bit 7	(DIO7)	
16	8	Data bit 8	(DIO8)	
1 <i>7</i>	10	Remote enable	(REN)	
18	12	Signal ground	(DAV)	
19	14	Signal ground	(NRFD)	
20	16	Signal ground	(NDAC)	
21	18	Signal ground	(IFC)	
22	20	Signal ground	(SRQ)	
23	22	Signal ground	(ATN)	
24	24	Signal ground	(Logic)	

The pinouts for the signals described above are as follows:

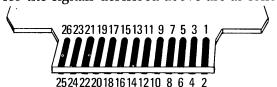

26-pin edge connector, looking at front of Osborne 1. Pins 25 and 26 are not used, but provided for compatability.

Figure 4.1.2 IEEE-488 Pinouts

4.1.3 IEEE-488 Jump Vectors

To provide easier access to the routines necessary to use the IEEE-488 interface, the CP/M BIOS jump table has been extended to provide a series of extra jumps specifically for the IEEE-488 programmer. The IEEE-488 routines are offset from the starting address of BIOS as follows:

BIOS + 3FH Control out

BIOS + 42H Status in

BIOS + 45H Go to standby

BIOS + 48H Take control

BIOS + 4BH Output interface message

BIOS + 4EH Output device message

BIOS + 51H Input device message

BIOS + 54H Input parallel poll message

4.1.4 IEEE-488 Communication Protocol

IEEE-488 commands use no RAM other than the stack. Each command routine in BIOS determines status of the port by reading the status of the 6821 PIA chip. The PIA transmits signals in both directions, so to reduce the overhead in determining the current direction the PIA is attempting to communicate, it is always left in one of two modes:

the source handshake mode or the acceptor handshake mode

(The PIA specification sheet will be helpful in determining these modes.)

Several of the IEEE commands require that the PIA be in the source handshake mode when called. The PIA is normally in the source handshake mode following the completion of any IEEE- bus information transfer, so this is not a major restriction. For instance, both the Status In and the Parallel Poll commands require that the PIA be in the source mode, which means that you can perform the detection-of-device request using either serial poll or parallel poll only when the interface is idle.

To send data to a device on the IEEE bus, the controller makes the device a LISTENER, assumes the role of TALKER, and sends the data. To receive data from an external device, the controller must first make the device a TALKER and then assume the role of LISTENER. After this, the controller goes on "standby" and allows the two devices to communicate at their own rate.

The controller can regain control asynchronously by setting the ATN signal to true. But if a device-dependent message is true at the same time when ATN becomes true, other devices on the IEEE bus can misinterpret the interrupted

byte as an interface message and produce chaos. Avoid the problem by taking control synchronously. If high-speed transfer of data between devices is not required and the computer can be tied up during the transfer, it is better to make the controller listen to the transfer while discarding the data. This procedure allows the controller to count transfers, look for EOI signals, or "time out" the TALKER before regaining control.

The IEEE commands are detailed in the User's Guide's Appendix, with sample programs included to help decipher how we've put the BIOS jumps into effect for the IEEE bus. A listing of the 6821 registers and instruction set is provided as Appendix B of this manual for those who wish to make direct use of the PIA for controlling the IEEE-488 port.

4.1.5 IEEE-488 As A Parallel Port

The IEEE-488 can also be used as a standard parallel port, and software has been added to the BIOS section of CP/M so that users of a Centronics-compatible printer may use their printer as the list device under CP/M. By setting the CP/M IOBYTE equal to BAT:, UR1:, UP1:, or LPT:, the IEEE-488 port is reconfigured by BIOS to be a simple 8-bit parallel input/output port with the following pinouts:

Osborne IEEE Edge Connector		Centronics- Compatible Connector
pin 1	data 0	2
2	data 4	6
3	data 1	
4	data 5	
5	data 2	4
6	data 6	8
7	data 3	5
8	data 7	
11	out strobe	1
12	ground	19
15	busy	
16	ground	29
19	select	13


Figure 4.1.5 IEEE-488 Parallel Interface

To use a parallel printer connected to the IEEE interface, you must employ the SETUP program to configure the appropriate protocol for the printer. You need do this only once for each diskette. Alternatively, if you have two printers hooked up, or wish to change the printer being used from within a program, you can reset the IOBYTE as described later.

4.2 SERIAL RS232 INTERFACE

The serial port is configured as a RS-232C-compatible port, though certain of the RS-232C signals are held at +5 volts since they are not needed to control the Osborne 1. A 6850 ACIA chip controls the serial port.

The RS232 status port address is located at 2A00H and the data port at 2A01H in the shadow mode. RS232 status bit assignments are detailed in the following diagram:

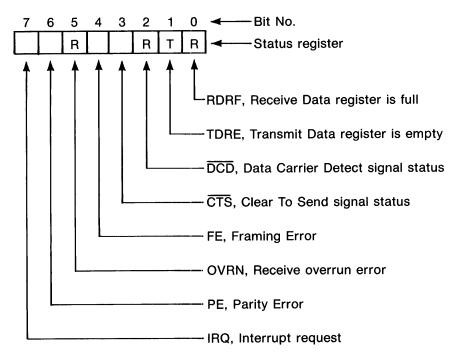

NOTE: See pages 9-59 and 9-60 in Volume 2 of An Introduction To Micro computers by Adam Osborne/McGraw-Hill or the 6850 Data sheet for a complete description.

Figure 4.2 RS-232 Status Bit Assignments

4.2.1 RS232 Signal Direction

The serial port is configured as a DTE device. The following signals apply:

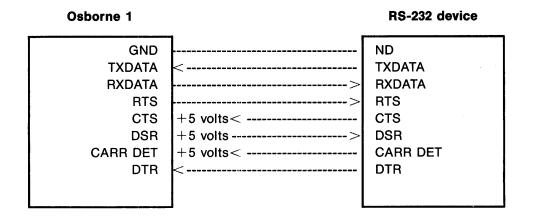


Figure 4.2.1 RS-232 Signal Direction

4.2.2 RS232 Pinouts

Below are the pin assignments for the RS-232 serial interface:

DB-25S	RS-232	Pin Definition
1	AA	Frame ground (optional)
2	BA	Transmitted data (low=1)
3	BB	Received data (low=1)
4	CA	Request to send (high or no connection enables)
5	CB	Clear to send (always high on OCC 1)
6	CC	Data set ready (always high on OCC 1)
7	AB	Signal ground
8	CF	Received line signal detected (always high)
20	CD	Data terminal ready (high or no connection enables)
	13 12	2 11 10 9 8 7 6 5 4 3 2 1
		/
	\	000000000/

9,10,11,12,13,14,15,16,17,18,19,21,22,23,24,25 no connections

25 24 23 22 21 20 19 18 17

Figure 4.2.2 RS-232 Serial Pinouts

16 15 14

4.3 MODEM

A close look at the circuitry in the Osborne 1 schematics will show that the modem and RS-232 interfaces are basically one and the same. In addition to the serial port, TTL-level signals may be directly input into the 6850 ACIA using the modem port connection. To read to and from the modem or serial port use the CP/M IOBYTE function.

4.3.1 Modem Signal Direction

The following signals apply to the Modem Port:

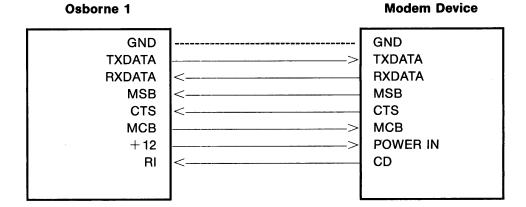


Figure 4.3.1 Modem Signal Direction

4.3.2 Modem Pin Connections

The pin connections on the modem port are as follows (all use the standard numbering of the DE-9P connector).

DE-9P Osborne Modem Definition:

GND - Signal ground
TXD - Transmitted data - TTL logic, 1=high
Not used
MSB - Modem status bit— open collector, 50ua sink=inactive
CTS - Clear to send
RXD - Receive data - bipolar input, -0.5v-10v=1
+12v - Connected to power supply through 22 ohms
MCB - Modem control bit - TTL, low suppresses output
RI - Ring indicator - TTL, high-to-low sets flag

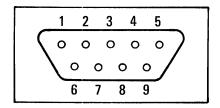


Figure 4.3.2 Modem Pinouts

NOTE: all signals are TTL-level and thus this interface is extremely vulnerable to damage through misuse.

Early versions of the main PC board have a reversal of the modem signals described in this document; the original design called for a female modem socket. Consult the User's Guide which accompanied your Osborne 1 for the applicable modem pinouts. A special cable is required with the Osborne Modem to compensate for the configuration of these earlier connectors.

If you have a modem that uses an RS-232C connector, you may have to use an external adapter box to properly institute all the modem functions. Connecting a modem without using an external adaptor may damage your Osborne 1, as pins 4 and 5 are open collectors and are sensitive to signal-edge transitions. If pin 4 is not connected to the modem, make sure that nothing is connected to pin 4 at the Osborne end; otherwise, adjacent signals may be received inadvertently.

4.3.3 Modem Status

You can determine the output status of the modem port by using the BIOS call LISTST located at 0E12D hex. A value of 0FF hex indicates that the list device is ready; 00 indicates busy.

To find the input status of the modem port, you must first switch to bank 2 of memory and then look at memory location 2A00 hex. To change the status of the modem or serial device directly, you use the same memory location and write a special "control" byte as dictated in the 6850 specification sheet. Memory location 2A01 hex in bank 2 is the data buffer: you read information from external devices by moving the byte to one of the CPU internal registers, you send information to the external device by moving data from the CPU register to the memory location.

Baud rates for the serial and modem ports is software-selectable between 300 or 1200 (use the SETUP program to change the baud rate from 1200 that BIOS assumes to 300). If necessary, the baud rate may be increased (on Revision level E boards and latter) from the 300/1200 baud normally used on the Osborne 1 to 600/2400 baud. To Switch baud rates remove the two-pin jumper from the position "J1" (See Fig. 2.3) on the logic board. Earlier versions require soldering and cutting of traces.

An even faster Baud rate of 1200/2400 or 2400/9600 can be attained with the addition of a few routing wires. The Osborne 1 cannot handle terminal functions above 2400 baud due to the limitation of system calls. However, communication to an external terminal, printer or another computer can be maintained at these higher rates of transmittion.

Note: We are making the procedure for increasing Baud rate available because we are convinced that certain parties are using it successfuly. Osborne Computer Corporation does not officially support these higher Baud rates because the 6850 support driver is potentially unreliable at high speeds. Also, be forwarned that any tampering within the computer will void your waranty.

Here is the procedure for increasing the Baud rate to either 1200/2400 or 2400/9600. Refer to the Figure 2.3 of the main logic board and the illustration below the instructions for more details:

- 1. Remove LS161/163 from C3 and repace it with a 16 pin socket.
- 2. Bend up pins 2, 3, 7, and 10.
- 3. Route a wire between pins 3 and 4, another between pins 4 and 7, and another wire between pins 7 and 10.
- 4. Place the modified pack in the socket. The modification so far will provide 1200/4800 Baud capability.
- 5. For 2400/9600 Baud you must connect an extra wire from pin 2 to the middle contact of J2 as illustrated in Figure 4.4.

For those who wish to control the 6850 ACIA directly, Appendix C contains a listing of the registers and instructions the 6850 chip utilizes.

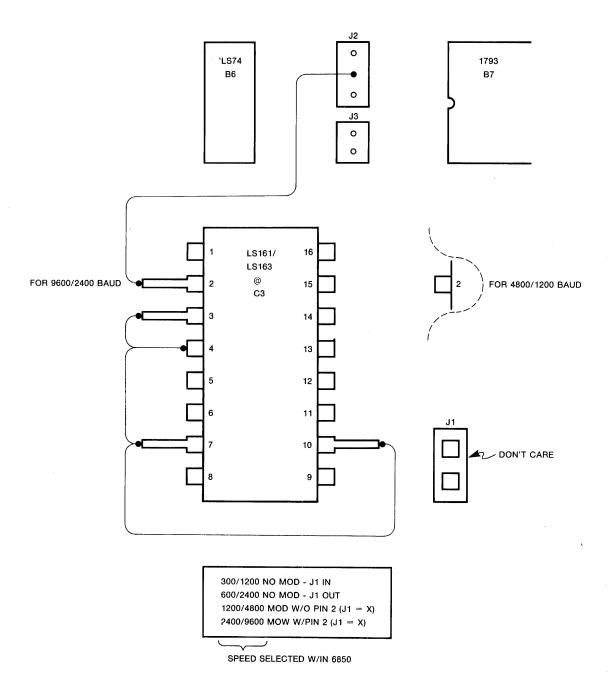


Figure 4.4 Baud Rate Hardware Modification

Video Attributes

5.3	CHARACTER GENERATION 24	
5.4	DISPLAY LOGIC 25	
5.5	BLOCK GRAPHICS 25	
5.6	VIDEO SIGNALS AND PINOUTS 27	
	5.6.1 Video In-Line Connector 27	
5.7	VIDEO CONNECTIONS AND CIRCUITRY	28
5.8	VIDEO TIMING 30	

5.1 VIDEO DISPLAY5.2 VIDEO MEMORY23


5.0 Video Attributes

5.1 VIDEO DISPLAY

The video display probably has the trickiest design of any of the modules on the main logic board. A 6821 PIA chip is used to control portions of the video display circuitry, while the video display circuitry itself is used to refresh the main memory dynamic RAM. A 2716 ROM is used as a character generator, and an extra 4116 chip is used to store the dim video attribute.

5.2 VIDEO MEMORY

Memory from 0F000 hex to 0FFFF hex is used for the video memory map. That memory is considered to be 32 rows of 128 characters, even though only 24 rows of 52 characters are actually displayed on the monitor screen at a time. The character matrix is 7×9 in an 8×10 box. The following bits are used to encode the character to be displayed:

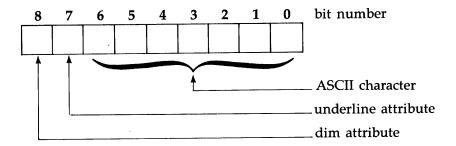

5.3 CHARACTER GENERATION

All characters are defined using a dot matrix that is 8 columns wide by 10 rows high. Within the character generator ROM, 128 characters are defined. The top row of each character is defined in the first 128 bytes of the character generator ROM. The second row is subsequently defined in the second 128 bytes, and so on. This is illustrated as follows:

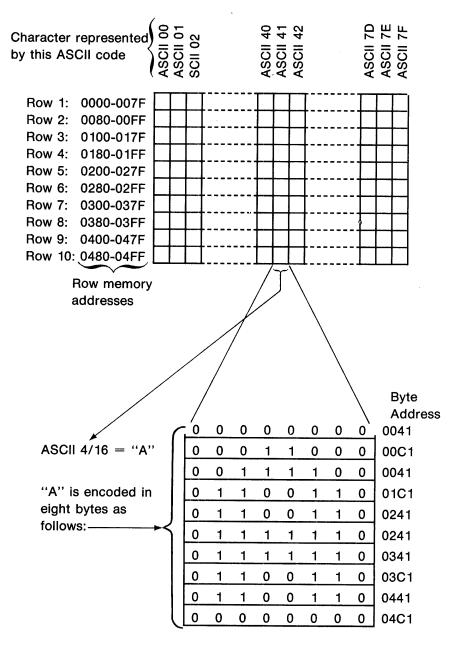


Figure 5.3 Character Generator Encoding

5.4 DISPLAY LOGIC

In order to create displays, ASCII codes are written into screen RAM. Display logic fetches the code in each screen RAM location and displays the character from the character generator ROM corresponding to the screen RAM ASCII code. This may be illustrated as follows:

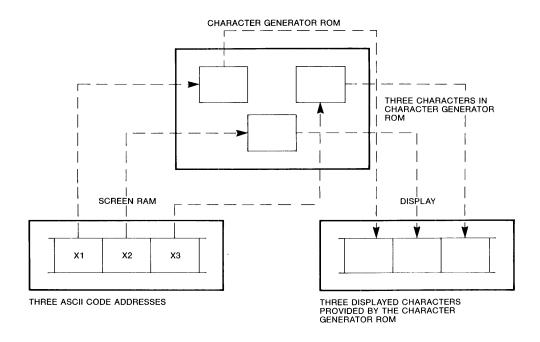


Figure 5.4 Display Logic Diagram

5.5 BLOCK GRAPHICS

The first 32 character values (00 hex through 1F hex) are not displayable ASCII characters and are thus used for block graphics characters on the Osborne 1. The following graphic characters are available:

Hexa										
[Decimal				В	inary				ASCII
I	0	0	0	0	0	0	0	0	0	@
١	0	1	0	0	0	0	0	0	1	^A
١	0	2	0	0	0	0	0	· 1	0	^B
ı	0	3	0	0	0	0	0	1	1	^ C
	0	4	0	0	0	0	1	0	0	■ ^ D
į	0	5	0	0	0	0	1	0	1	^ E
	0	6	0	0	0	0	1	1	0	
١	0	7	0	0	0	0	1	1	1	^G
	0	8	0	0	0	1	0	0	0	^н
	0	9	0	0	0	1	0	0	1	
1	0	Α	0	0	0	1	0	1	0	^ J
1	0	В	0	0	0	1	0	1	1	K
ı	0	С	0	0	0	1	1	0	0	
١	0	D	0	0	0	1	1	0	1	
١	0	E	0	0	0	1	1	1	0	^ N
İ	0	F	0	0	0	1	1	1	1	^ o
١	1	0	0	0	1	0	0	0	0	^ P
	1	1	0	0	1	0	0	0	1	_ ^ Q
	1	2	0	0	1	0	0	1	0	^R
	1	3	0	0	1	0	0	1	1	1/4 ^ s
١	1	4	0	0	1	0	1	0	0	^т
	1	5	0	0	1	0	1	0	1	^ U
١	1	6	0	0	1	0	1	1	0	^ v
١	1	7	0	0	1	0	1	1	1	^W
١	1	8	0	0	1	1	0	0	0	^ x
	1	9	0	0	1	1	0	0	1	^ Y
	1	Α	0	0	1	1	0	1	0	^ Z
ı	1	В	0	0	1	1	0	1	1	ESC
	1	С	0	0	1	1	1	0	0	
	1	D	0	0	1	1	1	0	1	1/2]
	1	Ε	0	0	1	1	1	1	0	
	1	F	0	0	1	1	1	1	1	,

NOTE

Graphic characters must be accessed through an application program. ESC g enters graphic mode. The hex equivalent of each graphic character accesses and displays the graphic character.

Figure 5.5 Graphic Character Chart

5.6 VIDEO SIGNALS AND PINOUTS

The video signals are either directed to the built in monitor, or to an external monitor depending on what's plugged into the PC edge connector on the front panel of the Osborne 1. Normally, a shunt plug connects here which directs the video signals from the bottom of the PC board to the monitor connections on the top edge of the PC board. The following PC board pinouts apply:



- pin 2 Ground
 - 4 Brightness high
 - 6 Brightness low Brightness potentiometer
 - 8 Brightness arm
 - 10 Ground
 - 12 Horizontal sync
 - 14 + 12 volts
 - 16 Video out
 - 18 Vertical sync
 - 20 Ground

Figure 5.6 PC Edge Video Pinouts

5.6.1 Video In-line Connector

Normally, the shunt connects each of the above signals to the top side of the PC board, meaning that pin 2 connects to pin 1, pin 4 to pin 3, etc. In addition, a single inline connector located inside the Osborne 1 on the main logic board becomes active when the shunt is in place. This single in-line connector provides the signals and power to the internal video display monitor. The pinouts for this internal connector are as follows:

- pin 1 Ground
 - 2 Brightness high
 - 3 Brightness low Brightness Potentiometer
 - 4 Brightness arm
 - 5 Ground
 - 6 Horizontal sync
 - 7 + 12 volts 8 video out
 - 9 Vertical sync
 - 10 Ground

Figure 5.6.1 Video In-line Pinouts

5.7 VIDEO CONNECTIONS AND CIRCUITRY

Figure 5.7A shows the connections between the top and bottom of the PC connector (P9) and the single In-line internal connector (P5):

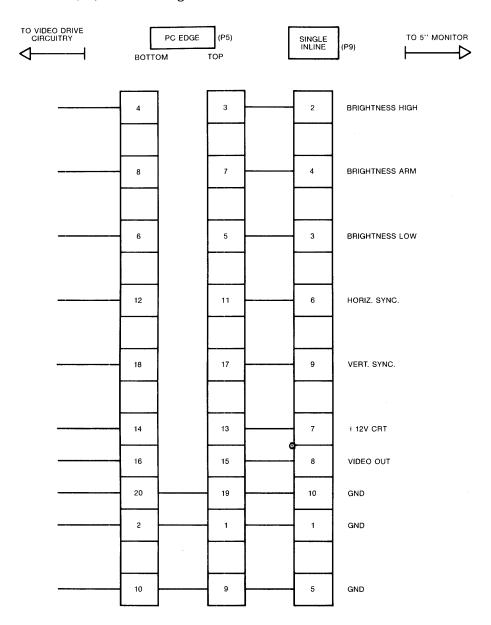


Figure 5.7A PC edge to Single Inline connections

The following diagram illustrates the applicable circuitry connected to this single inline connector:

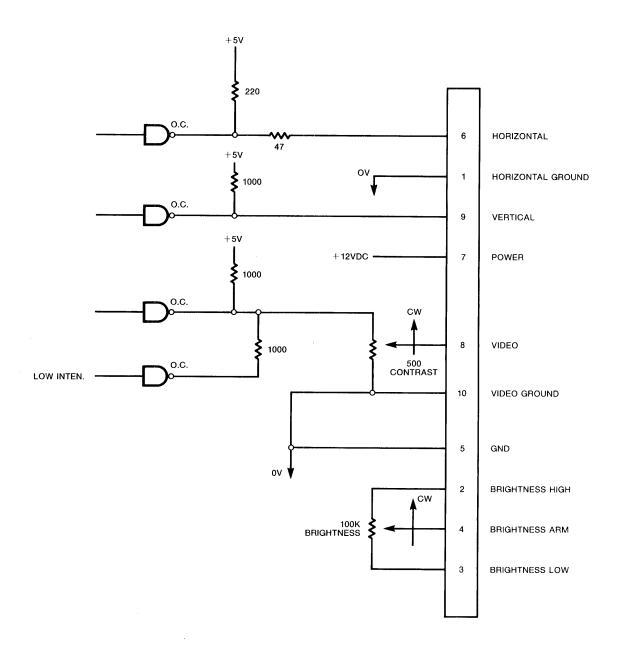


Figure 5.7B Video Drive Circuitry

5.8 VIDEO TIMING

The following illustrations show the horizontal (5.8A) and vertical (5.8B) timing used in the video display interface:

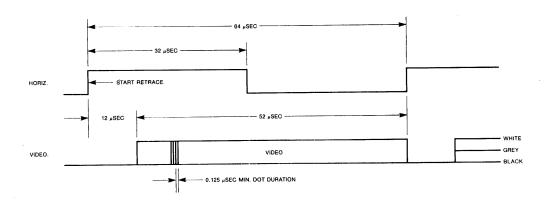


Figure 5.8A Horizontal Timing Diagram

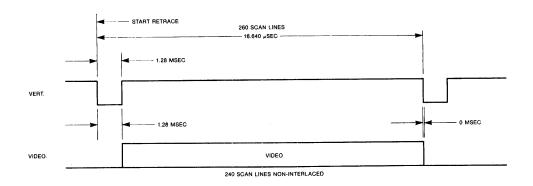


Figure 5.8B Verticle Timing Diagram

Warning: The video connectors contain TTL-level signals along with ± 12 Volts, and are quite vulnerable to damage by accidental misconnections. Be careful when you attach anything to either video connector.

The internal monitor is a P4 phosphorous monitor with an image area of 3.55 inches horizontally and 2.63 inches vertically. Rated linearity is 10% for adjacent characters, 15% overall.

Power Specifications

- 6.1 POWER SUPPLY 31 6.2 SWITCHING VOLTAGE 31 6.3 POWER BOARD LAYOUT 32

6.0 Power Specifications

6.1 POWER SUPPLY

The power supply for the Osborne 1 is an Astec switching power supply providing the following voltages and amperages:

```
+5 volts 2.5 amps
+12 volts 2.05 amps
```

Earlier versions of the power supply may be wired for 115v or 230v operation. To switch from one voltage to another, the wire with the bright orange tag indicating the current voltage setting must be removed from the pin it is currently connected to and attached to the adjoining pin. (See Figure 6.3)

6.2 SWITCHING VOLTAGE

Osborne 1 computers with the new blue case can operate at the 110V and 220V. Adapting the system for one of these voltages requires rotation of a fuse card accessable through the rear power well. The circuit breaker button has been replaced by this fuse and fuse card. Here is the procedure for switching from one voltage to another:

- 1. Disconnect the AC power cord from the power panel.
- 2. Slide open the transparent fuse box door in the AC power panel. Flip the fuse pull to remove the fuse.
- 3. The fuse card is located underneath the fuse mounting. The current AC voltage setting of the system is visible as a number printed on the card (100, 120, 220, or 240).
- 4. If you wish to change the indicated voltage setting, use needle-nose pliers to pull the fuse card from the fuse box.
- 5. Turn the card and replace it in the fuse box so that the desired voltage rating is the only number visible.
- 6. Replace the fuse and close the fuse box cover.
- 7. Reconnect the AC power cord to the power panel.

6.3 POWER BOARD LAYOUT

Here is the layout of the power supply board with the 115v and 230v pins identified:


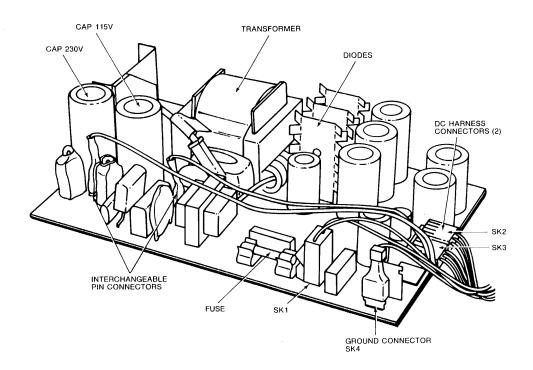


Figure 6.3 Power Board Layout

Pins 1 and 2 on the SK1 connector provide neutral and live in that order. The three connectors SK2, SK3, and SK4 are identical, and are laid out as follows when looked at from above:

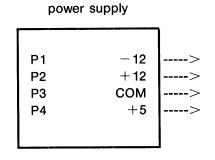

The power supply is fused. If this fuse burns out, replace it with another fuse of the same type (T2A250V).

Disk Drives

7.1	DRIVES USED 33		
7.2	DISK DRIVE INTERFACE BOARD	33	
7.3	DISK CONTROLLER AND PINOU	TS	37
7.4	CP/M BIOS DISK ADDRESSING	38	
7.5	DISK INTERFACE 38		
7.6	DISK DRIVE SPECIFICATIONS	38	
7.7	DISK FORMAT 39		

7.7.1 CP/M File Control Block

7.0 Disk Drives

7.1 DRIVES USED

Two types of disk drives are used in the Osborne 1. The type supplied with your computer depends on when your Osborne 1 was made. Both Siemens and MPI disk drives are used, with the manufacturer-supplied electronics replaced with a Osborne-designed electronics board.

7.2 DISK DRIVE INTERFACE BOARD

As stated earlier, there have been numerous revisions on the disk drive interface board as described below:

Rev A — Original release

Rev B — Added jumper to U3 to stabilize erase current

Rev C — RN2 substituted with discrete resistors

Rev D — Added snubbing resistor and bypass capacitor

Rev E — Incorporation of all changes


Rev F — RN8 jump increases current through index LED

Rev G-J — Snubbing capacitor (R39), discrete resistor (C5) eliminated

Boards currently being shipped are designated Rev B which is distiguished from the earlier Rev B by a new part number 1B10081. Changes between Rev G and the new Rev B disk board are:

- Read filter was optimized for group delay response.
- Servo circuitry optimized and top-adjust speed control pot added.
- Stepper power-down option added.
- Tantallum capacitors and bypass capacitors were added to reduce board noise.

The layout of the disk drive board is shown in Figure 7.2.

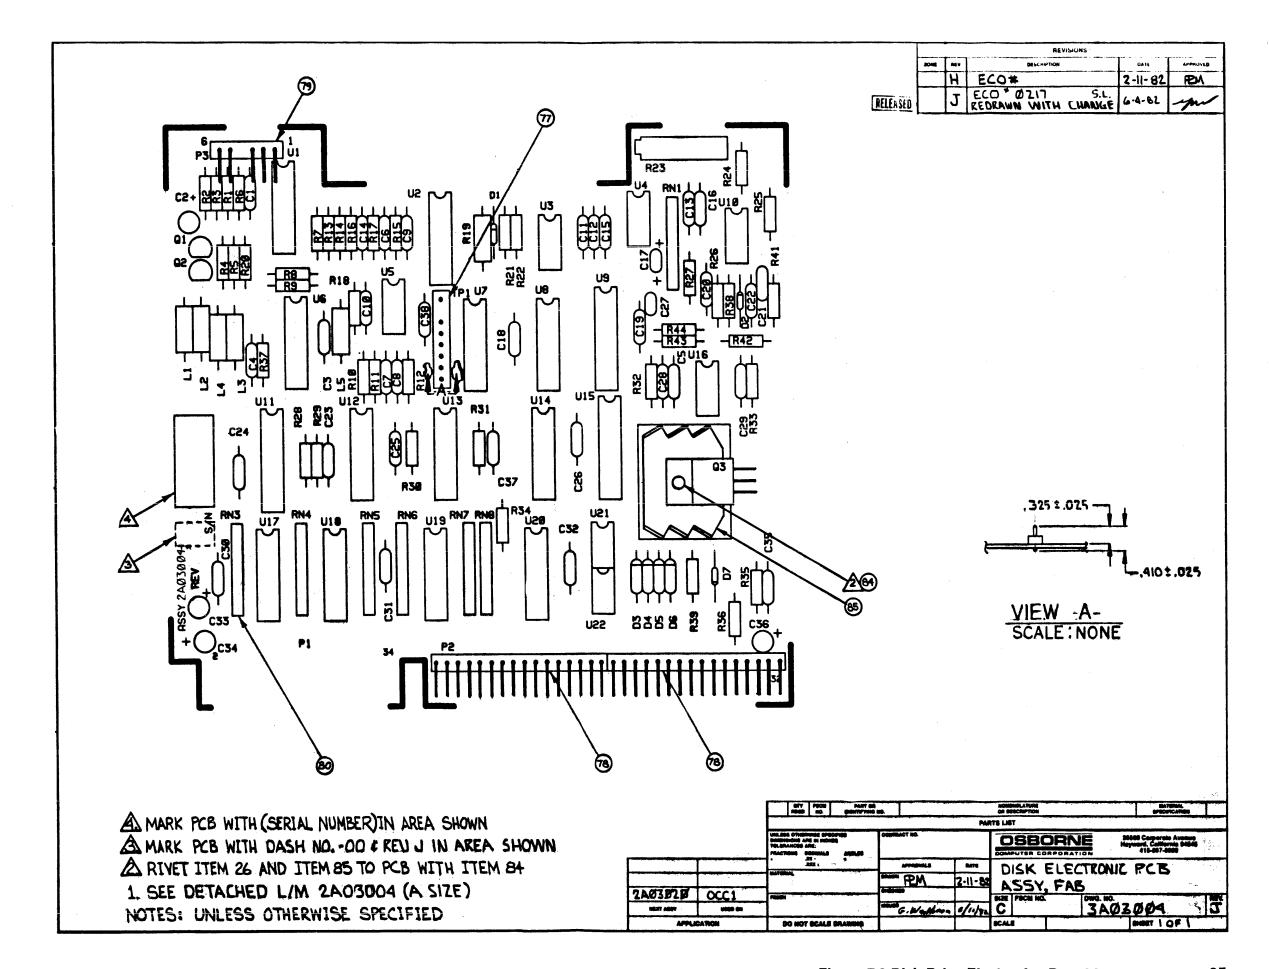

7.3 DISK CONTROLLER AND PINOUTS

The disk controller chip used on the main logic board is the Fujitsu 8877, equivalent to the Western Digital 1793. The following pinouts apply to the disk cable connector on the main logic board:

```
pin 1
        GND
    2
        GND
    3
        GND
    4
        GND
    5
        GND
    6
        GND
    7
        GND
    8
        INDEX
    9
        GND
   10
        DRIVE SELECT 1
   11
        +12 volts
   12
        DRIVE SELECT 2
   13
        +12 volts
        NC
   14
   15
        +12 volts
   16
        4mhz clock
   17
        +12 volts
   18
        DIR
   19
        GND
   20
        STEP
   21
        +5 volts
   22
        WRITE DATA
   23
        \pm 5 volts
   24
        WRITE GATE
   25
        \pm 5 volts
   26
        TRACK 00
   27
        GND
   28
        WRITE PROTECT
   29
        GND
   30
        READ DATA
        GND
   31
   32
        SIDE SELECT
   33
        GND
   34
        LATE
```

Figure 7.3 Main Board Disk Cable Connector Pinouts

7.4 CP/M BIOS DISK ADDRESSING

You can address the disk interface directly, although we strongly discourage this practice. If you must control the disk drives directly, do so through the standard CP/M BIOS calls:

BIOS + 18	Move head to track 0 on selected drive
BIOS + 1B	Select disk-drive number
BIOS + 1E	Set track number
BIOS + 21	Set sector number
BIOS + 24	Set the DMA address
BIOS + 27	Read the selected sector
BIOS + 2A	Write the selected sector
BIOS + 30	Translate the sector

NOTE

These calls are addressed with an offset from the start of BIOS for the particular revision of software being used.

If you're familiar with the way CP/M handles disk I/O, you also know that "BDOS functions" are accessible through memory location 0005 hex.

7.5 DISK INTERFACE

The Osborne 1 does not allow transfers of data directly to memory in the first 16K of memory space because the ROM and I/O in the second bank reside there. Instead, transfer information involving the first 16K of memory by first buffering the information in high memory (above BIOS) and then moving it into position. The opposite procedure occurs when you write information to the diskette from the initial 16K of memory. Use of the Z80 block-memorymove instruction makes this buffering transparent to users, and almost completely cancels any speed penalty involved.

7.6 DISK DRIVE SPECIFICATIONS

- maximum seek time 20 milliseconds track to track
- head load time 0 milliseconds rotation time 200 milliseconds
- utilizes standard FM recording

7.7 DISK FORMAT

The first track used for data is track 4 which contains the directory. Each entry consists of the standard CP/M format: one byte to indicate deletion, 11 bytes for the file name, and 20 bytes representing the "groups" assigned to the file.

There are two unusual aspects of the Osborne 1's use of the disk system. First, even though information is stored on the diskette in 10 sectors, to CP/M there are 20 sectors of 128 bytes each on the diskette. In other words, if you are using the Osborne 1 ROM routines, as documented, you'll be working with 10 physical sectors of 256 bytes, but if you're working with CP/M BIOS or BDOS routines, you'll be dealing with 20 logical sectors of 128 bytes each.

The disk medium used is the single-sided, single-density, soft-sectored 5 1/4-inch diskette. Data is stored on the diskette in 40 tracks of 10 256-byte sectors each, resulting in 102K of data storage per diskette. The Osborne double density option involves the addition of a small electronics board that interfaces between the main logic board and the disk drives. With the double density option installed, the Osborne 1 stores data in a multitude of different formats, including:

- 40 tracks 10 256-byte sectors (Osborne single density)
- 40 tracks 5 1024-byte sectors (Osborne double density)
- 40 tracks 8 512-byte sectors (IBM Personal Computer)
- 40 tracks 18 128-byte sectors (Xerox 820 Computer)
- 40 tracks 9 512-byte sectors (DEC 1820 double density)

7.7.1 CP/M File Control Block

Each file being accessed through CP/M must have a corresponding "File Control Block" which provides the name and allocation information for all subsequent file operations. The default FCB is located at BIOS \pm 05c hex and consists of 36 bytes of information:

```
(0=current, 1=A, 2=B)
5C
     drive code
5D
5E
5F
60
     Filename
61
62
63
65
     File Type
66
67)
     Current extent number
68
     Reserved
69
      =0 on BDOS call to open, make, or search
6A
6B
      extent record count
6C`
6D
6E
     Disk record map
77
78
      Random record number
```

Figure 7.7.1 File Control Block

File Control Blocks are stored in the directory area of the disk and are brought into main memory when a file operation begins. The FCB in memory is updated as file operations occur and its attributes are recorded permanently when the file operation is completed.

Keyboard

8.1 THE KEYBOARD 41
8.2 KEYBOARD PINOUTS 41
8.3 KEYBOARD LAYOUT 42
8.4 KEYSWITCH MATRIX 42
8.5 PROGRAMMABLE KEYS 43

8.0 Keyboard

8.1 THE KEYBOARD

The Osborne 1 keyboard contains no electronics—it consists of a column/row matrix of keyswitches which are converted into data and addresses by a 81LS95 and two 74LS05 chips. The data and addresses are then converted into ASCII key sequences by the monitor ROM, which uses a three-key rollover routine and maintains a lookup table for the conversion process.

8.2 KEYBOARD PINOUTS

The pinouts on the keyboard are as follows:

```
pin 1
          ground
     2
          row 4
     3
          row 0
     4
          row 3
     5
          row 6
                           used for address
     6
          row 2
     7
          row 5
     8
          row 1
     9
          row 7
    10
          col 0
    11
          col 1
    12
         col 2
    13
         col 3
                          used for data
    14
         col 4
    15
         col 5
    16
         col 6
    17
         col 7
    18
         no connection
    19
         no connection
    20
         ground
```

Figure 8.2 Keyboard Pinouts

8.3 KEYBOARD LAYOUT

The keys are laid out as follows (graphic characters are also shown):



Figure 8.3 Osborne 1 Key Layout

8.4 KEYSWITCH MATRIX

The matrix used to convert the keyswitches to ASCII is as follows:

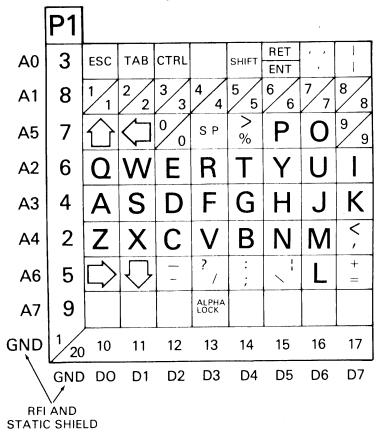


Figure 8.4 Key Switch Matrix

8.5 PROGRAMMABLE KEYS

In addition to the normal ASCII keystrokes allowed, 14 programmable keys have been added to the Osborne 1. These keys («0 through «9, and the four arrow keys) are converted by a routine in BIOS to any series of keystrokes up to 96 (for all 14 keys). The function keys (0-9) are programmed through the SETUP program located on the System program diskette.

Assembly And Disassembly

9.1	VARIATIONS IN DESIGN 45	
9.2	KEYBOARD 45	
	9.2.1 Keyboard Disassembly 45	
	9.2.2 Keyboard Assembly 46	
9.3	ORIGINAL AND NEW BEZEL/CHASSIS	47
	9.3.1 Original Bezel And Chassis Disassembly 47	
	9.3.2 Original Case Assembly 48	
	9.3.3 New Case Disassembly 49	
	9.3.4 New Case Assembly 50	
9.4		
	9.4.1 Logic Board Disassembly 52	
	9.4.2 Logic Board Assembly 53	
9.5	ORIGINAL AND NEW VIDEO MONITOR	53
	9.5.1 Original Monitor Disassembly 53	55
	9.5.2 Original Monitor Assembly 54	
	9.5.3 Blue Case Monitor Disassembly 54	
	9.5.4 Blue Case Monitor Assembly 55	
9.6	· · · · · · · · · · · · · · · · · · ·	
	9.6.1 Power Supply Disassembly 55	
	9.6.2 Power Supply Assembly 56	
9.7		
J.,	9.7.1 Disk Drive Disassembly 57	
	9.7.2 Disk Drive Assembly 58	
9.8	•	
9.0		
	9.8.1 Power Panel Assembly 59	
	9.8.2 Power Panel Assembly 61	

9.0 Assembly And Disassembly

9.1 VARIATIONS IN DESIGN

This section provides the instructions needed to dismantel the Osborne 1 into its various components and re-assemble it. The case in which the computer is currently being shipped has been redesigned. The following instructions pertain to both the original and the new case; except where a slight deviation in procedure or extra step need be noted. Two sections on the Bezel/Chasis and the Video Monitor are provided since the difference between the two cases with regard to these items is substantial enough to warrant separate descriptions. Information in this section was extracted from the Osborne Field Service Manual.

9.2 KEYBOARD

9.2.1 Keyboard Disassembly:

CAUTION: Identify connector orientations before detaching any cable.

- 1. Disconnect computer from power source.
- 2. Disconnect the keyboard cable from the front Bezel by spreading the latches of the keyboard connector.
- 3. Using a pad or soft material to protect the keyboard, turn the keyboard assembly over so the keys face down.
- 4. Remove the 6/32 Phillips screw located at each latch end of the keyboard case.
- 5. Remove the keyboard case from the keyboard and keyboard bezel assembly.
- 6. Carefully remove the keyboard harness from the double back tape located on both the keyboard Bezel and keyboard. (There is no tape on the blue case).
- 7. Carefully remove the keyboard harness from the keyboard connector.

NOTE

The keyboard harness is aligned with Pin 1 of the keyboard connector. Looking at the underside of the keyboard with the numeric row of keys to the top, Pin 1 is the upper right Pin.

- 8. Remove four 8/32 Phillips screws which secure the keyboard to the standoffs.
- 9. Remove the keyswitch array from the keyboard Bezel.

9.2.2 Keyboard Assembly:

- 1. Place the keyboard Bezel onto a Pad or Soft material (to protect the keyboard), standoffs facing up.
- 2. Align the keyswitch array face down with cutouts on keyboard Bezel.
- 3. Install four 8/32 Phillips screws to secure the keyboard to the bezel standoffs.
- 4. (This step does not apply to the blue case). Locate the notch on the long edge of the keyboard Bezel furthest from the "space" bar. There should be a 1 1/2 2 inch length of double-backed tape on the underside of the Bezel at this notch. Affix tape if necessary.
- 5. (This step does not apply to the blue case). Check that there is also a 1 1/2-2 inch length of double-backed tape near the keyboard connector on the underside of the keyboard. Affix tape if necessary.
- 6. Connect Pin 1 (black stripe or thick ground wire) on the keyboard harness to Pin 1 of the keyboard connector on the underside of the keyboard.

NOTE

To locate Pin 1 of the keyboard connector, position the keyboard with the numeric row of keys to the top. Facing the underside of the keyboard, Pin 1 is in the upper right corner of the keyboard connector. On the keyboard Harness, Pin 1 is identified by a black stripe.

- 7. Position the keyboard harness in the notch on the long edge of the keyboard bezel and press it flat against both lengths of tape. (No tape on blue case).
- 8. Lower the keyboard case onto the keyboard and keyboard Bezel assembly so the Case and Bezel are flush.
- 9. Install the 6/32 Phillips screw located on each latch end of the keyboard case to secure it to the keyboard assembly.
- 10. Turn keyboard face up and connect the keyboard cable to the keyboard connector below the CRT screen.

9.3 ORIGINAL AND NEW BEZEL/CHASSIS

9.3.1 Original Bezel And Chasis Disassembly

- 1. Disconnect computer from power source.
- 2. Disconnect the keyboard cable from the front bezel by spreading the latches on the keyboard connector.
- 3. Remove all external cables (ie. RS-232, Modem, External Video, etc.).
- 4. Using a 1/20 inch Allen wrench, remove the video knobs.
- 5. Remove the $6/32 \times 1/4$ inch Phillips screws surrounding the bezel.
- 6. Placing thumbs below CRT screen and fingers in the disk storage pockets, apply a slight pressure inward with fingers, and pull bezel straight forward.
- 7. With the Osborne 1 resting flat on its rubber feet, turn it so the A/C power panel faces you.
- 8. Remove the two $6/32 \times 1/4$ inch Phillips screws from above and below the handle. Mark these screws FOR HANDLE and set aside.

NOTE

Using an incorrect screw may puncture the Disk harness running behind the handle assembly.

- Remove the six 6/32 Phillips screws securing the A/C Power panel to the case. Note that the two upper screws have washers. Mark these two screws FOR A/C POWER PANEL and set aside. Using an incorrect screw may puncture the Drive harness.
- 10. With the Osborne 1 resting flat on its rubber feet, turn it so the CRT screen faces you.
- 11. Remove either the two or the four $8/32 \times 1/2$ inch Phillips screws which hold the chassis to the case. These are located on the left and right inside forward edges of the chassis.
- 12. Grasp the chassis assembly between the CRT and the Logic board. Lift the assembly slightly and pull it straight forward. Be careful when removing the chassis from the case. The A/C power panel will be dragging behind the chassis by wires only.
- 13. Pull remaining power cord through case.

9.3.2 Original Case Assembly:

- 1. Position the chassis assembly with disk drives on top, CRT screen facing you.
- 2. Place the case behind chassis assembly, AC power panel recess to the rear right.
- 3. Pull power cord through case until DC harness is taut or AC power panel is at case recess.
- 4. Grasp the chassis assembly between the CRT and the logic board. Lift the assembly slightly and push it straight back into the case. Be sure the AC Power panel is positioned correctly in its case recess.

NOTE

When installing chassis into case be sure not to pinch, trap or rip harness assemblies.

5. Install either two or four $8/32 \times 1/2$ inch Phillips screws on the left and right inside front edges of the chassis to secure it to the case.

- 6. Keeping the Osborne 1 flat on its rubber feet, turn it so the A/C power panel faces you.
- 7. Install six 6/32 Phillips screws to secure the A/C power panel to the case. The two upper screws MUST be 6/32 x 1/4 inch with washers. These were marked FOR A/C POWER PANEL. An incorrect upper screw may puncture the drive harness.
- 8. Install the two 6/32 x 1/4 inch Phillips screws above and below the handle. These screws were marked "FOR HANDLE". Using an incorrect screw may puncture the disk harness behind the handle assembly.
- 9. Keeping the Osborne 1 flat on its rubber feet, turn it so the CRT screen faces you.
- 10. Grasping bezel with thumbs below CRT screen cutout and fingers in the disk storage pockets, slide bezel completely into case.
- 11. Install the 6/32 Phillips screws surrounding the bezel to secure it to the case.
- 12. Using a 1/20 inch Allen wrench, install the brightness and contrast knobs onto their shafts.
- 13. With the keyboard assembly in front of the Osborne 1, connect the keyboard cable to the keyboard connector below the CRT screen.

9.3.3 New Case Disassembly:

CAUTION

The interior of the case is coated with a special metallic paint. Avoid scratching this coating.

- 1. Disconnect computer from power source.
- 2. Disconnect the keyboard cable from the front bezel by spreading the latches on the keyboard connector.
- 3. Remove all external cables (RS-232, modem, external video, etc.).
- 4. Pull the video contrast and brightness knobs off their shafts.

- 5. Remove the $6/32 \times 1/4$ inch Phillips screws surrounding the bezel.
- 6. Placing thumbs below CRT screen and fingers in the disk storage pockets, apply a slight pressure inward with fingers to loosen the bezel.
- 7. Grasp the bezel near the carrying-case latches and carefully pull it straight forward until it is free.
- 8. Remove the AC power cord from the power cord compartment.
- 9. Carefully turn the unit over so ventilation slots are on the bottom.
- 10. Remove five long 6/32 Phillips screws holding the two halves of the carrying case together.
- 11. Hold down the carrying handle plate and the power cord compartment and lift the upper half of the case free of the unit.

NOTE

The logic board and the power supply unit can be replaced at this point without further disassembly of the chassis. To further dismantle the unit, proceed as follows:

- 12. Slide the carrying handle plate out of the lower part of the case. Note that the broad area of the plate is below the handle at this point.
- 13. Lift the power cord compartment slightly and detach the door.
- 14. Place one hand under the front of the video monitor and the other at the back of the monitor and lift the chassis out of the case. Be sure that the AC power cord compartment lifts freely with the chassis.

9.3.4 New Case Assembly:

- 1. Position the chassis assembly so the logic-board is up, CRT screen facing technician.
- 2. Place the top half of the carrying case (the part with the ventilation slots) upside down with latches closest to you.
- 3. Place one hand under the front of the video monitor and the other at the back of the monitor and lift the chassis into the top half of the carrying case.

NOTE

When installing the chassis into the case, be careful not to pinch, trap, or rip harness assemblies.

- 4. Align screw holes in the chassis with the five mounting standoffs in the case.
- 5. Position the video harness and DC cables in the tab on the "B" drive shield.
- 6. Slide the AC power cord compartment into the case, fuse at the top and facing out.
- 7. Attach the power cord compartment door.
- 8. Slide the carrying handle plate into the case. The broad area of the plate is below the handle at this point.
- 9. Place the lower half of the case onto the chassis assembly. Be sure that the AC power compartment, carrying handle plate, and upper and lower halves of the case align properly.
- 10. Install five long 6/32 Phillips screws which hold both halves of the case together. Tighten these screws until they are snug. Do not overtighten!
- 11. Turn the unit over so the ventilation slots are on top and CRT screen facing you.
- 12. Placing thumbs below CRT screen cutout and fingers in the disk storage pockets, slide the bezel into the chassis.
- 13. Install the 6/32 Phillips screws which secure the bezel to the front of the chassis. Do not overtighten these screws!
- 14. Carefully push the video control knobs onto their shafts.
- 15. With the keyboard assembly in front of the unit, connect the keyboard cable to the keyboard connection below the CRT screen. Facing the screen, the cable connects from the left.

9.4 LOGIC BOARD

9.4.1 Logic Board Disassembly:

- 1. Position the chassis assembly with the logic board facing up and the CRT screen facing you.
- 2. Remove the 6/32 Phillips screw at each corner of the logic board. The screw in the right front corner of some logic boards has a nylon insulation washer.
- 3. Lift the logic board by the front edge and hold it perpendicular to the chassis, video control shafts pointing straight up. Make note of all connector orientations while still connected.
- 4. Remove the DC harness connector located in the extreme lower left corner of the logic board. The DC harness connector is not keyed. The RED wire on the harness must go to the left. (On the blue case, the connector is keyed by the "lip" on one side. 5. Remove the disk harness connector located in the lower left corner of the logic board at the right of the DC harness connector. Grip the connector and CARE-FULLY detach it, being sure not to bend any pins.)

NOTE

The disk drive harness connector is not keyed. The RED stripe on the harness must go to the right.

6. Remove the video harness connector located in the upper left corner of the logic board to the right of the reset button.

NOTE

The Video harness connector is not keyed. The RED wire on the harness must go to the left.

- 7. Remove external video plug located between the reset button and video contrast shaft on the front edge of the logic board.
- 8. Remove the logic board.

9.4.2 Logic Board Assembly:

- 1. Position the chassis assembly with its logic-board side up, and CRT screen facing you.
- 2. Hold the logic board perpendicular to the chassis, component-side facing you, video control shafts pointing straight up.
- 3. Connect the external video plug to the connector on the edge of the logic board between the reset button and video contrast shaft.
- 4. With the video harness running below the logic board, attach the video harness connector to the 10-Pin connection on the logic board between reset button and the contrast shaft, RED WIRE TO THE LEFT.
- 5. With the DC harness running below the logic board, attach the DC harness connector to the 7-Pin connection in the extreme left lower corner of the logic board, RED WIRE TO THE LEFT.
- With the disk harness running below the logic board, attach the disk harness connector to the 34 Pin connection located at the lower left, of the logic board's to the right of the DC harness. RED STRIPE TO THE RIGHT.
- 7. Lower the logic board onto its chassis mounting blocks.
- 8. Install a 6/32 Phillips screw with star washer at each corner of the logic board. The screw in the right front corner of some older logic boards has a nylon insulation washer to protect the trace.

9.5 ORIGINAL AND NEW VIDEO MONITOR

9.5.1 Original Monitor Disassembly:

- 1. Disassemble the chasis and bezel following earlier instructions.
- 2. Position the chassis assembly with the logic-board side up and CRT screen facing you.
- 3. Remove the four 6/32 Phillips screws securing the monitor to the chassis.
- 4. Grasp the left and right sides of the chassis assembly and carefully lift away to expose the underside of the monitor.

5. Remove the video harness connector located at the top rear of the video PC board. This is a keyed connector.

9.5.2 Original Monitor Assembly:

- 1. Position the chassis assembly vertically with handle on work bench and drive shields facing you.
- 2. If the video harness has been removed, insert the small end-connector of the harness through the left rear slot of the video shield from the inside.
- 3. Place the video monitor in front of chassis assembly, CRT screen facing you and keyed PC board connection at top rear.
- 4. Connect the keyed large end-connector of the video harness to the rear of the monitor PC board.
- 5. Grasp the left and right sides of the chassis assembly. Lift the chassis and carefully lower it onto the video monitor.
- 6. Align the monitor with the four screw holes in the chassis. install four 6/32 Phillips screws to secure the monitor to the chassis.

9.5.3 Blue Case Monitor Disassembly:

- 1. Position the chassis assembly with its logic-board side up and CRT screen facing you.
- 2. Slip the video harness cable from its tab on the chassis.
- 3. Disconnect the slip-on ground wire from its connection at the back of the video monitor shield.
- 4. Remove the disk drive from the four fasteners holding it to the back of the video shield.
- 5. Remove the video harness connector located at the top rear of the video PC board. This is a keyed connector.
- 6. Remove four 6/32 Phillips screws securing the monitor to the chassis assembly.
- 7. Remove the video monitor from its shield.
- 8. Remove the transparent face plate from the monitor screen.

9.5.4 Blue Case Monitor Assembly:

- 1. Position the video monitor in front of the chassis assembly, CRT screen facing you and keyed video PC board connection at top rear.
- 2. Lower the video monitor shield onto the monitor and align the monitor and monitor shield screw holes.
- 3. Connect the keyed, large end-connector of the video harnesss to the rear of the monitor PC board.
- 4. Grasp the left and right sides of the chassis assembly. Lift the chassis and carefully lower it onto the video monitor. Do not crimp any wires.
- 5. Align the monitor with the four screw holes in the chassis. Install four 6/32 Phillips screws to secure the monitor to the chassis.
- 6. Attach the slip-on ground connector to the connection at the rear of the video monitor shield.
- 7. Slip the disk drive harness into the four fasteners on the back of the video monitor shield.
- 8. Replace the transparent face plate on the monitor screen.

9.6 POWER SUPPLY

9.6.1 Power Supply Disassembly:

WARNING

Working with Power Supplies is DANGEROUS. Power Supplies can hold an electrical charge for long periods of time. Be careful not to touch any components unnecessarily!

- 1. Disassemble the Osborne-1 chasis and bezel as described earlier.
- 2. Position the chassis assembly logic-board-side-up and CRT screen facing away from you.
- 3. Remove the 6/32 Phillips screw from each corner of the power supply unit.

- 4. With the wires still attached, carefully lift the power supply out of the chassis.
- 5. Turn the power supply over left-to-right so the components face you and the five large capacitors are in the lower left corner.
- Remove the DC harness connector from the power supply. This keyed connector is attached to one of the three identical male connectors on the left side of the power supply.
- 7. Remove the ground wire connector from the power supply. This is a slip-on connector located in the upper left corner of the power supply.
- 8. Remove the AC input connector from the power supply. This is a keyed connector located left of the fuse on the upper side of the power supply.
- 9. (This step applies only to the blue case). Remove both interchangeable pin connectors from the 115V and 230V pins on the power supply.

9.6.2 Power Supply Assembly:

NOTE

Power Supply procedures are with DC harness installed in Chassis.

- 1. Position the chassis assembly with its logic-board side up and handle facing you.
- 2. Turn the power supply so the components face you and the five large capacitors are in the lower left corner.
- 3. Attach the AC input connector to the keyed connector located left of the fuse on the power supply.
- 4. Attach the slip-on ground wire connector to the ground connection in the upper left corner of the power supply.
- 5. Attach the keyed DC harness connector to one of the three identical male connectors on the left side of the power supply.

- 6. With the wires attached, turn the power supply over, from right to left, so the DC connector is to the right. Carefully insert the power supply into chassis.
- 7. Align the screw holes on the power supply PC board with the chassis assembly standoffs.
- 8. Install a 6/32 Phillips screw and washer in each corner of the power supply. Use a metal star washer in the upper right corner. Use nylon washers on the other three corners.
- 9. (This step applies only to the blue case). Slip the power supply harness into its tab on the chassis.

9.7 DISK DRIVES

9.7.1 Disk Drive Disassembly:

NOTE

The A drive has an 8-pin 150-OHM Terminator resistor pack. B DRIVE DOES NOT.

- 1. Disassemble the Osborne 1 chasis and bezel as described earlier.
- 2. Position the chassis assembly with its logic-board side up and handle facing away from you.
- 3. Remove the four 6/32 Phillips screws holding the "A" drive to the chassis assembly.

NOTE

Disk drive A is the drive closest to the power supply.

- 4. With the wires still connected, pivot the shielded drive horizontally to the right 90 degrees from its original position.
- 5. (This step applies only to the blue case). Remove the disk harness connector and the ground connector from drive. The disk harness connector is at the rear of the drive PC board. The slip-on ground

- connector is located at the rear of the drive either on the drive frame or the drive shield.
- 6. Remove the two 6/32 Phillips screws which hold the shield to the drive. These screws are located on the left and right sides of the drive.
- 7. Hold the drive shield down and lift the drive up enough to access the rear of the drive.
- 8. Remove the disk harness connector and the ground connector from drive. The disk harness connector is at the rear of the drive PC board. The slip-on ground connector is located at the rear of the drive either on the drive frame or the drive shield.

NOTE

The disk drive harness is not keyed. Facing the back of the drive with the strobe wheel side up, the harness is always connected RED STRIPE to the RIGHT.

- 9. Remove drive from shield.
- 10. If drive A is being replaced with another, remove the 8 pin terminator from the drive PC board and KEEP IT for installation on the new drive. The terminator is located at position RN3 on the right rear corner of the PC board.

9.7.2 Disk Drive Assembly:

- 1. Install terminator resistor pack at position RN3 of PC board. (for Drive A)
- 2. Place drive in shield with PC board facing down.
- 3. Position the chassis assembly with its logic-board side up and handle facing away from you.
- 4. Place shielded drive next to chassis assembly, strobe wheel facing up, drive door facing away from chassis.
- 5. Hold the drive shield down and move the drive enough to access the rear of the drive.


- 6. Insert the broad drive connector on the end of the drive harness through the rectangular slot at the rear of the drive shield. Connect the drive connector to the rear of the PC board, RED STRIPE on harness edge closest to you.
- 7. Connect the narrow slip-on ground connector to the male tab located at the rear of the drive either on the drive frame or the drive shield.
- 8. Align drive with screw holes in the drive shield. Install one 6/32 Phillips screw with star washer in each side of the drive.
- 9. Slide drive under chassis assembly with drive door facing you. Install the four 6/32 Phillips screws which secure the "A" drive to the chassis.

9.8 POWER PANEL

Figure 9.8 identifies the DC harness and its connectors:

9.8.1 Power Panel Disassembly:

- 1. Disassemble the Osborne 1 chasis and bezel as discribed earlier.
- 2. Remove the ground wire to the video monitor shield.
- 3. Remove the ground wire from each disk drive shield.
- 4. Remove the thermal relay from its clip on the chassis. The AC power panel should now be completely disconnected from the chassis.
- 5. Remove the screws which hold the AC power panel to the back of the power panel compartment.
- 6. Position the AC power panel with connections facing the technician, switch assembly in lower left corner, ground wires in lower right corner.
- 7. Disconnect the five-wire slip-on ground connector from the lower right corner of the power panel.
- 8. Disconnect both interchangeable pin connectors from pins "C" and "D" of the power panel.

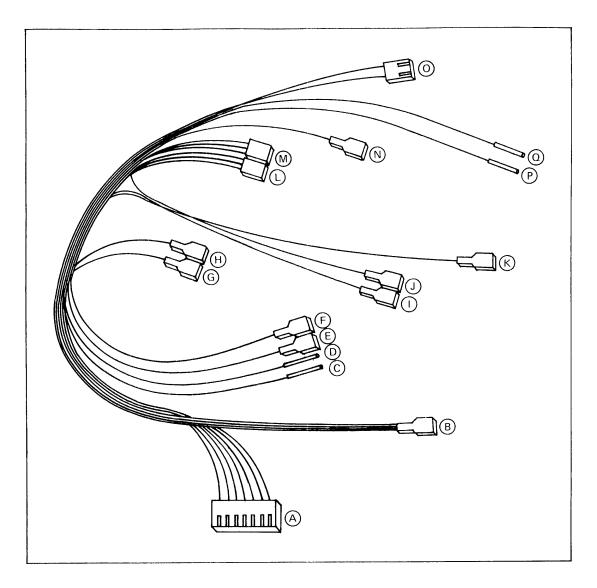

A	Logic Board DC Input	K	"A" Drive Ground
B	AC Power Panel Ground (5 wire)	(L) and (M)	Interchangeable DC Output Connectors from Power Supply
(C) and (D)	Interchangeable 115V and 230V		
	Pin Connectors to AC Panel	(N)	DC Power Supply Ground
E and F	Power Panel AC Outputs	0	AC Input Connector
<u> </u>	"B" Drive Ground	(P) and (Q)	Interchangeable 115V and 230V
Θ	Video Monitor Ground	() (<u>G</u>	Pin Connectors to Power Supply

Interchangeable Thermal Cutout Connectors

Figure 9.8 DC Power Harness

- 9. Disconnect both lower wires from the switch assembly in the lower left corner of the power panel. Do not disconnect the upper wires.
- 10. Detach the thermal relay from the wire harness.

9.8.2 Power Panel Assembly

- 1. Connect two slip-on connectors, I and J, to the thermal relay.
- Position the AC power panel with connectors facing you, switch assembly in lower left corner, and ground wire connection at lower right.
- 3. Connect the five-wire ground cable B to the connector in the lower right corner of the power panel.
- 4. Connect the AC output wires E and F to the lower connectors on the power panel switch assembly. Connect F, which runs to the thermal relay, to the right of E.
- 5. Connect two interchangeable pin connectors, C and D, to pins "C" and "D" of the power panel.
- 6. Align the power panel with the screw holes on the rear of the power panel compartment. Position the fuse box furthest from the door hinge cutouts on the power panel compartment.
- 7. Install four 6/32 Phillips screws which secure the power panel to the back of the power panel compartment.
- 8. Fasten the thermal relay to its chassis mounting clip beneath the power supply unit.
- 9. Place the thermal relay wires I and J in their notch on the chassis. This prevents pinching of the wires between chassis and case.

Osborne 1 Software

10.1	SOFTWAKE REVISIONS 63	
10.2	THE MONITOR ROM 64	
	10.2.1 Console Routines 65	
	10.2.2 Other Interface Routines 66	
	10.2.3 ROM Listings 66	
10.3	BDOS CALLS 66	
10.4	OSBORNE 1 BIOS ROUTINES 6	68
	10.4.1 The IOBYTE 68	
	10.4.2 BIOS Listings 69	

10.0 Osborne 1 Software

10.1 SOFTWARE REVISIONS

Following are the monitor ROM and BIOS revision levels to date, and a summary of the modifications that have been made:

ROM revisions

REV A — contains diagnostics, limits boot to one fixed address. This version was subsequently upgraded.

REV 1.2 — supports configurable CP/M system through MOVCPM, adds three key rollover.

REV 1.3 — Clock removed, disk drivers modified.

REV 1.4 — allows multi-density format, I/O functions moved from BIOS to ROM, graphics offset added, and increased size of BMRAM.

REV 1.4.1 — fixes reset jump

BIOS revisions

Rev A — original BIOS; subsequently upgraded.

Rev 1.2 — supports parallel IEEE, adds function keys and printer protocals (XON/XOFF, ETX-ACK).

Rev 1.3 — allows WordStar to run from serial terminal, fix of XON/XOFF and timing of serial port.

Rev 1.4 — adds printer initialization string, IEEE device addressing, BIOS modified to preserve IX and IY registers, added ability for recognition of different disk formats.

Since improvements to ROM and BIOS and subsequent release of this software were made in tandem, both have the same revision numbers. You can determine the address of BDOS and CCP for any version by using the starting address of BIOS for each release shown below:

Version #	start of BIOS address
Rev A	EA00
Rev 1.2	E600
Rev 1.2.1	E500
Rev 1.3	E500
Rev 1.4	E100

10.2 THE MONITOR ROM

The monitor ROM consists of 10 assembly language source modules:

- ROM initialization and startup
- CP/M boot routines
- Console routines
- PIA routines
- ACIA routines
- Disk routines
- Diagnostic routines (not after 1.2)
- Formatting routines
- Utilities
- RAM linkages

The initialization routines set the computer into a known state, display a message to the user, then wait for the user's response. Three responses are allowed:

RETURN	boot from disk drive A
"	boot from disk drive B
]^	homes screen

In addition, a jump table is located at location 0100 hex which parallels the jump table of BIOS.

The bootstrap loader in ROM loads $\mbox{CP/M}$ from the diskette using the following assumptions:

Pre-1.4 ROM single density

track 0	sectors	1 - 8	CCP
	sectors	9 - 10	BDOS
track 1	sectors	1 - 10	BDOS
track 2	sectors	1 - 2	BDOS
	sectors	3 - 10	BIOS

1.4 **ROM**

track 0	sectors	1 - 2	CCP
	sectors	3 - 5	BDOS
track 1	sectors	1 - 1.5	BDOS
	sectors	1.5 - 2.5	BIOS

The boot routines in BIOS are responsible for displaying the sign-on message (if any), and for setting up the base page parameters.

10.2.1 Console Routines

The console routines include the special commands which the Osborne 1 recognizes as terminal control functions. In particular, the Osborne 1 emulates many of the functions which control the TeleVideo 912 and 920 terminals:

Hex Sequence	ASCII Control Code	Description of Action
07	^G	rings the bell
0B	^K	moves cursor up
0 A	^J	moves cursor down
0C	^L	moves cursor right
08	^H	moves cursor left
1A	^ Z	clears screen and homes cursor
1E		homes cursor
1B 23	ESC #	locks keyboard
1B 22	ESC "	unlocks keyboard
1B 3D	ESC =	cursor XY positioning
1B 53	ESC S	screen XY positioning
1B 51	ESC Q	insert character
1B 57	ESC W	delete character
1B 45	ESC E	insert line
1B 52	ESC R	delete line
1B 54	ESC T	clear to end of line
1B 29	ESC)	start half intensity display
1B 28	ESC (end half intensity display
1B 4C	ESC L	start underline display
1B 4D	ESC M	end underline display
1B 67	ESC g	start graphics display
1B 47	ESC G	end graphics display
1B 5B	ESC [homes screen

The console routines are responsible for keyboard input, console output, bell ringing, updating the real-time clock, and checking to see if the disk drive should be deactivated.

10.2.2 Other Interface Routines

The parallel, serial, and disk interface routines directly control the 6821, 6850, and 1793 chips through memory-mapped I/O.

Diagnostics for the keyboard, memory, and diskette are provided in the ROM, as well as routines to bootstrap from either disk drive, and to load special test programs via the serial port if the disk drives are not functioning. These diagnostics have been removed from the 1.4 ROM and Osborne Computer Corporation will be providing an optional system test to replace the missing diagnostics in the near future.

10.2.3 ROM Listings

The current ROM was coded by several different organizations under the direction of Osborne Computer Corporation. Nevertheless, all maintanence and modification of the ROM is performed by the software department at Osborne Computer Corporation. The listings that follow were created with the Sorcim ACT I assembler and fully utilize Z80 code.

Listings for the 1.3 Monitor ROM, followed by the most current 1.4 Monitor ROM are included at the back of this manual.

10.3 BDOS CALLS

Function Number	Description	Entry Values	Return Values
0	system reset		
1	console read		A = character
2	console write	E=character	
3	reader read		A = character
4	punch write	E=character	
5	list write	E=character	
6	direct I/O	E=type*	A=0 if busy
7	get IOBYTE	• •	A = IOBYTE
8	set IOBYTE	E = IOBYTE	
9	print string	DE=address	
10	read console buffer	DE=address	
11	get console status		A=status
12	get version number		HL=version #
13	reset disk		
14	select disk	E=drive	A=found ***

Function Number	Description	Entry Values		Return Values
15	open file	E=drive		A=found ***
16	close file	DE=FCB add	dress	A=found ***
1 <i>7</i>	search for file	DE=FCB add		A=found ***
18	search for next			A=found ***
19	delete file	DE=FCB add	iress	A=found ***
20	read next record	DE=FCB add	lress	A=found ***
21	create file	DE=FCB add	lress	A=found ***
22	create file	DE=FCB add	lress	A=found ***
23	rename file	DE=FCB add	lress	A=found ***
24	get login vector			HL=drive
25	get disk number			A=drive
26	set DMA address	DE=DMA ac	ddress	
27	get allocate vector			HL=allocation
28	write protect			
29	get R/O vector			HL=R/O vector
30	set file attributes	DE=FCB add	lress	A=found ***
31	get disk header addres	SS		HL=address
32	set/get user number	D = FF (get)		A=user #
		code (set)		
33	read random	DE=FCB add	ress	A=error ***
34	write random	DE=FCB add	lress	A=error ***
35	compute file size	DE=FCB add	ress	A = record
36	set random record	DE=FCB add	ress	A = record
37	reset drive	DE=drive ve	ctor	A=0
38	write random zero fil	l DE=FCB add	ress	A=error ***
*type: FF=ir	C register nput from console character to output to conso		3 = can	ding unwritten data not close current extent t to unwritten extent
**status:	00=not ready FF=ready		5=dire	ectory overflow c past physical end of disk
***found:	FF=not found			

NOTE

Drive numbers are coded: 0=A 1=B

00=valid entry


You must set the random record position (7D-7F hex) before reading or writing random records.

10.4 OSBORNE 1 BIOS ROUTINES

The BIOS routines supplied by Osborne Computer Corporation include several additional functions to the standard BIOS CP/M expects.

10.4.1 The IOBYTE

The IOBYTE is a reserved memory location (0003 hex) which defines the current assignment of physical to logical devices. The IOBYTE is divided into four distinct fields for the four logical devices recognized by CP/M. The logical device names are now obsolete (i.e., do not match Osborne physical device names) and are used only for the sake of maintaining the standard CP/M nomenclature. There are four logical devices each of which takes up two bits as follows:

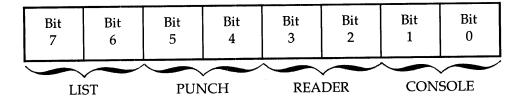

A value in the range 00 to 11 hex (0 to 3 decimal) determines the assignment of each logical device as follows:

Value	CP/M Physical	Osborne Physical
00	TTY:	Keyboard + Screen
01	CRT:	Serial Port
10	BAT:	Parallel Port
11	UC1:	IEEE Port
00	TTY:	Keyboard + Screen
01	PTR:	Serial Port
10	UR1:	Parallel Port
11	UR2:	IEEE Port
00	TTY:	Keyboard + Screen
01	PTR:	Serial Port
10	UP1:	Parallel Port
11	UP2:	IEEE Port
00	TTY:	Keyboard + Screen
01	CRT:	Serial Port
10	LPT:	Parallel (Centronics)
11	UL1:	IEEE Port
	00 01 10 11 00 01 10 11 00 01 10 11 00 01	00 TTY: 01 CRT: 10 BAT: 11 UC1: 00 TTY: 01 PTR: 10 UR1: 11 UR2: 00 TTY: 01 PTR: 10 UP1: 11 UP2: 00 TTY: 01 CRT: 10 LPT:

Besides fully implementing the CP/M IOBYTE, routines are provided to drive printers which require XON/XOFF or ETX/ACK protocols. Automatic horizontal scrolling, screen size for word wrap, default baud rate and programming of the function keys are maintained by the BIOS.

10.4.2 BIOS Listings

The BIOS listings are included at the end of this manual.

Theory Of Operations

11.1 INTRODU	UCTION 71
11.2 ·FUNCTIO	NAL OPERATION 71
	NIC CODES 72
11.4 BASIC TI	
	75
	77
11.6.1 Addre	• •
11.6.2 RAM	
	Refresh Operation 77
	Enable Signal WE* 77
	Write Operations 78
	ory Multiplexing 78
	TER GENERATOR 78
11.9 VIDEO D	
11.10 VIDEO SC	CAN GENERATOR 80
11.11 KEYBOAI	RD AND ASSOCIATED BUFFERS 81
	IVE AND DISK CONTROLLER 81
	Drive Controller 81
11.12.1 Disk 11.12.2 Disk	· · · · · · · · · · · · · · · ·
	Drive Electronics 82
11.12.3 Disk 11.12.4 Disk	
11.12.4 DISK	FOLIMAL OZ

11.0 Theory of Operations

11.1 INTRODUCTION

This chapter provides a functional description of the Osborne 1 Computer functions. To understand this chapter, an understanding of digital Logic and TTL (transistor-transistor-Logic) is required.

11.2 FUNCTIONAL OPERATION

The major functional areas of the Osborne 1 Computer as shown on Figure 11.2 are: Basic Timing, CPU, ROM, RAM, Video System, Parallel I/O, Serial I/O, Keyboard, and Disk System.

The basic timing originates with a 16 MHz crystal oscillator. The 15.9744 MHz signal is divided down to provide nominal 8, 4, 2, and 1 MHz signals to control other circuits of the system.

The (CPU) Central Processor Unit controls and communicates with the remainder of the system through an 8-bit data bus and a 16-bit address bus. In addition to the two busses shown on the diagram, the CPU has several additional inputs and outputs that are not shown on the block diagram. These inputs and outputs are control functions and will be described later.

The (ROM) Read Only Memory is a 4 kilobyte Read-Only Memory with tristate outputs connected to the data bus. When the ROM is enabled, data stored at the address on the address bus is put on the data bus.

The Random Access Memory (RAM) is a 64 kilobyte dynamic memory. The RAM data outputs are tied to the data bus through a gate that is enabled only when the CPU accesses RAM. The RAM can be accessed by the video logic also. RAM output for the video display is latched, then fed into the address inputs of a two kilobyte EPROM, called the character generator. This EPROM has dot patterns stored in it and is not connected with the CPU data or address busses. Its outputs go to a shift register where the dot pattern is shifted out (one at a time) to the video interface, and then to the CRT.

The disk system consists of a disk controller and two disk drives. It receives and transmits data on the CPU data bus and is addressed by the address bus. The disk system uses single density Osborne disks.

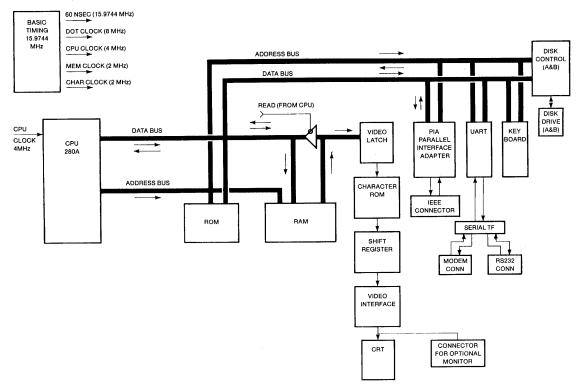


Figure 11.2 — Functional Block Diagram

The Osborne 1 can interface with IEEE 488 and RS-232-C standard external busses. There is also a MODEM port. The RS-232-C serial data communications port uses a universal asynchronous receiver/transmitter (UART). The UART can send and receive, through an external MODEM (MOdulator/DEModulator), over telephone lines.

Another connector on the front panel is for an optional larger monitor; the last connector is for connecting an optional battery pack for operating the computer where no commercial power is available.

11.3 MNEMONIC CODES:

Mnemonic	Description	Function
CAS	Column Address Strobe	Strobes RAM column address
DOT CLK	Dot clock	Used in conjunction with the Character Generator and video logic to produce dot patterns on display
NMI	Non Maskable Interrupt	Restarts ROM program
RAS	Row Address Strobe	Stobes RAM row address

11.4 BASIC TIMING

Crystal controlled oscillator X1 operates at 15.9744 MHz. The oscillator output is buffered by UB13. The oscillator circuit output at a nominal 16 MHz is used as 62 NSEC timing signal and is also used to clock 4-bit synchronous counter UB11 (on the positive edge of the clock) to develop additional timing signals of 8, 4, 2, and 1 MHz (Figure 11.4).

The 8 MHz is inverted by UA11 and becomes the dot clock (DOT CLK). One of the destinations of DOT CLK is Shift Register UA14 (Sheet 4 of the Schematic); UA14 is positive edge sensitive which is the reason for inverting DOT CLK. The active edge of DOT CLK is also the active edge of signals that follow at lower frequencies or lower rates. UA14 will load synchronously with the rising edge of DOT CLK when a load pulse (H COUNT*) Active low is indicated by (*). is applied. H COUNT* is generated by decoder UB1 (Schematic, Sheet 2). UB1 Pin 9 will be active during the counts E to F of counter UB11 which generates H COUNT*.

The Memory Counter is UD3. During the time H COUNT* is active synchronous with the rising of the 8 MHz clock, Shift Register UA14 will load new data from the video circuitry. The character on the screen is bracketed by the H COUNT* pulse which sets an inflexible limit in timing. A horizontal display line consists of 64 pulses including video retrace blanking which leaves 52 characters visible. Each character time is very nearly 1 microsecond, so that the vertical frame rate is in full synchronization with the AC line (60 cycles).

At the decoder UB1 (Schematic, Sheet 2), there is an active low CHAR CLK* at Pin 15. CHAR CLK is inverted by UE12 (Schematic, sheet 8). The other two

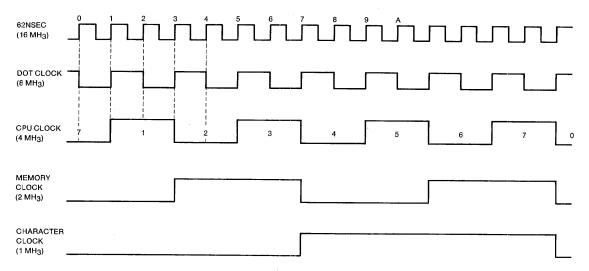


Figure 11.4 — Basic System Timing

inputs to the decoder are CPU CLK and MEM CLK. CPU CLK is a 4 MHz signal that will change synchronous with the low to high transition of DOT CLK. MEM CLK and CHAR CLK also have transitions on the rising edge of the DOT CLK, (the active times that are decoded for the operation of the machine state or the logic timing synchronizing circuits). CARRY is a 62 nanosecond pulse which is fed to a chain of synchronous counters which are clocked with the 62 NSEC clock so that the pulse must be just that long in order to allow for one advance. The CARRY output occurs only during the F count of counter UB11.

The address decoder UB1 (Schematic, Sheet 2) decodes address lines 13 and 14 and the added conditions to UE5 of ROM MODE* and address 15. ROM MODE* comes from a sequence of flip-flops set by various interrupt conditions, by a power-on-reset, or by a particular I/O reference. If ROM MODE* is active (low), address 15 is low, address 14 is low and address 13 is high indicating the second 8K of memory, then one of the UB1 outputs (Y1) will be active. In the bottom 8K of memory with address 13, 14, and 15 all low, Y0 will be active. This output is ROM CE* (chip enable) which allows ROM access.

MREQ* is ANDed in UE11 with RD* to produce ROM RD*. Note that the MREQ* is delayed from the Z80's MREQ* and is not present when a refresh is occurring; MREQ* is different from the MREQ* normally associated with a Z80. ROM RD* enables the ROM output, therefore, ROM access is developed from Chip Enable (address 13, 14, and 15 low together with ROM MODE* low) and the ROM Output Enable going active when MREQ* goes active (as long as read is present). There is no RAM access under these conditions.

If ROM MODE* is not active, decoder UB1 will not have any output low. If ROM MODE* is active, and address 14 or 13 is high (in the ROM MODE but in the upper 3/4 of memory), Y2 or Y3 will be low or no output will be low. This is the condition for a RAM access.

If either of the inputs on pins 4 or 5 of UD1 is low, pin 6 will be high which will prevent a RAM RQ* from being issued from UA4, pin 3. On the other hand, if UD1 pins 4 and 5 are high, pin 6 will be low permitting a RAM request. On an MREQ* signal, a RAM request will be issued. RAM RQ* is applied to gate UC2, pin 12 where it will pass thru if the Memory Counter UD3 is in a finished condition (low output on pin 11). The Memory Counter will lock up in the finished condition because of the UB3 inversion applied to UD3 pin 3 which causes the counter not to count. The Memory Counter will count up to 8 and stop with QD high. If UD3-QD is locked high, then UD2-8 is high which results in a low output (UD2-10) permitting the RAM RQ* to pass thru UC2. It will be the OR'd thru UC1 and applied as a WAIT* to pin 24 of the Z80. This means that if the Memory Counter (UD3) is in the finished state, the RAM request will immediately result in a WAIT* request to the CPU. In order to leave this state, the other destination of RAM RQ* from UA4-3 must be examined.

The timing conditions at UC1-8 are as follows:


- (1) Count 8 to 9 from counter UB11 via decoder UB1
- (2) Condition of UB1-10, count C to D
- (3) M1* which comes direct from the CPU

The M1 memory timing sequence from the Z80 is shorter than the non-M1 memory sequence. Two possible openings for M1 access are allowed, but only one possible opening is allowed for a non-M1 timing sequence. Therefore, either M1 and C-D or 8-9 are the possible times RAM request will be gated thru UC2-8. The output of UC2-8 is called RAM LOAD* which is applied to UD1-12 where it is ORed with C-D from decoder UB1. This means that even if a RAM request is not issued, C-D time will cause Memory Counter UD3 to load. If the Memory Counter is finished counting, a high active signal is applied to UD1-9. Therefore, if a RAM request is not issued on C-D time, UD1-9 will cause the Memory Counter to load. UD3 inputs A, B and C determine what is loaded into the memory counter. Input D will always load to a zero, and the count will start. Bit C indicates no RAM request and the load came from C-D of decoder UB1. This will cause a video access cycle of RAM. Video timing must allow for video access thru memory and to the Video Latch UA18 (Schematic, Sheet 4). The data must be presented to the latch and to Character Generator UA15 in time for the propagation delay (415 nanoseconds). The video deadline is 450 nanoseconds in advance of the H COUNT* load signal to Shift Register UA14 which is the end of the zero count state on Video Counter UB1. Video access will count from 4 to 8 in the Memory Counter. QC will be high and remain high until the count reaches 8. Active low constitutes CPU access. UD3-13 starts at zero and will remain zero for the first count based on the 125 nanosecond dot clock. It will go high for two counts, then it will go low as CPU time changes low. At that point, QD will go high and a finished condition will exist.

11.5 ROM (Read Only Memory)

The ROM (See Figure 11.5) is a device with information pre-written into its memory slots. The contents of the ROM within the Osborne 1 cannot be changed. There are 12 address inputs and 8 data outputs, which means that the ROM has a capacity of 4 kilobytes.

The ROM has tri-state outputs. When pin 20 (Output Enable*, or OE*) is high, the output pins present a high impedance to the data bus lines, permitting other devices to use the lines when ROM is not in use. When pin 20 is high, no information is put on the data bus by the ROM and the address lines have no effect. When pin 20 is low, the data stored in the ROM is connected to the data bus, and the bus will see whatever is stored in the location being addressed at that time.

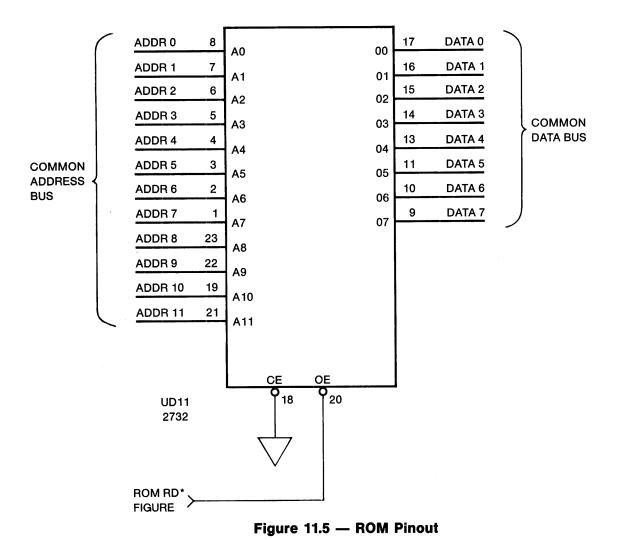

Operation of the ROM (Schematic, Sheets 2 and 5) is basically controlled by pin 18 (Chip Enable) and pin 20 (Output Enable). ROM CE* (Chip Enable) and ROM RD* (read) are applied to pins 18 and 20 respectively. ROM CE* and ROM RD* are generated as briefly described below. A detailed discussion is provided under the Timing Function.

ROM CE*: ROM CE* is generated by 2-to-4 line decoder UB1 which is under control of ADR 13, 14, and 15 and ROM MODE*. Address lines 13 thru 15 are used by the CPU to select the ROM chip rather than another device on the bus. The ROM MODE* signal is available to ensure no bus conflict will occur when ROM data is using the bus (UA4 and UB1 act in concert to ensure that RAM and ROM cannot be selected simultaneously.

ROM RD*: ROM RD* (which is active low) is generated by UE11 which allows the ROM (UD11) to access the bus via its tri-state outputs only after causing the RAM to wait.

11.6 RAM (Random Access Memory)

The RAM is a dynamic 64K by 8 bit memory. It is physically structured as a 4×8 matrix (UA20 thru 27, UB20 thru 27, UC20 thru 27, and UD20 thru 27) of integrated circuits (IC), each IC being a 16K by 1 bit RAM. This arrangement results in a 64K by 8 bit memory.

11.6.1 Address Lines

Fourteen address lines are required to specify 1 of 16,348 memory cells. Since the RAM ICs have 7 address inputs, addresses are strobed into the chip seven bits at a time. To read from the RAM, seven row address bits are set up on input addresses A0 through A6, then latched into the chip by a Row Address Strobe (RAS*). Then seven column bits are set up on A0 through A6 and latched in by the Column Address Strobe (CAS*). After both RAS* and CAS* are low, the data output of the cells addressed becomes valid.

11.6.2 RAM Data Output

The outputs are tri-state. Except during a memory cycle by RAS* and CAS*, the outputs present a high impedance to the data lines.

11.6.3 RAM Refresh Operation

It is the nature of this type of memory that the stored data will deteriorate rapidly; therefore, a refresh operation must be performed by applying a RAS* strobe to each row address every 2 milliseconds, or more often. In the Osborne 1 the RAM is refreshed during each video cycle by reading display data from the RAM.

The A0 through A6 pins on all the RAM chips are tied together; that is all pins 5 (A0) are together, all 7 (A1) and so on, so that whatever is on the RAM address bus is applied to all 32 chips. Likewise, all the DI (data in) pins are paralleled. The DO (data out) pins are also tied together.

11.6.4 Write Enable Signal WE*

Write Enable from OR gate UE5 enables data to be put onto the bus. Write Enable is a function of the CPU delayed access input at UE5 pin 2 and the RD* signal. RAM bus access is also controlled by the tri-state line driver UA19, the state of which is controlled by UE5 output pin 11. The output of UE5 is a function of READ*, pin 12, and CPU delayed access, pin 13. The generation

and access will be discussed as part of the timing function. Addresses are set on A0 through A6 by the address multiplexers UE15, UE16, UE17, and UE18 and through buffers UE19. The gate inputs to the buffers are tied low, thus the buffer outputs are always enabled. The DO (data out) pins to the RAMs are connected to the data bus through the read buffer UA19. This driver is a tristate output device gated by UE5.

11.6.5 CPU Write Operations

When RD* and CPU TIME* are low, RAM data outputs are gated out on the data lines. When CPU TIME* is high, the RAM is (probably) in a video cycle and RAM outputs go to the video circuits. The CPU TIME* and RD* signals switch RAM output to the CPU data lines.

To read a memory cell it is necessary to set up address bits A0 through A6 with a row address, strobe with RAS*, set up a column address, strobe with CAS*, and while the RAS* and CAS* strobes are low, data appears at the outputs.

11.6.6 Memory Multiplexing

Memory multiplexing (Schematic, Sheet 4) is done by four ICs, UE15 thru UE18. Pins 14 and 2 (S0 and S1) switch between CPU and video, and between rows and columns, as determined by ACCESS, CPU TIME*, and the 62 NSEC clock. The addressing, reading, writing, and strobing the memory with appropriate delays are a separate function. The paragraphs on timing describe the timing and sequence of these signals.

11.7 CHARACTER GENERATOR

The character generator EPROM is a part of the video section that performs a translation on the character data as it comes out of the RAM, to the data as it is displayed on the screen. The data in RAM is generally stored using the ASCII code (American Standard Code for Information and Interchange) which is a table of 128 bit patterns that relate to typical characters and control characters from the keyboard. The Character Generator EPROM is entirely separate from the Program ROM and performs a different function. The Character Generator EPROM converts the character code in RAM to a pattern of dots for the display.

When a key is pressed on the keyboard, it has to get into the Character Generator EPROM, since that is the path it has to take in order to be displayed in the screen. When it comes from the keyboard, it is read by the processor and temporarily stored in the RAM. The processor reads the RAM to determine the next action. It looks through a table in the EPROM that contains the

keyboard decoding table. A part of the table information resides in the RAM so the user may change the coding of the keys. The numeric keys with the control key pressed down result in reference to this table in RAM.

11.8 I/O SERIAL PORT

Divider UC3 (Schematic, Sheet 7) is a divide-by-13 counter that operates from a 2 or 4 microsecond signal that is obtained from the video counter UA13. This works out to a 26 or 52 microsecond clock period. The software registers in UC4 chip can be set to divide by 16 or 64 as necessary. This results in a 1200 baud bit rate or a 300 baud bit rate for the 6850.

11.9 VIDEO DISPLAY

There are 52 microseconds for display across the screen divided into 52 character elements. There are 24 text lines vertically, each line consisting of 10 elements vertically and 8 horizontal dots; the display matrix is therefore 8×10 dots.

The Character Generator outputs an 8-bit element based on the character code from RAM and a line scan number (0–3) from UB15 divider that indicates which line of the character is being displayed. Every time the retrace returns to the beginning and starts a new scan line, the scan counter increments. It starts at 0 and resets to 0 after the count of 9. The resultant line of text, has text address TXADR.

In terms of the actual data coming out of memory, there are 24 text lines, and Counters UD17 and UD18 count from 0 to 23 (24 lines). There are two text line times that are not seen. The 24th and 25th lines occur during the vertical retrace. The visible size of the display is 24 lines. Horizontally, Character Counters UD15 and UD16 keep track of which character is being displayed at a particular location on the screen. The display can be scrolled vertically and horizontally in hardware. This means that the starting point of each of those lines, horizontal and vertical, can be changed.

Registers contain the values of the first horizontal count in memory that will be accessed, and the value of the first vertical count. Any changing if these two reference values will cause the display to appear to move on the screen. This action is implemented as part of a large scale integration (LSI) parallel interface adapter (PIA) that is a 6821 chip. These reference numbers are latched into the PIA from the CPU.

This indicates that there is a horizontal and vertical set of pointers that can be manipulated by manipulating data as presented by the 6821 chip and results in changing the positioning of the display screen relative to the RAM memory.

As previously described, a text line in RAM can go out to a width of 128 characters. The screen displays only 52 characters at any given moment. The portion of the 128 characters to be displayed is determined by the horizontal offset.

11.10 VIDEO SCAN GENERATOR

The video display timing starts with the horizontal timing signal (CHAR CLK) developed by 4-bit Counter UB1-11. CHAR CLK is inverted by UE12 (CHAR CLK*) and is applied to Decoder UB1. UB1 output count of E-F results in H COUNT* which is applied to the Scan Generator input at UA13-1. The input to UA13-1 is divided down to provide 2, 4, 8 and 16 microsecond outputs. The 2 msec and 4 msec outputs are applied to the baud rate generator UC3 which is part of the I/O serial port. The 16 microsecond output is applied to UA13 where it is further divided down to provide two 64 microsecond outputs. One of the 64 microsecond outputs UA13-10 is inverted through UE23D and routed to the external monitor connector. This is the horizontal sync pulse. The other 64 msec output is inverted by UA11 and applied to UA12. The flip-flop formed by two sections of UA12 develops the horizontal blanking pulse.

Flip-flop UD14 develops a one character wide pulse. The Q output (UD14-7) advances Scan Counter UB15, resets Horizontal Counter UA13, and also increments Text Line Counters UD17 and UD18.

The Q* output (UD14-6) reloads Character Counters UD15 and UD16 with the horizontal offset.

Divider UB15 develops the SCAN 0 to 3 signals. The SCAN 0 and SCAN 3 signals are applied to the inputs of AND gate UB13 that increments the text address counters (UB17 and UB18) by one each time scan number nine occurs. The audio alarm is enabled by the PB5 output of parallel interface adapter (PIA) UC15 and is modulated by SCAN 2 (UB15-7).

The QD output from UB15 (SCAN 3) clocks a line counter formed by UB15 and UB14. This line counter develops the vertical blanking and sync signals.

The vertical blanking pulse output from AND gate UB13 is also routed to the external monitor connector through inverter buffer UE23. Vertical blanking is also applied to another section of inverter buffer UE23, mixed with the horizontal blanking output from UE23, and applied to gates UE22. The outputs from the two gates (UE22) are inverted by buffer UE23 and applied to the CRT video via video contrast control R44.

Flip-flop UE21 is used to insert the cursor signal and DIM* level via gate UE22 onto the CRT video line along with the video signal that originates from the video display shift register UA14.

The outputs of counters UD15 and UD16 (CHADR 0 to 6) and UD17 and UD18 (TXADR 0-4) are routed to the RAM address multiplexer circuits.

11.11 KEYBOARD AND ASSOCIATED BUFFERS

Input to the Osborne 1 is made via the keyboard unit. The keyboard is comprised of a series of 69 key switches which connect columns (COL 0 to 7) and rows (ROW 0 to 7).

The keyboard circuitry is an 8×8 matrix with a key switch located at the junction of each pair of lines. The circuitry is enabled when ADR 9 line is set high, I/O SEL* is set low, and RD* line is also set low. This results in enabling UE12 tri-state buffers that transmit the COL 0 through COL 7 levels via the data lines (DATA 0 through DATA 7) to the CPU.

Pressing a key connects the associated ROW and COL lines. The voltage level from the ADR line is transferred to the ROW line via Inverter UE13 or UE14. The keyswitch passes this level to the COL line, and it is then routed through enabled tri-state buffers of UE12 to the data lines to the CPU.

11.12 DISK DRIVE AND DISK CONTROLLER

There are two 5-1/4" Disk Drives provided as an integral part of the Osborne 1. The two units permit recording and playing back information on single sided, single density, soft sectored diskettes and transferring this information from or to RAM.

11.12.1 Disk Drive Controller

The disk drive controller circuit is a 1793 LSI chip, that provides all the necessary control of the two disk drive units (1 and 2). The disk drive controller (UB7) is a serial interface that is under software control. The 1793 interfaces with the disk drive electronics via buffer interface gates UA8 thru UA10.

11.12.2 **Disk Drive**

The Osborne 1 contains two disk drive units that store information on a floppy disk. Each disk has 40 tracks capable of storing 102K bytes for a total of 80 tracks (204K bytes) with two drives. The disks when operating rotate at 300 rpm that results in 200 millisecond period of rotation. The head can move across the 40 tracks taking approximately 20 milliseconds per track step time. The recorded data is retrieved as a serial data stream. This data is examined by the disk controller to decipher which sector is being read.

11.12.3 Disk Drive Electronics

The disk drive electronics board on each drive provides the following functions:

- 1. Read amplification to amplify signals received from the magnetic read heads
- 2. Write drive control that is used to drive the recording head
- 3. Motor control electronics used to maintain the disk drive motor running at a constant speed
- 4. Stepper motor control used to activate the stepping motor and move the head across the disk to the proper track in response to step commands from the disk controller
- 5. Track 0 sensors
- 6. Write protect that detects if a tab has been placed over a notch in the disk envelope prohibiting the ability to write on the disk
- 7. Index sensing that senses a hole in the disk to provide an index point

11.12.4 Disk Format

The disk track format is such that it provides the writing and reading of magnetic flux densities along a disk track. An electrical pulse, applied to a write head, will result in polarizing the magnetic particles in the disk at a specific spot. During the read process, the spot will cause an electrical read pulse to be developed. These pulses when written, will normally occur at 4 microsecond intervals.

To be assured that the correct pulse train versus noise is read, the pulse is gated with a 4 microsecond clock pulse generated by a counter. In this manner, noise transient effects will be minimized.

The index timing pulse occurs once each rotation of the disk. With a disk present in the drive assembly and the drive door closed, the index sensor optically detects the presence of a disk hole. Only one hole is permitted per disk to identify the beginning of sector 1. Disks that contain additional holes (hard sectored disks) will not operate correctly in the disk drives.

To verify a good recording, the information writing operation must be completed before the second index pulse occurs. A second index pulse will terminate the operation and will cause an error indication to occur. The index pulse received by the 1793 disk drive controller is a significant indicator of operational status.

11.13 RESET AND NMI

Reset and NMI are two signals generated separately that produce similar results.

NMI: Pressing the Reset Switch S1 on the front of the Computer will cause the non-maskable interrupt (NMI) to be generated from the debounce buffer UE20 (Schematic, Sheet 1). The NMI or reset signal causes ROM to be addressed (at location zero) as explained later. When Reset switch S1 is pressed, the following sequence occurs:

- 1. NMI is applied to the D input of UB6 and to pin 4 of AND gate UA4 (Schematic, Sheet 3).
- 2. The M1* output of the CPU is inverted by UB12 and clocks flip-flops UB6 and UB4. The Q output of UB6 goes low, and this signal, ANDed with switch signal, applies NMI* to the CPU.

The next M1* pulse switches the Q output of UB4 low, and the pulse after that sets the Q output of UB4 (ROM MODE*) low. The active low Q* output of UB4B prevents further clocking of UB1 and UB4 via OR gate UB4UA4.

UD10B functions as an I/O write cycle decoder. The low active outputs of UD10A perform as follows:

- 1. Y0 clears flip-flop UB4 and ROM MODE* becomes low active.
- 2. Y1 presets UB4 and ROM MODE* goes high which enables RAM if MEM REQ* is low.
- 3. Y2 causes BIT 9 to go high. UE10A serves as a latch so that BIT 9 remains high until Y3 goes low, setting BIT 9 low.

Reset: Before the computer power supply is turned on, Capacitor C12 (Schematic, Sheet 1) is completely discharged. Turning the power supply on results in the Capacitor (C12) being charged to 5V. This charging does not occur instantaneously. The time it takes depends on Resistors R1, R6 and Capacitor C12. While C12 is charging, the input to UB3A is in the low state (between 0 and 2.0 Volts) and this results in the output of UB3B, which is the reset signal, being low. Reset is routed to:

- 1. Z80 CPU UC11
- 2. The parallel port interface chip UC7
- 3. Interface chip UC15 (Figure 5)
- 4. Clear input of flip-flop UB4

The reset signal resets the parallel port interface and the video interface chip. The effect of the reset signal on the CPU and on flip-flop UB4 is the same as the NMI signal.

Osborne 1 Schematics


- 12.1 MAIN LOGIC BOARD SCHEMATICS 8512.2 DISK ELECTRONICS BOARD SCHEMATICS


105


12.0 Osborne 1 Schematics


12.1 MAIN LOGIC BOARD SCHEMATICS


Following are the schematics for the main logic printed circuit board:

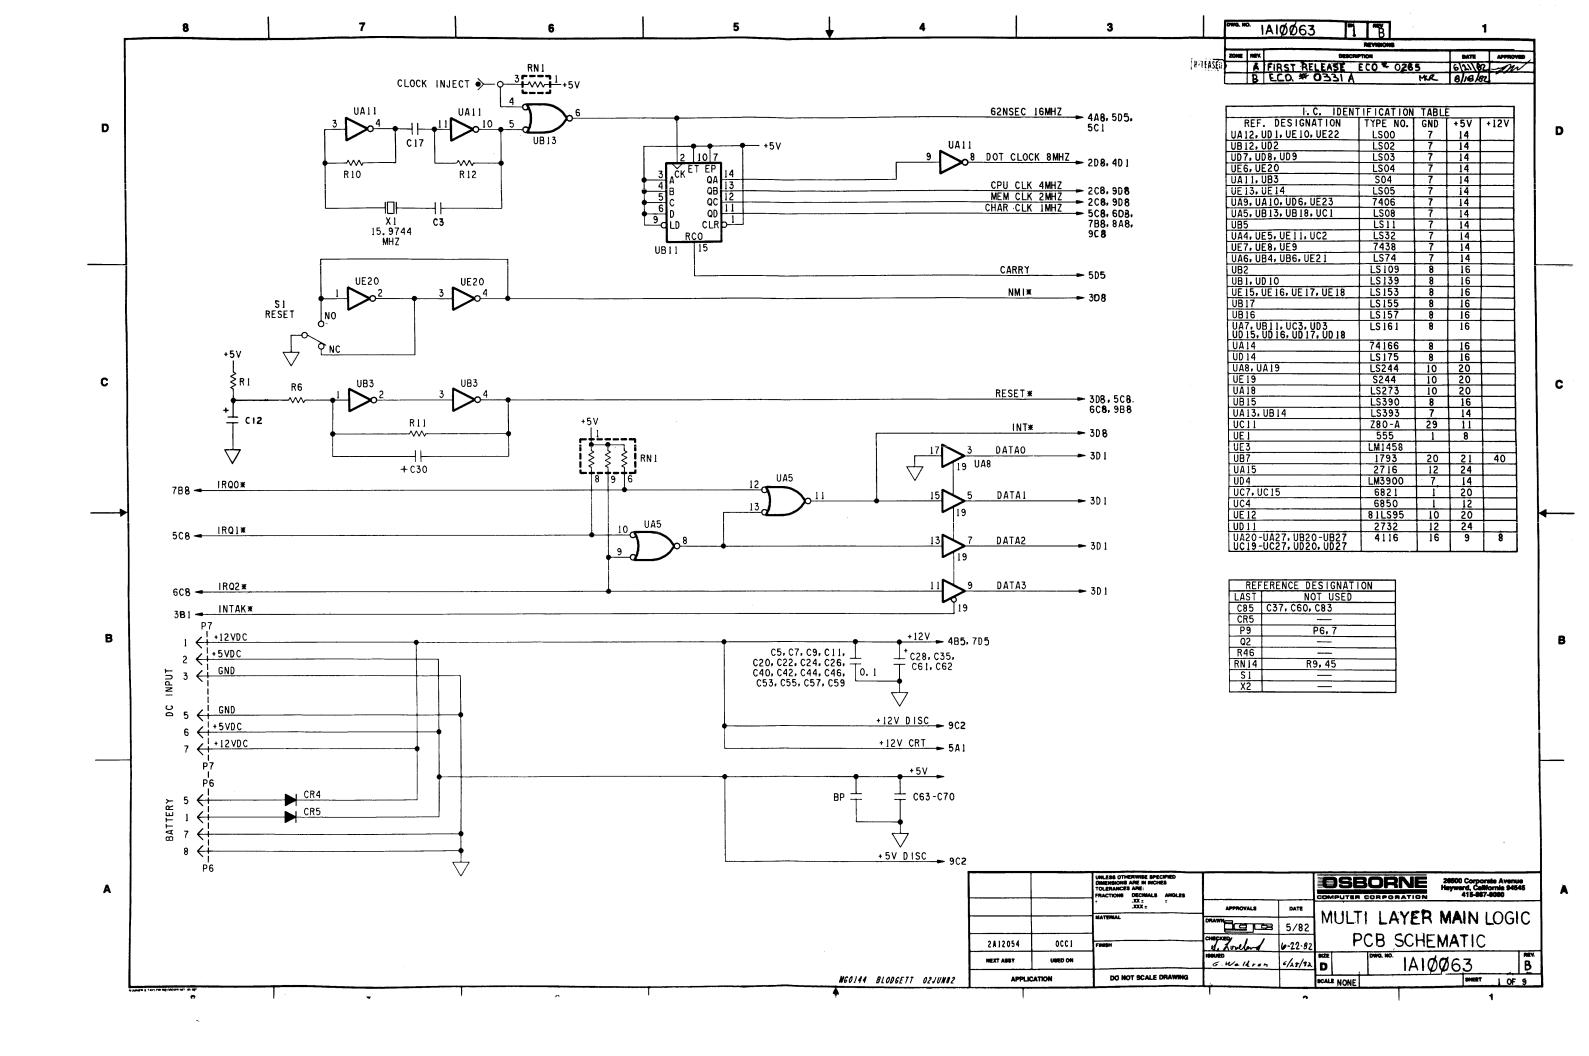


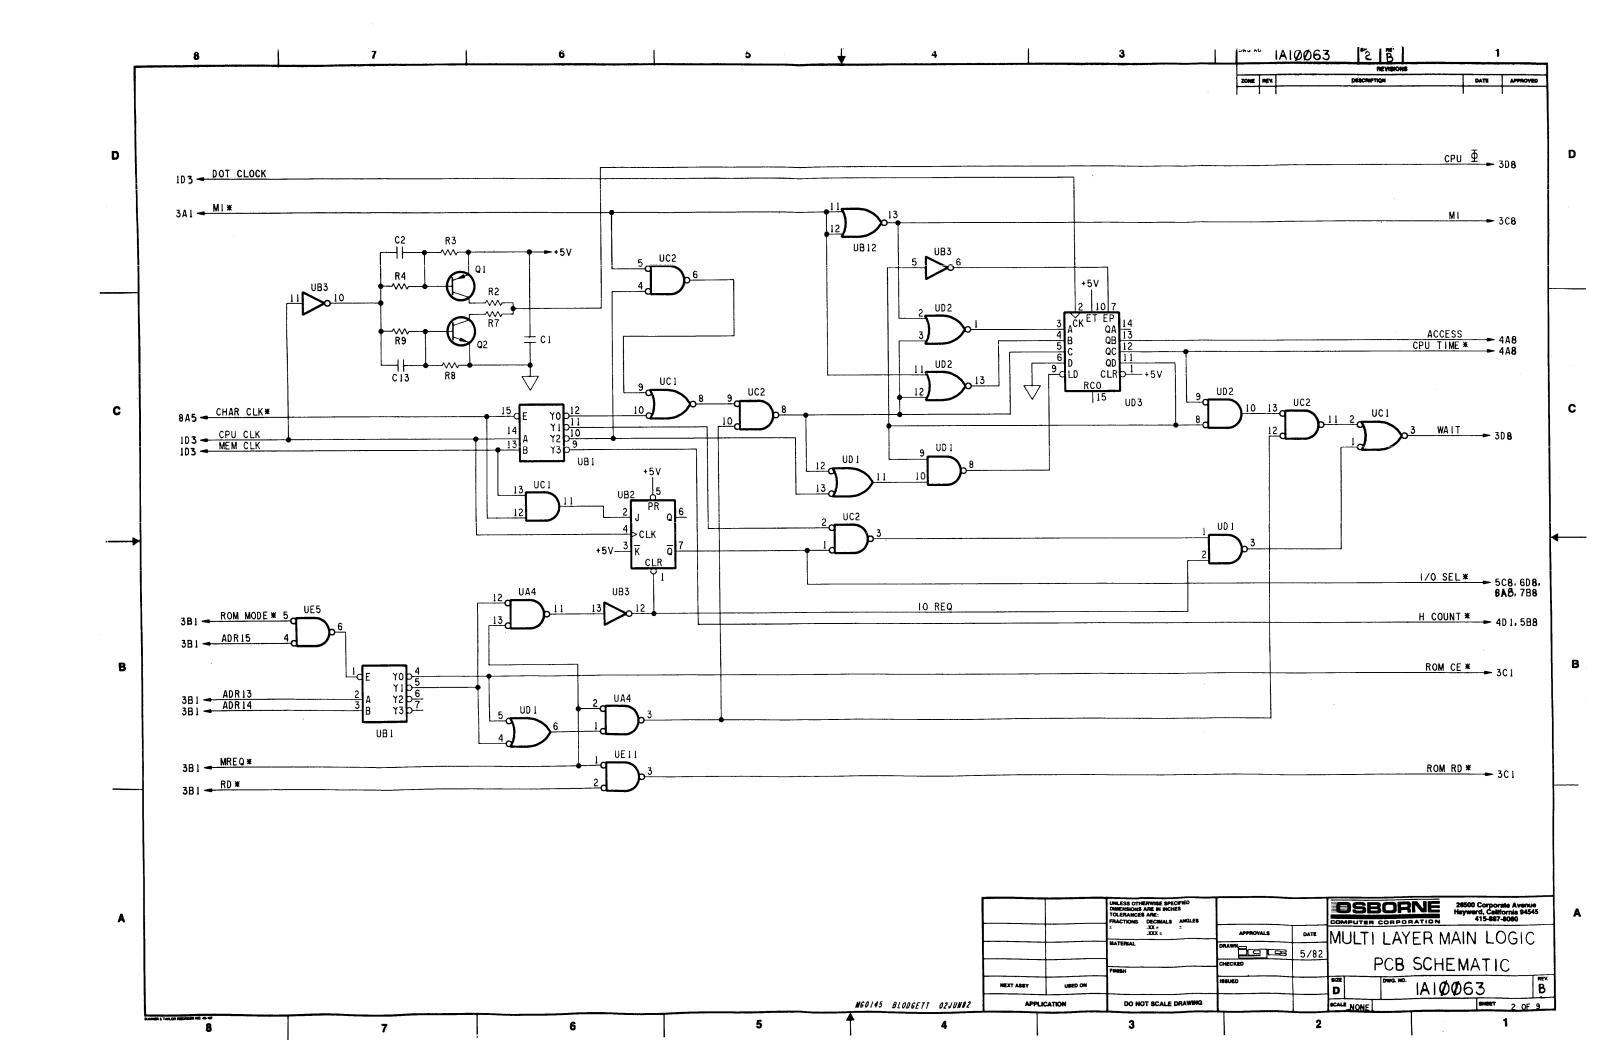


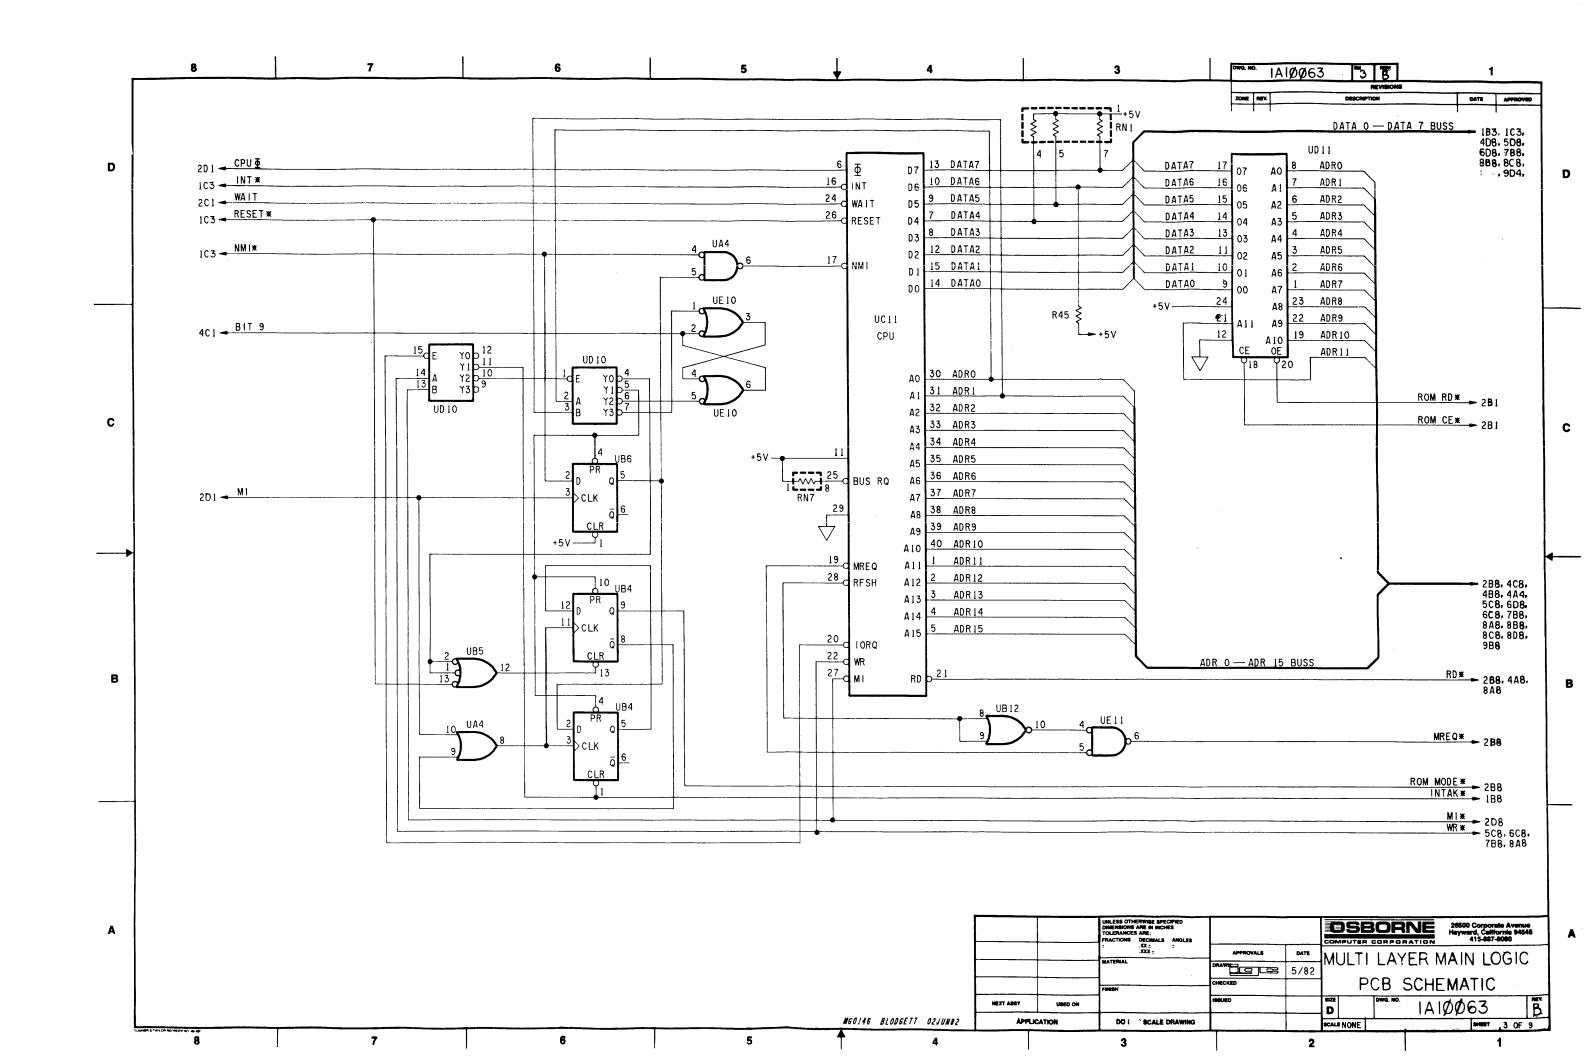


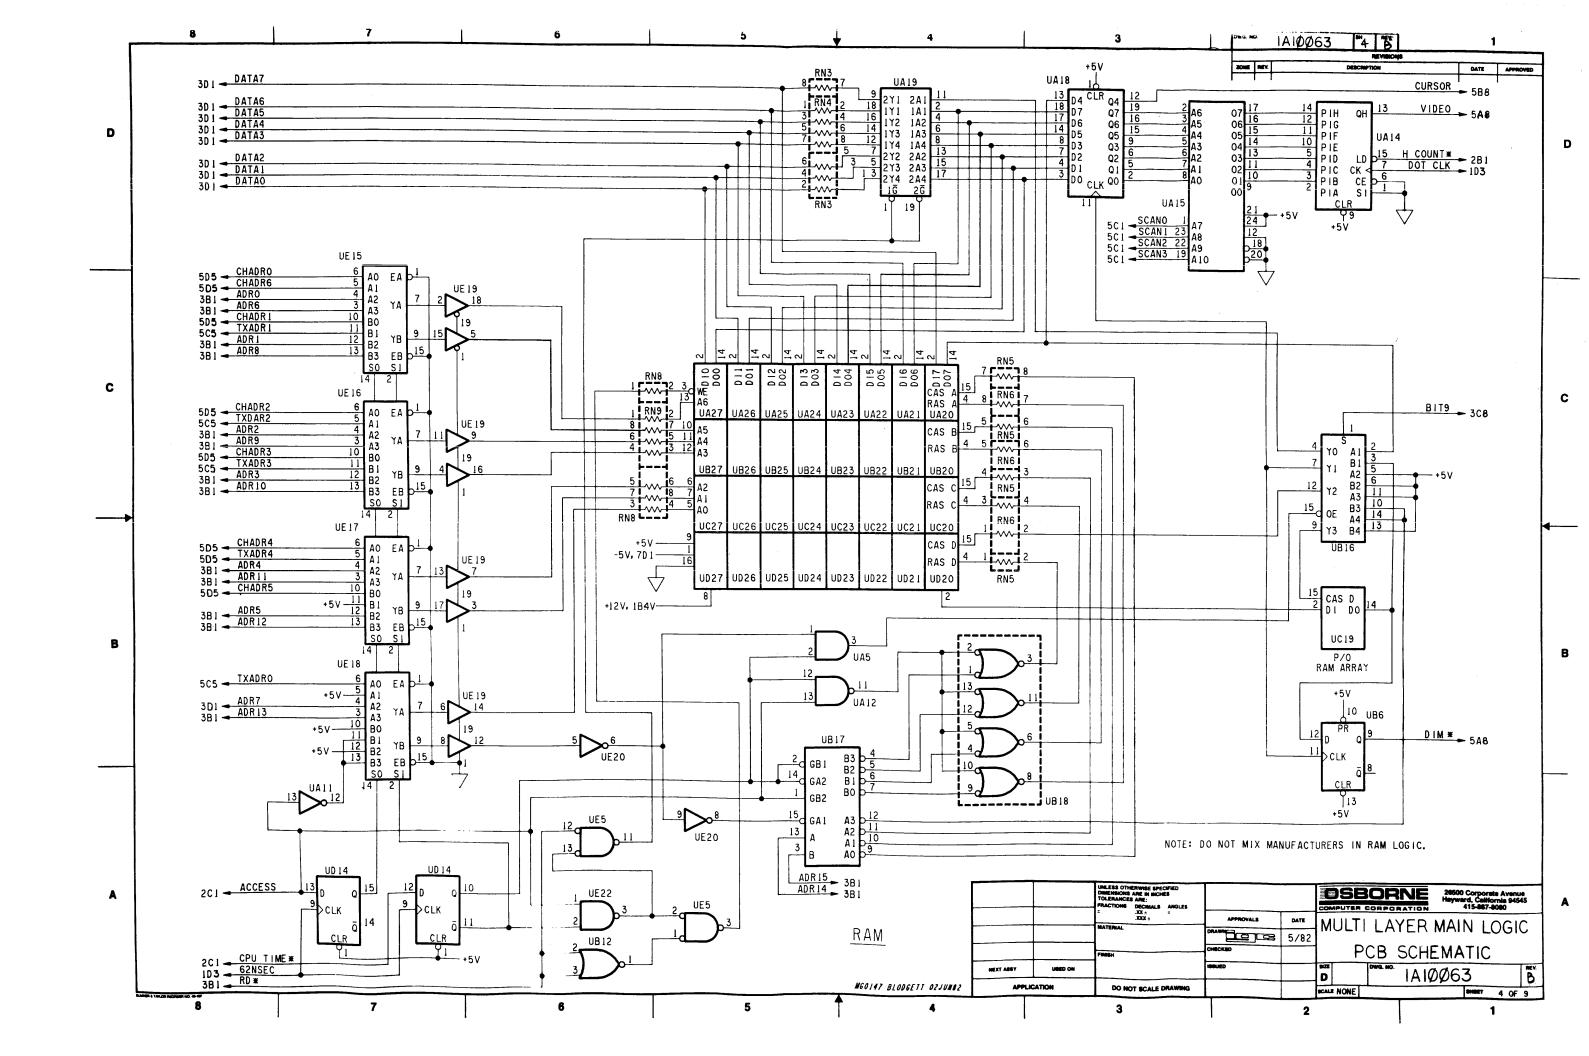


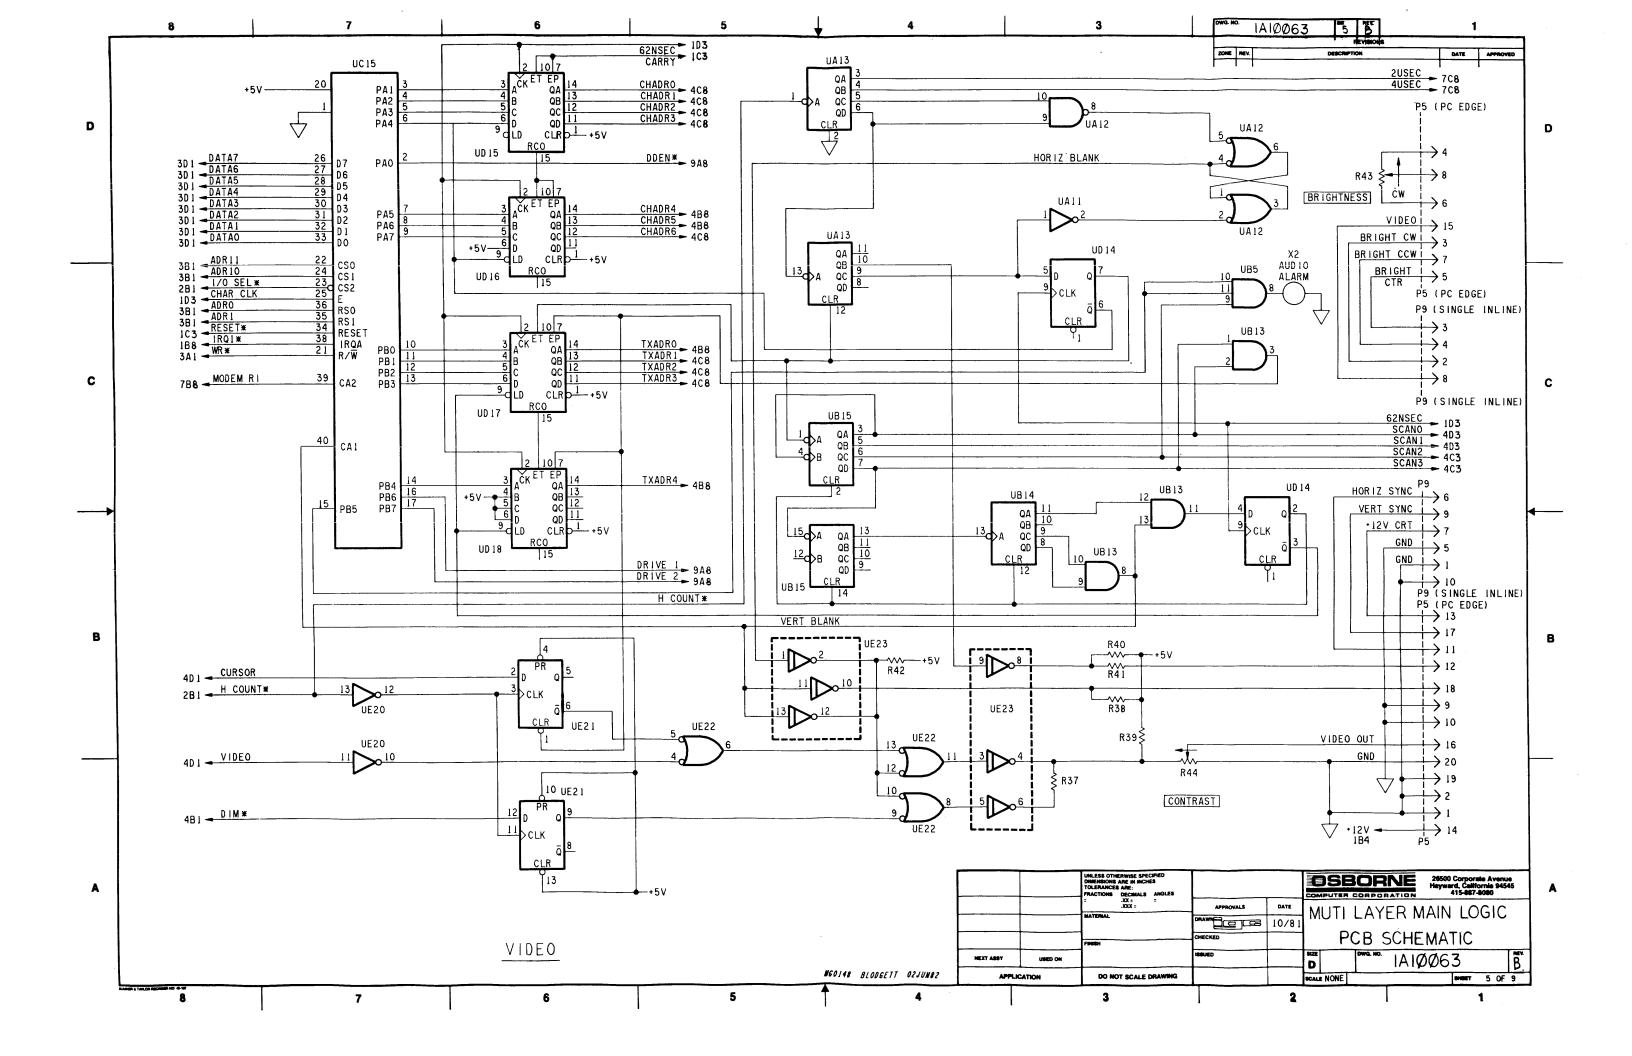

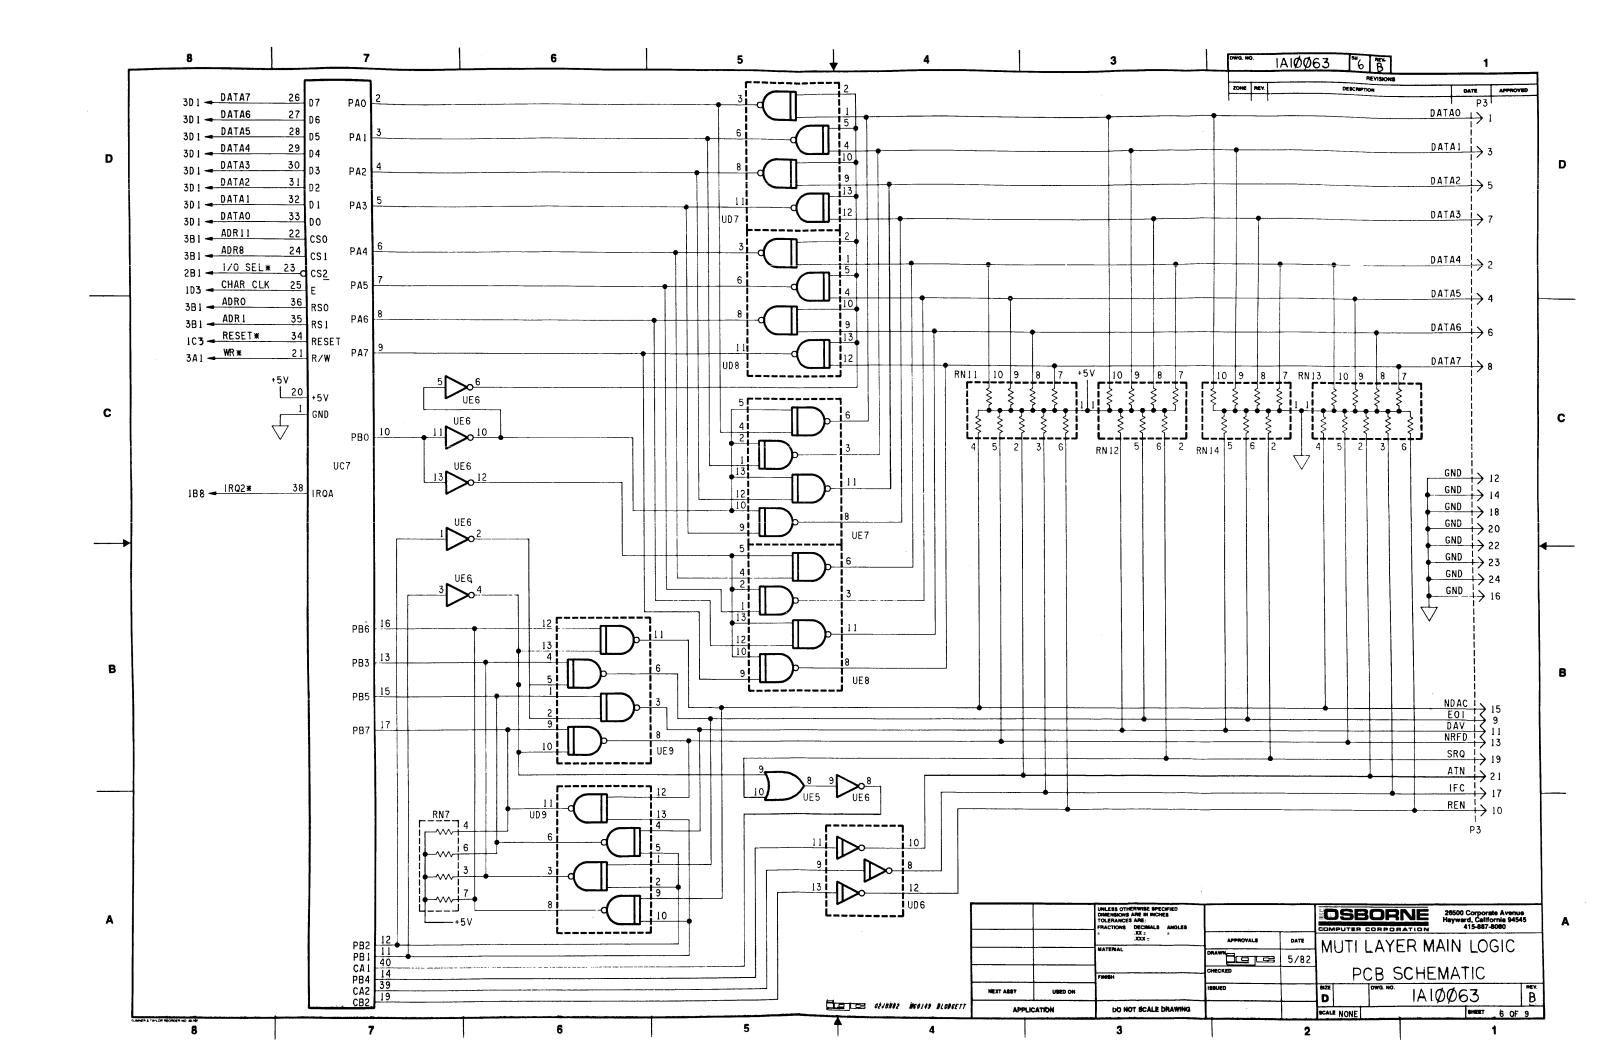

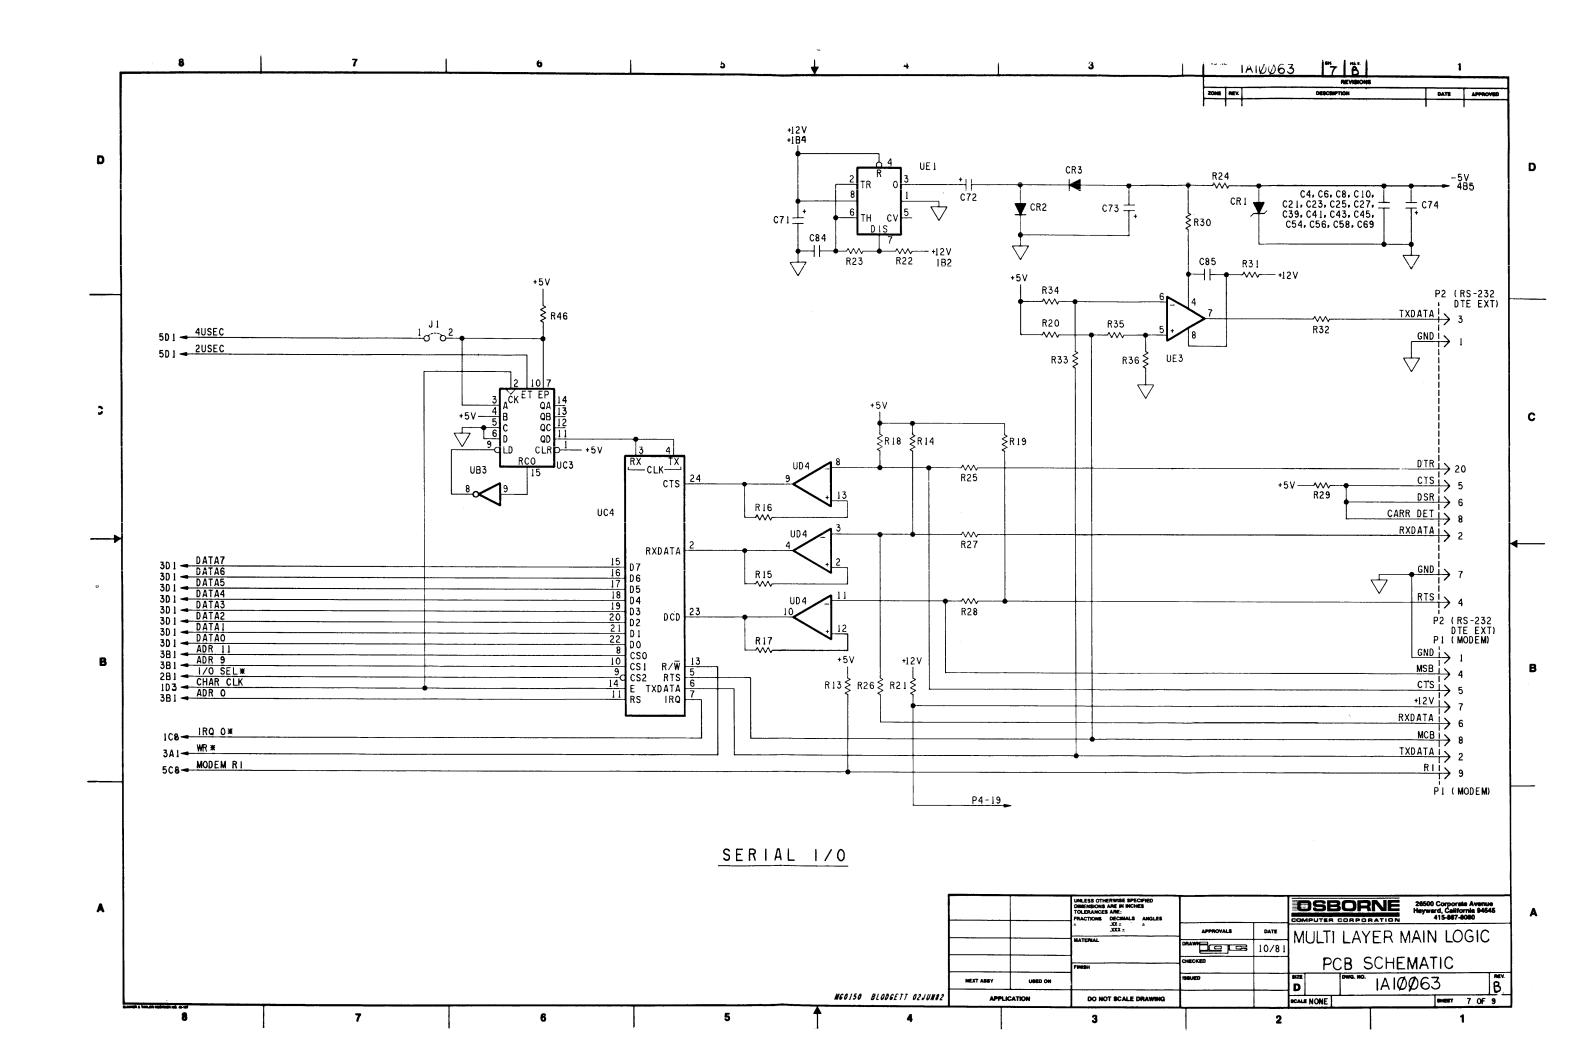

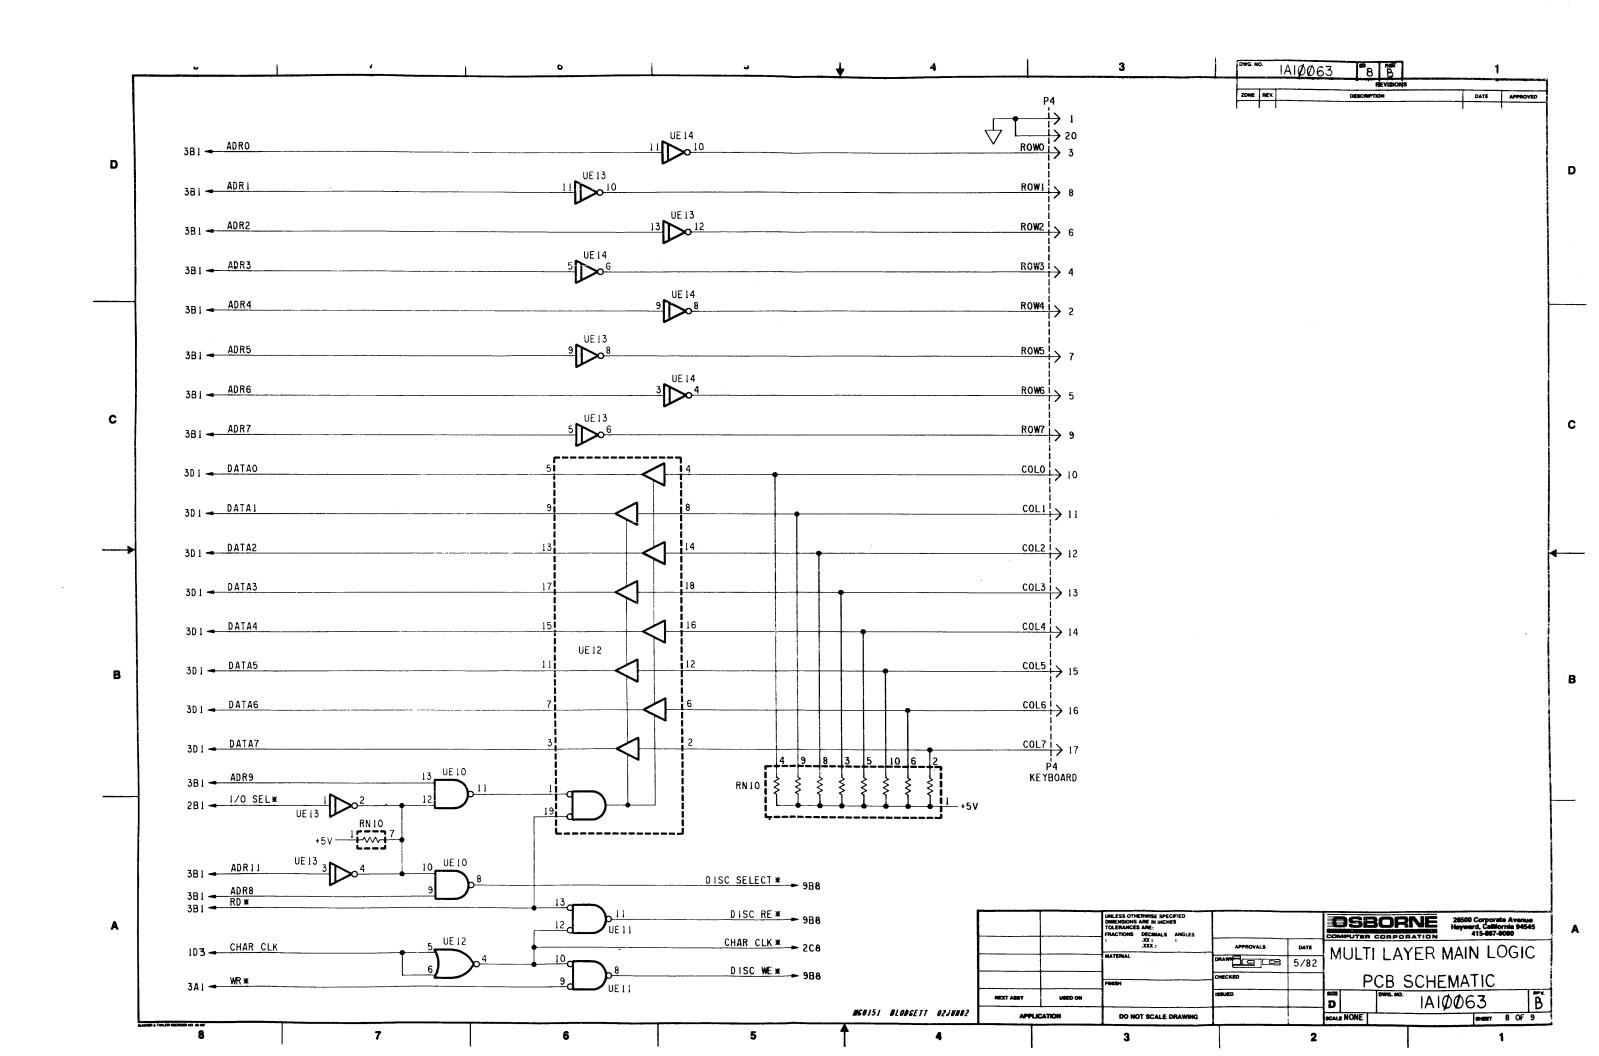

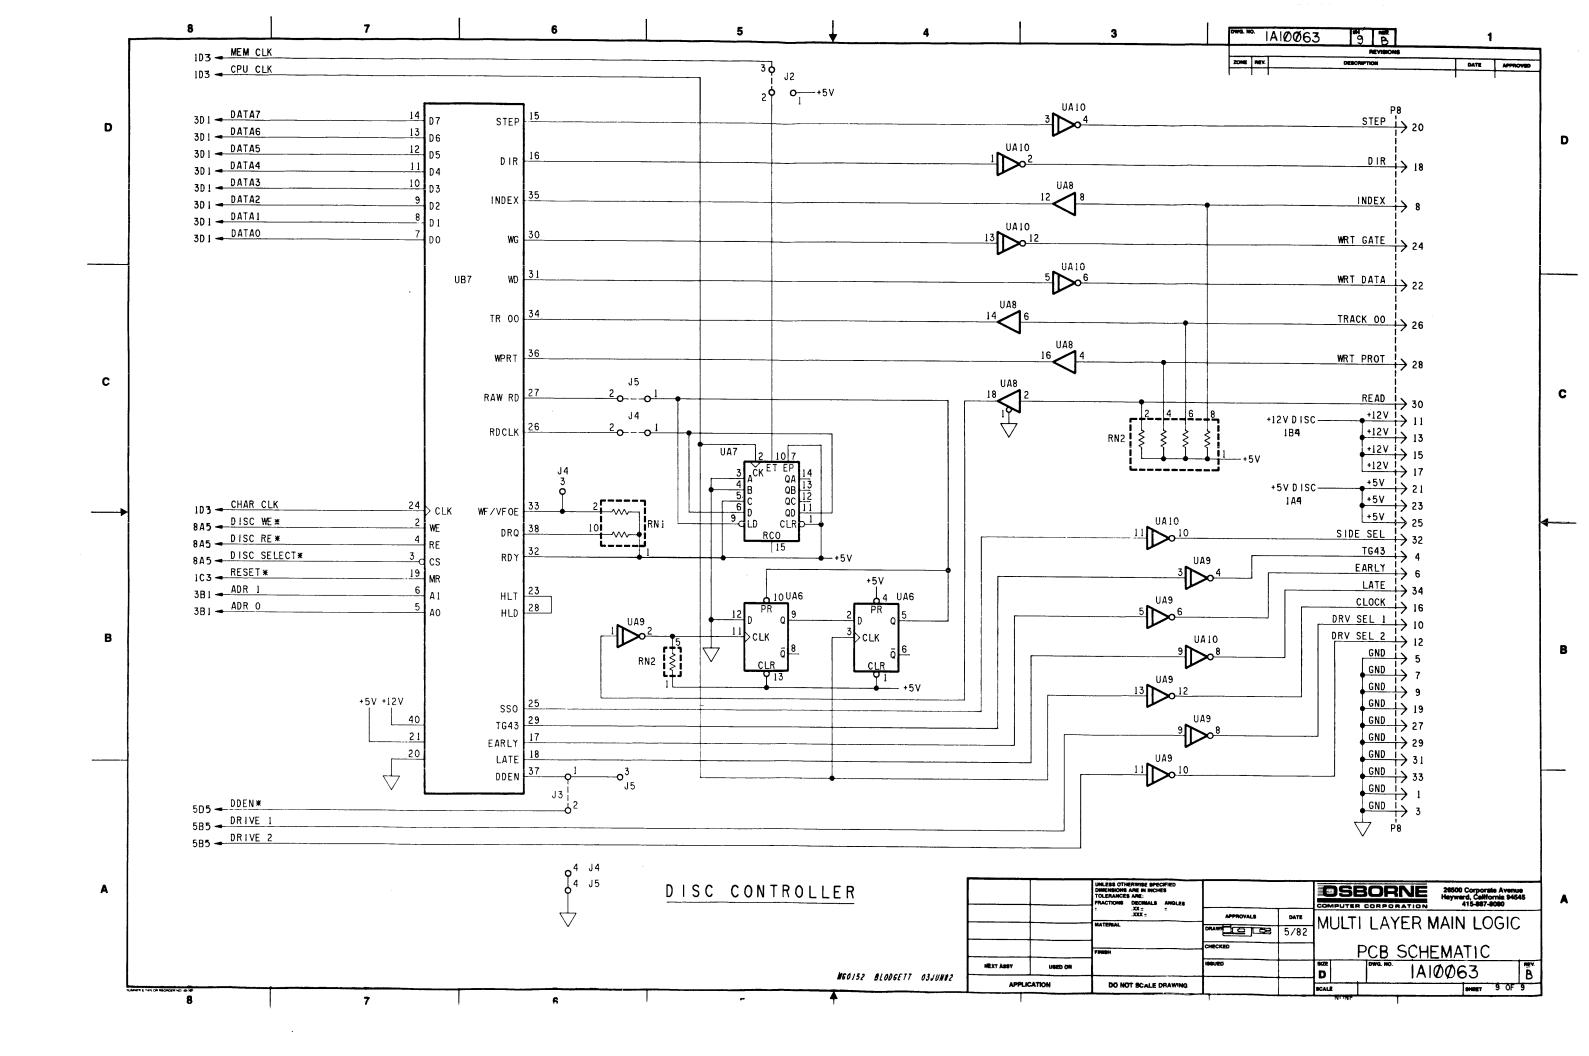



1			TTI	TLE: D MULTLYR MAINLOGIC PCB ASSY		
	I OSBORNE COMPUTER CORP I					
1	I Drawn: KDK IChecked M. IDATE 9/8/82 IRevision H I IDrawn: KDK IChecked M. IAPPVd: 157 MATERIALS I IReleased: REIE/SED I					
IDrawn: KI	DK <u> Checked</u>	141.0	<u>J. App</u>	vd: Myran IECO#: 0401 Date:	Released: REIEASED	
1DETACHE	ED LIST OF	MATERI	ALS_		1 Istalification	
	<u>PART NO. 1</u>	QTY I			<u> </u>	
	710063-00	A/R I		ISCHEM, MULTI LAYER MAIN LOGIC PCB		
	P10063-00		EΑ	IFAB, MULTI LAYER MAIN LOGIC PCB	1	
1002 1 36	910256-00 l	001 1	EA	ID CHAR GEN PRGMD EPROM ASSY	TUA15	
				ID SYSTEM PRGMD EPROM ASSY	IUD11	
	P11000-00			174LS00		
	11002-00				TUB12, UD2	
	11003-00				IUD7, UD8, UD9	
	11004-00				TUE6, UE20	
	11005-00				IUE13, UE14	
	11008-00				(UA5, UB13, UB18, UC1)	
	11010-00				TUB5	
	11032-00				TUA4, UC2, UE5, UE11	
				174LS74	TUA6, UB4, UB6, UE21	
	11109-00 I				INBS	
	11139-00				TUB1,UD10	
				174LS153	TUE15, UE16, UE17, UE18	
	11155-00				IUB17	
	11157-00 l			174LS157	TUB16	
1018 17P	11161-00			174LS161	TUA7, UB11, UC3, UD3, UD151	
	!	ı		I [*]	UD16, UD17, UD18	
	1	1		Alternate P/N 7P11163	1	
	11166-00 I			174LS166	TUA14	
	11175-00				IUD14	
				174LS244	TUA8, UA19 I	
	11273-00				TUA18	
	11390-00			174LS390	TUB15	
				174LS393	TUA13, UB14	
	11895-00 1				TUE12	
	11897-00			174504	TUA11, UB3	
	11898-00 l	001 1	EΑ	1748244	TUE19	
	11899-00			· · · 	TUA9, UA10, UD6, UE23	
		003 1			TUE7, UE8, ÚE9	
				16821 PARALLEL I/O	TUC7,UC15 I	
				16850 SERIAL I/O	TUC4	
				11793 DISK CONTROLLER	TUB7	
				IZBØA MICRO PROCESSOR	TUC11	
1034 17P1				14116 16K MOS RAM	TUA20-27, UB20-27, UC19-1	
1 1	1	i		1	127,UD20-27	
				LM CONTINUED		


Drawn:	KDK Checked	Mary	IAnn	TE 9/8/82 Revision Vd: Myran ECO#: 0401 Date:		RELEASED)
	ACHED LIST OF	MATER	ALS			
ITEM		QTY		TITLE	TREFERENCE D	ESIGNATOR
235				ILM 1458 LINEAR, OP AMP	IUE3	
	7P11818-00 (001	EA	ILM 3900 LINEAR, OP AMP	IUD4	
	7P11820-00	001	EA	INE555V LINEAR, TIMER	IUE1	
040	7P30001-00	002	I EA	11N4001 DIODE, 1A, SILICON	ICR2,CR3	
041	7P30002-00	001	I EA	IIN5231B DIODE, ZENER 5.1V, 10%	ICR1	
042	1 7P30003-00	002	I EA	IMR501 DIODE, RECTIFIER 3A	ICR4, CR5	
045	7P30006-00	001	I EA	12N3906 TRANSISTOR, PNP	IQ1	
Ø46	1 7P30007-00			12N3904 TRANSISTOR, NPN	102	
050	1 7P40025-00			IXTAL 15.9744MHZ +005%HC18U	IX1	
Ø51	7P40026-00			IALARM AUDIO, PIEZO PC MOUNT	1X5	000 074
052	7P45501-00			ICAP, DIPPED, TANT, 1.0 UF 20V	1028,035,061	, 662, 674
	i			rnate P/N 7P45505-00	1074 070 077	
	7P45502-00			ICAP, DIPPED, TANT, 15UF, 15V	1071,072,073	
	1 7P45604-00		I EA	ICAP, ELECT., ALUM 22UF, 16V	1012	
	7P46103-00		I EA	ICAP, AXL, CER, . 001uf +-10%, 50V	IC17 IC1, C14, C15,	C16 C18 F
056	7P46104-00	028	I EA	ICAP, AXL, CER, . 01UF, +-30%, 25V	1029,031,032	
		1		!	1036,038,047	
		1	1	1	1050,051,052	
	i	1	1	1	1077,078,079	
	i .	1	}	1	1C82, C84	,, ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
^E7	 	ነ ነውልን	i ea	ICAP, AXL, CER, Ø. 1UF, +-50%, 25V	104-11,020-8	7. C39-46.
057	7P46105-00	1 645 1	I EH	1 DEAD, HAL, CER, 6. 101, 1 DEA, LOV	1053-60,063-	
aro	! 7P46330-00	i Colori	. EO	ICAP, AXL, CER, 33PF +-5%, 50V	103	, ,
	1 7P46530-00	I OO I	1 50	ICAP, AXL, CER, 68PF, +-05%, 50V	102	
	1 7P46188-00	1 (2)(2)1	I EO	ICAP, AXL, CER, 180pf, +-10%, 50V	IC13	
	1 7P46106-00	1 (2)(2)1	I EO	ICAP, 22UF+-20% 12V ALUM EL AXL	1C3Ø	
	1 7P50006-00	1 001	I FO	IRES, VAR, PC MT, 100K, 30%, 1/4W	1R43	
	1 7P50007-00	1 (2)(2) 1	I FO	IRES, VAR, PC MT, 500 OHM, 30%, 1/4W	1R44	
	1 7P51001-00	1 001	I FA	IRES, NWK, 150 OHM SIP 8/P P/U	TRN2	
	7P51004-00		LEA	IRES, NWK, 3.3K SIP 8 PIN P/U	IRN7	
067	7P51007-00	ו ממו	LEA	IRES, NWK, 10K, SIP 10 PIN P/U	I RN1	
	7P51008-00	003	I EA	IRES, NWK, 3.3K, SIP 10 PIN P/U	IRN10, RN11, F	RN12
	1 7P51009-00	1 002	I EA	IRES, NWK, 6.8K, SIP 10 PIN P/U	IRN13, RN14	
070	7P51011-00	1 004	I EA	IRES, NWK, 33 OHM SIP 8 PIN ISO	IRNS, RN6, RN6	3, RN9
071	I 7P51014-00	1 002	I EA	IRES, NWK, 82 OHM SIP 8 PIN ISO	IRN3, RN4	
072	7P52101-00	003	I EA	IRES, FXD, 1/4W 5% 100 OHM	1R3, R30, R31	
073				IRES, FXD, 1/4W 5% 1.0K	1R32, R35, R37	
Ø74				IRES, FXD, 1/4W 5% 10K	1R13, R20, R26	5, R34, R36

	LYR MAINLOGIC PCB ASSY		110063-06
M IDATE 9/8/82	IRevisio	on H	
DETACHED LIST OF MATERIALS !	IECO#: 0401 Date:	IReleased:	RELEASED
FFM PART NO. GTY UM	TITIF	TREFERENCE	
75 7P52104-00 005 EA RES,FXD,1/4 76 7P52181-00 001 EA RES,FXD,1/4 77 7P52220-00 002 EA RES,FXD,1/4	W 5% 100K	IR14, R15, R	
76 7P52181-00 001 EA RES.FXD.1/4	W 5% 180 OHM	1R24	,,
77 7P52220-00 002 EA RES, FXD, 1/4	W 5% 22 OHM	IR2, R21	
78 7P52221-00 002 EA RES,FXD,1/4 79 7P52222-00 003 EA RES,FXD,1/4	W 5% 220 OHM	IRB, R40	
79 7P52222-00 003 EA RES,FXD,1/4	W 5% 2.2K	IR22, R23, R3	33
30 7P52223-00 001 EA RES,FXD,1/4	W 5% 22K	IR1	
31 7P52330-00 001 EA RES, FXD, 1/4	W 5% 33 OHM	IR7	
32 7P52331-00 003 EA RES, FXD, 1/4	W 5% 330 DHM	IR9, R10, R13	2
33 7 <i>P52332-00 002 </i> EA RES,FXD,1/	W 5% 3.3K	1R29, R42	
31 7P52330-00 001 EA RES,FXD,1/ 32 7P52331-00 003 EA RES,FXD,1/ 33 7P52332-00 002 EA RES,FXD,1/ 34 7P52470-00 001 EA RES,FXD,1/ 35 7P52471-00 002 EA RES.FXD.1/	W 5% 47 OHM	1R41	
		IR6, R4	
36 7P52472-00 001 EA RES,FXD,1/4		1R19	
97 7P52473-00 004 EA RES, FXD, 1/4		IR11, R25, R	27, R28
38 7P61106-00 001 EA ISWITCH, DPD		151	
39 7P61103-00 001 EA ISWITCH BUT		I (S1)	
90 7P63000-00 004 EA CONN, SHUNT.		(J1), (J3),	(J4), (J5)
91 7P64125-00 001 EA CONN, PC MT		1P2	
92 7P64209-00 002 EA CONN, PC MT.		IP1,P6	
93 7964102-00 002 EA HDR, PC MT,		1J1, J3	
94 7P64410-00 001 EA HDR, PC MT,		1 P9	
95 7P64207-00 001 EA HDR,PC MT,: 96 7P64408-00 001 EA HDR.PC MT.:		1P7	
· · · · · · · · · · · · · · · · · · ·		1J4, J5	
97 7P64520-00 001 EA HDR, PC MT,		1P4	
98 7P64534-00 001 EA HDR,PC MT, 99 7P65124-00 002 EA SOCKET LOW		IP8	
99 7P65124-00 002 EA ISOCKET LOW 00 7P65140-00 002 EA ISOCKET LOW		IPA15, PD11	
on i tennitanan i mar i eu innevel FOM	ENDUTE DIE 46 PIN	IPB7, PC11	
		1	
1 1 1		1	
		•	
		1	
i i i		i	
		i	
		i	
		i	
		i	
		i	
		i	

12.2 DISK ELECTRONICS BOARD SCHEMATICS

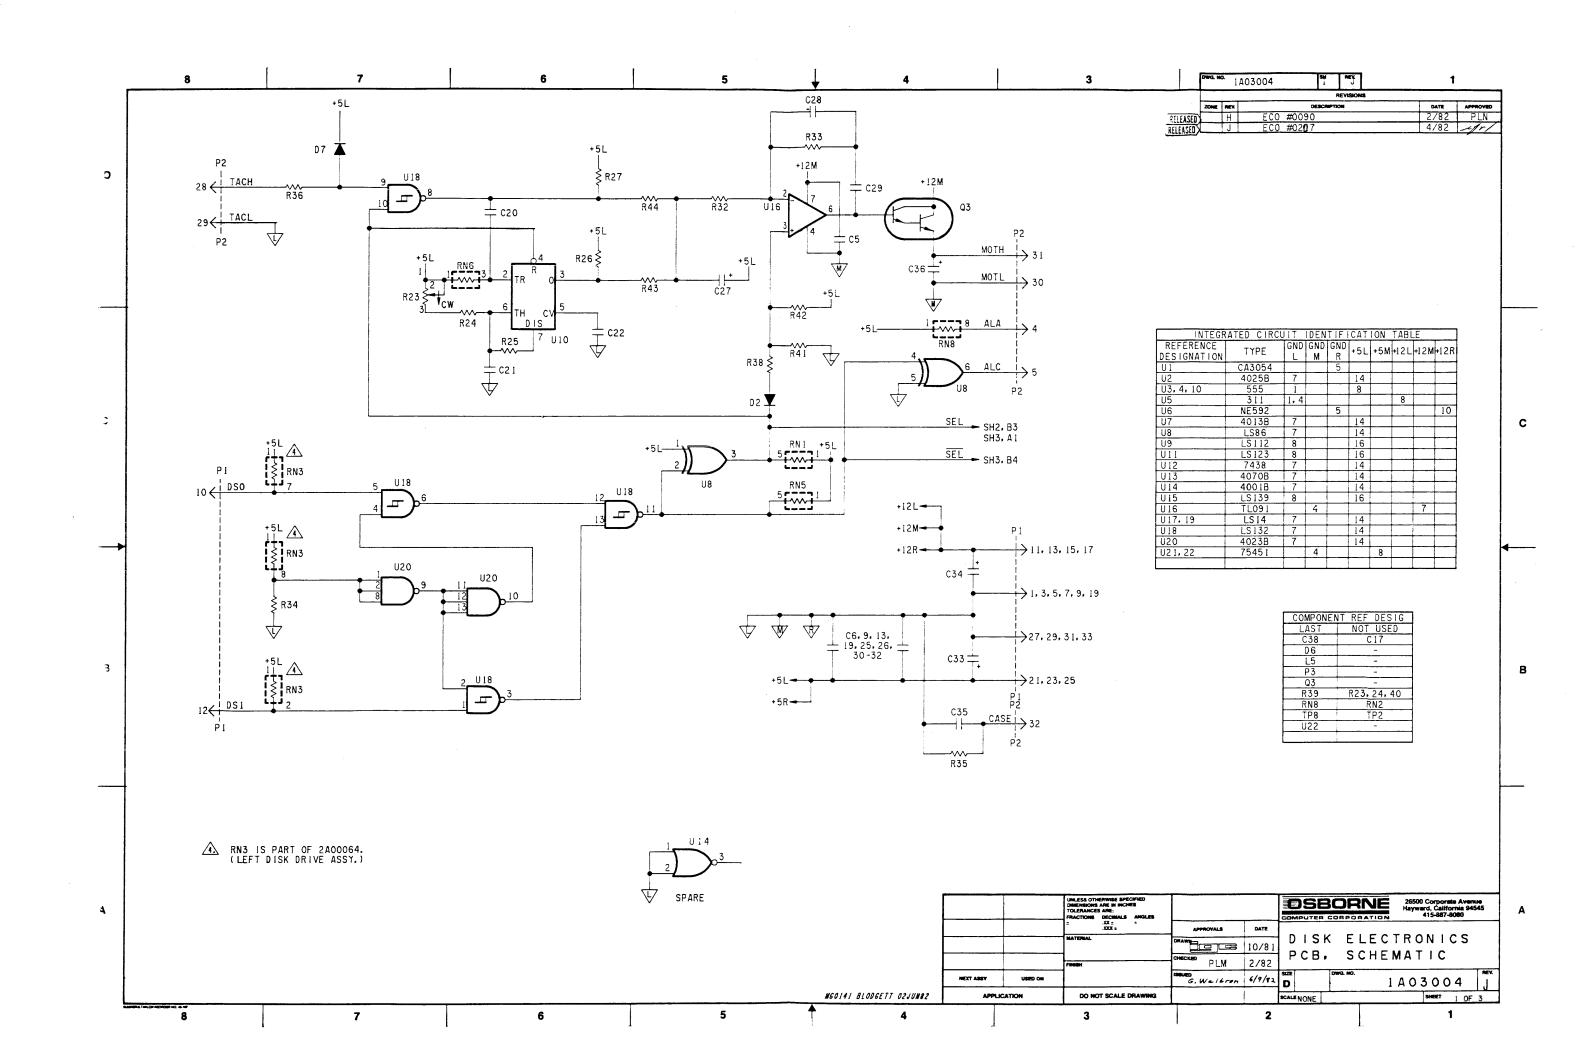

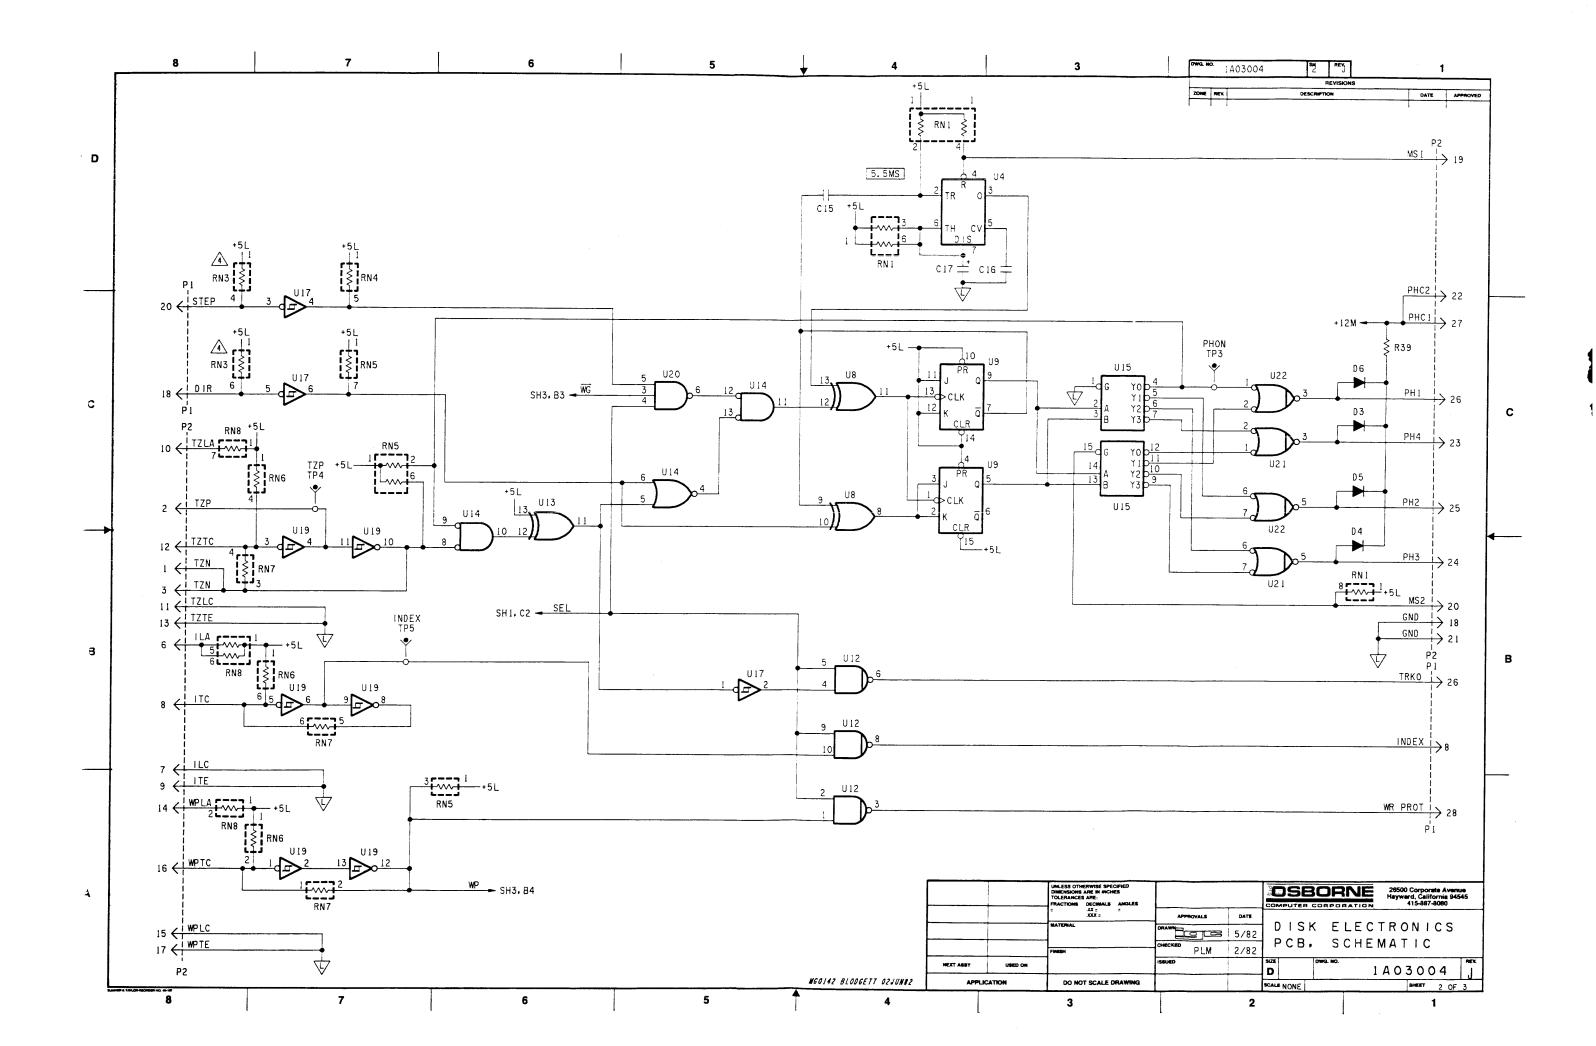

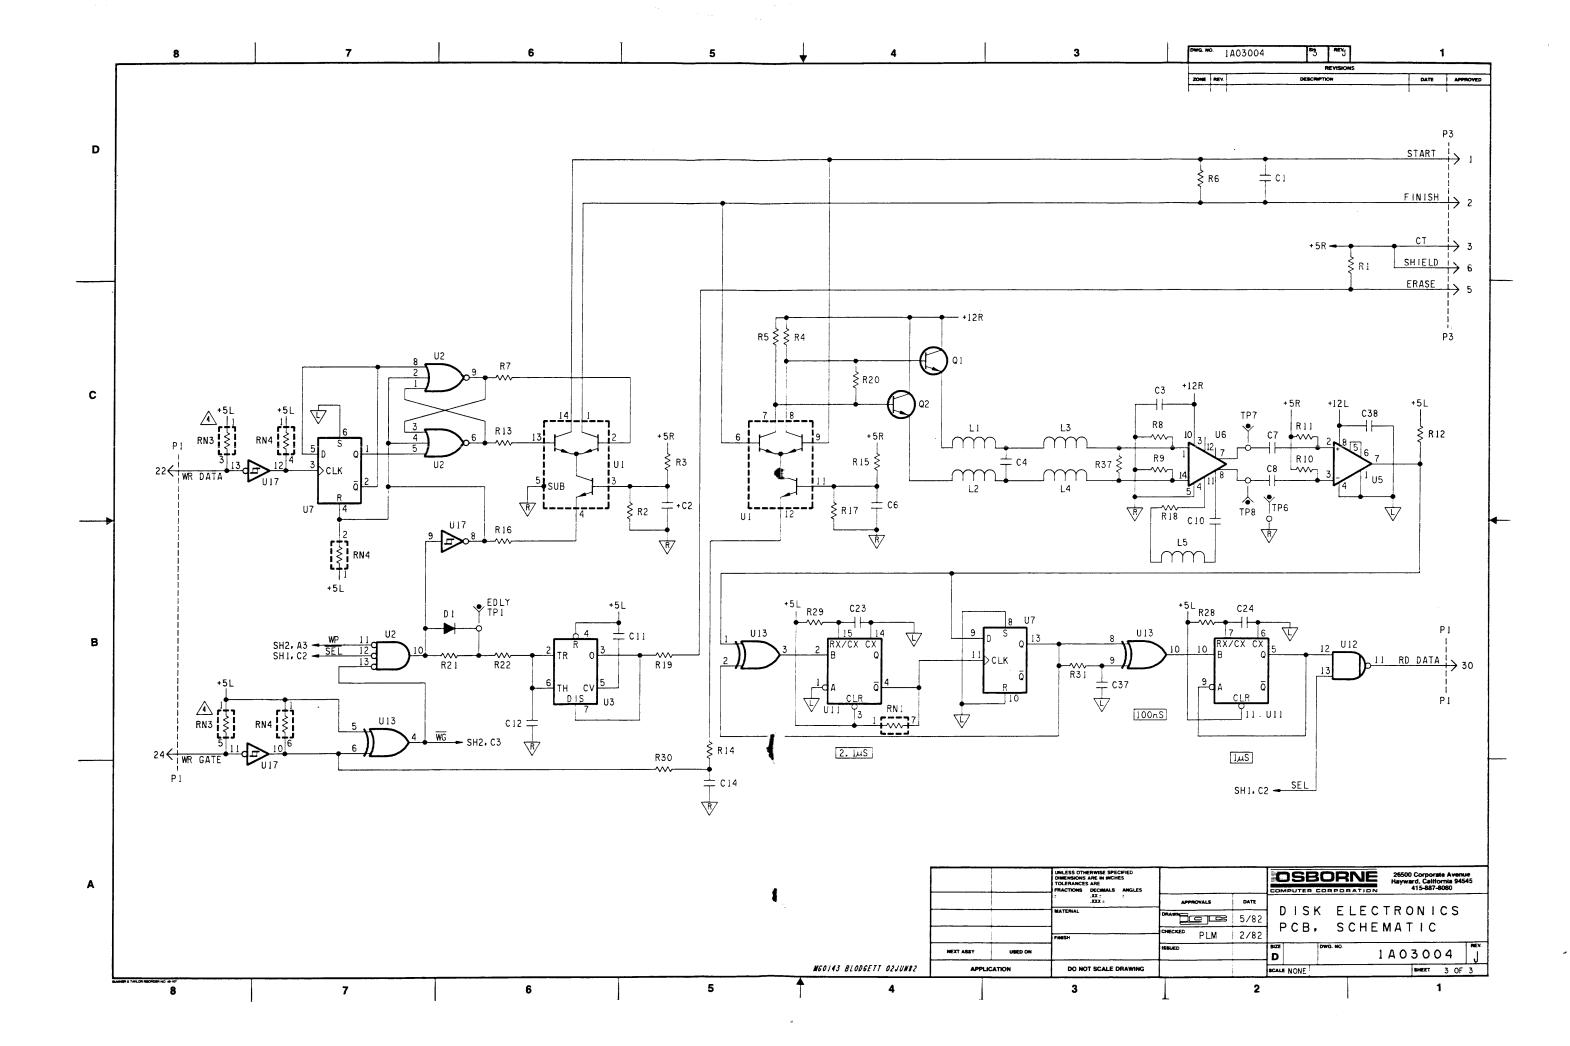

טפט	RNE COMPUTER	IDOTE	DE /22/83	!		LRevis	ionJ	
raw	n: LLB	IAppyd:	TECC	#:0217_IDat	e:	Released:	RELEASEL	1)
DE	TACHED LIST D	F MATERIALS					THE TAXABLE PARTY.	_
TEM	I PART NO. IQ	TYI	TITLE		<u> </u>	REFERENCE	DESIGNAT	DRS_
46	17420003-0010	WI:KES, VAKI	HELE SWA S	KAL ORM	REB			
	1	IRES, NETW	4,518 B P1	.N	1			
47	17P51002-00:0			8W BUSSED				
48	17951003-0010	011 150	R, 10%, 1/2V	, BUSSED	I RNB			
49	7P51005-00 0 7P51012-00 0 7P52101-00 0	Ø3! 4.7	K, 10%, 1/81	, BUSSED	IRN1, 4,	, 5		
50	7P51012-0010	Ø11 33K	, 10%, 1/8W,	ISOLATED	IRN7			
51	7P52101-00 0	Ø11RES, C.F.	,5%,1/4W	120R	!R1			
52	17P52105-0010	Q1 i		1.0M	1R35			
54	7P52153-00 0	Ø21			:R7.13			
	:7P52164-00:0				:R22			
	:7P52203-00:0				:R128			
	17P52220-0010				1R39			
	17952272-0010				(R10, 1)	1		
	17P52273-0010				1R32			
	17P52332-0010				+ 35			
51	17P52335-0010	1201			1R33			
	17P52393-0010				IRE'9			
EB	17P52472-0010	12				8, 9, 20, 26,	27,31,34	•
	!	ŧ			137,38			
	17P52514-0010				1321			
	17P52682-0010				1R36			
	17P52751-0010				1R18			
	17P52821-0010				:R12,2	5, 38		
71	17P53560-0010	001:RES, C.F.	5%, 1/2W	56r	1219			
	:7P57153-0010	•	2%, 1/4W		R42			
	17953223-0010				1324.4			
	17P57331-0010			330r		14, 16, 30		
	17P57472-0010				1815,1	7		
	17P53912-0010				1R43			
	17964108-0010		8PIN 9	STR, TIN	1191			
	17964316-0010		16PIN	RT ANGL, TIN	192			
	17964906-0010							
80	17965201-0010	OWI I SUCKET, I	U, 519,	8PIN	(RN3)			
84	17970041-0010	MULIKIVEL, . 1	SP.DIH X	. 693" : HR	1			
	17P73001-0010			HEM REV J	,			
87	1 1 1 1 2 2 2 2	MARINISK ELE	C. PER SCI		,			
88	1346617-6616	MAINDISK ELE	C. PLD PHI	3 KEV D				
	1	 			i			
	1	i			1			
		;			i I			
	; ;	ì f			•			
	1	ł •			i			
	1	i .			1			
	1	j t			1			
	1	ì			i I			
	:	1						

```
ITITLE DISK ELECTRONICS PCB ASSY FAB | LM# 3A@3@04-@@ |
IDSBORNE COMPUTER CORP. |-----
 Drawn:LLB_ICheckSt_!Appvd: | IECD#:0217 | Date: 2:/x:Released: | RELEASED | RELEASED | IECD#:0217 | Date: 2:/x:Released: | Released: 2:/x:Released: | Release
                                                                                                         REFERENCE DESIGNATORS
iU17,19
                                                                     SN74LS14N
1002 | 7P11086-001001;
                                                                     SN74LS86N
                                                                                                       LU8
1003 17P11112-0010011
                                                                     SN74LS112N
                                                                                                       149
1004 | TP11123-0010011
                                                                     SN74LS123N
                                                                                                      111111
1005 | 7P11132-00|001|
                                                                     SN74LS13EN
                                                                                                      HHA
1006 | 7P11139-0010011
                                                                    SN74LS139N
                                                                                                      11.15
1007 17P11800-001001:
                                                                    SN7438N
                                                                                                      1012
1008 | 7P11801-001002:
                                                                     SN75451BP
                                                                                                     121.22
1009 17P11802-001001:IC,CMOS
                                                                    CD4001BE
                                                                                                     1014
                                                                    CD4@13BE
1010 | 17P11803-001001|
                                                                                                      1 U7
:011 | 7P11804-00:001|
                                                                    CD4023BE
                                                                                                      JUEØ
1012 | 7P11805-001001|
                                                                    CD4@25BE
                                                                                                      TUE
1013 17P11807-0010011
                                                                     CD4070BE
                                                                                                      1013
1015 | TP21004-001001| IC. LINEAR
                                                                     TL@91CP
                                                                                                      :U16
1016 | 7911820-001003/IC.LINEAR
                                                                     LM555CN
                                                                                                      103,4,10
1017 | TP20001-001001:
                                                                     LM311N
                                                                                                      1 U5
1018 | TP20002-0010011
                                                                     CA3054
                                                                                                      1U1
1019 |7P20003-001021|
                                                                     NESGEN
                                                                                                      TUE
1022 | 17P30001-001004 | DIODE
                                                                    1N4001
                                                                                                      1D3-6
                                                                    1N4148
1023 |7930004-001003:
                                                                                                      ∃D1,2.7
1025 | TP30007-001002| TRANSISTORS
                                                                  2N39Ø4
                                                                                                      101,2
1026 | 17230008-001001:
                                                                     TIPii@
                                                                                                      103
1028 | 7P40101-001003| INDUCTORS
                                                                    150uh +-10%
                                                                                                      113-5
1029 17P40102-001002:
                                                                     560uH +-10%
                                                                                                      111, E
IDE7
1032 | 17P45504-0010011
                                                                     2.2uF +-10%,6V
                                                                                                      2017
1033 17P45604-0010011CAP, ALUM LO PROFILE 22uF, 16V 1034
1034 17P45605-0010011
                                                                                  4. 7uF
                                                                                                      1036
1035 17P45606-0010021
                                                                                  47uF,10V (C2,33
:036 | 7745609-001001| CAP, MYLAR 68NF +-20%
                                                                                                      |C21
1037 | 17946100-0010201CAP, CER, AXIAL10NF | +80-20%
                                                                                                      :03,5,6-9,11,13-16,18,19,22,
                            1 !
                                                                                                      | C25, 26. 30-32. 35
1038 | 17P46101-001002:CAP, CER, AXIAL. 100PF+- 5%
                                                                                                      1023,24
                                                                                                      1029,
1040 17P46103-001001:
                                                                  10NF +-20%
                                                                    1.5NF +10%
1041 | TP46152-0010041
                                                                                                      1010, 12, 20, 28
1042 17P46330-0010021
                                                                     33PF++5%
                                                                                                      101,37
                                                                    330PF+-10%
1043 | TP46331-0010011
                                                                                                      104
1044 17P46504-0010011
                                                                    100NF +80-20%
                                                                                                      :C38
                                                      -----LM CONTINUED-----
```

Appendix A Z80 Instruction Set

Presented here is the Z80A instruction set:

Z80 Instruction Set

Register Layout:

Main Register Set

Accumulator Flags B C D E H L

Alternate Registers

Accumulator'	Flags'
В'	C'
D'	E'
H'	L'

interrupt vector I	memory refresh R
index register IX	
index register IY	
stack pointer SP	
program counter PC	

nnnn = hexadecimal 16-bit value nn = hexadecimal 8-bit value dd = 8-bit signed displacment

r = register b = single bit

${\bf Z80\ instruction}\quad {\bf 8080\ instruction}\quad {\bf description}$

ADC A,(HL)	ADC M	adds byte at HL to A
$ADC A_{i}(IX+dd)$	none	adds byte indexed by X to A
ADC A,($IY+dd$)	none	adds byte indexed by Y to A
ADC A,r	ADC r	adds value in register to A
ADC A,nn	ADI nn	adds value to A
ADC HL,BC	none	adds BC to HL
ADC HL,DE	none	adds DE to HL
ADC HL,HL	none	doubles HL
ADC HL,SP	none	adds stack pointer to HL
ADD A,(HL)	ADD M	adds byte at HL to A
ADD A,($IX+dd$)	none	adds byte indexed by X to A
ADD A, $(IY+dd)$	none	adds byte indexed by Y to A
ADD A,r	ADD r	adds value in regsiter to A
ADD A,nn	ADI nn	adds value to A
ADD HL,BC	DAD B	adds BC to HL
ADD HL,DE	DAD D	adds DE to HL
ADD HL,HL	DAD H	doubles HL
ADD HL,SP	DAD SP	adds stack pointer to HL
ADD IX,BC	none	adds BC to X index
ADD IX,DE	none	adds DE to X index
ADD IX,IX	none	doubles X index
ADD IX,SP	none	adds stack pointer to X index
ADD IY,BC	none	adds BC to Y index
ADD IY,DE	none	adds DE to Y index
ADD IY,IY	none	doubles Y index
ADD IY,SP	none	adds stack pointer to Y index
AND (HL)	ANA M	logical AND with byte and A
AND $(IX+dd)$	none	logical AND with index and A
AND $(IY+dd)$	none	logical AND with index and A
AND r	ANA r	logical AND with register and A
AND nn	ANI nn	logical AND with value and A
BIT b,(HL)	none	test bit of byte at HL
BIT $b_{i}(IX+dd)$	none	test bit of byte at index X
BIT b ,(IY+dd)	none	test bit of byte at index Y
BIT b,r	none	test bit of regsiter value
CALL nnnn	CALL nnnn	subroutine call to location
CALL C,nnnn	CC nnnn	subroutine call if carry
CALL M,nnnn	CM nnnn	subroutine call if sign
CALL NC,nnnn	CNC nnnn	subroutine call if carry reset
CALL NZ,nnnn	CNZ nnnn	subroutine call if zero reset
CALL Pannn	CP nnnn	subroutine call if sign reset
CALL PE,nnnn	CPE nnnn	subroutine call if parity
CALL PO,nnnn	CPO nnnn	subroutine call if parity reset
CALL Z,nnnn	CZ nnnn	subroutine call if zero
CCF	CMC	complement carry flag
CP (HL)	CMP M	compare byte at HL to A
CP (IX+dd)	none	compare byte at X index to A
CP (IY+dd)	none	compare byte at Y index to A
CP r	CMP r	compare register value to A
CP nn	CPI nn	compare value to A
CPD	none	compare byte at HL and decrement BC
		- ,

Z80 instruction 8080 instruction description

CPDR	none	compare byte at HL, decrement and repeat
CPI	none	compare byte at HL, increment BC
CPIR	none	compare byte at HL, increment and repeat
CPL	CMA	complement A
DAA	DAA	decimal adjust A
DEC (HL)	DCR M	decrement byte at HL
DEC(IX+dd)	none	decrement byte at index X
DEC (IY+dd)	none	decrement byte at index Y
DEC r	DCR r	decrement register
DEC BC	DCX B	decrement BC
DEC DE	DCX D	decrement DE
DEC HL	DCX H	decrement HL
DEC SP	DCX SP	decrement stack pointer
DEC IX	none	decrement X index
DEC IX	none	decrement Y index
DI	DI	disable interrupts
DJNZ dd	none	decrement B and jump relative
EI	EI	enable interrupts
EX (SP),HL	XTHL	exchange stack pointer with HL
		-
EX (SP),IX	none	exchange stack pointer with X index
EX (SP),IY	none	exchange stack pointer with Y index
EX AF,AF'	none	exchange AF register sets
EX DE,HL	XCHG	exchange DE and HL
EXX	none	exchange BC,DE,HL register sets
HALT	HLT	suspend operation
IM 0	none	set interrupt mode 0
IM 1	none	set interrupt mode 1
IM 2	none	set interrupt mode 2
IN r,(C)	none	input byte from C port to register
IN A _i (nn)	IN nn	input byte from por to A
INC (HL)	INR M	increment byte at HL
INC $(IX+dd)$	none	increment byte at X index
INC $(IY+dd)$	none	increment byte at Y index
INC r	INR r	increment byte in register
INC BE	INX B	increment BC
INC DE	INX D	increment DE
INC HL	INX H	increment HL
INC SP	INX SP	increment stack pointer
INC IX	none	increment X index
INC IY	none	increment Y index
IND	none	input from C port to HL byte, decre-
		ment B, increment HL
INDR	none	input from C port to HL byte, decre-
		ment B, increment HL, repeat
INI	none	input from C port to HL byte, decre-
		ment B, decrement HL
INIR	none	input from C port to HL byte, decre-
		ment B, decrement HL, repeat
JP (HL)	PCHL	copy HL to PC then jump to it
JP (IX)	none	copy X index to PC then jump
· \/	-	*

Z80 instruction 8080 instruction description

TD (T)()		Y in day to DC them issue
JP (IY)	none	copy Y index to PC then jump
JP nnnn	JMP nnnn	jump to location
JP C,nnnn	JC nnnn	jump if carry
JP M,nnnn	JM nnnn	jump if sign
JP NC,nnnn	JNC nnnn	jump if no carry
JP NZ,nnnn	JNZ nnnn	jump if not zero
JP P,nnnn	JP nnnn	jump if sign reset
JP PE,nnnn	JPE nnnn	jump if parity
JP PO,nnnn	JPO nnnn	jump if parity reset
JP Z,nnnn	JZ nnnn	jump if zero
JR dd	none	jump relative using value
JR C,dd	none	jump relative if carry
JR NC,dd	none	jump relative if no carry
JR NZ,dd	none	jump relative if not zero
JR Z,dd	none	jump relative if zero
LD (BC),A	STAX B	move A to byte at BC
LD (DE),A	STAX D	move A to byte at DE
LD (HL),r	MOV M,r	move byte in register to byte at HL
LD (HL),nn	MVI M,nn	move value to byte at HL
LD (IX + dd),r	none	move byte into byte at indexed location
LD (IX+dd),nn	none	move byte into byte at indexed location
LD (IY+dd),r	none	move byte into byte at indexed location
LD (IY+dd),nn	none	move byte into byte at indexed location
LD (nnnn),A	STA nnnn	move A to location
LD (nnnn),BC	none	move BC to location and location $+ 1$
LD (nnnn),DE	none	move DE to location and location $+1$
LD (nnnn),HL	SHLD nnnn	move HL to location and location $+ 1$
LD (nnnn),IX	none	move IX to location and location $+1$
LD (nnnn),IY	none	move IY to location and location + 1
LD (nnnn),SP	none	move stack pointer to location and lo-
(,,-		cation + 1
LD A,(BC)	LDAX B	move byte at BC to A
LD A,(DE)	LDAX D	move byte at DE to A
LD A,I	none	move interrupt vector register to A
LD A,R	none	move memory refresh register to A
LD I,A	none	move A to interrupt vector register
LD R,A	none	move A to memory refresh register
LD r,(HL)	MOV r,M	move byte at HL to register
LD $r_r(IX+dd)$	none	move byte at IX to register
LD $r_r(IY+dd)$	none	move byte at IY to register
LD r,r	MOV r,r	move byte from register to register
LD r,nn	MVI r,nn	move value to register
LD A,(nnnn)	LDA nnnn	load A from location
LD BC,(nnnn)	none	load BC from locations
LD DE,(nnnn)	none	load DE from locations
LD HL,(nnnn)	LHLD nnnn	load HL from locations
LD BC,nnnn	LXI B,nnnn	load BC with value
LD DE,nnnn	LXI D,nnnn	load DE with value
LD HL,nnnn	LXI H,nnnn	load HL with value
LD SP,nnnn	LXI SP,nnnn	load stack pointer with value
LD IX,nnnn	none	load IX with value
LD IY,nnnn	none	load IY with value
LD IX,(nnnn)	none	load IX from locations

Z80 instruction	8080 instruction	description	
LD IY,(nnnn)	none	load IY from locations	
LD SP,(nnnn)	none	load stack pointer from locations	
LD SP,HL	SPHL	load stack pointer from HL	
LD SP,IX	none	load stack pointer from IX	
LD SP,IY	none	load stack pointer from IY	
LDD	none	move byte at HL to DE location,	decre-
		ment BC, decrement HL and DE	accie
LDDR	none	move byte at HL to DE location, ment BC, decrement HL and DE, repeat	decre-
LDI	none	move byte at HL to DE location,	decre-
LDI	none	ment BC, increment HL and DE	decre-
LDIR	none	move byte at HL to DE location,	decre-
		ment BC, increment HL and DE, repeat	
NEG	none	two's complement of A	
NOP	NOP	no operation	
OR (HL)	ORA M	logical OR of A and byte at HL	
OR (IX+dd)	none	logical OR of A and byte at IX	
OR (IY+dd)	none	logical OR of A and byte at IY	
OR r	ORA r	logical OR of A and register	
OR nn	ORI nn	logical OR of A and value	
OTDR	none	output byte at HL to port C, decrement B, decrement HL, repeat	
OTIR	none	output byte at HL to port C, decrement B, increment HL, repeat	
OUT (C),r	none	output byte in register to port C	
OUT (nn),A	OUT nn	output value to port A	
OUTD	none	output byte from HL to port C, decrement B, decrement HL	
OUTI	none	output byte from HL to port C, decrement B, increment HL	
POP AF	POP PSW	restore AF from stack	
POP BC	POP B	restore BC from stack	
POP DE	POP D	restore DE from stack	
POP HL	POP H	restore HL from stack	
POP IX	none	restore IX from stack	
POP IY	none	restore IY from stack	
PUSH AF	PUSH PSW	store AF on stack	
PUSH BC	PUSH B	store BC on stack	
PUSH DE	PUSH D	store DE on stack	
PUSH HL	PUSH H	store HL on stack	
PUSH IX	none	store IX on stack	
PUSH IY	none	store IY on stack	
RES $b_i(IX+dd)$	none	reset bit in byte at IX	
RES b,(IY+dd)	none	reset bit in byte at IY	
RES b,r	none	reset bit in register	
RET	RET	return from subroutine	

Z80 instruction	8080 instruction	description
RET C	RC	return if carry
RET M	RM	return if sign
RET NC	RNC	return if no carry
RET NZ	RNZ	return if not zero
RET P	RP	return if sign reset
RET PE	RPE	return if parity
RET PO	RPO	return if parity reset
RET Z	RZ	return if zero
RETI	none	return from maskable interrupt
RETN	none	return from nonmaskable interrupt
RL (HL)	none	rotate byte at HL left with carry
RL(IX+dd)	none	rotate byte at IX left with carry
RL(IY+dd)	none	rotate byte at IY left with carry
RL r	none	rotate byte in register left with carry
RLA	RAL	rotate byte in A left with carry
RLC (HL)	none	rotate byte at HL circularly left
RLC (IX+dd)	none	rotate byte at IX circularly left
RLC (IY+dd)	none	rotate byte at IY circularly left
RLC r	none	rotate byte in register circularly left
RLCA	RLC	rotate byte in A circularly left
RLD	none	rotate 12 bits n HL 4 bits at time left
RR (HL)	none	rotate byte at HL right with carry
RR (IX+dd)	none	rotate byte at IX right with carry
RR (IY+dd)	none	rotate byte at IY right with carry
RR r	none	rotate byte in register right with carry
RRA	RAR	rotate accumulator right
RRC (HL)	none	rotate byte in HL circularly right
RRC (IX+dd)	none	rotate byte in IX circularly right
RRC (IY+dd)	none	rotate byte in IY circularly right
RRC r	none	rotate byte in register circularly right
RRCA	RRC	rotate byte in A circularly right
RRD	none	rotate 12 bits in HL 4 bits at time right
RST 00h	RST 0	first restart location
RST 08h	RST 1	second restart location
RST 10h	RST 2	third restart location
RST 18h	RST 3	fourth restart location
RST 20h	RST 4	fifth restart location
RST 28h	RST 5	sixth restart location
RST 30h	RST 6	seventh restart location
RST 38h	RST 7	eighth restart location
SBC A,(HL)	SBB M	subtract byte at HL from A
SBC A,(IX+dd)	none	subtract byte at IX from A
SBC A,(IY+dd)	none	subtract byte at IY from A
SBC A,r	SBB r	subtract byte in register from A
SBC A,nn	SBI nn	subtract value from A
SBC HL,BC	none	subtract BC from HL
SBC HL,DE	none	subtract DE from HL
SBC HL,HL	none	subtract HL from HL
SBC HL,SP	none	subtract SP from HL
SCF	STC	set carry flag
SET b,(HL)	none	set big in byte at HL
SET $b_{i}(IX+dd)$	none	set bit in byte at IX
SET b,(IY+dd)	none	set bit in byte at IY
		•

APPENDIX A Z80 INSTRUCTION SET

Z80 instruction 8080 instruction description

SET b,r	none	set bit in byte in register
SLA (HL)	none	arithmetic shift left on byte at HL
SLA (IX+dd)	none	arithmetic shift left on byte at IX
SLA (IY+dd)	none	arithmetic shift left on byte at IY
SLA r	none	arithmetic shift left on byte in register
SRA (HL)	none	arithmetic shift right on byte at HL
SRA (IX+dd)	none	arithmetic shift right on byte at IX
SRA (IY+dd)	none	arithmetic shift right on byte at IY
SRA r	none	arithmetic shift right on byte in register
SRL (HL)	none	logical shift right on byte at HL
SRL (IX+dd)	none	logical shift right on byte at IX
SRL (IY+dd)	none	logical shift right on byte at IY
SRL r	none	logical shift right on byte in register
SUB (HL)	SUB M	subtract byte at HL from A
SUB (IX+dd)	none	subtract byte at IX from A
SUB (IY+dd)	none	subtract byte at IY from A
SUB r	SUB r	subtract byte in register from A
SUB nn	SUI nn	subtract value from A
XOR (HL)	XRA M	XOR HL register
XOR (IX+dd)	none	XOR IX register
XOR (IY+dd)	none	XOR IY register
XOR r	XRA r	XOR register
XOR nn	XRI nn	XOR value with A

Appendix B 6821 PIA Registers/ Instructions

The following specifications on the 6821 PIA were furnished in full by Motorola, Inc:

MC6821 (1.0 MHz) MC68A21 (1.5 MHz) MC68B21 (2.0 MHz)

PERIPHERAL INTERFACE ADAPTER (PIA)

The MC6821 Peripheral Interface Adapter provides the universal means of interfacing peripheral equipment to the M6800 family of microprocessors. This device is capable of interfacing the MPU to peripherals through two 8-bit bidirectional peripheral data buses and four control lines. No external logic is required for interfacing to most peripheral devices.

The functional configuration of the PIA is programmed by the MPU during system initialization. Each of the peripheral data lines can be programmed to act as an input or output, and each of the four control/interrupt lines may be programmed for one of several control modes. This allows a high degree of flexibility in the overall operation of the interface.

- 8-Bit Bidirectional Data Bus for Communication with the MPU
- Two Bidirectional 8-Bit Buses for Interface to Peripherals
- Two Programmable Control Registers
- Two Programmable Data Direction Registers
- Four Individually-Controlled Interrupt Input Lines; Two Usable as Peripheral Control Outputs
- Handshake Control Logic for Input and Output Peripheral Operation
- High-Impedance Three-State and Direct Transistor Drive Peripheral Lines
- Program Controlled Interrupt and Interrupt Disable Capability
- CMOS Drive Capability on Side A Peripheral Lines
- Two TTL Drive Capability on All A and B Side Buffers
- TTL-Compatible
- Static Operation

MAXIMUM RATINGS

Characteristics	Symbol	Value	Unit
Supply Voltage	Vcc	-0.3 to $+7.0$	٧
Input Voltage	V _{in}	-0.3 to $+7.0$	٧
Operating Temperature Range MC6821, MC68A21, MC68B21 MC6821C, MC68A21C, MC68B21C	TA	T _L to T _H 0 to 70 -40 to +85	°C
Storage Temperature Range	T _{stg}	-55 to +150	°C

THERMAL CHARACTERISTICS


Characteristic	Symbol	Value	Unit
Thermal Resistance			
Ceramic		50	00044
Plastic	θ_{JA}	100	°C/W
Cerdip	i l	60	}

This device contains circuitry to protect the inputs against damage due to high static voltages or electric fields; however, it is advised that normal precautions be taken to avoid application of any voltage higher than maximum-rated voltages to this high-impedance circuit. Reliability of operation is enhanced if unused inputs are tied to an appropriate logic voltage (i.e., either VSS or VCC).

MOS

(N-CHANNEL, SILICON-GATE, DEPLETION LOAD)

PERIPHERAL INTERFACE
ADAPTER

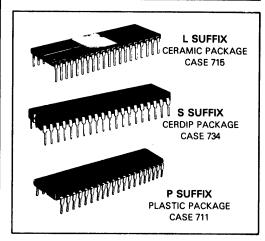

PIN ASSIGNMENT

			•
٧ss Ľ		40	CA1
PA0 [2	39	CA2
PA1 [3	38	IRQA
PA2 [4	37	IRQB
PA3 [5	36	I RS0
PA4 [6	35	IRS1
PA5 [7	34	RESET
PA6 [8	33	D 0
PA7 [9	32	D D1
РВ0 [10	31	D 2
PB1 [11	30	1 D3
PB2 [12	29	1 D4
РВЗ [13	28] D5
РВ4 Д	14	27	1 D6
PB5 [15	26	1 D7
РВ6 Д	16	25	j E
РВ7 [17	24	CS1
CB1 [18	23	CS2
СВ2	19	22	cs0
V _{CC} I	20	21] R/₩
			,

POWER CONSIDERATIONS

The average chip-junction temperature, TJ, in °C can be obtained from:

 $T_J = T_A + (P_D \bullet \theta_{JA})$

(1)

Where:

TA = Ambient Temperature, °C

θJA = Package Thermal Resistance, Junction-to-Ambient, °C/W

PD=PINT+PPORT

 $P_{INT} = I_{CC} \times V_{CC}$, Watts — Chip Internal Power

PPORT = Port Power Dissipation, Watts - User Determined

For most applications PPORT PINT and can be neglected. PPORT may become significant if the device is configured to drive Darlington bases or sink LED loads.

An approximate relationship between PD and TJ (if PPORT is neglected) is:

$$P_D = K + (T_J + 273^{\circ}C)$$

(2)

Solving equations 1 and 2 for K gives:

 $K = PD \bullet (TA + 273 \circ C) + \theta JA \bullet PD^2$

(3)

Where K is a constant pertaining to the particular part. K can be determined from equation 3 by measuring PD (at equilibrium) for a known TA. Using this value of K the values of PD and TJ can be obtained by solving equations (1) and (2) iteratively for any value of TA.

DC ELECTRICAL CHARACTERISTICS ($V_{CC} = 5.0 \text{ Vdc } \pm 5\%$, $V_{SS} = 0$, $T_A = T_L$ to T_H unless otherwise noted).

Characteristic	Symbol	Min	Тур	Max	Unit
BUS CONTROL INPUTS (R/W, Enable, RESET, RS0, RS1, CS0, CS1, CS2)					
Input High Voltage	VIH	V _{SS} + 2.0	-	Vcc	V
Input Low Voltage	VIL	V _{SS} - 0.3	1	V _{SS} +0.8	V
Input Leakage Current (Vin = 0 to 5.25 V)	lin	-	1.0	2.5	μΑ
Capacitance (V _{in} =0, T _A =25°C, f=1.0 MHz)	C _{in}	_		7.5	pF
INTERRUPT OUTPUTS (IRQA, IRQB)					
Output Low Voltage (I _{Load} = 3.2 mA)	VOL	_	<u> </u>	V _{SS} +0.4	٧
Three-State Output Leakage Current	loz	_	1:0	10	μΑ
Capacitance (V _{in} = 0, T _A = 25°C, f = 1.0 MHz)	Cout	-	_	5.0	pF
DATA BUS (D0-D7)					
Input High Voltage	ViH	$V_{SS} + 2.0$	_	Vcc	٧
Input Low Voltage	VIL	V _{SS} -0.3	-	V _{SS} +0.8	٧
Three-State Input Leakage Current (Vin = 0.4 to 2.4 V)	ΙΙΖ	_	2.0	10	μΑ
Output High Voltage (I _{Load} = -205 μA)	Vон	VSS + 2.4	_	-	٧
Output Low Voltage (I _{Load} = 1.6 mA)	VOL	-	-	V _{SS} +0.4	>
Capacitance (V _{in} =0, T _A =25°C, f=1.0 MHz)	C _{in}			12.5	pF
PERIPHERAL BUS (PAO-PA7, PBO-PB7, CA1, CA2, CB1, CB2)					
Input Leakage Current R/W, RESET, RS0, RS1, CS0, CS1, CS2, CA1, (Vin = 0 to 5.25 V) CB1, Enable	lin	-	1.0	2.5	μΑ
Three-State Input Leakage Current (V _{In} = 0.4 to 2.4 V) PB0-PB7, CB2	lız	_	2.0	10	μΑ
Input High Current (VIH = 2.4 V) PA0-PA7, CA2	۱н	- 200	- 400	-	μА
Darlington Drive Current (V _O = 1.5 V) PB0-PB7, CB2	ЮН	- 1.0	_	- 10	mA
Input Low Current (V _{IL} = 0.4 V) PA0-PA7, CA2	liL.		-1.3	-2.4	mA
Output High Voltage (ILoad = -200 μA) (ILoad = -10 μA) PA0-PA7, PB0-PB7, CA2, CB2 (ILoad = -10 μA) PA0-PA7, CA2	Vон	V _{SS} +2.4 V _{CC} -1.0	_	<u>-</u>	٧
Output Low Voltage (I _{Load} =3.2 mA)	VOL	_	-	V _{SS} +0.4	V
Capacitance (V _{in} = 0, T _A = 25°C, f = 1.0 MHz)	C _{in}	-	-	10	рF
POWER REQUIREMENTS					
Internal Power Dissipation (Measured at T _A = T _L)	PINT	_	l –	550	mW



BUS TIMING CHARACTERISTICS (See Notes 1 and 2)

ldent.	Characteristic	Sumbal	МС	6821	MC68A21		MC68B21		Unit
Number	Characteristic	Symbol	Min	Max	Min	Max	Min	Max	Unit
1	Cycle Time	t _{cyc}	1.0	10	0.67	10	0.5	10	μS
2	Pulse Width, E Low	PWEL	430	_	280	-	210	T -	ns
3	Pulse Width, E High	PWEH	450	-	280	-	220	<u> </u>	ns
4	Clock Rise and Fall Time	t _r , t _f	-	25	_	25	-	20	ns
9 ,	Address Hold Time	t _A H	10	-	10		10	-	ns
13	Address Setup Time Before E	tAS	80	-	60	_	40		ns
14	Chip Select Setup Time Before E	tcs	80		60	_·	40	_	ns
15	Chip Select Hold Time	^t CH	10	_	10	_	10		ns
18	Read Data Hold Time	^t DHR	20	50*	20	50*	20	50*	ns
21	Write Data Hold Time	tDHW	10	_	10	_	10	-	ms
30	Output Data Delay Time	t _{DDR}	-	290	_	180	-	150	ns
31	Input Data Setup Time	t _{DSW}	165	_	80	_	60	-	ns

^{*}The data bus output buffers are no longer sourcing or sinking current by tDHRmax (High Impedance).

R/W, Address (Non-Muxed) ΖS Read Data MPU Read Data Non-Muxed Non-Muxed Write Data MPU Write Data Non-Muxed Non-Muxed

FIGURE 1 - BUS TIMING

Notes:

- 1. Voltage levels shown are V_L \leq 0.4 V, V₁ \approx 2.4 V, misss otherwise specified. 2. Measurement points shown are 0.8 V at \approx 2.0 V, unless otherwise specified.



PERIPHERAL TIMING CHARACTERISTICS (V_{CC}=5.0 V ±5%, V_{SS}=0 V, T_A=T_L to T_H unless otherwise specified)

PERIPHERAL TIMING CHARACTERISTICS (VCC=5.0 V ±0%,		MC		MC68A21		MC68B21		Unit	Reference
Characteristic	Symbol	Min	Max	Min	Max	Min	Max	Unit	Fig. No.
Data Setup Time	tPDS	200	_	135		100		ns	6
Data Hold Time	tPDH	0	_	0	_	0	-	ns	6
Delay Time, Enable Negative Transition to CA2 Negative Transition		_	1.0	_	0.670	-	0.500	μS	3, 7, 8
Delay Time, Enable Negative Transition to CA2 Positive Transition	T _{RS1}		1.0	-	0.670	_	0.500	μS	3, 7
Rise and Fall Times for CA1 and CA2 Input Signals	t _r , tf	_	1.0	_	1.0	_	1.0	μS	8
Delay Time from CA1 Active Transition to CA2 Positive Transition	tRS2	-	2.0	1	1.35	_	1.0	μS	3, 8
Delay Time, Enable Negative Transition to Data Valid	tPDW	-	1.0		0.670		0.5	μS	3, 9, 10
Delay Time, Enable Negative Transition to CMOS Data Valid PAO-PA7, CA2	tCMOS	_	2.0	_	1.35	_	1.0	μS	4, 9
Delay Time, Enable Positive Transition to CB2 Negative Transition	tCB2	_	1.0		0.670		0.5	μS	3, 11, 12
Delay Time, Data Valid to CB2 Negative Transition	tDC	20	-	20		20		ns	3, 10
Delay Time, Enable Positive Transition to CB2 Positive Transition	tRS1	_	1.0	_	0.670	_	0.5	μS	3, 11
Control Output Pulse Width, CA2/CB2	PWCT	500		375		250		ns	3, 11
Rise and Fall Time for CB1 and CB2 Input Signals	t _r , t _f	-	1.0		1.0	_	1.0	μ	12
Delay Time, CB1 Active Transition to CB2 Positive Transition	tRS2		2.0	_	1.35	_	1.0	μS	3, 12
Interrupt Release Time, IRQA and IRQB	tIR	_	1.60		1.10		0.85	μs	5, 14
Interrupt Response Time	tRS3		1.0		1.0	_	1.0	μS	5, 13
Interrupt Input Pulse Time	PWI	500	_	500	_	500		ns	13
RESET Low Time*	tRL	1.0		0.66		0.5		μS	15

^{*}The $\overline{\text{RESET}}$ line must be high a minimum of 1.0 μ s before addressing the PIA.

FIGURE 2 - BUS TIMING TEST LOADS

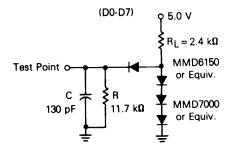


FIGURE 3 — TTL EQUIVALENT TEST LOAD

(PA0-PA7, PB0-PB7, CA2, CB2)

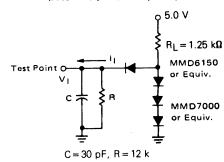


FIGURE 4 — CMOS EQUIVALENT TEST LOAD

(PA0-PA7, CA2)


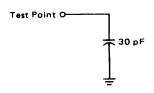


FIGURE 5 — NMOS EQUIVALENT TEST LOAD



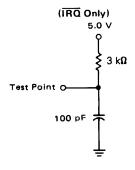

MOTOROLA Semiconductor Products Inc.

FIGURE 6 - PERIPHERAL DATA SETUP AND HOLD TIMES (Read Mode)

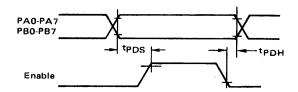


FIGURE 7 — CA2 DELAY TIME (Read Mode; CRA-5 = CRA3 = 1, CRA-4 = 0)

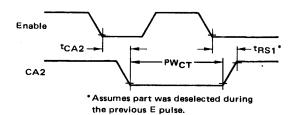


FIGURE 8 — CA2 DELAY TIME (Read Mode; CRA-5=1, CRA-3=CRA-4=0)

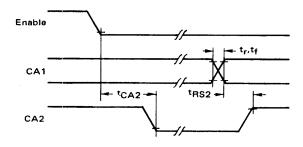


FIGURE 9 - PERIPHERAL CMOS DATA DELAY TIMES (Write Mode; CRA-5 = CRA-3 = 1, CRA-4 = 0)



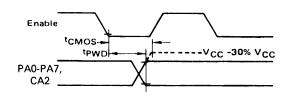


FIGURE 10 - PERIPHERAL DATA AND CB2 DELAY TIMES (Write Mode; CRB-5 = CRB-3 = 1, CRB-4 = 0)

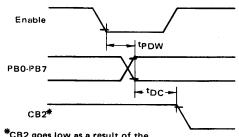

*CB2 goes low as a result of the positive transition of Enable.

FIGURE 11 - CB2 DELAY TIME (Write Mode; CRB-5= CRB-3= 1, CRB-4= 0)

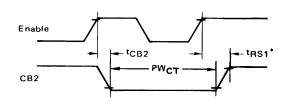

*Assumes part was deselected during the previous E pulse.

FIGURE 12 - CB2 DELAY TIME (VVrite Mode; CRB-5=1, CRB-3=CRB-4=0)


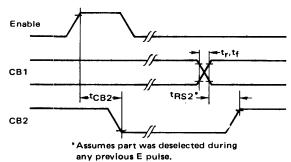


FIGURE 13 - INTERRUPT PULSE WIDTH AND IRQ RESPONSE




Note: Timing measurements are referenced to and from a low voltage of 0.8 volts and a high voltage of 2.0 volts, unless otherwise noted.

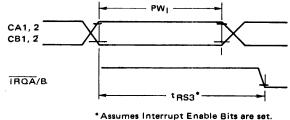

MOTOROLA Semiconductor Products Inc.

FIGURE 14 — IRQ RELEASE TIME FIGURE 15 — RESET LOW TIME The RESET line must be a V_{IH} for a minimum of 1.0 μ s before addressing the PIA.

Note: Timing measurements are referenced to and from a low voltage of 0.8 volts and a high voltage of 2.0 volts, unless otherwise noted.

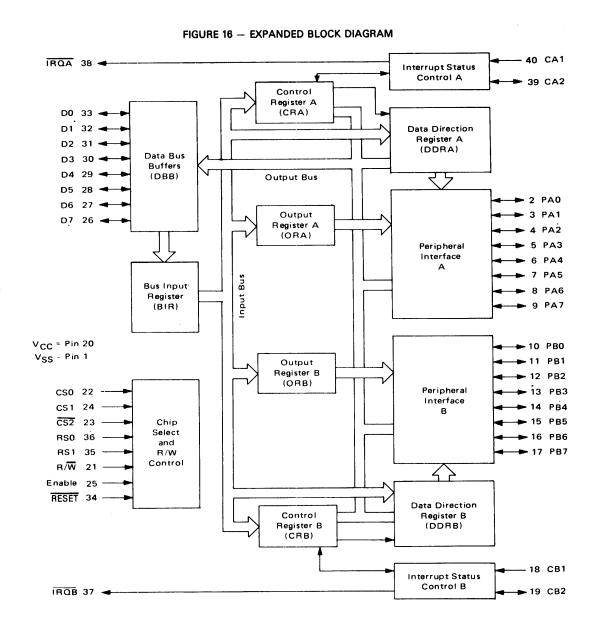

PIA INTERFACE SIGNALS FOR MPU

The PIA interfaces to the M6800 bus with an 8-bit bidirectional data bus, three chip select lines, two register select lines, two interrupt request lines, a read/write line, an enable line and a reset line. To ensure proper operation with the MC6800, MC6802, or MC6808 microprocessors, VMA should be used as an active part of the address decoding.

Bidirectional Data (D0-D7) - The bidirectional data lines (D0-D7) allow the transfer of data between the MPU and the PIA. The data bus output drivers are three-state devices that remain in the high-impedance (off) state except when the MPU performs a PIA read operation. The read/write line is in the read (high) state when the PIA is selected for a read operation.

Enable (E) — The enable pulse, E, is the only timing signal that is supplied to the PIA. Timing of all other signals is referenced to the leading and trailing edges of the E pulse.

Read/Write (R/\overline{W}) - This signal is generated by the MPU to control the direction of data transfers on the data bus. A low state on the PIA read/write line enables the input buffers and data is transferred from the MPU to the PIA on the E signal if the device has been selected. A high on the read/write line sets up the PIA for a transfer of data to the bus. The PIA output buffers are enabled when the proper address and the enable pulse E are present.

RESET — The active low RESET line is used to reset all register bits in the PIA to a logical zero (low). This line can be used as a power-on reset and as a master reset during system operation.

Chip Selects (CS0, CS1, and CS2) - These three input signals are used to select the PIA. CS0 and CS1 must be high and CS2 must be low for selection of the device. Data transfers are then performed under the control of the enable and read/write signals. The chip select lines must be stable

for the duration of the E pulse. The device is deselected when any of the chip selects are in the inactive state.

Register Selects (RS0 and RS1) - The two register select lines are used to select the various registers inside the PIA. These two lines are used in conjunction with internal Control Registers to select a particular register that is to be written or read.

The register and chip select lines should be stable for the duration of the E pulse while in the read or write cycle.

Interrupt Request (IRQA and IRQB) - The active low Interrupt Request lines (IRQA and IRQB) act to interrupt the MPU either directly or through interrupt priority circuitry. These lines are "open drain" (no load device on the chip). This permits all interrupt request lines to be tied together in a wire-OR configuration.

Each Interrupt Request line has two internal interrupt flag bits that can cause the Interrupt Request line to go low. Each flag bit is associated with a particular peripheral interrupt line. Also, four interrupt enable bits are provided in the PIA which may be used to inhibit a particular interrupt from a peripheral device.

Servicing an interrupt by the MPU may be accomplished by a software routine that, on a prioritized basis, sequentially reads and tests the two control registers in each PIA for interrupt flag bits that are set.

The interrupt flags are cleared (zeroed) as a result of an MPU Read Peripheral Data Operation of the corresponding data register. After being cleared, the interrupt flag bit cannot be enabled to be set until the PIA is deselected during an E pulse. The E pulse is used to condition the interrupt control lines (CA1, CA2, CB1, CB2). When these lines are used as interrupt inputs, at least one E pulse must occur from the inactive edge to the active edge of the interrupt input signal to condition the edge sense network. If the interrupt flag has been enabled and the edge sense circuit has been properly conditioned, the interrupt flag will be set on the next active transition of the interrupt input pin.

PIA PERIPHERAL INTERFACE LINES

The PIA provides two 8-bit bidirectional data buses and four interrupt/control lines for interfacing to peripheral devices.

Section A Peripheral Data (PA0-PA7) - Each of the peripheral data lines can be programmed to act as an input or output. This is accomplished by setting a "1" in the corresponding Data Direction Register bit for those lines which are to be outputs. A "0" in a bit of the Data Direction Register causes the corresponding peripheral data line to act as an input. During an iMPU Read Peripheral Data Operation. the data on peripheral lines programmed to act as inputs appears directly on the corresponding MPU Data Bus lines. In the input mode, the internal pullup resistor on these lines represents a maximum of 1.5 standard TTL loads.

The data in Output Register A will appear on the data lines that are programmed to be outputs. A logical "1" written into the register will cause a "high" on the corresponding data line while a "0" results in a "low." Data in Output Register A may be read by an MPU "Read Peripheral Data A" operation when the corresponding lines are programmed as outputs. This data will be read property if the voltage on the peripheral data lines is greater than 2.0 volts for a logic "1" output and less than 0.8 volt for a logic "0" output. Loading the output lines such that the voltage on these lines does not reach full voltage causes the data transferred into the MPU on a Read operation to differ from that contained in the respective bit of Output Register A.

Section B Peripheral Data (PB0-PB7) - The peripheral data lines in the B Section of the PIA can be programmed to act as either inputs or outputs in a similar manner to PAO-PA7. They have three-state capability, allowing them to enter a high-impedance state when the peripheral data line is used as an input. In addition, data on the peripheral data lines



PB0-PB7 will be read properly from those lines programmed as outputs even if the voltages are below 2.0 volts for a "high" or above 0.8 V for a "low". As outputs, these lines are compatible with standard TTL and may also be used as a source of up to 1 milliampere at 1.5 volts to directly drive the base of a transistor switch.

Interrupt Input (CA1 and CB1) — Peripheral input lines CA1 and CB1 are input only lines that set the interrupt flags of the control registers. The active transition for these signals is also programmed by the two control registers.

Peripheral Control (CA2) — The peripheral control line CA2 can be programmed to act as an interrupt input or as a

peripheral control output. As an output, this line is compatible with standard TTL; as an input the internal pullup resistor on this line represents 1.5 standard TTL loads. The function of this signal line is programmed with Control Register A.

Peripheral Control (CB2) — Peripheral Control line CB2 may also be programmed to act as an interrupt input or peripheral control output. As an input, this line has high input impedance and is compatible with standard TTL. As an output it is compatible with standard TTL and may also be used as a source of up to 1 milliampere at 1.5 volts to directly drive the base of a transistor switch. This line is programmed by Control Register B.

INTERNAL CONTROLS

INITIALIZATION

A RESET has the effect of zeroing all PIA registers. This will set PA0-PA7, PB0-PB7, CA2 and CB2 as inputs, and all interrupts disabled. The PIA must be configured during the restart program which follows the reset.

There are six locations within the PIA accessible to the MPU data bus: two Peripheral Registers, two Data Direction Registers, and two Control Registers. Selection of these locations is controlled by the RS0 and RS1 inputs together with bit 2 in the Control Register, as shown in Table 1.

Details of possible configurations of the Data Direction and Control Register are as follows:

TABLE 1 - INTERNAL ADDRESSING

		Control Register Bit		
RS1	RS0	CRA-2	CRB-2	Location Selected
0	0	1	×	Peripheral Register A
0	0	0	Х	Data Direction Register A
0	1	×	Х	Control Register A
1	0	×	1	Peripheral Register B
1	0	×	0	Data Direction Register B
1	1	х	×	Control Register B

X = Don't Care

PORT A-B HARDWARE CHARACTERISTICS

As shown in Figure 17, the MC6821 has a pair of I/O ports whose characteristics differ greatly. The A side is designed to drive CMOS logic to normal 30% to 70% levels, and incorporates an internal pullup device that remains connected even in the input mode. Because of this, the A side requires more drive current in the input mode than Port B. In contrast, the B side uses a normal three-state NMOS buffer which cannot pullup to CMOS levels without external resistors. The B side can drive extra loads such as Darlingtons without problem. When the PIA comes out of reset, the A port represents inputs with pullup resistors, whereas the B side (input mode also) will float high or low, depending upon the load connected to it.

Notice the differences between a Port A and Port B read operation when in the output mode. When reading Port A, the actual pin is read, whereas the B side read comes from an output latch, ahead of the actual pin.

CONTROL REGISTERS (CRA and CRB)

The two Control Registers (CRA and CRB) allow the MPU to control the operation of the four peripheral control lines CA1, CA2, CB1, and CB2. In addition they allow the MPU to enable the interrupt lines and monitor the status of the interrupt flags. Bits 0 through 5 of the two registers may be written or read by the MPU when the proper chip select and register select signals are applied. Bits 6 and 7 of the two registers are read only and are modified by external interrupts occurring on control lines CA1, CA2, CB1, or CB2. The format of the control words is shown in Figure 18.

DATA DIRECTION ACCESS CONTROL BIT (CRA-2 and CRB-2)

Bit 2, in each Control Register (CRA and CRB), determines selection of either a Peripheral Output Register or the corresponding Data Direction E Register when the proper register select signals are applied to RSO and RS1. A "1" in bit 2 allows access of the Peripheral Interface Register, while a "0" causes the Data Direction Register to be addressed.

Interrupt Flags (CRA-6, CRA-7, CRB-6, and CRB-7) — The four interrupt flag bits are set by active transitions of signals on the four Interrupt and Peripheral Control lines when those lines are programmed to be inputs. These bits cannot be set directly from the MPU Data Bus and are reset indirectly by a Read Peripheral Data Operation on the appropriate section.


Control of CA2 and CB2 Peripheral Control Lines (CRA-3, CRA-4, CRA-5, CRB-3, CRB-4, and CRB-5) — Bits 3, 4, and 5 of the two control registers are used to control the CA2 and CB2 Peripheral Control lines. These bits determine if the control lines will be an interrupt input or an output control signal. If bit CRA-5 (CRB-5) is low, CA2 (CB2) is an interrupt input line similar to CA1 (CB1). When CRA-5 (CRB-5) is high, CA2 (CB2) becomes an output signal that may be used to control peripheral data transfers. When in the output mode, CA2 and CB2 have slightly different loading characteristics.




Control of CA1 and CB1 Interrupt Input Lines (CRA-0, CRB-1, CRA-1, and CRB-1) — The two lowest-order bits of the control registers are used to control the interrupt input lines CA1 and CB1. Bits CRA-0 and CRB-0 are used to

enable the MPU interrupt signals IRQA and IRQB, respectively. Bits CRA-1 and CRB-1 determine the active transition of the interrupt input signals CA1 and CB1.

FIGURE 17 - PORT A AND PORT B EQUIVALENT CIRCUITS

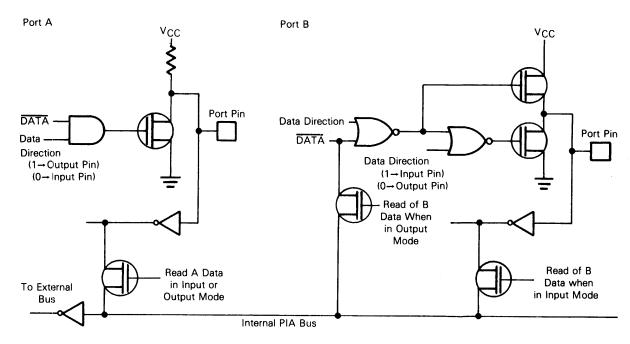


ORDERING INFORMATION

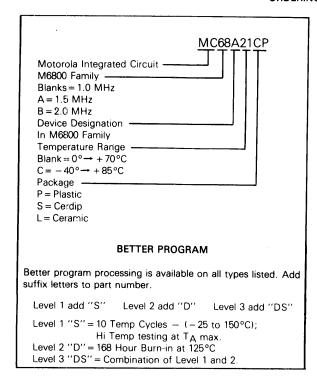

Speed	Device	Temperature Range
1.0 MHz	MC6821P,L,S	0 to 70°C
1.0 101712	MC6821CP,CL,CS	- 40 to +85°C
1.5 MHz	MC68A21P,L,S MC68A21CP,CL,CS	0 to +70°C -40 to +85°C
2.0 MHz	MC68B21P,L,S	0 to +70°C



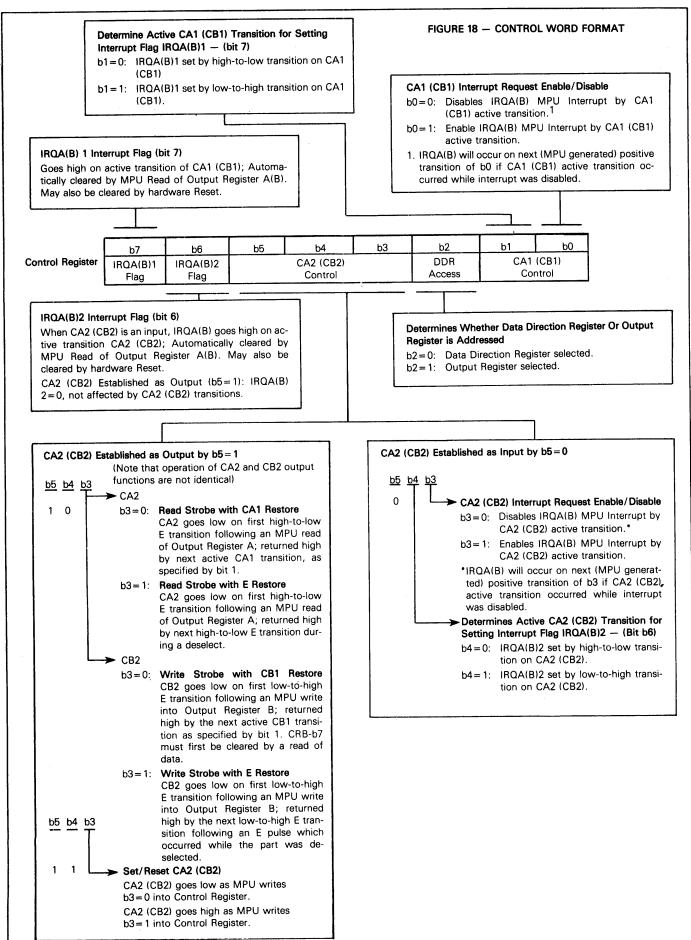



Appendix C 6850 ACIA Registers/ Instructions

The following specifications on the 6850 ACIA were furnished in full by Motorola, Inc:

MC6850 (1.0 MHz) MC68A50 (1.5 MHz) MC68B50 (2.0 MHz)

ASYNCHRONOUS COMMUNICATIONS INTERFACE ADAPTER (ACIA)

The MC6850 Asynchronous Communications Interface Adapter provides the data formatting and control to interface serial asynchronous data communications information to bus organized systems such as the MC6800 Microprocessing Unit.


The bus interface of the MC6850 includes select, enable, read/write, interrupt and bus interface logic to allow data transfer over an 8-bit bidirectional data bus. The parallel data of the bus system is serially transmitted and received by the asynchronous data interface, with proper formatting and error checking. The functional configuration of the ACIA is programmed via the data bus during system initialization. A programmable Control Register provides variable word lengths, clock division ratios, transmit control, receive control, and interrupt control. For peripheral or modem operation, three control lines are provided. These lines allow the ACIA to interface directly with the MC6860L 0-600 bps digital modem.

- 8- and 9-Bit Transmission
- Optional Even and Odd Parity
- Parity, Overrun and Framing Error Checking
- Programmable Control Register
- Optional +1, +16, and +64 Clock Modes
- Up to 1.0 Mbps Transmission
- False Start Bit Deletion
- Peripheral/Modem Control Functions
- Double Buffered
- One- or Two-Stop Bit Operation


MOS

(N-CHANNEL, SILICON-GATE)


ASYNCHRONOUS COMMUNICATIONS INTERFACE ADAPTER

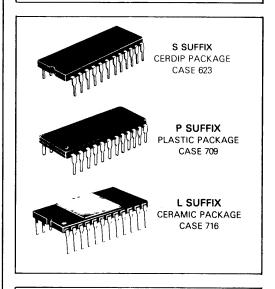

MC6850 ASYNCHRONOUS COMMUNICATIONS INTERFACE ADAPTER BLOCK DIAGRAM

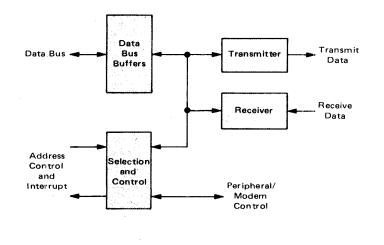

PIN ASSIGNMENT

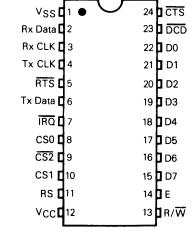

©MOTOROLA INC., 1981

MAXIMUM RATINGS

Characteristics	Symbol	Value	Unit
Supply Voltage	Vcc	-0.3 to $+7.0$	٧
Input Voltage	. V _{in}	-0.3 to $+7.0$	V
Operating Temperature Range MC6850, MC68A50, MC68B50 MC6850C, MC68A50C, MC68B50C	ТД	T _L to T _H 0 to 70 -40 to +85	°C
Storage Temperature Range	T _{stg}	-55 to +150	°C

This device contains circuitry to protect the inputs against damage due to high static voltages or electric fields; however, it is advised that normal precautions be taken to avoid application of any voltage higher than maximum rated voltages to this high-impedance circuit. Reliability of operation is enhanced if unused inputs are tied to an appropriate logic voltage level (e.g., either VSS or VCC).

THERMAL CHARACTERISTICS

Characteristic	Symbol	Value	Unit
Thermal Resistance Plastic Ceramic Cerdip	hetaJA	120 60 65	°C/W

POWER CONSIDERATIONS

The average chip-junction temperature, T_J, in °C can be obtained from:

$$T_J = T_A + (P_D \bullet \theta_{JA})$$

Where:

TA = Ambient Temperature, °C

θ J A ■ Package Thermal Resistance, Junction-to-Ambient, °C/W

PD ■ PINT + PPORT

 $P_{INT} = I_{CC} \times V_{CC}$, Watts — Chip Internal Power

PPORT Port Power Dissipation, Watts - User Determined

For most applications PPORT
PINT and can be neglected. PPORT may become significant if the device is configured to drive Darlington bases or sink LED loads.

An approximate relationship between PD and TJ (if PPORT is neglected) is:

$$P_D = K + (T_J + 273 ^{\circ}C)$$

(2)

(1)

Solving equations 1 and 2 for K gives:

$$K = P_D \bullet (T_A + 273 \circ C) + \theta JA \bullet PD^2$$

(3)

Where K is a constant pertaining to the particular part. K can be determined from equation 3 by measuring PD (at equilibrium) for a known TA. Using this value of K the values of PD and TJ can be obtained by solving equations (1) and (2) iteratively for any value of TA.

DC ELECTRICAL CHARACTERISTICS ($V_{CC} = 5.0 \text{ Vdc } \pm 5\%$, $V_{SS} = 0$, $T_A = T_L$ to T_H unless otherwise noted.)

Characteristic	Symbol	Min	Тур	Max	Unit
Input High Voltage	VIH	V _{SS} + 2.0	-	Vcc	V
Input Low Voltage	VIL	VSS-0.3	_	V _{SS} +0.8	٧
Input Leakage Current R/W, CS0, CS1, CS2, Enable (Vin = 0 to 5.25 V) RS, Rx D, Rx C, CTS, DCD		-	1.0	2.5	μА
Three-State (Off State) Input Current (V _{in} = 0.4 to 2.4 V)	^I TSI	_	2.0	10	μΑ
Output High Voltage D0-D7 ($I_{Load} = -205 \mu\text{A}$, Enable Pulse Width $< 25 \mu\text{s}$) ($I_{Load} = -100 \mu\text{A}$, Enable Pulse Width $< 25 \mu\text{s}$) Tx Data, RTS	Vон	VSS+2.4 VSS+2.4	- -	- -	V
Output Low Voltage (I _{Load} = 1.6 mA, Enable Pulse Width < 25 μs)	VOL	_	_	Vss+0.4	V
Output Leakage Current (Off State) (VOH = 2.4 V)	ILOH	-	1.0	10	μΑ
Internal Power Dissipation (Measured at TA = TL)	PINT	-	300	525	mW
Internal Input Capacitance $(V_{in}=0,T_A=25^{\circ}C,f=1.0\text{MHz})$ E, Tx CLK, Rx CLK, R/W, RS, Rx Data, CS0, CS1, $\overline{\text{CS2}}$, $\overline{\text{CTS}}$, $\overline{\text{DCD}}$		<u>-</u>	10 7.0	12.5 7.5	pF
Output Capacitance RTS, Tx Data $(V_{jn} = 0, T_A = 25^{\circ}C, f = 1.0 \text{ MHz})$	1 Court	- -	_	10 5.0	pF

SERIAL DATA TIMING CHARACTERISTICS

Characteristic			MC	MC6850		MC68A50		MC68B50	
Characteristic		Symbol	Min	Max	Min	Max	Min.	Max	Unit
Data Clock Pulse Width, Low	+ 16, + 64 Modes	PWCL	600	_	450	_	280	_	
(See Figure 1)	+ 1 Mode	LAACT	900	– .	650	-	500	-	ns
Data Clock Pulse Width, High	+ 16, + 64 Modes	PWCH	600	_	450	_	280	_	
(See Figure 2)	+ 1 Mode	LAACH	900	_	650	-	500	-	ns
Data Clock Frequency	+ 16, + 64 Modes	fC	_	0.8	_	1.0	_	1.5	MHz
	+ 1 Mode	ر	-	500	_	750	_ :	1000	kHz
Data Clock-to-Data Delay for Transmitter (See Figure 3)		tTDD	_	600	_	540	_	460	ns
Receive Data Setup Time (See Figure 4)	+ 1 Mode	tRDS	250	_	100	_	30		ns
Receive Data Hold Time (See Figure 5)	+ 1 Mode	tRDH	250	-	100	-	30	_	ns
Interrupt Request Release Time (See Figure 6)		tIR	_	1.2	_	0.9	-	0.7	μS
Request-to-Send Delay Time (See Figure 6)		tRTS		560	_	480	 	400	ns
Input Rise and Fall Times (or 10% of the pulse width if sn	naller)	t _r , t _f	_	1.0	_	0.5	-	0.25	μS

FIGURE 1 — CLOCK PULSE WIDTH, LOW-STATE

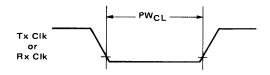


FIGURE 2 — CLOCK PULSE WIDTH, HIGH-STATE

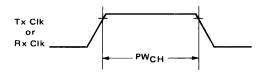


FIGURE 3 — TRANSMIT DATA OUTPUT DELAY

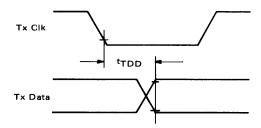


FIGURE 4 — RECEIVE DATA SETUP TIME (+1 Mode)

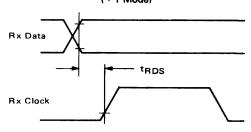


FIGURE 5 — RECEIVE DATA HOLD TIME (+1 Mode)


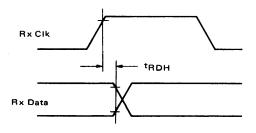


FIGURE 6 — REQUEST-TO-SEND DELAY AND INTERRUPT-REQUEST RELEASE TIMES



Note: Timing measurements are referenced to and from a low voltage of 0.8 volts and a high voltage of 2.0 volts, unless otherwise noted.

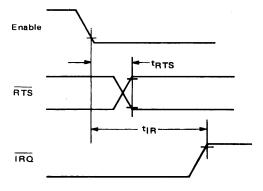


BUS TIMING CHARACTERISTICS (See Notes 1 and 2 and Figure 7)


Ident.		Combal	MC6850		MC68A50		MC68B50		Unit
Number	Characteristic	Symbol	Min	Max	Min	Max	Min	Max	Offic
1	Cycle Time	tcyc	1.0	10	0.67	10	0.5	10	μS
2	Pulse Width, E Low	PWEL	430	9500	280	9500	210	9500	ns
3	Pulse Width, E High	PWEH	450	9500	280	9500	220	9500	ns
4	Clock Rise and Fall Time	t _r , t _f	-	25		25	_	20	ns
9	Address Hold Time	t _{AH}	10	_	10	_	10	_	ns
13	Address Setup Time Before E	t _{AS}	80	_	60		40	_	ns
14	Chip Select Setup Time Before E	tcs	80	-	60		40	-	ns
15	Chip Select Hold Time	^t CH	10	_	10		10		ns
18	Read Data Hold Time	^t DHR	20	50*	20	50*	20	50*	ns
21	Write Data Hold Time	tDHW	10	_	10		10		ns
30	Output Data Delay Time	^t DDR	T -	290		180	_	150	ns
31	Input Data Setup Time	tDSW	165	_	80		60		ns


^{*}The data bus output buffers are no longer sourcing or sinking current by tDHRmax (High Impedance).



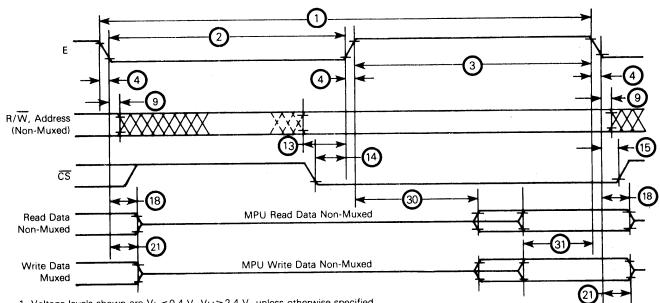

- 1. Voltage levels shown are V_L≤0.4 V, V_H≥2.4 V, unless otherwise specified.
- 2. Measurement points shown are 0.8 V and 2.0 V, unless otherwise specified.

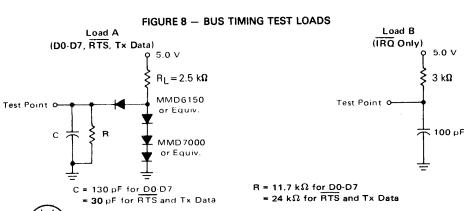

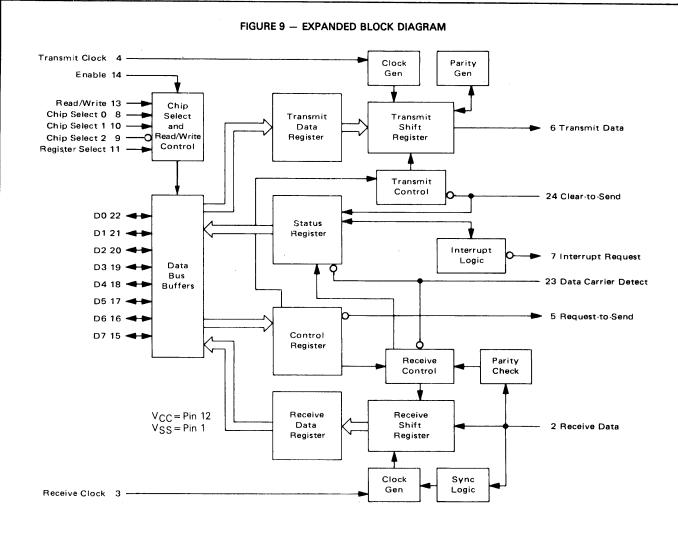

DEVICE OPERATION

At the bus interface, the ACIA appears as two addressable memory locations. Internally, there are four registers: two read-only and two write-only registers. The read-only registers are Status and Receive Data; the write-only registers are Control and Transmit Data. The serial interface consists of serial input and output lines with independent clocks, and three peripheral/modem control lines.

POWER ON/MASTER RESET

The master reset (CR0, CR1) should be set during system initialization to insure the reset condition and prepare for programming the ACIA functional configuration when the communications channel is required. During the first master reset, the IRQ and RTS outputs are held at level 1. On all other master resets, the RTS output can be programmed high or low with the IRQ output held high. Control bits CR5 and CR6 should also be programmed to define the state of RTS whenever master reset is utilized. The ACIA also contains internal power-on reset logic to detect the power line turn-on transition and hold the chip in a reset state to prevent erroneous output transitions prior to initialization. This circuitry depends on clean power turn-on transitions. The

power-on reset is released by means of the bus-programmed master reset which must be applied prior to operating the ACIA. After master resetting the ACIA, the programmable Control Register can be set for a number of options such as variable clock divider ratios, variable word length, one or two stop bits, parity (even, odd, or none), etc.

TRANSMIT

A typical transmitting sequence consists of reading the ACIA Status Register either as a result of an interrupt or in the ACIA's turn in a polling sequence. A character may be written into the Transmit Data Register if the status read operation has indicated that the Transmit Data Register is empty. This character is transferred to a Shift Register where it is serialized and transmitted from the Transmit Data output preceded by a start bit and followed by one or two stop bits. Internal parity (odd or even) can be optionally added to the character and will occur between the last data bit and the first stop bit. After the first character is written in the Data Register, the Status Register can be read again to check for a Transmit Data Register Empty condition and current peripheral status. If the register is empty, another character can be loaded for transmission even though the first character is in the process of being transmitted (because of



double buffering). The second character will be automatically transferred into the Shift Register when the first character transmission is completed. This sequence continues until all the characters have been transmitted.

RECEIVE

Data is received from a peripheral by means of the Receive Data input. A divide-by-one clock ratio is provided for an externally synchronized clock (to its data) while the divideby-16 and 64 ratios are provided for internal synchronization. Bit synchronization in the divide-by-16 and 64 modes is initiated by the detection of 8 or 32 low samples on the receive line in the divide-by-16 and 64 modes respectively. False start bit deletion capability insures that a full half bit of a start bit has been received before the internal clock is synchronized to the bit time. As a character is being received, parity (odd or even) will be checked and the error indication will be available in the Status Register along with framing error, overrun error, and Receive Data Register full. In a typical receiving sequence, the Status Register is read to determine if a character has been received from a peripheral. If the Receiver Data Register is full, the character is placed on the 8-bit ACIA bus when a Read Data command is received from the MPU. When parity has been selected for a 7-bit word (7 bits plus parity), the receiver strips the parity bit (D7=0) so that data alone is transferred to the MPU. This feature reduces MPU programming. The Status Register can continue to be read to determine when another character is available in the Receive Data Register. The receiver is also double buffered so that a character can be read from the data register as another character is being received in the shift register. The above sequence continues until all characters have been received.

INPUT/OUTPUT FUNCTIONS

ACIA INTERFACE SIGNALS FOR MPU

The ACIA interfaces to the M6800 MPU with an 8-bit bidirectional data bus, three chip select lines, a register select line, an interrupt request line, read/write line, and enable line. These signals permit the MPU to have complete control over the ACIA.

ACIA Bidirectional Data (D0-D7) — The bidirectional data lines (D0-D7) allow for data transfer between the ACIA and the MPU. The data bus output drivers are three-state devices that remain in the high-impedance (off) state except when the MPU performs an ACIA read operation.

ACIA Enable (E) — The Enable signal, E, is a high-impedance TTL-compatible input that enables the bus input/output data buffers and clocks data to and from the ACIA. This signal will normally be a derivative of the MC6800 ¢2 Clock or MC6809 E clock.

Read/Write (R/\overline{W}) — The Read/Write line is a high-impedance input that is TTL compatible and is used to control the direction of data flow through the ACIA's input/out-put data bus interface. When Read/Write is high (MPU Read cycle), ACIA output drivers are turned on and a selected register is read. When it is low, the ACIA output drivers are

turned off and the MPU writes into a selected register. Therefore, the Read/Write signal is used to select read-only or write-only registers within the ACIA.

Chip Select (CS0, CS1, CS2) — These three high-impedance TTL-compatible input lines are used to address the ACIA. The ACIA is selected when CS0 and CS1 are high and CS2 is low. Transfers of data to and from the ACIA are then performed under the control of the Enable Signal, Read/Write, and Register Select.

Register Select (RS) — The Register Select line is a high-impedance input that is TTL compatible. A high level is used to select the Transmit/Receive Data Registers and a low level the Control/Status Registers. The Read/Write signal line is used in conjunction with Register Select to select the read-only or write-only register in each register pair.

Interrupt Request (\overline{IRQ}) — Interrupt Request is a TTL-compatible, open-drain (no internal pullup), active low output that is used to interrupt the MPU. The \overline{IRQ} output remains low as long as the cause of the interrupt is present and the appropriate interrupt enable within the ACIA is set. The \overline{IRQ} status bit, when high, indicates the \overline{IRQ} output is in the active state.

Interrupts result from conditions in both the transmitter and receiver sections of the ACIA. The transmitter section causes an interrupt when the Transmitter Interrupt Enabled condition is selected (CR5•CR6), and the Transmit Data Register Empty (TDRE) status bit is high. The TDRE status bit indicates the current status of the Transmitter Data Register except when inhibited by Clear-to-Send (CTS) being high or the ACIA being maintained in the Reset condition. The interrupt is cleared by writing data into the Transmit Data Register. The interrupt is masked by disabling the Transmitter Interrupt via CR5 or CR6 or by the loss of CTS which inhibits the TDRE status bit. The Receiver section causes an interrupt when the Receiver Interrupt Enable is set and the Receive Data Register Full (RDRF) status bit is high, an Overrun has occurred, or Data Carrier Detect (DCD) has gone high. An interrupt resulting from the RDRF status bit can be cleared by reading data or resetting the ACIA. Interrupts caused by Overrun or loss of DCD are cleared by reading the status register after the error condition has occurred and then reading the Receive Data Register or resetting the ACIA. The receiver interrupt is masked by resetting the Receiver Interrupt Enable.

CLOCK INPUTS

Separate high-impedance TTL-compatible inputs are provided for clocking of transmitted and received data. Clock frequencies of 1, 16, or 64 times the data rate may be selected.

Transmit Clock (Tx CLK) — The Transmit Clock input is used for the clocking of transmitted data. The transmitter initiates data on the negative transition of the clock.

Receive Clock (Rx CLK) — The Receive Clock input is used for synchronization of received data. (In the +1 mode, the clock and data must be synchronized externally.) The receiver samples the data on the positive transition of the clock



SERIAL INPUT/OUTPUT LINES

Receive Data (Rx Data) - The Receive Data line is a highimpedance TTL-compatible input through which data is received in a serial format. Synchronization with a clock for detection of data is accomplished internally when clock rates of 16 or 64 times the bit rate are used.

Transmit Data (Tx Data) — The Transmit Data output line transfers serial data to a modem or other peripheral.

PERIPHERAL/MODEM CONTROL

The ACIA includes several functions that permit limited control of a peripheral or modem. The functions included are Clear-to-Send, Request-to-Send and Data Carrier Detect.

Clear-to-Send (CTS) - This high-impedance TTLcompatible input provides automatic control of the transmitting end of a communications link via the modem Clear-to-Send active low output by inhibiting the Transmit Data Register Empty (TDRE) status bit.

Request-to-Send (RTS) - The Request-to-Send output enables the MPU to control a peripheral or modem via the data bus. The RTS output corresponds to the state of the Control Register bits CR5 and CR6. When CR6=0 or both CR5 and CR6=1, the RTS output is low (the active state). This output can also be used for Data Terminal Ready (DTR).

Data Carrier Detect (DCD) - This high-impedance TTLcompatible input provides automatic control, such as in the receiving end of a communications link by means of a modem Data Carrier Detect output. The DCD input inhibits and initializes the receiver section of the ACIA when high. A low-to-high transition of the Data Carrier Detect initiates an interrupt to the MPU to indicate the occurrence of a loss of carrier when the Receive Interrupt Enable bit is set. The Rx CLK must be running for proper DCD operation.

ACIA REGISTERS

The expanded block diagram for the ACIA indicates the internal registers on the chip that are used for the status, control, receiving, and transmitting of data. The content of each of the registers is summarized in Table 1.

TRANSMIT DATA REGISTER (TDR)

Data is written in the Transmit Data Register during the negative transition of the enable (E) when the ACIA has been addressed with RS high and R/W low. Writing data into the register causes the Transmit Data Register Empty bit in the Status Register to go low. Data can then be transmitted. If the transmitter is idling and no character is being transmitted, then the transfer will take place within 1-bit time of the trailing edge of the Write command. If a character is being transmitted, the new data character will commence as soon as the previous character is complete. The transfer of data causes the Transmit Data Register Empty (TDRE) bit to indicate empty.

RECEIVE DATA REGISTER (RDR)

Data is automatically transferred to the empty Receive Data Register (RDR) from the receiver deserializer (a shift register) upon receiving a complete character. This event causes the Receive Data Register Full bit (RDRF) in the status buffer to go high (full). Data may then be read through the bus by addressing the ACIA and selecting the Receive Data Register with RS and R/W high when the ACIA is enabled. The non-destructive read cycle causes the RDRF bit to be cleared to empty although the data is retained in the RDR. The status is maintained by RDRF as to whether or not the data is current. When the Receive Data Register is full, the automatic transfer of data from the Receiver Shift Register to the Data Register is inhibited and the RDR contents remain valid with its current status stored in the Status Register.

TABL	E 1 — DEFINITION O	F ACIA REGISTER CO	NTENTS
		Buffer Address	
			1

		Buffer Address						
Data Bus	RS ● R/W Transmit	RS ● R/W Receive	RS • R/W	RS • R/W				
Line Number	Data Register	Data Register	Control Register	Status Register				
	(Write Only)	(Read Only)	(Write Only)	(Read Only)				
0	Data Bit 0*	Data Bit 0	Counter Divide Select 1 (CR0)	Receive Data Register Full (RDRF)				
1	Data Bit 1	Data Bit·1	Counter Divide Select 2.(CR1)	Transmit Data Register Empty (TDRE)				
2	Data Bit 2	Data Bit 2	Word Select 1 (CR2)	Data Carrier Detect (DCD)				
3	Data Bit 3	Data Bit 3	Word Select 2 (CR3)	Clear-to-Send (CTS)				
4	Data Bit 4	Data Bit 4	Word Select 3 (CR4)	Framing Error (FE)				
5	Data Bit 5	Data Bit 5	Transmit Control 1 (CR5)	Receiver Overrun (OVRN)				
6	Data Bit 6	Data Bit 6	Transmit Control 2 (CR6)	Parity Error (PE)				
7	Data Bit 7***	Data Bit 7**	Receive Interrupt - Enable (CR7)	Interrupt Request (IRQ)				

^{*} Leading bit = LSB = Bit 0



<sup>Data bit will be zero in 7-bit plus parity modes.
Data bit is "don't care" in 7-bit plus parity modes.</sup>

CONTROL REGISTER

The ACIA Control Register consists of eight bits of write-only buffer that are selected when RS and R/\overline{W} are low. This register controls the function of the receiver, transmitter, interrupt enables, and the Request-to-Send peripheral/modem control output.

Counter Divide Select Bits (CR0 and CR1) — The Counter Divide Select Bits (CR0 and CR1) determine the divide ratios utilized in both the transmitter and receiver sections of the ACIA. Additionally, these bits are used to provide a master reset for the ACIA which clears the Status Register (except for external conditions on CTS and DCD) and initializes both the receiver and transmitter. Master reset does not affect other Control Register bits. Note that after power-on or a power fail/restart, these bits must be set high to reset the ACIA. After resetting, the clock divide ratio may be selected. These counter select bits provide for the following clock divide ratios:

CR1	CR0	Function
0	0	+1
0	1	+ 16
1	0	+64
1	1	Master Reset

Word Select Bits (CR2, CR3, and CR4) — The Word Select bits are used to select word length, parity, and the number of stop bits. The encoding format is as follows:

CR4	CR3	CR2	Function
0	0	0	7 Bits + Even Parity + 2 Stop Bits
0	0	1	7 Bits + Odd Parity + 2 Stop Bits
0	1	0	7 Bits + Even Parity + 1 Stop Bit
0	1	1	7 Bits + Odd Parity + 1 Stop Bit
1	0	0	8 Bits + 2 Stop Bits
1	0	1	8 Bits + 1 Stop Bit
1 1	1	0	8 Bits + Even parity + 1 Stop Bit
1	1	1	8 Bits + Odd Parity + 1 Stop Bit

Word length, Parity Select, and Stop Bit changes are not buffered and therefore become effective immediately.

Transmitter Control Bits (CR5 and CR6) — Two Transmitter Control bits provide for the control of the interrupt from the Transmit Data Register Empty condition, the Request-to-Send (RTS) output, and the transmission of a Break level (space). The following encoding format is used:

CR6	CR5	Function
0	0	RTS = low, Transmitting Interrupt Disabled.
0	11	RTS = low, Transmitting Interrupt Enabled.
1	0	RTS = high, Transmitting Interrupt Disabled.
1	1	RTS = low, Transmits a Break level on the
		Transmit Data Output. Transmitting Inter-
		rupt Disabled.

Receive Interrupt Enable Bit (CR7) — The following interrupts will be enabled by a high level in bit position 7 of the Control Register (CR7): Receive Data Register Full, Overrun, or a low-to-high transition on the Data Carrier Detect (DCD) signal line.

STATUS REGISTER

Information on the status of the ACIA is available to the MPU by reading the ACIA Status Register. This read-only register is selected when RS is low and R/W is high. Information stored in this register indicates the status of the Transmit Data Register, the Receive Data Register and error logic, and the peripheral/modem status inputs of the ACIA.

Receive Data Register Full (RDRF), Bit 0 — Receive Data Register Full indicates that received data has been transferred to the Receive Data Register. RDRF is cleared after an MPU read of the Receive Data Register or by a master reset. The cleared or empty state indicates that the contents of the Receive Data Register are not current. Data Carrier Detect being high also causes RDRF to indicate empty.

Transmit Data Register Empty (TDRE), Bit 1- The Transmit Data Register Empty bit being set high indicates that the Transmit Data Register contents have been transferred and that new data may be entered. The low state indicates that the register is full and that transmission of a new character has not begun since the last write data command.

Data Carrier Detect (DCD), Bit 2 — The Data Carrier Detect bit will be high when the DCD input from a modem has gone high to indicate that a carrier is not present. This bit going high causes an Interrupt Request to be generated when the Receive Interrupt Enable is set. It remains high after the DCD input is returned low until cleared by first reading the Status Register and then the Data Register or until a master reset occurs. If the DCD input remains high after read status and read data or master reset has occurred, the interrupt is cleared, the DCD status bit remains high and will follow the DCD input.

Clear-to-Send (CTS), Bit 3 — The Clear-to-Send bit indicates the state of the Clear-to-Send input from a modem. A low CTS indicates that there is a Clear-to-Send from the modem. In the high state, the Transmit Data Register Empty bit is inhibited and the Clear-to-Send status bit will be high. Master reset does not affect the Clear-to-Send status bit.

Framing Error (FE), Bit 4 — Framing error indicates that the received character is improperly framed by a start and a stop bit and is detected by the absence of the first stop bit. This error indicates a synchronization error, faulty transmission, or a break condition. The framing error flag is set or reset during the receive data transfer time. Therefore, this error indicator is present throughout the time that the associated character is available.

Receiver Overrun (OVRN), Bit 5 — Overrun is an error flag that indicates that one or more characters in the data stream were lost. That is, a character or a number of characters were received but not read from the Receive Data Register (RDR) prior to subsequent characters being received. The overrun condition begins at the midpoint of the last bit of the second character received in succession without a read of the RDR having occurred. The Overrun does not occur in the Status Register until the valid character prior to Overrun has




been read. The RDRF bit remains set until the Overrun is reset. Character synchronization is maintained during the Overrun condition. The Overrun indication is reset after the reading of data from the Receive Data Register or by a Master Reset.

Parity Error (PE), Bit 6 — The parity error flag indicates that the number of highs (ones) in the character does not agree with the preselected odd or even parity. Odd parity is defined to be when the total number of ones is odd. The parity error indication will be present as long as the data

character is in the RDR. If no parity is selected, then both the transmitter parity generator output and the receiver partiy check results are inhibited.

Interrupt Request (\overline{IRQ}), Bit 7 — The \overline{IRQ} bit indicates the state of the \overline{IRQ} output. Any interrupt condition with its applicable enable will be indicated in this status bit. Anytime the \overline{IRQ} output is low the \overline{IRQ} bit will be high to indicate the interrupt or service request status. \overline{IRQ} is cleared by a read operation to the Receive Data Register or a write operation to the Transmit Data Register.


PACKAGE DIMENSIONS

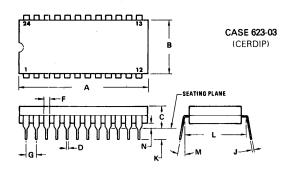

	MILLIN	METERS	INC	HES	
DIM	MIN	MAX	MIN	MAX	
Α	31.24	32.77	1.230	1.290	
В	12.70	15.49	0.500	0.610	
C	4.06	5.59	0.160	C.220	
D	0.41	0.51	0.016	0.020	
F	1.27	1.52	0.050	0.060	
G	2.54	BSC	0.100 BSC		
J	0.20	0.30	0.008	0.012	
K	2.29	4.06	0.090	0.160	
L	15.24 BSC		0.600	BSC	
M	00	15 ⁰	00	150	
N	0.51	1.27	0.020	0.050	

NOTES:


- 1. DIM "L" TO CENTER OF LEADS WHEN FORMED PARALLEL.
- PARALLEL.
 2 LEADS WITHIN 0.13 mm
 (0.005) RADIUS OF TRUE
 POSITION AT SEATING
 PLANE AT MAXIMUM
 MATERIAL CONDITION.
 (WHEN FORMED PARALLEL)

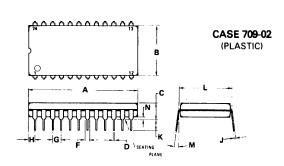

	MILLIN	MILLIMETERS		HES
DIM	MIN	MAX	MIN	MAX
Α	31.37	32.13	1.235	1.265
В	13.72	14.22	0.540	0.560
C	3.94	5.08	0.155	0.200
D	0.36	0.56	0.014	0.022
F	1.02	1.52	0.040	0.060
G	2.54	BSC	0.100	BSC
H	1.65	2.03	0.065	0.080
J	0.20	0.38	0.008	0.015
K	2.92	3.43	0.115	0.135
į,	15.24	BSC	0.600	BSC
M	00	150	00	15°
N	0.51	1.02	0.020	0.040

NOTES:

- POSITIONAL TOLERANCE OF LEADS (D), SHALL BE WITHIN 0.25 mm (0.010) AT MAXIMUM MATERIAL CONDITION, IN RELATION TO SEATING PLANE AND EACH OTHER.
- 2. DIMENSION L TO CENTER OF LEADS WHEN FORMED PARALLEL.
- 3. DIMENSION B DOES NOT INCLUDE MOLD FLASH.

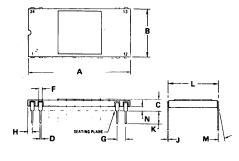

NOTE


- LEADS TRUE POSITIONED WITHIN
 0.25mm (0.010) DIA (AT SEATING
 PLANE) AT MAXIMUM MATERIAL
 CONDITION.
- 2. DIM "L" TO CENTER OF LEADS WHEN FORMED PARALLEL.

CASE 716-06 (CERAMIC)

	MILLIN	METERS	INC	HES	
DIM	MIN	MAX	MIN	MAX	
A	27.64	30.99	1.088	1.220	
В	14.73	15.34	0.580	0.604	
C	2.67	4.32	0.105	0.170	
D	0.38	0.53	0.015	0.021	
F	0.76	1.40	0.030	0.055	
G	2.54	BSC	0,100 BSC		
Н	0.76	1.78	0.030	0.070	
J	0.20	0.30	0.008	0.012	
K	2.54	4.57	0.100	0.180	
T	14.99	15.49	0.590	0.610	
M	-	100	-	100	
N	1.02	1.52	0.040	0.060	



ORDERING INFORMATION

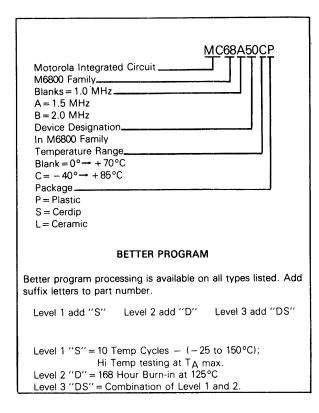


Speed Device		Temperature Range
1.0 MHz	MC6850P,L,S MC6850CP,CL,CS	0 to 70°C - 40 to +85°C
1.5 MHz	MC68A50P,L,S MC68A50CP,CL,CS	0 to +70°C -40 to +85°C
2.0 MHz	MC68B50P,L,S	0 to +70°C

Motorola reserves the right to make changes to any products herein to improve reliability, function or design. Motorola does not assume any liability arising out of the application or use of any product or circuit described herein; neither does it convey any license under its patent rights nor the rights of others.



Appendix D MB8877A Disk Controller Registers/Instructions

The following specifications on the MB8877A disk controller were furnished in full by Fujitsu Microelectronics:

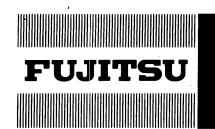

FLOPPY DISK FORMATTER/ CONTROLLER

MB 8876A MB 8877A

March 1982 Edition 1.0

FLOPPY DISK FORMATTER/CONTROLLER

- One-Chip Floppy Fisk Formatter/Controller.
- Applicable to Single Density Floppy Disk, Double Density Floppy Disk and Mini Floppy Disk.
- Interfaceable to 8-bit Microprocessor.

MB 8876A: Negative-logic 8-bit Data Bus.


MB 8877A: Positive-logic 8-bit Data Bus.


- IBM Compatible Sector Format.
- Automatic Track Seeking and Verification.
- Both Single and Double Density Formats.
 - a) Single Density in IBM 3740 Format and FM Recording.
 - b) Double Density in IBM System-34 Format and MFM Recording.
- Programmable Single Sector/Multiple Sectors/Entire Track Read Operation.
- Programmable Single Sector/Multiple Sectors/Entire Track Wire Operation.
- Programmable Sector Length.
- Programmable Side Compare Function.
- Programmable Head Step Rate.
- Programmable Head Engage/Head Settle Time.
- Double Buffered Data I/O.
- DMA Data Transfer Capability.
- Write Precompensation Capability.
- All TTL Compatible I/O.
- Single +5V Power Supply.
- N-Channel E/D MOS Technology.
- Standard 40-pin Dual-In Line Package.
- MB 8876A: Upward Compatible with Western Digital FD1791-02.
 MB 8877A: Upward Compatible with Western Digital FD1793-02.

ABSOLUTE MAXIMUM RATINGS


Rating	Symbol	Value	Unit
Voltage on any pin to V _{SS}	V_{cc}, V_{I}, V_{O}	-0.3 to +7.0	V
Operating Temperature	T _{OP}	0 to 70	°C
Storage Temperature	T _{stg}	-55 to +150	°C

NOTE: Permanent device damage may occur if ABSOLUTE MAXIMUM RATINGS are exceeded. Functional operation should be restricted to the conditions as detailed in the operational sections of this data sheet. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

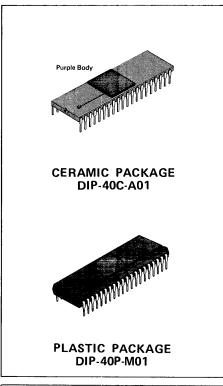

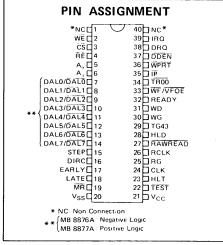

This device contains circuitry to protect the inputs against damage due to high static voltages or electric fields. However, it is advised that normal precautions be taken to avoid application of any voltage higher than maximum rated voltages to this high impedance circuit.

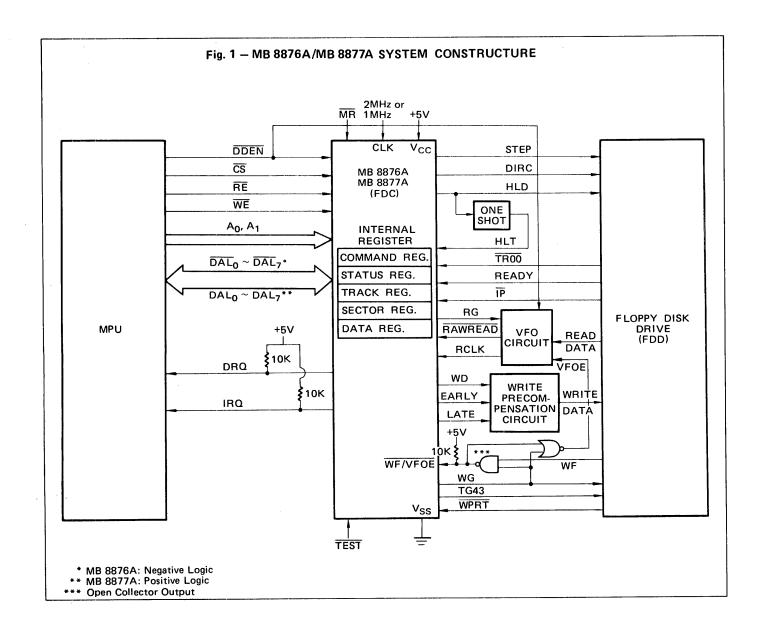

GUARANTEED OPERATING CONDITIONS (Referenced to V_{SS})

		Value			Unit	Operating
Parameter	Symbol	Min.	Тур.	Max.]	Temperature
	V _{cc}	4.75	5.00	5.25		
Supply Voltage	V _{SS}		0			0°C to +70°C
Input High Voltage	V _{IH}	2.0		V _{cc}	V	
Input Low Voltage	V _{IL}	-0.3		0.8	.V	



PIN DESCRIPTIONS

Pin No.	Symbol	Pin Name	I/O	Description
20	V _{SS}	Down Comply		Ground (GND)
21	V _{cc}	Power Supply		+5V DC supply
24	CLK	Clock I		2-MHz fixed frequency clock signal (1-MHz for mini-floppy disk)
19	MR	Master Reset	ı	Signal for resetting the FDC
22	TEST	Test	1	Signal for setting the FDC into a test mode
1, 40	NC	Non Connection	_	These pins are not used.

MPU INTERFACE PINS

37	DDEN	Double Density	I	Signal for selecting a FDC operation mode: When DDEN = 0, the double density operation mode is selected. When DDEN = 1, the single density operation mode is selected. This input must be fixed while the FDC is in busy state.
3	CS	Chip Select	l	Signal for controlling the DALs: When \overline{CS} = 0, the DALs are activated and data transfer between the FDC and the MPU is enabled. When \overline{CS} = 1, the DALs are in high impedance state and data transfer is inhibited. (i.e., \overline{RE} and \overline{WE} are ignored.)
4	RE	Read Enable	1	Strobe signal provided when data is read from internal registers: When $\overline{\text{CS}} = \overline{\text{RE}} = 0$, data can be read from internal registers.
2	WE	Write Enable	I	Strobe signal provided when data is written into internal registers: When $\overline{CS} = \overline{WE} = 0$, data can be written into internal registers.
5,6	A ₀ , A ₁	Register Select Line	Î	Signal for addressing an internal register among Command Register (CR), Status Register (STR), Track Register (TR), Sector Register (SCR) and Data Register (DR): Refer to table of REGISTER SELECTION (p. 6)
7~14	DAL ₀ ∼DAL ₇ DAL ₀ ∼DAL ₇	Data Access Line	I/O	8-bit bidirectional bus for transferring 8-bit data between the FDC and the MPU. MB 8876A: negative logic / MB 8877A: positive logic
38	DRQ	Data Request	0	Signal for informing the MPU of a DR status: Read operation: DRQ = 1 shows the DR is filled with a 8-bit data from a disk, and the FDC is requesting for the MPU to read the data. Write operation: DRQ = 1 shows the DR is empty, and the FDC is requesting for the MPU to write the next data into the DR.
39	IRQ	Interrupt Request	0	Interrupt signal to the MPU: IRQ is set when a Command is completed or the TYPE IV Command is executed. IRQ is reset when the next Command is written or the STR is read.

FLOPPY DISK INTERFACE PINS Disk Head Control Signal

15	STEP	Step Move	0	Step pulse signal for moving a disk head.
16	DIRC	Direction	0	Signal for indicating a direction of disk head moving to the FDD: DIRC = 0 shows the head moves toward outside. DIRC = 1 shows the head moves toward inside.
28	HLD	Head Load	0	Signal for loading a disk head: When HLD = 1, the head is engaged on the disk. When HLD = 0, the head is released from the disk.



Disk Head Control Signal (cont'd)

Pin No.	Symbol	Pin Name	1/0	Description
23	HLT	Head Load Timing	I	Signal for informing a disk head status: HLT = 1 shows a disk head is in an engaged state. HLT is set when a disk head has been settled or a head settle time pre-determined by one shot circuit has elapsed after HLD = 1.
34	TR00	Track 00	I	Signal for informing whether a disk head is positioned on Track No. 00 or not: TR00 = 0 shows Track No. 00 is detected during track seaking operation.
32	READY	Ready	1	Signal for informing the FDC of a disk drive status: READY = 1 shows the disk drive is ready for operation, and only when READY = 1, read/write operation for disk can be executed. READY = 0 shows the disk drive is not ready, and neither read/write operation can not be executed. However, seek operation is excuted regardless of this signal.
35	ĪΡ	Index Pulse		Signal for informing the FDC of an index hole of disk being detected in the FDD.

Disk Read Operation Signal

25	RG	Read Gate	0	Signal for informing synchronization between RCLK and RAWREAD to an external VFO circuit: RG = 1 shows the FDC has found out a SYNC byte during disk reading operation.
26	RCLK	Read Clock	ı	A data window signal which is generated in an external VFO circuit out of Read Data.
27	RAWREAD	Raw Read	I	A raw read data signal transferred from the FDD.


Disk Write Operation Signal

30	WG	Write Gate	0	Signal for indicating data is being written into a disk.
17	EARLY	Early Shift	0	Signal for indicating early pre-compensation of data write timing to a disk: EARLY = 1 shows a serial data to be transmitted via the WD pin to a disk must be shifted earlier.
18	LATE	Late Shift	0	Signal for indicating later pre-compensation of data write timing to a disk: LATE = 1 shows a serial data to be transmitted via the WD pin to a disk must be shifted later.
31	WD	Write Data	0	A write data signal transferred to the FDD.
29	TG43	Track Greater Than 43	0	Signal for indicating a head position of a disk: TG43 = 1 shows the head is located on any of Track No. 44 thru 76. TG43 = 0 shows the head is located on any of Track No. 0 thru 43.
33	WF/VFOE	Write Fault/ Variable Frequency Oscillator Enable	I/O	Input signal for informing a fault is detected during write operation for a disk (during WG = 1). Output signal forinforming the FDC is reading a disk (during WG = 0).
34	WPRT	Write Protect	ı	Signal for inhibiting write operation for disk.

REGISTER SELECTION

Chip Select	Ad	dress	Selecte	d Register	Data Access Line Status
CS	Α1	Ao	Read Mode (RE = 0)	Write Mode (WE = 0)	$\overline{DAL_7} \sim \overline{DAL_0}$ $DAL_7 \sim DAL_0$
1	*	*	Deselected	Deselected	High Impedance
0	0	0	Status Register (STR)	Command Register (CR)	Enabled
0	0	1	Track Register (TR)	Track Register (TR)	Enabled
0	1	0	Sector Register (SCR)	Sector Register (SCR)	Enabled
0	1	1	Data Register (DR)	Data Register (DR)	Enabled

*: Don't care

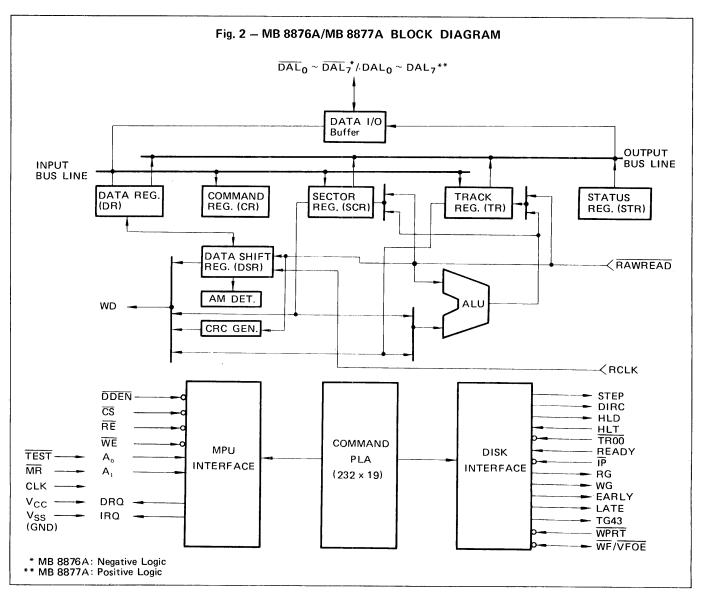

FUNCTIONAL BLOCK DESCRIPTIONS

INTERNAL REGISTERS

Command Register (CR)

An 8-bit write-only register in which a Command is written from the MPU:

A Command must be loaded in the CR during BUSY = 0. (The BUSY flag is Bit 0 of the STR.) After completion of execution for a loaded Command, such a completion is informed to the MPU by setting the IRQ output high (IRQ = 1), and resetting the BUSY flag.

Status Register (STR)

An 8-bit read-only register from which the MPU can read the contents to know a status of the FDC and the FDD:

The contents of STR is automatically changed according to the status of executing Command. After the STR is read by the MPU, the IRQ output is usually reset to low (IRQ = 0) except for the Type IV Command.

Data Register (DR)

An 8-bit read/write register:

In a read operation, an 8-bit parallel data is loaded from the DSR to the DR previously.

For Seek Command, a loaded data in the DR means a track number to be sought.

For Read Data Comand or Write Data Command, a stored data in the DR means a data read from a data field of disk or a data to be written into a data field.

Data Shift Register (DSR)

An 8-bit serial shift-register which can not be accessed directly by the MPU:

In a disk read operation, a series of bit data read from a disk are transferred to the DSR, and then the filled data in the DSR is transferred in parallel to the DR.

In a disk write operation, and 8-bit data in the DR is transferred in parallel to the DSR, and then the filled data in the DSR is serially transferred and written into a disk bit by bit.

Track Register (TR)

An 8-bit read/write shift-register:

For Restore, Seek, Step, Step-In and Step-Out Commands (i.e. TYPE I Command), a content of the TR means a present track number, and is updated during the Command execution.

For Read Data Command and Write Data Command: a content of the TR means a designated track number itself which is written into the TR prior to the Command execution and can not be renewed during the Command execution.

Sector Register (SCR)

An 8-bit read/write shift-register:

For Read Data Command and Write Data Command, a designated sector number is written into the SCR prior to the Command execution.

For Read Address Command, a track number in the ID field is transferred to the SCR.

OTHER FUNCTIONAL BLOCKS

Cycle Redundancy Check (CRC) Circuit

A circuit to check a misread/miswrite on a data which is serially transferred between the FDC and a disk:

In a write operation, a CRC data (16-bit serial bit cell) is automatically generated in the CRC circuit based on the original data and written in the disk together with the original data.

In a read operation, a CRC data is read together with the target data to check an error.

Arithmetic Logic Unit (ALU)

The ALU has the functions of Serial Data Compare, Increment (+1), Decrement (-1) and Through (±0).

The ALU can renew a content of Register and compare data.

Address Mark (AM) Detection Circuit

A circuit to detect specific bit pattern data in serial data from a disk, such as the Index Mark (or Track Mark: IDM), ID Address Mark (or Address Mark: IDAM) and Data Address Mark (Data AM).

Data Modulator

A circuit to modulate data to be written into a disk in the specified recording format:

Single density recording format: Frequency Modulation

(FM)

Double density recording format: Modified Frequency

Modulation (MFM)

Programmable Logic Array (PLA) for Commands

A micro-program to generate control signals (Commands) which control the FDC operation:

The size of micro-program is approximately 232 x 19 bits.

DC CHARACTERISTICS

(Full Guaranteed Operating Conditions unless otherwise noted.)

Parameter	Chambal		Unit		
rarameter	Symbol	Min.	Тур.	Max.	Unit
Output High Voltage (I _{OH} = -200μA)	V _{он}	2.4			V
Output Low Voltage (I _{OL} = 1.8 mA)	V _{OL}			0.4	V
Three-State (Off-State) Input Current (V _{IN} = 0.4V to 2.4V)	I _{TSI}			10	μΑ
Input Leakage Current See Note 1)	I _{IN1}			2.5	μΑ
Input Leakage Current See Note 2)	I _{IN2}			100	μΑ
Output Leakage Current for Off-State (V _{OH} = 2.4V)	I _{LOH}			10	μΑ
Power Consumption	P _C			350	mW

Note 1) : Except for HLT, $\overline{\text{TEST}}$, $\overline{\text{WF}}$, $\overline{\text{WPRT}}$, and $\overline{\text{DDEN}}$. (V_{IN} = 0V to 5.25V) 2) : For HLT, $\overline{\text{TEST}}$, $\overline{\text{WF}}$, $\overline{\text{WPRT}}$, and $\overline{\text{DDEN}}$. (V_{IN} = 0V to 5.25V)

AC CHARACTERISTICS

(Full Guaranteed Operating Conditions unless otherwise noted.)

MPU Read Timing (From FDC)


Parameter	Symbol		Unit		
i di dille tel	Symbol	Min.	Тур.	Max.	
Address Setup Time	t _{SET}	50			ns
Address Hold Time	t _{HLD}	10			ns
RE Pulse Width	t _{RE}	280			ns
DRQ Reset Time	t _{DRR}			250	ns
IRQ Reset Time	tirR			500	ns
Data Delay Time (C _L = 25pF)	t _{DACC}			250	ns
Data Hold Time (C _L = 25pF)	t _{DOH}	50		150	ns
DRQ Service Time (RCLK cycle = 2μs)	t _{SEVR}			13.5*	μs

^{* :} These values are doubled when CLK = 1 MHz.

MPU Write Timing (To FDC)

Parameter	Cymahal		11		
rarameter	Symbol	Min.	Тур.	Max.	Unit
Address Setup Time	t _{SET}	50			ns
Address Hold Time	t _{HLD}	10			ns
WE Pulse Width	t _{WE}	200			ns
DRQ Reset Time	t _{DRR}			250	ns
IRQ Reset Time	t _{IRR}			500	ns
Data Setup Time	t _{DS}	250			ns
Data Hold Time	t _{DH}	0			ns
DRQ Service Time (DDEN = "L")	t _{SEVW}			11.5*	μs

^{*:} These values are doubled when CLK = 1 MHz.

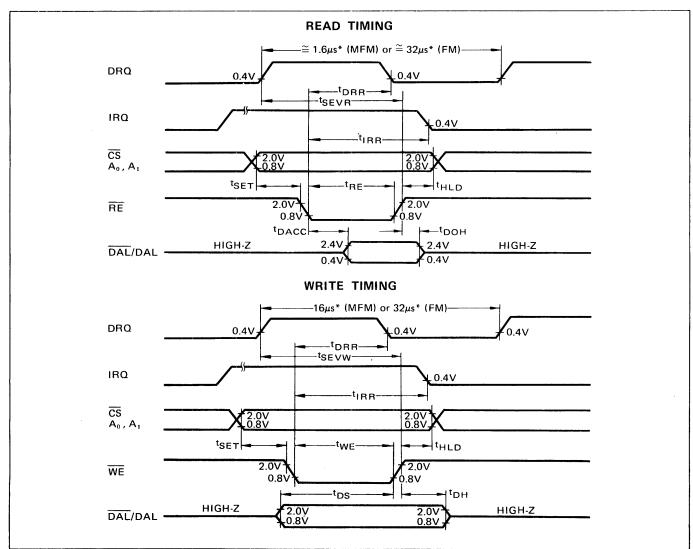


*: These values are doubled when CLK=1MHz.



FDC Read Data Timing (From Disk)

Parameter		Symbol				
r ai ai i le tei		Symbol	Min.	Тур.	Max. 250*	Unit
RAWREAD Pulse Width		t _{PW}	100*		250*	ns
Clock Setup Time		^t D	40			ns
Clock Hold Time for MFM		t _{CD}	40			ns
Clock Hold Time for FM		t _{CS}	40			ns
RAWREAD Cycle Time	MFM			2*, 3* or 4*		μs
NAWNEAD Cycle Time	FM	^t BC		2* or 4*		μs
RCLK High Pulse Width	MFM		0.8	1*	20	μs
NOLK High ruise width	FM	t _A	0.8	2*	250*	μs
RCLK Low Pulse Width	MFM		0.8	1*	20	μs
NOLK LOW Fulse Width	. FM	t _B	0.8	2*	20	μs
RCLK Cycle Time	MFM			2*		μs
NCLK Cycle Time	FM	^t C		4*		μs

^{*:} These values are doubled when CLK = 1MHz.

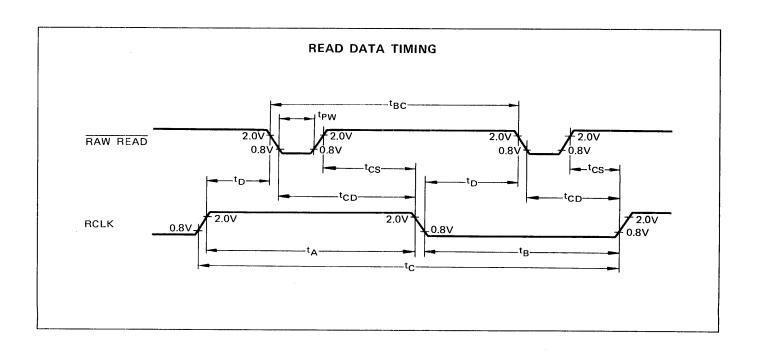


FDC Write Data Timing (To Disk)

Parameter Vrite Data Pulse Width	C	ol Conditions			Value			
Parameter	Symbol	Conditio	ns	Min.	Тур.	Max.	Unit	
	t _{WD} **	0116 0111	FM	450	500	550		
Write Data Pulse Width	TWD	two CLK = 2 MHz		150	200	250	ns	
	+ **		FM	_	2	_	μs	
Write Gate to Write Data	t _{WG} **	VG CLK = 2MHz	MFM	_	1	_	μ3	
W	+ **	CLK = 2 MHz	FM	_	2	_	μs	
Write Gate off from WD	t _{WF}		MFM	1	_	2		
Early (Late) to Write Data	t _S	CLK = 2 MHz	MFM	125	_	_	ns	
Early (Late) from Write Data	t _H	CLK = 2 MHz	MFM	-50*	_	_	ns	
WD Valid often CLK	t _{D1}	CLK = 1 MHz	MFM	200	-	_	ns	
WD Valid after CLK	וטי	CLK = 2 MHz	MFM	30	_	_	113	
WD Volid to CLK	+	CLK = 1 MHz	MFM	50		_	ns	
WD Valid to CLK	t _{D2}	CLK = 2 MHz	MFM	50	_	_	1 115	

^{*:} This value, -50ns (min) indicates that Early (Late) signal changes 50ns (min) before WD falls down in worst case. See DISK DATA OUTPUT TIMING.

^{**:} All times are doubled when CLK = 1 MHz.

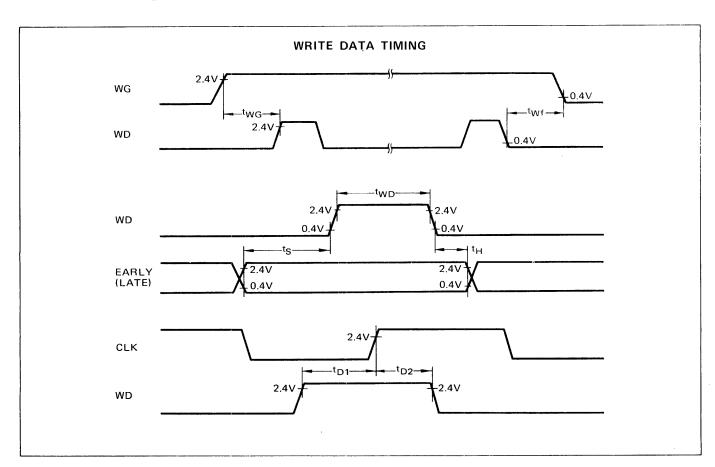




OTHER TIMINGS


Parameter		Symbol		11-14		
Farameter	rarameter		Min.	Тур.	Max.	Unit
CLK Low Pulse Width		t _{CD1}	230		20000	ns
CLK High Pulse Width	LK High Pulse Width		200		20000	ns
OTED D. I. WELL	MFM		2*			μs
STEP Pulse Width	FM	t _{STP}	4*			μs
DIRC Setup Time		t _{DIR}	12*			μs
MR Pulse Width**		t _{MR}	50*			μs
IP Pulse Width		t _{IP}	10*			μs
WF Pulse Width		t _{WF}	10*			μs
CLK Cycle Time		t _{CYC}		0.5*		μs

^{*:} These values are doubled when CLK = 1 MHz.

^{**:} During Master Reset, CLK of more than 10 cycles are required.

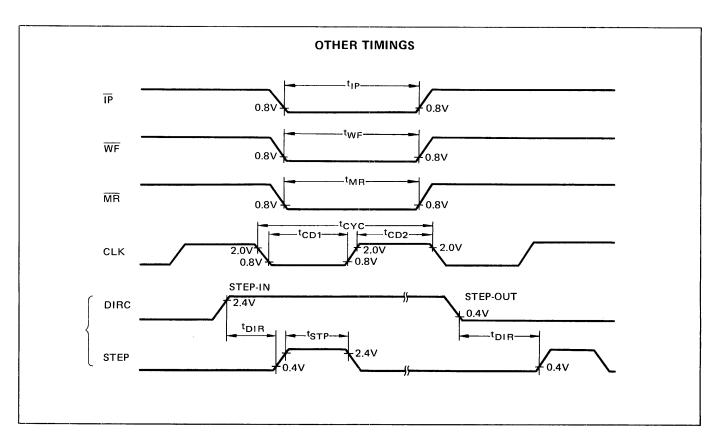

PACKAGE DIMENSIONS

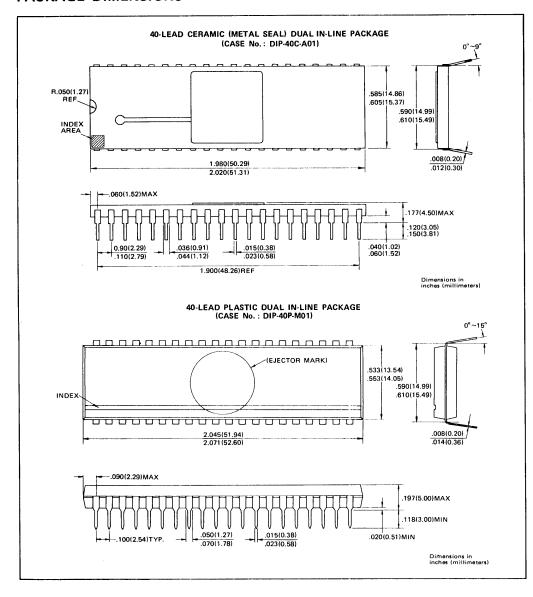

Circuit diagrams utilizing Fujitsu products are included as a means of illustrating typical semiconductor applications; consequently, complete information sufficient for construction purposes is not necessarily given. The information has been carefully checked and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies. Furthermore, such information does not convey to the purchaser of the semiconductor devices described herein any license under the patent rights of Fujitsu Limited or others. Fujitsu Limited reserves the right to change device specifications.

FUJITSU LIMITED

Communications and Electronics

6-1, Marunouchi 2-chome, Chiyoda-ku, Tokyo 100, Japan

Phone: National (03) 216-3211 International (Int'l Prefix) 81-3-216-3211 Telex: J22833 Cable: "FUJITSULIMITED TOKYO"

For further information please contact:

FUJITSU LIMITED

Semiconductor Division: No. 18 Mori Bldg., 3-13, 2-chome, Toranomon, Minato-ku, Tokyo 105, Japan

Phone: National (03) 502-0161 International (Int'l Prefix) 81-3-502-0161 Telex: 2224361 FTTOR J

FUJITSU MICROELECTRONICS, INC.:

2985 Kifer Road, Santa Clara, CA95051, U.S.A

Phone: 408-727-1700 Telex: 910-338-0190 FUJITSU SNTA

FUJITSU MIKROELEKTRONIK GmbH.:

Arabella Center 9. OG./A Lyoner Straße 44-48 D-6000 Frankfurt 71, F.R. Germany

Phone: 0611/66 63 056 Telex: 0411 963

Appendix E Osborne 1 System Specifications

SIZE measured with case closed 20.5 inches wide 13 inches deep 9 inches high

WEIGHT

24.5 lbs. (shipping weight 32 lbs.)

PORTABILITY

Leather handle for carrying When closed, unit is weatherproof Unit sized to fit under standard airline seat

Power cord stows within case with cover secured by hook-and-loop plastic fasteners or hinged

High-impact ABS plastic or injection molded case meets UL 94VO flame retardance specifications

POWER CONSUMPTION

110 or 220 volts

37 watts max.

Configurable through internal jumper to 230 vac, or through fuse card Switching power supply

ENVIRONMENTAL

Convection cooled; no fan

Maximum operating ambient air temperature 85 degrees F

Humidity — 95% relative, non-condensing

Minimum operating ambient air temperature 32 degrees F

SAFETY

Three-wire grounded power plug

Three primary circuit protection points

Fuse integral to power supply

Resettable or fused circuit breaker at power switch

Thermal cutoff opens when internal temperature exceeds 150 degrees F (resets at 130 degrees F)

Power supply shuts off under overload conditions

CONTROLS

69 key detachable keyboard, full-travel sloped keytops includes 12 key numeric keypad

Power on-off switch in rear

Reset pushbutton on front panel

Brightness and contrast controls on front panel

MAIN PC BOARD

Processor — Z80A®, 4 Mhz CPU clock

Memory size — 64K bytes programmable (RAM)

4K read-only memory bank-switched

59K of programmable memory available for software

Memory access time — 250 nsec programmable memory

350 nsec read-only memory

Program in read-only memory executes without delay

Programmable memory adds average delay times as follows:

First M1 cycle — 188 nsec

Subsequent consecutive M1 cycles — 0 nsec

Non-M1 cycles — 375 nsec

DISPLAY SYSTEM

4K byte memory-mapped display memory in top page of main memory
 9 bit wide display memory — 7 bit ASCII plus underline and half-intensity attributes

Scrolling performed by hardware in vertical and horizontal directions Solid underline cursor

White video on dark background

24 lines of 52 characters visible at any time

32 lines of 128 characters video memory over which screen may be moved

Character set

96 upper and lower case characters

32 graphics characters

INTERFACES

Serial RS-232C

1200 or 300 baud, selectable in software

DTR (pin 20) handshaking input to control transmission spot rate Modem — 9 pin plug for use with external modem (DCE)

Adapter allows connection of modem and printer simultaneously

IEEE-488 (General Purpose instrumentation Bus)

Controller ony, talker and listener

Keyboard — connects to keyboard through 10 inch ribbon cable removable by user

External video — drives video monitor as option (same format as 24 x 52)
Battery adapter — allows operation with external battery pack

PERIPHERALS — SELF-CONTAINED

Video monitor

Size of video area

3.55" horiz.

2.63" vert.

P4 phosphor (same as TV)

Linearity 10% adjacent characters, 15% overall

Display format

24 lines

52 characters

10 scan lines per character line

Cursor on lowest scan

Timing

64 microseconds per scan

16.666 milliseconds per vertical sweep

12 microseconds horizontal blanking

1.28 milliseconds vertical blanking

DISKS

Media

5.25 inch diskettes, single sided, soft sectored Storage provided for 25 diskettes max.

40 tracks per diskette

10 sectors per track

256 bytes per sector

Max. seek time 12 milliseconds track-to-track

Head load time 0 milliseconds

Rotation time 200 milliseconds

Recording standard — FM

Controller type 1793

ROM/BIOS 1.3

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 1
SINGLE Density Monitor for Model 1 system.
                                                              C:SDROMA .ASM
        ≉ABS
                0000 EFF0
        ‡CODE
                EFF0 0000
        ≠DATA
               EFF0
                      0000
                  ;
                               SINGLE Density Monitor
                  ÷
                  ; VER
                                 REV A.O
                  ;LABLE =
                                 REV 1.3
                  DATE
                                 29
                        This rom has been modified to accept single or double density. All the disk driver have been
                  ;changed. New valriables have been added which are:
                         SAVTYP:
                                 BIT 0 =
                                                 (0.1)Double density or single density 1=single. 0=double.
                                 BIT 1 =
                                                 (0.1)SIDE SELECT
                                 BIT 2-3 =
                                                 (0-3) The sector lenth 0=128, 1=256, 2=512, 3=1024.
                  :Added Dec. 21.81 by DEB.
                       Density select(SELDEN) has been added to the disk drivers. This proc senses the density of the
                 disk and reports it by setting SAVTYP with density and sector size. It also reports the number of
                  ;sectors on one track in regester 8.
                  ;Added Jan. 5,82 by DEB.
                       There seems to be a problem in the timing of the RSEC AND WSEC routines. The problem shows up
                 ; when CP/M reads the disk one sector after another. The fix is to use RADR only when the drive is
                 islected and not before every read or write.
                 ;Added Jan. 6,82 by DEB.
     = 0000
                 CCP
0000 = 0000
                         ORG
                                 0
                                                 FWA of memory
                 ALPUSH: MACRO
                         PUSH
                                 ΑF
                         PUSH
                                 ВC
                         PUSH
                                 DE
                         PUSH
                                 HL
                         PUSH
                                 ΙX
                         PUSH
                                 ΙY
                         ENDM
                 ALLPOP: MACRO
                         POP
                                 ΙY
                         POP
                                 ΙX
                         POP
                                 HL
                         POP
                                 ÐΕ
                         POP
                                 8 C
                         PCP
                         ENDM
```

SCRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 2 SINGLE Density Monitor for Model 1 system. C:SDROMA .ASM

ROM SECTIONS ARE:

;	#[1]	=	ROM STANDARDS
;	#[2]	=	CPM BOOT
;	#[3]	=	CONSOL ROUTINES
:	≑[4]	=	PIA ROUTINES
•	*[5]	=	SIA ROUTINES
:	≑[6]	=	DISK ROUTINES
i	≠[7]	=	FORMAT ROUTINE
·	#101	=	RAM LOCATIONS

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 3
 Monitor Main Loop.
                                                                 C:SDROMA .ASM
                   #[1]
 0000
                           DISDIM
                                                   disable DIM
0002 C33600
                           JMP
                                   BMON
                                                   :reset/restart
 0005
                   USER:
                   :Exit to user program from 'G' command
 0005
                           ΕI
 0006 C9
                           RET
                                                   :Exit from G command
 0007
                   ILINT:
                   Here on unknown interrupt
 0007
                           DI
 0008
                           DISDIM
000A ED736FEF $
                           STO
                                   SP.IESTK
                                                   save interrupted proc stack
000E 3199EF
                           LDK
                                   SP.ISTK
                                                   insure stack in RAM
 0011
                           ALPUSH
                                                   save all registers
 0019 3E49
                           LDK
                                   A, " I "
001B 3206EF
                           STO
                                   A. MPCHR
                                                   set prompt to inter level
001E
                  EXITI:
                   Exit interrupt code via exiting to RAM and
                           then enable or disable ROM code depending on
                           the value contained in ROMRAM cell.
001E 3A002C
                           LD
                                   A.H.VIO
                                                   clear interrupt
0021 3A08EF
                          LD
                                   A+ROMRAM
0024 B7
                           OR
                                   Δ
0025 C2DF00
                           JNZ
                                   ROMJP1
                                                   ; if return to RAM. CPM
0028
                          ALLPOP
0030 ED786FEF $
                          LD
                                  SP. IESTK
                                                   get users stack back
0034
                          ΕI
0035 C9
                          RET
0036
                  BMON:
                          DI
0037 31C1EF
                          LDK
                                  SP+ROMSTK
003A AF
                          XRA
0038
     3217EF
                          STO
                                  A. SDISK
                                                   set disk to drive 0
003E 32EFEF
                          STO
                                  A. VR TOFF
                                                   OFFSET TO ZERO USED IN COUT
0041 30
                          INC
0042 32D0EF
                          STO
                                  A. SAVTYP
                                                  SET SAVTYP TO SINGEL
0045 CD8000
                          CALL
                                  HINT
                                                  :Initialize hardware
0048 2100ED
                          LDK
                                  HL+(high MRAM) +100h
     22EAEF
004B
                          STO
                                  HL.SSAVE
                                                  :Initialize User stack in ram
004E 210000
                          LDK
                                  HL.O
0051
     226DEF
                          STO
                                  HL.LDSEL
                                                  iclear select and last track
0054
     118601
                          LDK
                                  DE.IMSG
0057
     CD9701
                          CALL
                                  OSTR
                                                  ;Output initial message
005A
     180E -006A$
                          JR
                                  BMON1
                                                  :continue
005C
     = 0066
                          DRG
                                  NMIA
0066
                          DI
0067 C33600
                          JMP
                                  BMON
                                                  :NMI
```

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 4 Monitor Main Loop. C:SDROMA .ASM

Main start up for Monitor. Get 1st user response.

006A 006D	CD7E03 B	MON1:	CALL	C I CR	:Get next character
			LK	HL.DSKSWP	idisk swap cell
006F	21C7EF		r.v		
0072	0E00		LK	C+0	<pre>;boot from A:</pre>
0074	71		STO	C.[h1]	;set to A=A+ B=B
0075	CA6802		JZ	CBDDT	if cold boot
0078	34		INC	[h1]	:swap drives: A=B+ B=A
0079	FE22		CMP	* # *	
007B	CA6802		JZ	CBOOT	iif cold boot off of B
0078	1886 ^0036\$		JR	BMON	

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 5
Monitor Main Loop.
                                                               C: SDROMA .ASM
0080
                  HINT:
                  :Initialize all dependent hardware.
                  : ENTRY
                  None.
                  EXIT
                  :All hardware initialized.
                  Set flag indicating in ROM
0800
                          PROC
0080
                          ENAROM
                          DISDIM
0089
                                                  idisable DIM bit
0088 211F07
                          LDK
                                  HL . GKEY
008E 22F8EF
                          STO
                                  HL.INTBL+(4*2) ;set keyboard interrupt
0091 ED5E
                          IM2
0093
     3EEF
                          LDK
                                  A, high INTBL
0095 ED47
                          MOV
                                  I.A
                                                  set interrupt page
                          Initialize keyboard
0097 AF
                          XRA
0098 32F0EF
                          STO
                                  A. OEFFOH
009B 326BEF
                          STO
                                  A. BELCNT
                                                  clear bell timer cell
009E 325EEF
                                  A, LKEY
                          STO
                                                  clear last key cell
                                  A. ECHOP
00A1 3207EF
                          STO
                                                  clear echo to list dev
00A4 3260EF
                          STO
                                  A.ESCH
                                                  iclear ESC hold flag
00A7 21D4EF
                          LDK
                                  HL.KEYLST
OOAA
     0606
                          LDK
                                  B.KL_LEN≠KLE_LEN
DOAC
                  :1:
00AC 77
                          STO
                                  A+[HL]
00AD 23
                          INC
                                  HL
00AE 10FC ^00AC$
                          DJNZ
                                  :1
00B0 2F
                          CMA
0081 3263EF
                          STO
                                  A.IDAY
                                                  ;set date invalid for SETUP.COM
00B4 3259EF
                          STO
                                  A.KEYLCK
                                                  indicate NOT locked
00B7 3E80
                          LDK
                                  A.VLL
00B9 326CEF
                          STO
                                  A.LLIMIT
                                                  set max line limit
                          Now function PIA to set starting address
                          and continue to move display window over
                  ;
                  ;
                          the first display line.
                          Set cursor as 1-40 on 1st line.
                  ;
OOBC CD4F09
                          CALL
                                  SPAO
                                                  set up for output
OOBF OEEA
                          LDK
                                  C.VFLO
00C1 CD6409
                          CALL
                                  DPAD
                                                  set for -10 char position AND DOUBLE DENSITY
                  ;
                          Set beginning line to 0
OOC4 AF
                          XRA
                                  A
00C5 4F
                          MOV
                                  C.A
00C6 CD7109
                          CALL
                                  OPBD
                                                  iset line
                          Intialize IEEE port
00C9 0E01
                          1 dk
                                  C + 1
00CB CD7E09
                          call
                                 ie.co
                          Reset-Master clear the SIO (ACIA)
00CE 0E55
                          LK
                                 C.SI.S16
                                                  select 16x clock for 1200 baud
```

		SORCIM 808x	Assembler	ver 3.5E	<:/55/7= 59:92	
Monit	or Main Loop.				C:SD	ROMA .ASM
0000	CDF60A	CALL	SIRST	;re	eset	
		; Set o	default seek	to as defi	ined by systext	
0003	3E02	LDK	A.SEEKT	1 ;de	efined from sys	text
0005	3213EF	STO	A. SEKDEL	. se	et seek step ra	te
		; Set o	default prom	pt char		
0008	3E3E	LDK	A.PMCHR			
OODA	3206EF	STO	A.MPCHR	ise	et up default	
0000		€I				
DODE	C 9	RET				

SDRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 7 Monitor Main Loop. C:SDROMA .ASM

	113316 1803 ^00E7\$	romjp1:	ldk jr	de •1633h bio:ip	offset in bios jump table
00E4 00E7	113616 2AD2EF	romjo2: biojp:	idk id	de 1636h hi ccpadr	offset in blos jump taple
OOEA	19		add	hl•de	form address
00EB	E9		qmi	[hl]	

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 8

			1 808X A	SSemolei	AGI	J.J	C:SDROMA .A	c M
Monito	or Main Lo	30p•					CISURUMA .A.	3 M
			ORG	100h				
OOEC	= 0100		UKG	10011				
		*POM 1111	MP TABLE					
		\$ KUM 30	CBIOS	=	Jmos	used main	y by CBIOS	
		;	SC	=			y by SuperCalc	
		•	30		Q.mp3	4 304	, 2, 2223	
0100	C36802		JMP	CBOOT		;CBIOS	cold boot	
0103	C3AB02		JMP	WBOOT		:CBIOS	warm boot	
0105	C37103		JMP	SKEY		:CB10S	keyboard status	
0109	C37E03		JMP	CI		;CBIOS	keyboard input	
0100	C31004		JMP	COUT		:CBIOS	console output	
010F	C31C08		JMP	LIST		;CBIOS	list output	
0112	C31COB		JMP	LIST		;CBIDS	punch output	
0115	C3030B		JMP	READER		; CB10S	reader input	
		;	Disk I/	0				
							*	
0118	C3400B		JMP	RDRV		CBIOS	HOME	
0118	C9		RET ! N	IOP ! NOP		:C810S	SELECT DISK	
011E	C3750C		JMP	READ		;	READ SECTOR	
0121	C37D0C		JMP	WRITE		•	WRITE SECTOR	ECTOR HEADER
0124	C3EC0C		JMP	RADR		;	READ SECTOR ANY S	ECIUR HEADER
0127	C35808		JMP	RSEC		;CBIOS	DISK SECTOR READ	
0124	C36D0B		JMP	WSEC		CBIOS	DISK SECTOR WRITE	
0120	C3130B		JMP	SLST		CBIOS	List device statu	
0130	C3800B		JMP	SENDEN		;CBIOS	SENSE THE DENSITY	OF BRIVE
0133	C3DF00		JMP	ROMJP1		;CBIOS		
0136	C3E400		JMP	ROMJP2		;CBIOS	FORMATING ROUTINE	
0139	C33F0E		JMP	FORMAT		:08105	PURMATING ROUTINE	
		;	IEEE					
			JMP	SIRST		;CB10S	SIO reset	
013C	C3F60A		JMP	IE.CO		;CB105	IEEE Control 0	lut
013F	C37E09			IE-SI		CBIOS	Status In	
0142	C3C109		JMP JMP	IE.GTS		CBIOS	Go To Sta	
0145	C3D409		JMP	IE.TC		;08108	Take Cont	
0148	C3E009		JMP	IE.OIM		;CB10S		terface Message
014B	C3200A		JMP	IE-DDM		; C B I O S		vice Message
014E	C3430A		7W5	IE-IDM		CBIOS	Input Dev	ice Message
0151	C3850A		JMP	IE-PP		:09108	Parallel	
0154	C3E10A		3111	120				
		:	SuperCa	alc				
								255
0157	C3F106		JMP	VLDDR		; S C	VIDEO BLOCK MOVE	
015A	C30507		JMP	VLDIR		;sc	AIDED BLOCK WORE	
0150	C3E906		JMP	STODIM		;sc	STO reg 8 IN [HL]	
		;	DISK I	' 0				
				544U57		•	DMA WRITE TO CONT	ROLER
0160	C3200E		JMP	DMAWRT		:	DMA READ FROM COM	
0163	C30A0E		JMP	DMARD		;	HOME DISK DRIVE	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
0166	C3F708		JMP	HCME		•	SEEK TO TRACK	
0169	C31AOC		JMP	SEEK		•	STEP SAME DIRECT!	ION
016C	C3390C		JMP	STEP		;	STEP IN	
016F	C34DOC		JMP	STEPIN		:	STEP DUT	
0172	C3610C		JMP	STEPOUT		;	FORCE INTERUPT	
0175	C3640D		JMP	FOR INT READTRK		;	READ TRACK	
0178	C3330D		JMP	FMTTRK		;	Format one track	
017B	C3490D		JMP	CHILKK		,	C. May One Chack	

	SCRCIM 808x Assembler ver	3.5E	<:/55/7= 59:92 Page 9	,
Monitor Main Loop.			MAA. AMOROZEO	

	C3A40D C3280B C3F00B	JMP JMP	SELDRV ACISTAT SCTRKR		SELECT DRIVE SERIAL PORT STATUS SET TRACK REGESTER IN CONTROLER CHIP WITH VALUE IN SAVTRK
--	----------------------------	------------	-----------------------------	--	---

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 10
Monitor Main Loop. C:SDROMA .ASM

0187 ODOA EMBOOT: DB CR+LF

0189 424F4F5420 DB 'BOOT ERROR'

, 0193 AO DC • •

0194 E800T:

BOOT ERROR MESSAGE ROUTINE

:ENTRY

0194 PROC

0194 118701 LDK DE+EMBOOT :HERE ON BOOT ERROR :FALL THROUGH TO CSTR

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 11 C:SDROMA .ASM

0197		:NOTE: :ENTRY		TO CONSOLE Cognizes 7		N ESCAPE	SEQUENCE	TO REPEA	T CHAR	N TIMES.	FORMAT	IS: 7F	REPEAT	COUNT.	CHAR
		;DE	=	FWA OF SC	URCE										
0197			PR OC												
0197	1A		LD	A.[DE]											
0198	B7		DR	A											
0199	F 5		PUSH	AF											
019A	E67F		AND	07FH											
0190	FE7F		CMP	07FH											
019E	4F		MOV	C + A											
019F	200C ^01AD\$		JRNZ	:4		; IF NOT	REPEAT								
01A1	13		INC	DE		711 .101									
01A2	1 A		LD	A.[DE]											
01A3	30		DEC	A											
0144	47		MOV	8 • A		REPEAT	COUNT								
01A5	13		INC	DE											
0146	1 A		LD	A.[DE]		GET RE	PEAT CHAR								
01A7	4F		VOM	C . A											
0148	CD1004	:2:	CALL	COUT		GUTPUT	CHAR								
01AB	10FB ^01A8\$		DJNŽ	:2		:IF NOT	DONE								
Olad	CD1004	:4:	CALL	COUT		;OUT PUT									
0180	13		INC	ĐE											
0181	F1		POP	AF											
01B2	F29701		JP	OSTR		FIF NOT	DONE								
0185	C9		RET												

0186		IMSG:	
0186	1404040404	DB	*Z*-40h•1f•1f•1f•1f
0188	7F0B20	DB	07Fh. 11, ' '
018E	1867	DB	ESC. VSGH
	11	DB	*Q*-40h
0100		DB	07Fh. 24. *W*-40h
01C1	7F1817		*E*-40h
01C4	05	DB	
0105	1847	DB	ESC•VEGH
0107	ODOA	DB	cr+lf
0109	7F0820	DB	07Fh. 11, * *
0100	1867011847	DB	ESC.VSGH.1. ESC.VEGH
0101	2020	DB	• •
		DB	ESC.*1*
01D3	186C	DB	*OSBORNE System One.*
0105	4F53424F52		ESC+*m*
01E8	186D	08	
Olea	202020	DB	
Oled	1867041847	DB	ESC. VSGH. 4. ESC. VEGH
01F2	ODOA	DB	cr+lf
01F4	7F0B20	ЭB	07Fh+ 11+ * *
01F7	1867	DB	ESC.VSGH
01F9	01	DB	*A*-40h
	7F1820	0.8	07Fh.24. *
Olfa		DB	*D*-40h
01FD	04		ESC. VEGH
01FE	1847	DB	E3C4 & E OH
0200	ODOA	DB	cr+lf
0202	7F0B20	DB	07Fh, 11, " "
0205	1867	DB	ESC, VSGH
0207	01	DB	• Δ•−40h
0208	1829	DB	ESC.*)*
020A	2052657620	DB	• Rev 1.3 c. 1982 OCC •
0222	1828	DB	ESC+*(*
		DB	*D*-40h
0224	04	08	ESC. VEGH
0225	1847	08	E364 (E011
0227	ODOA	DB	cr+lf
0229	7F0B20	DB	07Fh+ 11+ * *
022C	1867	DB	ESC. VSGH
022E	1 A	DB	*Z*-40h
022F	7F1818	DB	07Fh, 24, "X"-40h
0232	03	28	*C*-40h
0233	1B47	DB	ESC.VEGH
0235	ODOAOAOA	D B	crelfelf
0239	7F04Z0	DB	07Fh• 4• * *
023C	496E736572	DB	"Insert disk in Drive "
0251	186C	96	ESC+*1*
0253	41	DB	*A*
	186D	08	ESC. *m*
0254		DB	and press RETURN*
0256	20616E6420	DC	1,4
0267	AE	UC	•

#[2]

The CBOOT entry point gets control from the cold start loader and is responsible for the basic system initialization. This includes outputting a sign-on message and initializing the following spage zero locations:

0.1.2: Set to the warmstart jump vector.
3: Set to the initial IOBYTE value.
4: Default and logged on drive.
5.6.7: Set to a jump to BDOS.

The WBOOT entry point gets control when a warm start occurs, a ^C from the console, a jump to ;BDOS (function 0), or a jump to location zero. The WBOOT routine reads the CCP and BDOS from the ;appropriate disk sectors.

; WBOOT must also re-initialize locations 0+1+2 and 5+6+7+. The WBOOT routines exits with the C register set to the appropriate drive selection value. The exit address is to the CCP routine.

Single Density Disk layout Definition:

•				
;	Track 0			
;	1 thru	8	CCP	2k
;	9 thru		BDOS	
;	Track 1			
;	1 thru		BDOS	
;	Track 2			
•	1 thru	2	BDOS	3.5k
;	3 thru	10	CBIOS	2k

Boot CP/P			ssembler ver 3. s k.	5E <:/55/7= 59:92 Page 14 C:SDROMA •ASM
0268	CBOCT: :ENTRY :C	=	drive to boot f	rom
	;EXIT	=	DRIVE TO BOOT F	ROM
0268		Proc		
	≄SET "S	DISK" AN	D "SAVTYP"	
0268 79 0269 3217EF		MOV Sto	A+C A+SDISK	SET DRIVE
026C CD800B 026F 2805 ^02769	:1:	CALL JRZ	SENDEN :2	DETERMINE DENSITY
0271 CD9401 0274 18F6 ^026Cs	.	CALL JR	EBCOT:1	PRINT ERROR
	≉READ A	ND SET F	BA OF CCP	
0276 2100D0 0279 220FEF	:2:	LDK Sto	HL+ODOOOH HL+DMADR	SET DMA
027C AF 027D 3215EF	:3:	XRA STO INC	A A•SAVTRK A	set track
0280 3C 0281 3214EF		STO	A.SAVSEC	set sector
0284 47 0285 CD5808		MOV CALL	B+A RSEC	READ SECTOR ONE
0288 2805 ^028F	5	JRZ	:4	:IF GOOD
028A CD9401 028D 18ED ^027C	6	CALL JR	EBCOT:3	PRINT ERROR
028F 3A02D0	:4:	LD	A+0D002H	get ccp address/100h + 3
0292 D603 0294 2E00		SUB LDK	3 L•0	
0296 67		MOV	H+A	
	*SET NU	MBER OF	128 BYTE BLOCKS	TO READ FOR BOOT
0297 063C		LDK	B•60	CCP/BDOS/CBIOS
	#READ S	YSTEM		
0299 3A17EF		LD	A.SDISK	DRIVE TO BOOT FROM
029C F5		PUSH PUSH	AF HL	SAVE FWA FOR "CCPADR"
029D E5 029E CD8302		CALL	BCPM	boot system
02A1 E1		POP	HL	
02A2 F1		POP	AF	
	#JUMP S	YSTEM		
02A3 22D2EF		STO	HL . CCP ADR	
02A6 110016		LDK	DE • 1600h	offset for blos
02A9 19 02AA E9		ADD JMP	HL,DE [HL]	address of bios in hi
ULAM E7		J. 17		

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 15
Boot CP/M from disk. C:SDROMA .ASM
DZAB
                  WBOOT:
                  :ENTRY
                  NONE
                  :EXIT
                  *;
                          THIS ROUTINE DOES NOT EXIT. IT ONLY SETS PARAMITERS FOR BCPM:.
                  ⇒;A
                                  DRIVE TO BOOT FROM
                  #;B
                          =
                                  NUMBER OF 128 BYTE BLOCKS TO READ FOR BOOT
                  #;HL
                                  DMA ADDR FOR CCP
02AB
                          Proc
02AB 062C
                          LDK
                                  B . 44
                                                  CCP/BDOS and don't read CBIOS
02AD 3A0400
                          LD
                                  A.CDISK
                                                  :Current logged in drive
02B0 ZAD2EF
                          LD
                                  HL . CCP ADR
```

```
SORCIM 809x Assembler ver 3.5E <:/55/7= 59:92 Page 16
                                                              C:SDROMA .ASM
Boot CP/M from disk.
                  BCPM:
0283
                  ;Boot CPM from disk
                  :ENTRY
                                  DRIVE TO BOOT FROM
                  ; A
                                  NUMBER OF 128 BYTE BLCCKS TO READ FOR BOOT
                  :8
                                 DMA ADDR FOR CCP
                  ; HL
                  :EXIT
                  : NONE
                  :LOOPS ON ERROR
                          PROC
0283
                  #SET "SDISK", "DMADR" AND "SAVSEC"
                                                  ;Set drive to boot from
                                  A.SDISK
                          STO
02B3 3217EF
                                  HL.DMADR
                                                  SET DMA
0286 220FEF
                          CTS
                          LDK
                                  A . 1
02B9 3E01
                                                  ;set sector
                                  A.SAVSEC
                          STO
028B 3214EF
                          DEC
                                  Α
02BE 3D
                                                  MAKE TEM ZERO
                                  A.TEM
02BF 3200EF
                          STO
                  #SET "SAVTYP" AND GET NUMBER OF SECTORS PER TRACK
                                  ВC
02C2 C5
                          PUSH
                                                  DETERMINE DENSITY
                  :RLOOP: CALL
                                  SENDEN
02C3 CD8008
                                                  : IF GDOD
                          JR Z
                                  :G00D
02C6 2805 ^02CD$
                                                  :PRINT ERROR
                                  EBOOT
                          CALL
02C8 CD9401
                                  :RLCOP
02CB 18F6 ^02C3$
                          JR
                                                  D=NUMBER OF 128 BYTE BLOCKS
                  :G00D: POP
                                  DE
02CD D1
                                                  SAVE NUMBER OF SECTORS IN ONE TRACK
                          PUSH
                                  вс
02CE C5
                  *SET NUMBER OF SECTORS TO READ
                          LD
                                  A. SAVTYP
OZCF 3ADOEF
                          SRL
                                  A
 02D2 C83F
                          SRL
                                  A
02D4 C83F
                                                  :A=NUMBER OF BYTES IN ONE SECTOR(0-3)
                                  0000_00118
                          ANI
0206 E603
                          CMP
02D8 FE00
                                                  ; IF 128 BYTES SECTORS
                          JRZ
                                  :1
 02DA 2818 ^02F4$
                          GET NUMBER TO DEVIDE BY
                                                  :B=NUMBER OF BYTES IN ONE SECTOR(1-3)
                          MOV
                                  B • A
 02DC 47
                                  A+1
                          LDK
 02DD 3501
                                                  :TIMES TWO
                                  Α
                $ :1LOOP: SLA
 02DF CB27
                                  :1L00P
02E1 10FC ^02DF$
                          DJNZ
                                                  : NUMBER TO DIVIDE BY
                           MOV
                                  8 . A
02E3 47
                                                   :A=NUMBER OF 128 BYTE BLOCKS
                          MOV
                                  A.D
 02E4 7A
                          LDK
                                  D.0
 02E5 1600
                                                   SUBTRACK WITH DIVISOR
                   :2LOCP: SUB
                                  В
 02E7 90
                                  ۸F
                                                  SAVE FLAGS
                          EΧ
0268 08
                                                   : COUNT
                                  D
                           INC
 02E9 14
                                                   RESTORE FLAGS
                          ΕX
                                  ΑF
 02EA 08
                                                  ; IF REZULT IS ZERO (NO PARTIAL SECTORS)
                                  : 1
                          JRZ
 02EB 2807 402F4$
                                  :2L00P
                                                  :LOCP
                          JRNC
 02ED 30F8 402E7$
```

8 0 0	t CP/M	SORCI fro	M 808x m d	Assembler ver i s k.	3.5E <:/55/7= 59:92 Page 17 C:SDROMA .ASM
	ED44 \$		NEG STO	A A•TEM	:2 COMP :SAVE REMAINDER AND INDICATE A PARTIAL SECTOR
02F4 02F5		:1:	POP MOV	BC C•D	B=NUMBER OF SECTORS IN DNE TRACK C=NUMBER OF SECTORS TO READ
		≠READ S	YSTEM		
02F5 02F7	AF 3215EF	:TLOOP:	XRA STO	A A•SAVTRK	FA=0 FSET TRACK
			:CHECK	FOR ALL SECTO	RS READ
02FA 02FB			MOV OR A	A + C A	SECTORS TO READ
02FC	2008 ^0306\$		JRNZ	:5	FIF C IS NOT ZERO CONTINUE
			CHECK	FOR NO PARCIA	L SECTORS
0301			LD OR A	A+TEM A	
	2858 ^035C\$ 182A ^0330\$		JR Z JR	:4 :RLS	TYOUR DONE IF C=O AND TEM=O READ ONE MORE PARCIAL SECTOR
			;UPDATE	NUMBER OF SEC	CTORS LEFT TO READ
0306		:5:	SUB	В	SUBTRACK SECTORS IN ONE TRACK
0307 0308	3005 ^030F\$		MOV JRNC	C+A :2	SAVE REMAINING SECTORS TO READ ABOUT THAN ONE TRACK LEFT TO READ
			:IF TH	IS IS LAST TRAC	CK ZERO NUMBER OF SECTORS LEFT TO READ
030A 030C	ED44 \$		NEG	A .	;2_COMP
	0E00		MOV LDK	B•A C•O	READ ALL THE REMAINING SECTORS STOP AFTER THIS READ
			:CHECK	FOR NONZERO VA	ALUE IN TEM AND THE LAST SECTOR TO READ
30F 312	3AOOEF	_	LD	A+TEM	
	2808 ^031D\$		OR A JR Z	A :3	FIF TEM IS ZERO SKIP THIS
315			XRA	A	
	B1 2004 ^031D\$		ORA JRNZ	C :3	FIF REG C IS NOT ZERO SKIP THIS(NOT LAST TRAC
			READ C	NE LESS THAN T	HE LAST SECTOR
319			MOV	A • B	
	3D 2813 ^0330\$		DEC JRZ	A :RLS	:A=B-1 ;ONLY ONE SECTOR LEFT TO READ
			READ O	NE TRACK	
	CD580B 2805 ^C327\$		CALL JRZ	RSEC :GOO	:READ (BC IS SAVED) :IF GOOD

					5E <:/55/7= 59:92 Page 18 C:SDROMA •ASM
8 0 0	t CP/M	fro	m a i	s k•	C. Jokona Vask
			:UPDATE	DMA	
0327	220FEF	:G00:	STO	HL+DMADR	;SET DMA
			;UPDATE	TRACK	
032A 032D	3A15EF 3C		LD INC	A+SAVTRK A	
032E	18C7 ^02F7\$		JR	:TLOOP	;TRACK LOOP
		≠READ A	PARCIAL	SECTOR	
0330	E5	:RLS:	PUSH	HL	OT STIRW OT SZEROCA SVAC;
0331 0334	2180EA 220FEF		LDK STO	HL+DEABOH HL+DMADR	;ADDRESS OF HOST BUFFER IN BIOS ;SET DMA
0337 033A	2115EF 35		LDK DEC	HL,SAVTRK [HL]	SAVTRK = SAVTRK - 1
			READ S	ECTOR IN HOST BUI	FF
C33B	0601		LDK	B•1	READ ONE SECTOR
033D 0340	CD750C 2805 ^0347\$:3LOOP:	JRZ	READ :GO	; IF GOOD
	CD9401 18F6 ^C33D\$		CALL JR	EBCOT :3LOOP	REPORT ERROR
0545	10,0 03301			MBER OF BYTES TO	TRANSFER
0347 034A	3A00EF 47	:60:	LD MOV	A•TEM B•A	BENUMBER OF 128 BYTE BLOCK TO TRANSFER
0348	210000		LDK	HL,0	
034E	118000		LDK	DE+128	
0351	19	:4LGOP:		HL.DE	
0352	10FD ^0351\$		DJNZ PUSH	:4L00P HL	
0354 0355	E5 C1		POP	ВС	BC=NUMBER OF BYTES TO TRANSFER
			;TR4NSF	ER BYTES	
0356	2180EA		LDK	HL.OEA80H	:SCURCE
0359	01		POP	DE	:DESTINATION :MOVE
035A	EDBO \$		LDIR	SET PARR. AND RE	
		*CLEAR	30++583	SEI PARK. AND RE	TORN TO STOLEM
035C	2150EF	:4:	LDK	HL. HSTACT	CT1.1
035F	110700		LDK	DE. (LOGSEC-HSTA	ct)+1 iclear Host BIOS cells
0362	CD3D09		CALL LDK	FILLZ A•OFFh	TOTAL MOSE DIOS COLLS
0365 0367	3EFF 3255EF		STO	A.UNASEC	
036A	3E7F		LDK	A.VLL-1	
036C	326EEF		STO	A+LOTRK	set other drive NOT int
036=	AF		XRA	Δ	:Clear error indicator
0370	C 9		RET		

SDRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 19
Keyboard and Console Routines. C:SDRDMA .ASM

		;	Assembl	y constant	
=	0001	9KEY	=	1	production keyboard
		;	Control	keys	
=	0007	CBELL	=	*G*-40h	Ring the Bell
=	000В	MCUP	=	*K*-40h	Move cursor up
=	000A	MCDOWN	=	LF	Move cursor down
=	8000	MCLEFT	=	BKS	Move cursor left
=	000C	MCR IGH	=	*L*-40h	Move cursor right
=	001A	VCLRS	=	*Z*-40h	Clear and home cursor
=	001E	VHDME	=	*^*-40h	Home Cursor
				7011	anome carsor
		;	Escape	keys	
=	0023	VLOCK:	=	*#*	Lock Keyboard
=	0022	VUNLK	=	* * *	Unlock Keyboard
	003D	VCAD:	=	1=1	Cursor Addressing
=	0053	VSAD:	=	•\$•	Screen Addressing
=	0051	VINC:	=	•0•	Insert Char
=	0057	VDELC:	=	*W*	Delete char
=	0045	VINL:	=	• E •	Insert line
	0052	VDELL:	=	• R •	Delete line
	0054	VCEOL:	=	*	Clear to end of line
=	0029	vski:	=	•) •	Start half intensity
	0028	VEHI:	=	*{*	end
	006C	VSUL:	=	* *	Start underline
=	006D	VEUL:	=	* IE *	end
=	0067	vsgh:	=	• • •	******
	0047	VEGH:	=	* G *	Start graphics
	0041	VCOn•	-	- 6.	;End
		ARROW K	CEYS		
=	A800	UP	=	8AH	
=	008B	R IGHT	=	8BH	
=	008C	DOWN	=	8CH	
=	0080	LEFT		8DH	

SORCIM 808x Assembler ver	3.5E	<:/55/7= 59:92	Page	20
SUKCIA BOOK ASSEMBLE, ACT		C:SDF	AMO	MZAA
Keyboard and Console Routines.		C - 30		•

0371		SKEY: ;Get status of ke	eyboard	
0371 0374 0375	97 5 C8	OR RZ	data ready A•KEYLCK A	;if locked keyboard
0376 0376 0376 0376	87 A C8 B F6FF	ORA RZ	OFFH	CHECK FOR ZERO IF NOT ZERO MAKE OFFH IF DATA

1	Keybo	ard and Cons	SOR(ole Rou	IM 808x Itines•	Assembler ver	3.5E	<:/55/7=	59:92 Page 21 C:SDROMA .ASM
	037E		CI:					
	037E		RKEY:					
•			Read	next key	from keyboard			
			;EXIT					
)			; A	=	last key			
•	037E			PR OC				
	037E	CD7103		CALL	SKEY			
	0381	28FB ^037E\$		JRZ	RKEY	: 11	f NO data	
,	0383			DI	-			
	0384	3A5EEF		LD	A.LKEY	: G !	ET CHARACT	FR
	0387	4F		MOV	C+A	, , , ,		
	0388	AF		XRA	A			
1	0389	325EEF		STO	A.LKEY	:0	lear key f	ram hold
	038C	79		MOV	A • C		icai iicy i	
	0380			ΕI				
	038E	C 9		RET				

SDRCIM 808x Assembler ver Keyboard and Console Routines.	3•5€	<:/55/7= 59:92 Page 22 C:SDRDMA •ASM
---	------	---

038F		NORM: ;Norma :ENTRY		UPPER case	
		; A	=	char	
		:EXIT			
		; A	=	CHAR	
038F	FE61		CMP	'a'	
0391	D8		RC		;if upper
0392	FE78		CMP	"z"+1	
0394	DO		RNC		;if not lower
0395	D620		SUI	'a'-'A'	
0397	C 9		RET		
	= 0020	REPD	=	45	initial rep delay
	= 0025	REPK	=	5	repeat constant:

SDRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 23 Keyboard and Console Routines. C:SDROMA .ASM

0398		ichecks to see	if bell	if the disk drive motor should be turned off by updating DACTIVERoutine ALSO is currently ringing: if so, decrement counter. If counter turns zero,
0200		shut off bell.		
0398		Proc		
0398	216BEF	LDK	HL.BELC	CNT
G39B	AF	XOR	A	
039C	B6	OR	[hl]	cell=zero ?
039D	280C 403A8\$	JRZ	:2	if bell now off
039F	35	DEC	[h]	:bell is on. decrement counter
03A0	2009 A03AB\$	JRNZ	: 2	if bell should stay on awhile yet
03A2	3A62EF	LD	A.PIABD	
03A5	E6 DF	AND	1101_11	
03A7	4F	MOV	C+A	Forcal Berr St.
03A8	CD7109	CALL	CPBD	
03AB		:2:	0.05	
03AB	28	DEC	HL	HL => DACTVE
03AC	7E	LD	A+[h1]	VIII - > DAGIVE
03AD		DR	A	
03AE		RZ	-	RETURN if inactive
03AF	35	DEC	[h1]	
				reset delay
0380	CC360E	CZ	DDRV	; if deselect drive
0383	C 9	RET		

SDRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 24 Keyboard and Console Routines. C:SDROMA .ASM

		;	Bit definitions for ESCH flag byte			
		;	Note Bit	7 is currently	free.	
=	0040	EF_X:	=	64	:B6= extegting X-coordinate	
=	0020	EF SCR:	=	32	:85= Screen/Cursor Addressing	
=	0010	EF_ADR:	=	16	:B4= expegting address-chr	
=	8000	EF_ESC:	=	8	;83=\$last char was ESC	
=	0004	EF_UN:	=	4	:B2= Underline mode	
=	0002	EF HA:	=	2	;B1= Haif Intensity mode	
=	0001	EF GR:	=	1	;BO= Graphics mode	
	0007	EF_MSK:		EF_UN+EF_HA+EF_G	R :Mask to get mode.	

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 25
Keyboard and Console Routines. C:SDROMA .ASM

		· Ved	ctor (branch) table atrolled by ESCH mo	e for video output mode selection
0384		ESCHT8:		
0384	6704	DW	VNORM	;0 Normal mode
03B6	8105	ÐW	VGRAPH	:1 Graphics mode
0388	9504	DW	VHALE	;2 Half intensity mode
O3BA	9904	DW	VHA GR	33 Half and graphics
03BC	8704	DW	VUNDER	34 Underline mode
03BE	8804	DW	VUN_GR	55 Under and graphics
03C0	8F04	DW	VUN_HA	
03C2	9304	DW	VUN_HA_GR	#6 Under and half intensity#7 Under and half and graphics

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 26
                                                              C:SDROMA .ASM
Keyboard and Console Routines.
                 VALIDE:
03C4
                 :Valid ESC-Sequence Table
                         3 bytes per entry:ascii char , "DW"-Vector.
                          no. of entries is VALETS
                         Following body of table is 2 byte No-Match adrs
                                                  ESCCAD ; Cursor Addressing
                                         ! DW
                                 VCAD
                          DB
03C4 3D
                                                  ESCSAD ;Screen Addressing
                                         : DW
                                  VSAD
                          DB
03C7 53
                                                  ESCSGR ; Set graphics mode
                                         ! DW
                                  VSGH
                          DB
03CA 67
                                                  ESCCGR :CIr graphics mode
                                         : DW
                                  VEGH
                          DB
03CD 47
                                                  ESCSHA :Set half int. mode
                                         : DW
                                  VSHI
                          DΒ
0300 29
                                                  ESCCHA :Cir half int. mode
                                         ! DW
                          DΒ
                                  VEHI
03D3 28
                                                  ESCSUN :Set underline mode
                                         ! Dw
                                  VSUL
                          DB
0306 6C
                                                  ESCCUN :CIr underline mode
                                          ! DW
                                  VEUL
                          DB
03D9 6D
                                                         :Clear screen to blanks
                                         : DW
                                                  ESCZZ
                                  VCLRS
                          DB
03DC 1A
                                                         ;Insert char
                                          : DW
                                                  EINSRT
                                  VINC
                          DB
03DF 51
                                                         ;Delete char
                                         : DW
                                                  EDELC
                                  VDELC
                          DB
03E2 57
                                                          :Insert line
                                                  ESCEE
                                  VINL
                                          : DW
                          DΒ
03E5 45
                                                         :Delete line
                                                  ESCRR
                                         : DW
                                  VDELL
                          DB
03E8 52
                                                          :Clear to end of line
                                                  EEOL
                                         ! DW
                                  VCEOL
                          DΒ
03EB 54
                                                  ESCLCK :Lock Keyboard
                                         : DW
                                  VLOCK
                          ÐВ
03EE 23
                                                  ESCULK : Unlock Keyboard
                                         ! DW
                                  VUNLK
                          DB
03F1 22
                  :end:
03F4
                                  COUT2 : No Match exit
                          Ignore char upon undefined ESC-Sequence
03F4 4A04
                          (to treat undefined char after ESC as a regular
                           data char, should go to COUT2).
                                                         :# of entries in table
                                  (:end-VALIDE)/3
                  VALETS: =
      = 0010
```

040B 1E

040E 9E05

= 0008

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 27 Keyboard and Console Routines. C:SDROMA .ASM 03F6 VALIDC: :Valid control character table 3 bytes per entry: Ascii char , "DW"- Vector no. of entries is VALCTS Following body of table is 2 byte No-Match adrs 03F6 0D CR ! DW VC_CR :carriage return routine 03F9 0A DB LF ! DW VC_LF :line feed 03FC 08 DB BKS 1 DW VC_BKS back space 03FF 0C DB MCRIGH ! DW VC_MCRT :move cursor right 0402 OB DB MCUP ! DW VC_MCUP move cursor up 0405 07 : DW D8 CBELL VC_BEL Ring bell 0408 1A D8 VCLRS ! DW VC_CLRS clear screen

VHOME ! DW VC_HOME

((#-2)-VALIDC)/3

VOUT97

Cursor Home

:No match--ignore undef control char

:Number of valid entries

DB

DW

VALCTS: =

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 28
                                                              C:SDRDMA .ASM
Keyboard and Console Routines.
                 COUT:
0410
                  General output routine to Video Screen
                  :C=Character . CURS=Cursor . ESCH=Flag+Mode
                  :EXIT
                  :CURS & ESCH updated. A=Character
                  ;(bc, de, h! preserved)
                          ESCH is flag + mode byte as follows
                                   Normal mode & Last chr Esc flag faise
                          =00
                                   Normal mode & Last chr Esc flag True
                          =08
                          =01.02.04 Mode is Graphics. Half. or Under. respectively
                     • and Last chr Esc flag is False.
                          =3.5.6.7 As above, but mode is combination
                                   Last chr Esc flag True; otherwise like 1-7.
                          =9-15
                          PROC
0410
                  RESET VETICAL OFFSET WITH VRTOFF
                          PUSH
                                  AF
0410 F5
                          PUSH
                                  вс
0411 C5
                                                  :PRESENT VALUE
                          LD
                                  A.PIABD
0412 3A62EF
                                                  :HOUSEKEEPING
                                  111000008
0415 E6E0
                          AND
                          MOV
                                  8 . A
0417 47
                                                  :LAST VERTICAL OFFSET
                                  A.VRTOFF
                          LD
0418 3AEFEF
                                                  :GNLY VIDIO
                                  000111118
                          AND
0418 E61F
                                                  :ADD HOUSEKEEPING
                          ORA
                                  8
041D BO
                          VOM
                                  C+A
041E 4F
                                                  SET OFFSET
                          CALL
                                  CPBD
041F CD7109
                          POP
                                  B.C.
0422 C1
                          POP
                                  ΑF
0423 F1
                                  HL
0424 E5
                          PUSH
                          PUSH
                                  DE
0425 D5
                          PUSH
                                  ВC
0426 C5
                                                  :HL will usually be cursor/
                          LD
                                  HL .CURS
0427 2A5AEF
                                  A.ESCH
                          LD
042A 3A60EF
                                                  :B will be ESCH for a while
                                  B • A
                          MDV
0420 47
                                                  itest flag bit
                                  EF_ESC
                          AND
042E E608
                                                  ; IF last chr was ESC
                                  PSTESC
0430 2023 *0455$
                          JRNZ
                  ;Current chr is NOT ESCaped. Is this chr ESC?
                                                  :Chr
                                  A . C
                          MOV
0432 79
                                  ESC
                          CMP
0433 FE1B
                                                  ;(A=ESCH)
                                  A . B
                          VOM
0435 78
                                                  if this chr = ESC
                                  :ESC
0436 2815 ^0449$
                          JR Z
```

SDRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 29
Keyboard and Console Routines. C:SDRDMA .ASM

		Here with A=8	= ESCH	
0438		:out:		
0438	E5	PUSH	HL	
0439	218403	LDK	HL, ESCHTB	
043C	E607	AND	EF_MSK	Mode bits only
043E	87	ADD	A • Ā	Times two
043F	5F	MOV	E•A	
0440	1600	LDK	D•0	DE = offset
0442	19	ADD	HL . DE	HL = tbl addrs
0443		VECTOR:		, voi addi 3
				;entry point。 note hl on stack。
0443	7E	LD	A+[HL]	;1st byte (low order adrs)
0444	23	INC	HL	
0445	66	LD	H,[HL]	:2nd byte (hi order adrs)
0446	6F	MOV	L • A	:HL=adrs from table
0447	E3	XTHL		Restore hi from stack istack=tbi adrs
0448	79	MOV	A • C	Chr. note B=ESCH byte value
0449	C 9	RET		tenter routine per table adrs.
044A		CGUT2:		
044A	78	MOV	A • B	toronti 506Hi
0448	18E8 ^0438\$	JR	:out	recall ESCH value
0 1 1 0	1000 04333	JK	•001	output chr per current settings
044D		:ESC:		
		Current chr is	ESC. Set flag a	and exit
044D	F608	OR	EF_ESC	;indicate last char= ESC
044F	3260EF	STO	A+ESCH	
0452	C39E05	JMP	VOUT97	Exit

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 30 C:SDROMA .ASM Keyboard and Console Routines. PSTESC: 0455 Last chr was ESC :Entry EF_ESC ; A ESCH ; 8 Char to output ; C curs :HL Proc ; is this chr really an address? 0455 4 . B BIT 0455 CB60 :...if chr is part of an addr SETXY **JRNZ** 0457 2075 ^04CE\$ ino cursor/screen addressing in effect: #CIr EF_ESC bit (for next time) В XOR 0459 A8 :Set up B = ESCH byte value. 8 . A MOV 045A 47 A.ESCH STO 045B 3260EF ;save Curs PUSH HL 045E E5 Branch table adrs HL. VALIDE LDK 045F 21C403 :Table size LDK E, VALETS 0462 1E10 :Chr to A A • C MOV 0464 79 :Go to routine to branch per tol LOOKUPB JR 0465 1815 *0470\$

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 31
Keyboard and Console Routines.
                                                              C:SDROMA .ASM
0467
                 :NORMAL mode character processing.
                 SENTRY
                 ; A
                                 char to output
                 ;HL=curs
0467 FE20
                         CMP
                                 . .
0469 380B 40476$
                         JRC
                                 : 2
                                                IF control chr
046B
                 VBR IGH:
0468
                         DI
046C
                         ENADIM
                                         ;9th bit memory
046E 3680
                         STO
                                 BRTBIT.[hl]
                                                        set this chr BRIGHT
0470
                         DISDIM
0472
                         ΕI
0473 C38105
                         JMP
                                 VOUT80
0476
                 :2:
0476 E5
                         PUSH
                                 HL
                                                Save Curs
0477 21F603
                         LDK
                                 HL, VALIDO
                                                Branch table adrs
047A 1E08
                         LDK
                                 E.VALCTS
                                                 :Table size
                         JMP
                                 LOOKUPS
                                                 Scan table of valid control chrs
                                                 and branch to appropriate routine.
```

```
SORCIM 803x Assembler ver 3.5E <:/55/7= 59:92 Page 32
                                                              C:SDROMA .ASM
Keyboard and Console Routines.
                 LOOKUPB:
047C
                  :Logic to scan 3 byte branch table
                         NOT a subroutine --- do not CALL.
                  ;
                  :ENTRY
                  :HL =1st byte of table (match code)
                          (2nd, 3rd bytes = branch adrs)
                          (table repeats [3 byte entries])
                  ;E is table size (no. of entries)
                          (table body is followed with
                          2 byte "No-Match" adrs)
                  ;Stack has HL saved as top entry.
                  : C
                                  value to scan for possible match
                  : A
                          CMP
                                  [HL]
047C BE
                                          :(2nd byte of this 3 byte entry)
                          INC
                                  HL
047D 23
                                  VECTOR : If match process
047E 28C3 ^0443$
                          JR Z
                                          ; (3rd byte of this entry)
                                  HL
                          INC
0480 23
                                          :1st byte of next entry
                          INC
0481 23
                                          Dec count of entries remaining
                          DEC
                                  Ε
0482 10
                                  LOOKUPB : Continue thru body of table
0483 20F7 ^047C$
                          JR NZ
                                  VECTOR : No-Match. hl=points to vector
                          JR
0485 188C ^0443$
```

04A1 C38105

JMP

VOUTEO

:continue

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 33
Keyboard and Console Routines.
                                                               C:SDROMA .ASM
                          Processing for modes other than normal.
                  :VGRAPH =
                                  VOUT80 : Normal mode EXCEPT: cntl chrs are printed
0487
                  VUNDER:
                  :Underline only
0487 FE20
                                  . .
                          CMP
0489 38DC *0467$
                          JRC
                                  VNOR M
                                                  if cntl-chr. process as normal
                          JR
                                  VUN_GR
                                                  :continue
048B
                  VUN_GR:
                  :Underlined Graphics
048B F680
                          OR
                                  80h
                                                  underline bit
048D 18DC ^0468$
                          JR
                                  VBRIGH
                                                  set this chr BRIGHT
048F
                  VUN_HA:
                  :Underline and Half intensity
048F FE20
                         CMP
0491 3804 40467$
                          JRC
                                  VNORM
                                                  if cntl-chr, process as normal
                          JR
                                  VUN_HA_GR
0493
                  VUN_HA_GR:
                  :Underline, Half Intensity, Graphics
0493 F680
                         OR
                                 80h
                                         set underline bit
                          JR
                                 VHA_GR
0495
                  VHALF:
                  :Half Intensity
0495 FE20
                         CMP
0497 38CE *0467$
                          JRC
                                 VNORM
                                                 if cntl-chr, process as normal
                          JR
                                 VHA_GR
0499
                  VHA_GR:
                  :C=Chr. HL=Curs
0499
                         DI
049A
                         ENADIM
049C 3600
                         STO
                                 DIMBIT.[h1]
                                                         set dim field bit
                 ;
                         LD
                                 E.[h1]
                                                         ;diagnostic
049E
                         DISDIM
04A0
                         ΕI
```

SDRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 34
Keyboard and Console Routines. C:SDROMA .ASM

Keybo	aru anu consi	ore Roa			
0444		SCREEN: SetXY ENTRY		een movement	
		; B	=	ESCH	
		; A	=	new co-ord	val. NO OFFSET
0444			Proc		
	CB70 \$		BIT	6 • B	
04A6	2012 ^04BA\$		JRNZ	:sX ;if	X-coordinate
0488		:sY:			
04A8	E61F		AND	0001_1111b	*mod 32
04AA			MOV	C + A	
04AB	32EFEF		STO	A.VRTOFF	SET VERTICAL OFFSET FOR COUT
04AE	3A62EF		LD	A.PIABD	
0481	E6E0		AND	1110_0000b	
0483	81		OR	С	
0484	4F		MOV	C • A	
04B5	CD7109		CALL	CPBD	set Y coordinate
0488	182E ^04E8\$		JŔ	:exitY	
04BA		:sX:			
04BA	87		ADD	A • A	idouble A
04BB	C6EA		ADD	A.VFLO	:PIA A-reg magic offset constant
04BD	E6FE		AND	1111_1110b	clear bit 0
048F	4F		MOV	C + A	
		SET D	ENSITY B	IT	
040	3A61EF		LD	A . PIAAD	GET OLD VALUE
04C3	E601		ANI	0000_00018	SAVE DENSITY BIT
0405	81		ORA	C	OR IN HORIZONTAL OFFSET
0466	4F		MOV	C • A	
04C7	CD6409		CALL	OPAD	FUNCTION PIA
04CA	CBA8 \$		CBIT	5 + 8	finished screen-addressing
0400	1824 ^04F2\$		JR	:exitX	

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 35
Keyboard and Console Routines.
                                                              C:SDROMA .ASM
04CE
                  SETXY:
                  ;Set X-Y value for Cursor/Screen Addressing
                  ; ENTRY
                  ; HL
                                  cursor_addr
                  ;8
                          =
                                  ESCH
                  ; C
                                  chr
                  ;EXIT
                  to VOUT90; ESCH updated
04CE CD1907
                          CALL
                                  UN_CUR
04D1 3EE0
                          LDK
                                  Ay-(* *)
04D3 81
                          ADD
                                  С
                                          remove cursor bias
04D4 CB68
                          BIT
                                  5 . B
                                          ;cursor/screen addressing?
04D6 20CC *04A4$
                          JRNZ
                                  SCREEN ; if screen addressing
                  cursor addressing:
0408 29
                          ADD
                                  HL.HL
                                          shift HL left
04D9 CB70
                                          :X/Y coordinate?
                          BIT
                                  6 • B
04DB 2010 ^04ED$
                          JRNZ
                                  *cX
                                          if X coordinate
04DD
                  :cY:
04DD 67
                          MOV
                                  H+A
                                          ;save
04DE 3A62EF
                          LD
                                  A.PIABD
04E1 84
                          ADD
                                  н
                                          ioffset by start-Y co-ord of video
04E2 1F
                          RAR
                                          ;bitO(A) -> CY, shift A right
04E3 CB1D
                          RR
                                          ;CY -> bit7(L)
04E5 F6F0
                          OR
                                  OFOh
                                          turn on upper nybl
04E7 67
                          MOV
                                  H . A
                                          ;HL= new cursor addr
                                  :exitY
                          JR
04E8
                  :exitY:
04E8 3E40
                          LDK
                                  A+0100_0000b
                                                  inext addr-chr will be X-coord
O4EA BO
                         OR
                                  В
04EB 1808 ^04F5$
                          JR
                                  :exit2
04ED
                 :cX:
04ED 17
                         RAL
                                         trash 7th bit
04EE CB2C
                         SRA
                                         ;bitO(H) -> CY, bit7 stays 1
                                  Н
04F0 1F
                         RAR
                                         :... CY -> bit7(A)
04F1 6F
                          MOV
                                 L+A
                          JR
                                 :exitX
04F2
                 :exitX:
04F2 3E07
                         LDK
                                  A.EF_MSK
04F4 A0
                         AND
                                         finished addressing: reset addr bits
04F5
                  :exit2:
04F5 3260EF
                         STO
                                 A. ESCH
04F8 C39605
                          JMP
                                  VOUT90
```

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 36 Keyboard and Console Routines. C:SDROMA .ASM

; Control Code character processing

04FB	VC_H	IOME: :Home	Cursor	
04F8		Proc		
04FB	CD1907	CALL	UN_CUR	
04FE	3A62EF	LD	A.PIABD	
0501	1F	RAR		<pre>;bit0 => CY</pre>
0502	2E00	LDK	L•0	
0504	CB1D \$	RR	L	<pre>;CY => bit7. trash bit0</pre>
0506	67	MOV	H+A	
0507	182F ^0538\$	JR	:fixhl	;HL := HL or F000h

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 37 Keyboard and Console Routines. C:SDROMA .ASM

0509		VC_MCUP		Move Cursor Up.	
0509	601007	: A=C=Cr	r=MCUP.		
050G	CD1907		CALL	UN_CUR	
050C	E5 0180FF		PUSH	HL	old cursor must be on stack
0510			LDK	BC.(-VLL)	
0510	1816 ^0528\$		JR	:fwa	:at this entry point
0512		VC_BKS:			
0513	601007	#HL=Cur		t (old) char	
0512	CD1907		CALL	UN_CUR	iclear 80h bit
0515	3E7F		LDK	A+7Fh	
0517	A5		AND	L	
0518	2803 ^051Ds		JR Z	:wrap	if must wrap from col 0 to LLIMIT
051A	28		DEC	HL	
0518	1879. ^0596\$		JR	VCUT90	;Exit
051D		:wrap:			
0510	E5	· n. up	PUSH	HL	save old cursor
051E	017FFF		LDK	BC+-(VLL+1)	+2446 010 CUI 201
0521	09		ADD	HL,BC	·W1 = ==== / 13=4 == /
0522	3A6CEF		LD	A,LLIMIT	;HL = prev_line. (+1)st column ;LLIMIT = #columns on screen
0525	4F		MOV	C+A	*LLIMIT - *COTOMINS ON Screen
0526	0600		LDK	B+0	
0528	0000	:fwa:	LUK	B 4 0	
0528	09	• 1 wa•	ADD	HL .BC	
0529	E3		XTHL		test ald sures and a
052A	29		ADD	HL,HL	get old cursor, save new
052B	3A62EF		LD	A.PIABD	shift line# into H reg.
052E	F6E0		OR		** = ** - * * * * * * * * * * * * * * *
0530	BC		CMP	1110_0000b H	A = line# of UL corner
0531	E1		POP		;set Zflag: ahome?
0532	2004 ^0538\$			HL .	get new cursor
0534	01000C		JRNZ	:fixhl	; if NOT avideo home
			LDK	BC,(24*VLL)	wrap constant
0537	09		ADD	HL,BC	
0538	2550	:fixhl:			
0538	3EFO		LDK	A, OFOh	
053A	84		DR	Н	imodulo result: keep cursor
053B	67		MOV	H+A	inside video memory.
053C	1858 ^0596\$		JR	VOUT90	

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 38
Keyboard and Console Routines. C:SDROMA .ASM

053E		VC_BEL: Ring the bel!	via setting PIAB	2**5 bit
053E 0541 0543		LD OR MOV	A+PIABD 0010_0000b C+A	;bell bit
0544 0547 0549 0540	CD7109 3E1E 326BEF	CALL LDK STO	OPBD A+30 A+BELCNT VOUT97	function PIAB fring bell for 30 ticks for = 1/2 second fexit no change

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 39 Keyboard and Console Routines. C:SDROMA .ASM

054E	2100F0	VC_CLRS: LDK	HL,FWAVM	
0551	CD8406	CALL	CLRLN	clear 1st line
0554	01800F	LDK	BC+LVMEM-VLL	
0557	D5	PUSH	DE	
0558	DDE1 1	POP	1 X	
055A	CD0507	CALL	VLDIR	clear remaining lines
055D	3A62EF	LD	A.PIABD	Reset for 1st line of display mem
0560	E6E0	AND	not(1_1111b)	mem
0562	4F	VOM	C.A	
0563	CD7109	CALL	OPBD	
0566	AF	XRA	A	;ZERO A
0567	32EFEF	STO	A.VRTOFF	SET VERTICAL OFFSET FOR COUT
056A	2100F0	LDK	HL.FWAVM	inew cursor
0560	1827 ^0596\$	JR	VCUT90	Exit

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 40 Keyboard and Console Routines. C:SDROMA .ASM

056F	VC.	CR:		
056F	CD1907	CALL	UN_CUR	erase cursor
0572	3E80	LDK	A + 80h	Carriage Return
0574	A5	AND	L	
0575	6F	MOV	L.A	
0576	181E ^0596\$	JR	VOUT90	
0578	VC.	_LF:		
0578	CDA706	CALL	DO_LF	Line Feed
057B	1819 ^0596\$	JR	VOUT90	

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 41
Keyboard and Console Routines. C:SDROMA .ASM

re-echo current chr

= 05FF

:Last =

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 42
                                                            C:SDROMA .ASM
Keyboard and Console Routines.
```

Exit points for COUT Here to store new data and to update cursor VGRAPH: 0581 VOUT80: 0581 :This exit path stores A (new char) A.[hi] STO 0581 77 E.L 0582 5D MOV :E = col(cursor) CBIT 7,E 0583 C88B A.LLIMIT LD 0585 3A6CEF ;A = last_legal_col DEC 0588 3D ;A = last_legal_col - col(cur) Ε SUB 0589 93 if not allIMIT VOUT85 058A 2009 40595\$ **JRNZ** A - 80h LDK 058C 3E80 AND 058E A5 ido CR... L+A 6F VOM 058F :...and LF. DO_LF2 CALL 0590 CDAA06 JR VOUT90 0593 1801 ^0596\$ VOUT85: 0595 HL :move cursor INC 0595 23 Here if NO cursor update VOUT90: 0596 :This exit path turns on 80h bit A.[HL] 0596 7E Here if new data already in A V0UT95: 0597 : Make this chr cursor RAL 0597 17 VOUT96: 0598 invert cursor bit CMC 0598 3F RAR 0599 1F A+[h1] STO 059A 77 supdate cursor STO HL.CURS 059B 225AEF Here if no change to cursor, restore reg and exit VCUT97: 059E POP ВC 059E C1 DE POP 059F D1 POP HL 05A0 E1 Exit with A=chr MOV A . C 05A1 79 ;return, end of cout subr. RET 05A2 C9 ;earliest possible JR VGUT97 - (127 + 2) :First = = 0510; latest possible JR

VDUT80 + (128 - 2)

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 43
Keyboard and Console Routines. C:SDROMA .ASM

05A6 ESC_ULK: Unlock Keyboard 05A6 3EFF LDK A+0FFh

05A8 :2:

05A8 3259EF STO A.KEYLCK 05AB 18F1 ^059E\$ JR YOUT97

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 44 e Routines. C:SDROMA .ASM Keyboard and Console Routines.

05AD

EEOL: :Erase to end of line

HL save cursor PUSH 05AD E5

CLRLN 05AE CD8406 CALL POP

05B1 E1 05B2 18E2 ^0596\$ VOUT90 JR

05BE 3E07

05C1 F638 05C3 18F4 ^0589\$

05C0 A0

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 45 Keyboard and Console Routines. C:SDROMA .ASM 05B4 ESC_CAD: Cursor Addressing 0584 3E07 A+EF_MSK 0586 A0 AND 05B7 F618 OR EF_ESC or EF_ADR inext chr will be Y-coord 0589 :exit3: 0589 3260EF STO A+ESCH 058C 18E0 -059E\$ JR VOUT97 05BE ESC_SAD:

EF_ESC or EF_ADR or EF_SCR
:exit3

A.EF_MSK

Screen Addressing

LDK

AND

OR

JR

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 46
Keyboard and Console Routines. C:SDROMA .ASM

			:Subrou :Calcul	tine for ate #chr:	use with	n EDELC and EINSRT: e; if move zero chrs, never return.
0505				Proc		
05C5			:calc:			
0505	3E7F			LDK	A.VLL-1	:A= max #chrs to be moved
0507	4D			MOV	C.L	
0508	CBB9	\$		CBIT	7 • C	;C = col(cursor)
05CA	91			SUB	С	:A = #chrs to move
05CB		^05D1\$		JR Z	:end	if move zero characters
05CD	4F	•		MOV	C . A	
05CE	0600			LDK	B • 0	;BC = #chrs to move
0500	69			RET		
0,000	υ,					
0501			:end:			
0501	E1			POP	HL	trash return_addr;
05D2	Εl			POP	HL	;cursor_addr
0502	1801	^0596\$		JR	VOUT90	

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 47
Keyboard and Console Routines. C:SDROMA .ASM

05D5		EDELC:			
		:Delete	Charact	er	
05D5	E5		PUSH	HL	*cava augus and
05D6	CDC505		CALL	:calc	save cursor_addr
		;	MOV	D.H	calculate 8C
		:	MOV		
05D9	£5	•	-	E+L	;DE = cursor_addr
05DA	DDE1 \$		PUSH	HL	
05DC	23		POP	IX	
05DD			INC	HL	:HL = cursor_addr + 1
	CD0507		CALL	VLDIR	move characters
05E0	3620		STO	* *, [h1]	:last chr becomes blank
05E2			DI		
05E3			ENADIM	enable	9th bit memory
05E5	2B		DEC	HL	
05E6	3680		STO	BRTBIT,[hi]	HL = last chr on this line
05E8			DISDIM	OK 1011 VE1111	set chr BRIGHT
05EA			EI	•	
05EB	E1		POP	imain m	
05EC	1848 ^0596\$		JR	··-	restore cursor_addr
	1040 07707		JK	VOUT90	inext

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 48 Keyboard and Console Routines. C:SDRDMA .ASM

05EE	EINSRT: ;Insert	Character	
05EE 05F1 05F2 05F5 05F7 05F8 05F9 05FA 05FC 0600 0601	CD1907 E5 CDC505 3E7F B5 6F E5 DDE1 \$ 2B CDF106 E1 7E	CALL UN_CUR PUSH HL CALL :calc LDK A.7Fh OR L MOV L.A PUSH HL POP IX DEC HL CALL VLDDR POP HL LD A.[hi] RAL LDK A.* * si	<pre>;save cursor_addr ;calculate BC ;HL = last_chr on this line ;do move ;restore cursor ;get underline bit of this chr. ;into CY hl 1</pre>
0603 0605	3E40 1891 ^0598\$	JR VOUT96	;exit

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 49 Keyboard and Console Routines. C:SDROMA .ASM

0607		:ESC-Se	quence p	rocessing.	
0607		ESCSGR:			
0607	3E01	£3030K.	LDK	A+EF_GR	.555
0609	1806 40611\$		JR	:125	:ESC-g
	1000 00113		JK	•125	set graphics mode.
0608		ESCSHA:			
0608	3E02	C3C3IIA.	LDK	4 55 114	
0600	1802 ^0611\$			A, EF_HA	:ESC-) set half intensity
0000	1002 -0811\$		JR	:125	igo set flag bit
060F	3E04	ESCSUN:	1.04	4 55 1111	
0611	201	:125:	LUK	A+EF_UN	:ESC-1 set underline
0611	80	• 125•		_	
0612	6 0		OR	В	Reg B is ESCH Byte value
0612	3260EF	:130:			
			STO	A+ESCH	store desired value.
0615	1887 ^059E\$		JR	VOUT97	;Exit
0617	3EFE	ECCCOD -	4.54		
		ESCCGR:		A.NOT EF_GR	:ESC-G Clear graphics mode
0019	1806 ^0621\$		JR	:140	go clear ESCH bit
061B	3550	ECCCUA.	104		
061D	1802 ^0621\$	ESCCHA:		A-NOT EF_HA	ESC-(Clear half intensity
0010	1002 -00213		JR	:140	
061F	3EFB	ESCCUN:	1 DK	A NOT CE III	2500
0621	52.0	:140:	LUK	A.NOT EF_UN	:ESC-m Clear underline
0621	AO	. 140.	AND	_	
0622	18EE ^0612\$			В	Clear bit
0022	10LL -0012\$		JR	:130	Go store ESCH byte
	= 054E	ESCZZ:	=	NC CIDE FECE 3	
	. 0310	CJULL.	-	VC_CLRS ;ESC-Z	
					:Control-Z routine.

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 50
                                                               C:SDROMA .ASM
Keyboard and Console Routines.
                  ESCRR:
0624
                  :Delete Line
                  ESCEE:
0624
                  :Insert Line
                  :ENTRY
                                  cursor
                  :HL
                  ; C
                                  chr
                  :EXIT
                  :screen updated
                                  new cursor ...to VOUT90
                  : HL
                          Proc
0624
                                  UN_CUR
                          CALL
0624
     CD1907
                                  A, 1000_0000b
                          LDK
0627
     3E80
                          AND
0629
     A5
                                                   ido CR
                          MOV
                                  L.A
     6F
062A
                                                   save new cursor
                          PUSH
                                  HL
     E5
0628
                                  HL,HL
                          ADD
062C
     29
                                  A.PIABD
                          LD
062D 3A62EF
                                                   :A = addr(25th line)
                          ADD
                                  A . 24
0630 C618
                                                   ;A = lines_to_move + 1
                          SUB
0632 94
                                                           ; mod 32
                          AND
                                  0001_1111b
0633 E61F
                          MOV
                                   B . A
0635 47
                                  A. VDELL
                          LDK
0636 3E52
                          CMP
0638 89
                                                   recall #lines to move
                                   A . B
                          MOV
0639 78
                                                   ; if deleting a line
                          JR Z
                                   :delt
     2823 ^065F$
063A
                  :insrt:
063C
                  ;Insert a line
                                                   :A = addr(25th line)
                                   н
                           ADD
063C 84
                           MOV
                                   D.A
063D 57
                          LDK
                                   E+0
063E 1E00
                           RR D
0640 CB1A
                                           shift right DE
                           RR E
0642 C81B
                                                   ;DE = addr(Ist_chr_on_1st_line)
                                   DE
                           DEC
0644 1B
                                                   :A = #lines to move
                           MOV
                                   A . B
0645 78
                           LDK
                                   HL,-VLL
0646 2180FF
                                                   :HL = addr(line above DE)
                                   HL.DE
                           ADD
0649 19
                                                   ;DE := DE or F000h; HL := HL or F000h
                                   :istrt
                           JR
064A 1806 ^0652$
                   :icont:
 064C
                           PUSH
                                   ÐΕ
 064C D5
                                   IX
                           POP
064D DDE1
                 $
                                                   ;move 1 line down
                                   VLDDR
064F CDF106
                           CALL
                   :istrt:
 0652
                           CALL
                                   :vmod
0652 CD7506
                                                   ; if must move more lines
                                   :icont
                           JRNZ
 0655 20F5 ^064C$
                                                   ;HL => 1st chr of new line
                                   HL
                           INC
 0657 23
```

SORCIM 808x Assembler ver	3.5E	<:/55/7= 59	:92 Page	e 51
Keyboard and Console Routines.		С	SDROMA	• ASM

0658		exit:			
0658	CD8406		CALL	CLRLN	
0658	E1		POP	HL	recover cursor
065C	C39605		JMP	VCUT90	Main Exit
065F		:delt:			
065F	D1		POP	DE	recover new cursor
0660	D 5		PUSH	DE	
0661	218000		LDK	HL,VLL	
0664	19		ADD	HL.DE	;HL = line_below_cursor
0665	1806 ^066D\$		JR	dstrt	
0667		:dcont:			
0667	05		PUSH	DE	
0668	DDE1 \$		POP	IX	
066A	CD0507		CALL	VLDIR	<pre>;move 1 line up</pre>
066D		:dstrt:			
066D	CD7506		CALL	:vmod	
0570	20F5 ^0667\$		JRNZ	:dcont	
0672	EB		EX	HL.DE	get addr of line to clear
0673	18E3 ^0658\$		JR	:exit	

SDRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 52
Keyboard and Console Routines. C:SDRDMA .ASM

:HL := HL or F000h: DE := DE or F000h:
;simple mod-4096 arithmetic to keep pointers INSIDE video memory

0675		:vmod:		
	F5	PUSH	AF	isave A = #lines to move
0676	3EF0	LDK	A • 0F 0h	
0678	84	OR:	н	
0679	67	MDV	H+A	set upper nybl of H
067A	3EF0	LDK	A • 0F0h	
	82	OR	D	
067D	57	MOV	D+ A	;modulo 4096
067E	018000	LDK	BC.VLL	
0681	F1	POP	AF	
	3D	DEC	A	idecrement line_count
	C9	RET		

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 53 Keyboard and Console Routines. C:SDROMA .ASM 0684 CLRLN: :Clear to end of line : ENTRY ; HL Cursor :EXIT iclear to EOL Uses A11. 0684 PROC 0684 3620 STO * *,[hl] ;clear cursor... 0686 DI 0687 ENADIM 0689 3680 STO BRTBIT,[hi] set cursor 3RIGHT 0688 MICZIC 068D ΕI 068E 3A6CEF LD A.LLIMIT 0691 3D DEC ;max_#co1s => maximum_co1_# 0692 5D VOM E.L 0693 CBBB CBIT 7,E 0695 93 SUB E :A = col(EOL) - col(cursor) 0696 C8 RZ ;if @EOL. done 0697 3004 ^069D\$ **JRNC** :2 ;if inside logical_video_line 0699 3E80 LDK A, VLL 0698 93 SUB E :...else cir to end of 128-chr line 069C C8 RZ ;if cursor a column #127 069D :2: 069D 4F MOV C+A 069E 0600 LDK B . 0 :BC = chrs to move MOV E,L MOV D+H 06A0 E5 PUSH HL 06A1 DDE1 \$ POP ΙX INC DE ;DE = HL + 1 06A3 DD23 INC ΙX 06A5 185E ^0705\$ JR VLDIR

06E8 C9

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 54
                                                               C:SDROMA .ASM
Keyboard and Console Routines.
                  DO LF:
06A7
                  :Do Line Feed processing
                  :ENTRY
                                  cursor_addr
                  ; HL
                  :EXIT
                  :Cursor cleared
                  ;HL updated for current cursor pos
                  :window moved if necessary
                          PROC
06A7
                                                  iclear cursor
                                  UN_CUR
                          CALL
06A7
      CD1907
                  DO_LF2:
06AA
                                          save original cursor
                          PUSH
06AA E5
                                  BC.VLL : line length
                          LDK
     018000
06AB
                                  HL . BC
                          ADD
                                  nowap lif not wrapping from LWAVM to FWAVM
06AE
     09
                          JRNC
     3004 ^06B5$
06AF
                                  BC . FWAVM
                          LDK
0681 0100F0
                                  HL.BC :HL = new cursor a top of VM
                          ADD
0684
      09
                  :nowap:
0685
                                           save new cursor, get old
                          XTHL
0685 E3
                                          ishift HL left
                                  HL.HL
                          ADD
0686 29
                                  A.PIABD
                          LD
06B7 3A62EF
                                          ;start + 23 = last_video_line
                                   A,23
                          ADD
06BA C617
                                           :A = |_line - curr_line
                          SUB
06BC 94
                                                   :modulo 32
                                   0001_1111b
                          AND
                                  :vmov :if cursor is on 24th line of screen
06BD E61F
                           JRZ
063F 2802 406C3$
                  :end:
0601
                                           : get new cursor
                                   HL
                          POP
06C1 E1
                          RET
06C2 C9
                   :vmov:
 06C3
                                   A.LLIMIT
                           LD
 06C3 3A6CEF
                                           unshift L register
                           SRL
                                   L
 06C6 C83D
                                           ;A = LLIMIT - col(cursor)
                           SUB
                                   L
 06C8 95
                                           ; if cursor is outside logical line
                                   :end
                           JRC
 06C9 38F6 *06C1$
                   cursor is on last line of screen, inside of logical line.
                   *must move screen to follow cursor down through video memory.
                                   HL
                           POP
 06CB E1
                           PUSH
                                   HL
 06CC E5
                                   A . 80h
                           LDK
 06CD 3E80
                           AND
 DACE A5
                                           :HL = beginning of line
                                   L . A
                           MOV
 06D0 6F
                                          erase to EOL
                                   CLRLN
                           CALL
 06D1 CD3406
                                   A.PIABD
                           LD
 06D4 3A62EF
                           MOV
                                   B . A
 06D7 47
                                   not 31 ;A = line zero
                           AND
 06D8 E6E0
                                           :C = housekeeping bits 5..7
                                   C . A
                           VOM
 06DA 4F
                                   A+31
                           LDK
 060B 3E1F
                                           ;increment line#
                           INC
                                   В
 06DD 04
                                           ;A = 1ine#
                                   3
                           AND
                                                    SET VERTICAL OFFSET FOR COUT
 OADE AO
                                   A. VRTOFF
                           STO
 06DF 32EFEF
                                           A = new line# OR housekeeping_bits
                                   C.
                            OR
 06E2 B1
                                           :C = new value for OPBD
                                    C+A
                            VOM
                                           ;move video screen down 1 line in memory
 06E3 4F
                                    OPBD
                           CALL
 06E4 CD7109
                                    HL
                           POP
 06E7 E1
                            RET
```

06EF

06F0 C9

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 55 Keyboard and Console Routines. C:SDROMA .ASM STODIM: STORE THE CONTENTS OF THE B REG IN THE ADDR POINTED TO BY THE HL PAIR 06E9 **:ENTRY** ; B VALUE :HL = ADDRESS EXIT NONE 06E9 PROC 06E9 DI 06EA ENADIM :ENABLE DIM 06EC 70 STO B.[HL] STORE 06ED DISDIM DISABLE DIM

ΕI

RET

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 56
                                                               C:SDROMA .ASM
Keyboard and Console Routines.
                  VLDDR:
06F1
                  : Video Block Move
                  :ENTRY
                  :BC. IX. HL set
                  :EXIT
                  :LDDR on main & 9th bit memory
                          Uses
                                  BC. DE. HL.IX
                          PUSH
                                  ΙX
06F1 DDE5
                                  DE
                          POP
06F3
      D1
                          PUSHAL
06F4
                                                  :main memory
                          LDDR
06F7
      EDB8
                $
                          POPALL
06F9
                          DI
06FC
                          ENADIM
06FD
                                                  ;9th bit memory
                          LDDR
06FF ED88
                $
                          DISDIM
0701
                          ΕI
0703
                          RET
0704 C9
                  VLDIR:
0705
                  ; Video Block Move
                  :ENTRY
                  ;BC, IX, HL set
                  ;EXIT
                  :LDIR on main & 9th bit memory
                                  BC. DE. HL.IX
                          Uses
                          PUSH
                                  ΙX
0705 DDE5
                $
                          POP
                                  DΕ
0707
      01
                          PUSHAL
0708
                                                   ;main memory
                          LDIR
0708 ED80
                $
                          PCPALL
070D
                          DI
0710
                          ENADIM
0711
                                                  ;9th bit memory
                          LDIR
0713 ED80
                $
                          DISDIM
0715
                          ΕI
0717
                          RET
0718 C9
```

Keyboa	rd and	SDRCI Console Rout	4 808x ines•	Assembler ver	3.5E <:/55/7= 59:92 Page 57 C:SDROMA .ASM
0719		UN_CUR: ;Undo/I ;ENTRY	nvert	Cursor	
		#HL	=	cursor_addr	
		:EXIT			
		; cursor	inver	ted	
		;	Uses	A, CY.	
0719	7E		LD	A+[h1]	get the chr
071A	17		RAL		cursor_bit => CY
071B	3F		CMC		invert it
071C	1F		RAR		
071D	77		STO	A+[h1]	;
071E	C 9		RET		7444

SORCIM 808x Assembler ver	3.5E	<:/55/7= 59:92 Pag	e 58
Keyboard and Console Routines.		C:SDROMA	-ASM

KEYBOARD SCANNING & DECODE

071F

GKEY:
;KEYBOARD INTERRUPT PROCESSOR
;ENTRY
;NONE

:EXIT :KEYBOARD PROCESSING DONE. RESULT IN LDKEY.

SYSTEM CLOCK UPDATED BY UPTIM.

071F			PROC		
071F 0720 0724 0727	ED736FEF 3199EF	s	DI STO LDK ALPUSH	SP.IESTK SP.ISTK	SAVE INTERRUPTED PROCESS STK
072F	CD9803		CALL	UPTIM	SUPDATE SYSTEM CLOCK
0732 0735 0736 0739 0739	3A59EF B7 C43C07	GKEYX:	LD OR CNZ JMP	A•KEYLCK A KBDRVR	;EXIT INTERRUPT

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 59
Keyboard and Console Routines.
                                                              C:SDROMA .ASM
                         This file contains the 2-key roll over keyboard driver for
                 :
                         the OSBCRNE 1 comuter.
                         Author:
                         Microcode Corporation.
                         Fremont. CA.
                         Y. N. Sahae
                         September 1981
                 :
                         Revisions:
                 ;
                         2-Key roll over keyboard driver.
                         DESCRIPTION:
                         The keyboard driver gets control via the 60hz interrupt, i.e. once
                         every 16 ms. It scans the keyboard to detect any struck keys. If a
                         key is found, it is entered into the keylist if there is space
                         in the keylist and the key is not already in the list. At the end of
                         the scan, the keys in the list are processed. If the key is still
                         on, it is placed in Ikey (or special action taken) after translating
                         the keynumber. A count is also stored in the list and the key will
                         be serviced again at the end of this count if it is still on. Thus
                         the key will repeat if it is held down. If a key which is in the
                         list is not on it is removed from the list.
                 ;
                         The keyboard driver consists of the following routines:
                 ;
                         KBDRVR - Examines the keylist, calls CHKEY to determine if key
                         is still on. Removes the key from the list if it is not on. If
                 ;
                         key is on, it decrements the count associated with the key. when
                         the count goes to zero. it calls KBSERV to service the key. Calls
                         KBSCAN to enter any new keys into the list.
                         KBSCAN - This routine scans the keyboard, detects a struck
                 :
                 ;
                         key and enters it into the keylist. The key is entered
                         into the keylist if the key is not already present in the keylist
                 :
                         and there is an empty slot in the keylist.
                         KBSERV - It calls the routine CHKEY to check if shift/ctl or alphlock
                         keys are on. It then translates the keynumber into the ASCII
                         code and places it in the LKEY for the CBIOS to read. For some
                         special cases, it calls ROM resident routines to process the key.
                         CHKEY - It checks if a given key is on-
                         Data structure:
                         The main structure used is the kaylist. The format of each entry is:
                 ;
                         Byte 0:
                                 bit 7: Set indicates entry is in use.
                                 bit 6: Set indicates key has been serviced once.
                                 bits 5..3 : contain the row number of struck key.
                                 bits 2..0: contain the column number of struck key.
                         Byte 1:
```

bits 7..0: contain the repeat count for the key.

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 60
Keyboard and Console Routines. C:SDROMA .ASM

me, source and a second a second and a second a second and a second a second and a second and a second and a							
073C		KBDRVR:			national and processes keystrokes.		
		•			Detects and processes keystrokes.		
		;	Input: none				
	Output: LKEY contains keystroke.						
.726			PROC				
073C	607407		call	kbscan	scan keyboard and enter keys into keylist		
073C	CD7407						
		;	Framine	keylist. If key	y found in keylist, call CHKEY to see		
		;	if kev	is still on. re	move from list when not on.		
		•					
073F	21D4EF		LDK	hi•keyist	ipoint to first entry of keylist		
0742	0603		LDK	b•kl_len			
0744	0000	:10:					
0744	3A5EEF		ld	a.lkey			
	87		or	а			
0748	C O		RNZ		exit when a key is waiting in Ikey		
0.10					a bulle o at anteu		
0749	7E		Id	a·[hi]	get byte 0 of entry		
074A	CB7F \$		bit	kl_used•a	and the terms than		
074C	2821 ^076F\$		jrz	:40	if entry is in use then		
	CDD107		call	chkey	icheck if still on		
0751	2004 40757\$		jrnz	:20	; if key is now off then		
0753	3600		sto	0.[hi]	remove key from list		
0755	1818 ^076F\$		jr	:40	4-1		
0757		:20:			ielse		
•		;	key is	on. decrement i	ts repeat count. If count goes to zero		
		;	then it	is time to serv	ice the key.		
					save ptr to first byte of entry		
0757	£5		push	h!	spoint to repeat count		
0758	23		inc	hi			
0759	35		dec	[h1] :30	exit when not time to service the key.		
075A	2012 ^076E\$	i	jrnz	-			
		;	it is t	ime to service t	he key. Set the next repeat count		
		•	10 15				
075C	E 2		ex	[sp]•hi	spoint back to the first byte of entry		
075D	7E		ld	a+[hl]			
075E		•	bit	ky_srvd+a	check if it is serviced before		
	CBF6		sbit	ky_srvd+[hl]	;set the serviced once flag		
0762			ex	[sp]•hi	ipoint back to the repeat count		
0763			sto	irptct+[hi]	and store rpt count as per serviced flag		
0765		3	jrz	:22			
0767			sto	srptct.[hl]			
0769		:22:					
0769	E63F		and	krow_m+kcol_m	and to corving the key		
0768			call	kbserv	call to service the key		
076E	-	:30:			get ptr to first byte of entry again		
076E	E1		pop	hl			
					;endif ;endif		
076F		:40:		11-1	FORULI		
			echo	kle_len	;point to next entry		
			inc	hl	spottic to tieve energ		
			ENDM	•10	until complete list scanned		
0771	1001 ^0744	5	djnz	:10	TOTAL COMPTOS THE SERVICE		
			0.57		return to exiti code in rom		
0773	C 9		RET		21 4 4 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		

079C 21D4EF

LDK

hi.keyist

```
Keyboard and Console Routines.
                                                                C:SDROMA .ASM
                  ; **
                  •
                                  KBSCAN - Scan keyboard and enter detected keys in the
                          sbrt:
                          keylist.
                          input:
                  none
                          output:
                  :keyist = contains any keys detected.
0774
                  KBSCAN: proc
0774 2EFF
                                   1.Offh
                          LDK
                                                           isee if any key pressed
0776 CDEF07
                          cail
                                  rdrow
0779 C8
                          ſΖ
                                                           return when none
077A 2E81
                          LDK
                                   1.row0_m
                                                           iget row 0
077C CDEF07
                          call
                                   rdrow
                          LDK
                                  L.l
                          CALL
                                  RDROW
                          PUSH
                                  DSW
                          LDK
                                  1 . 80h
                  :
                          CALL
                                  rdrow
                          ANI
                                  08h
                          VOM
                                  B. A
                          POP
                                  PS#
                          OR
                                  В
077F E6E3
                          and
                                  11100011b
                                                           remove ctl/shift and alpha lock
0781 0607
                          LDK
                                  b.tot_row
                  ;
                          in this loop, reg b contains totrow- current row being scanned
0783
                  :10:
0783 2844 ^0709$
                          jΓZ
                                  :50
                                                           if any key is pressed then
0785 C5
                          push
                                  bc
                                                             save loop count
0786 5F
                          mov
                                  e • a
                                                             ie = columns
0787 3E07
                          LDK
                                  a.tot_row
0789 90
                          sub
078A 17
                          rai
0788 17
                          ral
078C 17
                          rai
078D 57
                          mov
                                  d+a
                                                            id = row number # 8
078E 0E00
                          LDK
                                  c • 0
                                                            ;initialize column counter
                          scan this row from right to left to get the column number
0790
                  :15:
                                                             ;repeat
0790 CB38
                          ST 1
                                  е
                                                               shift column bit into carry
0792 302F ^07C3$
                          jrnc
                                  :30
                                                               if a key is found then
                  ;
                          enter the key whose column number is in c and row*8 is in d
                  ;
                          into the keylst provided the key is not already in list and
                          there is an empty slot in the list.
0794 TA
                          mov
                                  a.d
0795 81
                          add
                                  a . c
0796 C5
                          push
                                  bc
0797 4F
                          mo v
                                  C + a
                                                                 ic = key number
0798 D5
                          push
                                                                 save de
                                  de
0799 E5
                          push
                                  hi
                                                                 save hi
079A 0603
                          LDK
                                  b.kl_len
                                                                 :length of keylist
```

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 61

SDRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 62
Keyboard and Console Routines. C:SDROMA .ASM

079F	110000		LDK	de•0	
07A2		:18:			
07A2	7E		1d	a•[hl]	•
	CB7F \$		bit	ki_used•a	is antaw is wood than
07A5	2807 ^07AE\$		jrz	:22	if entry is used then
07A7	E63F		and	krow_m+kcoi_m	
07A9	В9		cmp	С	icheck with current key
0744	2814 ^07C0\$		jrz	:27	exit if this key is in list
OTAC	1802 ^07B0\$		jr	:25	
OTAE	1002 0,500	:22:	•		<pre>;else (an empty entry is found)</pre>
O7AE	E D		mov	e, 1	
O7AF	54		MOV	d•h	save adrs of empty entry in de
	34	:25:	10	_,	; end i f
0780		• 23 •	echo	kle_len	
			inc	h!	
			ENDM	***	inext entry
				:18	till list scanned
0782	10EE -07A2\$		djnz	-10	
		;	check	if an empty entry wa	s found.
0784	7A		mov	a • d	
0785	87		οr	a	the same found then
	CACOO7		jΖ	:27	; if empty entry was found then
0789			ex	de•hl	<pre>;h! = empty entry</pre>
07BA	71		sto	c+[hi]	istore the key in the list
	CSFE \$		sbit	ki_used•[hi]	;set used flag
0780	23		inc	h!	
07BE	3601		sto	DB_ct.[hi]	store debounce delay
0100	3001				; end if
0700		:27:			restore all regsters
	C1	• • . •	pop	hi	
0700			DOD	de	
07C1			pop	bc	
07C2	C1	:30:	DOD		; end i f
07C3		: 30 :	ino	С	;increment column number
07C3			inc	a	
0764			XOL		
0705	88		CMD	e	until all columns scanned
0766	2008 ^0790	i	jrnz	:15	
0768	C 1		рор	bc	;rstore bc
0709		:50:			; end i f
	CB25 \$		sla	1	<pre>:move to next row</pre>
	CDEFO7	•	call	rdrow	
0708	1083 ^0783	•	djnz	:10	
07CE		P	ret		
0700	C 9		166		

07E4 C9

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 63 Keyboard and Console Routines. C:SDROMA .ASM ; ** sbrt: CHKEY - checks if key number is on. input: Reg A = Keynumber output: #Z ind cfr Key is off. :Z ind set Key is on. 0701 CHKEY: proc 0701 E5 push hi save callers hi 07D2 F5 push af save keynumber 07D3 1F rar 07D4 1F rar 07D5 1F rar right justify row number 07D6 CDE507 call gtmask 07D9 F1 pop af iget key number 07DA D5 push de save row mask 07DB CDE507 call gtmask :get col mask (col num is in bits 0..2) 07DE E1 pop hi imove row mask to 1 07DF CDEF07 call rdrow iget row of keys adrsed by I 07E2 A3 and ;z ind = value of key 07E3 E1 hl pop

ret

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 64
e Routines. C:SDROMA .ASM
Keyboard and Console Routines.
                  ; **
                                   GTMASK - generates mask with one bit set.
                           sbrt:
                  ;
                           input:
                                   bit number (0..7)
                  ; a
                           =
                           output:
                  ;
                   ;e
                                   mask
                  GTMASK: proc
07E5
                           LDK
                                   e • 1
07E5 1E01
                                   7
07E7 E607
                           and
                   :10:
07E9
07E9 C8
                           ٢Z
07EA CB23
                           sla
                                   e
                           dec
07EC 3D
                                   :10
07ED 18FA ^07E9$
                           j٢
```

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 65 Keyboard and Console Routines. C:SDROMA .ASM

O7EF RDROW: proc

07EF 07F1	2622 70	LDK MOV	h•high(h•key) A•L	th1 = prt adrs for given row
07F2 07F4		\$ MOV	R+A a•[h1]	
07F5	EEFF	xor	Offh	;invert values
07F7	C 9	ret		

```
Keyboard and Console Routines.
                                                               C:SDROMA .ASM
                  : **
                                  KBSERV - services the key
                  ;
                          sbrt:
                          input:
                                                  kevnumber
                              reg A
                          [SP]-4 =
                                           pointer to keylst entry (used for slide fnc only)
                  ;
                          preserves reg 8
      = 008D
                  Ift_arw equ
                                  8dh
      = 0088
                  rt_arw equ
                                  8hh
      = 008A
                  up_arw equ
                                  8ah
      = 0080
                  dn_arw equ
                                  8ch
      = 005B
                  hm_scrn equ
                                  • [ •
07F8
                  KBSERV:
07F8
                          PROC
                          setup hi to point to keycode table entry for this key
07F8 5F
                          MOV
                                  e•a
                                                  jused here and later
07F9 1600
                          LDK
                                  d+0
07FB 21C308
                          LDK
                                  hl*kycdtb
07FE 19
                                  hl • de
                          add
07FF 7E
                                  a.[hl]
                          ld
                                  • •+1
0800 FE21
                          CMD
                                                  ;ignore shift/ctl etc for chars less than 21h
0802 381F ^0823$
                                  :12
                          jrc
0804 F5
                          push
                                  af
0805 2E01
                          LDK
                                  1.1
                                                  From 0 adrs
                                                  iget row containing ctlishift and alpha key
0807
     CDEF07
                          call
                                  rdrow
080A F5
                          PUSH
                                  AF
080B 2E80
                          LDK
                                  L . 80H
080D CDEF07
                          CALL
                                  RDROW
0810 E608
                          ANI
                                  8
                          MOV
0812 5F
                                  E,A
0813 F1
                          POP
                                  AF
0814 B3
                          OR
                                  Ε
0815 5F
                          mov
                                  e•a
                                                  :restore keycode
0816 F1
                                  af
                          pop
0817 CB53
                                  ctl_ky.e
                          bit
0819 202E ^0849$
                          irnz
                                                  igo process ctl key
                                  :50
081B CB63
                          bit
                                  shft_ky•e
0810 2014 ^0833$
                          jrnz
                                  :30
                                                  ;go process shift key
081F C858
                          bit
                                  alph_ky.e
0821 2004 40827$
                          jrnz
                                  :25
                                                  igo process alpha key
                          store key code into Ikey
                  :
0823
                  :12:
0823 325EEF
                          sto
                                  a, lkey
0826 C9
                          ret
                                                  process alpha key
0827
                  :25:
                                  *a*
0827 FE61
                          cmp
0829 38F8 ^0823$
                                  :12
                                                  ;exit when less than 'a'. Alpha has no effect
                          jrc
082B
                  :27:
0828 FE80
                          cmp
                                  80h
082D 30F4 ^0823$
                          jrnc
                                  :12
                                                  for when >= 80h
082F
                  :28:
082F EE20
                          YOU
                                  20h
                                                  ifold char to upper case
0831 18F0 ^0823$
```

jΓ

:12

SORCIM 809x Assembler ver 3.5E <:/55/7= 59:92 Page 66

0870 19

add

nl.de

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 67
Keyboard and Console Routines.
                                                                C:SDROMA .ASM
0833
                   :30:
                                                   :process shift key
0833 FE61
                           cmp
                                   · a •
0835 30F4 ^0828$
                                  :27
                           irne
                                                   ;goto alpha when char > 'a'
0837 FE5B
                           cmp
                                  .1.
0839 3806 ^0841$
                           jrc
                                  :35
                                                   igoto process shift numerics etc
083B 20F2 4082F$
                           jrnz
                                  :28
                                                   :invert shift bit for '\'
                                  a,*]*
083D 3E5D
                          LDK
083F 18E2 ^0823$
                           ĴГ
                                  :12
                                                   ;convert [ to ]
0841
                  :35:
                  ;
                          chars * to > (ascii codes 27h to 3eh) are converted using
                  ;
                          the shft_tb
0841 5F
                          mov
                                                  :d=0 from before
                                  hishft_tb - ***
0842 210408
                          LDK
0845 19
                          add
                                  hi,de
0846
                  :37:
0846 7E
                          Id
                                  a.[hl]
0847 18DA ^0823$
                          j٢
                                  :12
0849
                  :50:
                                                  *process control key
                  ;
                          if char is between a..z then turn off the 3 high order
                          if char is between '.'..'?' it is translated as per table ctl_tb'
                  ;
                          if char is the arrow keys or the ']'/'[' key the slide functions
                  ;
                          are called.
0849 FE8D
                          CMD
                                  ift arw
0848 2833 40880$
                          jΓZ
                                  slidel
084D FE8B
                          cmp
                                  rt_arw
084F 2833 ^0884$
                                  slider
                          jΓZ
0851 FE8A
                          CMD
                                  up_arw
0853 2840 0895$
                          Jr z
                                  slideu
0855 FE8C
                          CMD
                                  dn arw
0857 2840 ^0899$
                          jrz
                                  slided
0859 FE5B
                          cmp
                                  hm_scrn
085B 2850 408AD$
                                  dohome
                          jΓZ
085D C863
                          BIT
                                  shft_ky•e
                                                  itest for cntl shift
085F 2808 ^0869$
                          irz
                                  :52
                                                  if not
0861 FE2F
                                  ./.
                                                  is it?
                          cmp
                                  :52
                                                  if not '?'
0863 2004 *0869$
                          jrnz
0865 3E7F
                                  a • 07fh
                          Idk
                                                  ideleat key
0867 1884 ^0823$
                                  :12
                          jτ
0869 FE40
                                  . . .
                  :52:
                          cmp
0868 3808 *0875$
                                  :54
                          jrc
                                                  igoto translate chars from table
086D
     FE78
                                  *z*+1
                          cmp
086F 30B2 ^0823$
                          jrnc
                                  :12
0871 E61F
                          and
                                  1fh
0873 18AE 40823$
                                  :12
                          j٢
0875
                  :54:
0875
     FE2C
                                  .,.
                          cmp
0877 38AA ^0823$
                          jrc
                                  :12
                                                  ino translation if char below ...
0879 21E708
                          LDK
                                  hi-cti_tb-'-'
087C 5F
                          mov
                                  e•a
                                                  id=0 from above
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 68
                                                              C:SDROMA .ASM
Keyboard and Console Routines.
087E 18C6 ^0846$
                                 :37
                         ĴΓ
                         slide functions.
0880
                 slidel:
0880 0E02
                         LDK
                                 c • 2
0882 1802 40886$
                         jΓ
                                 :70
0884
                 slider:
0884 DEFE
                         LDK
                                 C+-2
0886 3A61EF
                  :70:
                         Id
                                 a · piaad
                                                 iget horizontal coord.
0889 81
                         add
                                 a + C
088A 4F
                         MOV
                                 C.A
088B CD6409
                  :72:
                         CALL
                                 CPAD
                                                 FUNCTION PIA
                  :74:
088E
                         set repeat count for these keys (override count set by the kbdrvr)
088E D1
                         pop
                                 de
                                                 :qet return adrs
                                                 pointer to repeat entry
088F E1
                         pop
                                 hl
0890 3603
                                 sid_rct.[hi]
                                                 repeat count for slide keys
                         sto
0892 E5
                                 hi
                         push
0893 D5
                         push
                                 de
                                                 restore stack
0894 C9
                         ret
0895
                 slideu:
                         LDK
0895 0E01
                                 C • 1
0897 1802 40898$
                                 :76
                         j۲
0899
                  slided:
0899 OEFF
                         LDK
                                 C .-1
                                                 merge new vertoffset to lower 5 bits of
0898
                 :76:
                                                 FPIAB
                                 hl.piabd
                         LDK
089B 2162EF
089E 7E
                         Ιd
                                 a.[hl]
089F 81
                         add
                                 2 , C
08A0 E61F
                                 1fh
                                                 imodify current with +1/or-1
                         and
08A2 4F
                         mov
                                 C+a
08A3 7E
                         1d
                                 a.[hl]
08A4 E6E0
                         and
                                 0e 0h
08A6
                  :78:
08A6 B1
                         OΓ
                                 С
08A7 4F
                         mov
                                 C+a
08A8 CD7109
                         call
                                 opbd
08AB 18E1 ^088E$
                          Ĵ٢
                                 :74
08AD
                  dohome:
                         SET DENSITY BIT
                                                 GET OLD VALUE
                                 A.PIAAD
08A0 3A61EF
                         LD
                                 0000_0001B
                                                 SAVE DENSITY BIT
0880 E601
                         ANI
08B2 F6EA
                         ORI
                                  VFLO
                                                 OR IN HORIZONTAL OFFSET
0884 4F
                          MOV
                                 C.A
                                 OPAD
                                                 :FUNCTION PIA
0885 CD6409
                          CALL
                                 A.piabd
                          1 d
08B8 3A62EF
                         AND
                                  DEOH
                                                 *HOUSE KEEPING BITS
0888 E6E0
                          MCV
                                  C . A
08BD 4F
                                 A. VRTOFF
                                                 GET LAST VERTICAL OFFSET
08BE 3AEFEF
                          LD
                                 :78
                                                 ;and the vert to 0 also
08C1 18E3 ^08A6$
                          jΓ
```

SURCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 69
Keyboard and Console Routines. C:SDRDMA .ASM

-									
08C3		; kycdtb:	key	code t	trar	nslati	ion t	ables	
08C3	18097F7F	Kycatb.	DB	es	sc.	tab.	er¢•	erc	
08C7	7F00275B		DB	er	C+	CF.	••••	•1•	
08CB	31323334		DB	• 1	٠,	•2•,	•3•,	• 4 •	
08CF	35363738		DB	15	5°,	•6•,	•7••	•8•	
0803	71776572		D8	• 0	٠,	* w* •	•e•,	• •	
08D7	74797569		DB	• t		*y*,	•u••	• ; •	
08DB	61736466		DB	• a	٠,	's',	•d•,	.,.	
08DF	67686A6B		DB	• <u>g</u>	,•,	*h* •	• j•,	•k•	
08E3	7A786376		DB	• z	٠,	*x*,	*c*•	••	
08E7	626E6D2C		DB	•b	٠,	•n•,	• m • •	٠,٠	
08EB	8A8D3020		DB	8a	ıh,	8dh,	•0••		
08EF	2E706F39		DB	٠.	. • •	'p',	101,	•9•	
08F3	8B8C2D2F		DB	8b	h.	8ch.	,	• , •	
08F7	385C6C3D		DB	٠;	٠,	٠,٠,		•=•	
08FB 08FB	2200000000	shft_tb:	DB	• •	٠,,	00h•	00h.	00h•	00h
0900	3C5F3E3F29		DB			,			•) •
0905	2140232425		DB	• •		- '	***	•	• 2 •
090A	5E262A2800		DB				- •	·(·,	
090F	3A002B00		DB		•				OUII
	3AUU26UU		<i>D</i> B	•	•	00h•		00h	
0913 0913	781F7D7E	cti_tb:	DB	• €	٠,	4	0h• •	}• ••	
0917	8081828384		DB	80	h.	81h,	82h•	83h•	84h
0910	8586878889		DB	85	h.	86h,	87h•	88h•	89h
0921	00000060		DB	00	h,	00h,	00H•	60H	

092C C9

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 70 C:SDROMA .ASM Hardware PIO function processors. ***[4]** CDEHL: 0925 Compare DE to HL as unsigned integers. :ENTRY ;DE.HL set to values to compare :EXIT :Zbit set if DE = HL :Cbit set if DE < HL. Uses AF. MOV A.D 0925 7A CMP н 0926 BC ; If D .ne. H RNZ 0927 CO A . E 0928 78 MOV 0929 BD CMP ;if DE .ne. HL 092A CO RNZ STC 092B 37

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 71 Hardware PIO function processors. C:SDROMA .ASM

092D		DELAY: ;*N* Mi ;ENTRY :A	Hisecon		seconds to delay
		SCLFRE		(Freq/1000)/25	seconds to delay
		FEXIT			
092D			Proc		
0920	C5		PUSH	вс	
092E	4F		MOV	C+A	
092F	3E85	:1:	LDK	A+SCLFRE	
0931	3 D	:MLOOP:	DEC	A	;(4 tics)
0932	40		MOV	8 • B	i(4 tics)
0933	49		MOV	C+C	;(4 tics)
0934	C23109		JNZ	:MLOOP	;(10 tics) If 1 ms not elapsed
0937	OD		DEC	С	
0938	C22F09		JNZ	:1	:If requested msec not done
0938 093C	C1 C9		POP RET	ВС	restore registers

SCLFRE = 2000/22 ;Z80, 2mhz :...defined in OCCTXT-ast

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 72
                                                             C:SDROMA .ASH
Hardware PIO function processors.
093D
                 FILLZ:
                 ;Fill block of memory with byte value.
                 ;DE=LENGTH TO broadcast character
                 :C =character TO broadcast
                 HL=FWA TO START broadcast
                 :EXIT
                 FILL DONE
                                        FILL WITH ZERO
                                 C . O
093D 0E00
                         LK
                 FILLC: MOV
                                 A,E
093F 7B
0940 B2
                         OR
                                 D
                                        ; return here if broadcast 0 bytes
                         RZ
0941 C8
                                 C,[hi] ; 1st byte
                         STO
0942 71
                         DEC
                                 DE
0943 1B
                         MOV
                                 A . E
0944 78
0945 B2
                         OR
                                 D
                                         ; return here if broadcast 1 byte
                         RΖ
0946 C8
                                 8 . D
                         MCV
0947 42
                         MOV
                                 C.E
                                         ; BC := (count)
0948 4B
                         MOV
                                 D.H
0949 54
                         VOM
                                 E+L
094A 5D
                                         : DE := HL + 1
                         INC
                                 DE
0948 13
                         LDIR
                                         : overlapping move
094C EDB0
               $
                         RET
094E C9
```

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 73
Hardware PIO function processors. C:SDROMA .ASM

094F		SPAO:		
		Set PIA for (output	
094F	3E03	ŁDK	A+03h	CRA1-0, Interrupt inputs CA1
0951	32012C	STO	A+H+VIO+1	set data direction
0954	3EFF	LDK	A, OFFh	
0956	32002C	STO	A.H.VIO	set all A lines as output
0959	3E00	LDK	A+0	
0958	32032C	STO	A.H. VIO+3	
095E	3EFF	LDK	A.OFFh	
0960	32022C	STO	A+H-VID+2	set all 8 lines as output
0963	C 9	RET		·

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 74 Hardware PIO function processors. C:SDROMA .ASM 0964 OPAD: Output data to pia A register PIA definition. 7 6 5 4 3 2 1 0 ! horizontal offset IDD1 +--+--+--+--+--+ The DD(double density) bit is inverted and the jumper must be installed on the pc board. *NOTE If the 0 bit is LOW double density is set if it is HIGH single density is set. *NOTE Bit 0 of "PIAAD" : = single density set double density reset = :ENTRY ; C = data

:EXIT NONE 0964 PROC 0964 3E07 LDK A • 4+3 A+H-VIO+1 0966 32012C STO 0969 79 MOV A+C A.PIAAD STO 096A 3261EF A.H.VIO send data 096D 32002C STO 0970 C9 RET

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 75 Hardware PIO function processors. C:SDROMA .ASM

0971		OPBD: ;Output ; ; ; ;	7 6 ++	o pia 8 register inition. 5 4 3 2 1 	
		;ENTRY ;C	- ·	data	
		;EXIT ;NONE			
0971			PROC		
0971	3E04		LDK	A • 4	
0973	32032C		STO	A+H-VIO+3	
0976	7.9		MOV	A+C	
0977	3262EF		STO	A.PIABD	
097A	32022C		STO	A+H+VIO+2	send data
097D	C 9		RET		

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 76 BMIEEE.ASM - IEEE-488 INTERFACE. C:SDROMA .ASM

	+				
:	! ENTERED 05/01/81	FROM TNW	XEROX.	SEH.	;
•					+

LAST EDITED AT 09:29 ON 11 NOV 80

THERE ARE FOUR COMMANDS TO THE 6821

:	00	PERIPHERAL/DIRECTION REGISTER A	CPDRA
2	01	CONTROL REGISTER A	CCRA
:	10	PERIPHERAL/DIRECTION REGISTER B	CPDRB
•	11	CONTROL REGISTER B	CCRB

BIT 2 OF THE CONTROL REGISTER (A AND B) ALLOWS SELECTION OF EITHER 3A PERIPHERAL INTERFACE REGISTER OR A DATA DIRECTION REGISTER. 34 "1" IN BIT 2 SELECTS THE PERIPHERAL REGISTER.

THE TWO DATA DIRECTION REGISTERS ALLOW CONTROL OF THE DIRECTION OF DATA THROUGH EACH CORRESPONDING PERIPHERAL DATA LINE.

A DATA DIRECTION REGISTER BIT SET AT "O" CONFIGURES

THE CORRESPONDING PERIPHERAL DATA LINE AS AN INPUT.

*A RESET AT POWER UP HAS THE EFFECT OF ZEROING ALL PIA REGISTERS.

THIS WILL SET PAO-PAT, PBO-PBT, CA2, AND CB2 AS INPUTS,

AND ALL INTERRUPTS DISABLEC.

SIGNALS ATN. REN. AND IFC WILL BE DRIVEN LOW

UNTIL INITIALIZED BY SOFTWARE.

DATA DIRECTION IS ALWAYS SET FOR OUTPUT FOR THE DATA REGISTER.

DATA MUST BE SET TO ALL ONES WHEN INPUTTING.

THE INTERFACE IS IN SOURCE HANDSHAKE MODE IF DATA ENABLE (PBO)

IS SET TO "O", AND IN ACCEPTOR HANDSHAKE MODE IF SET TO "1".

WHEN SWITCHING FROM SOURCE TO ACCEPTOR HANDSHAKE.

ATN WILL ALWAYS BE LOW.

TAKE CONTROL CAN ONLY BE CALLED FOLLOWING A GO TO STANDBY.

SAFTER A FATAL ERROR, PERFORM AN IFC RESET.

STANDARD VALUES USED:

CCRA 0011(IFC)(DIR)10

CCRB 0011(REN)(DIR)00

CPDRA	SOURCE	DIRECTION DATA	1111_1111 DATA	
CPDRA	ACCEPTOR	DIRECTION DATA	1111_1111 1111_1111	
;CPDR8	SOURCE	DIRECTION DATA	0011_1111 000A_0010	;A = ATN
:CPDRB	ACCEPTOR	DIRECTION DATA	1101_0111 0100_0101	

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 77
BMIEEE.ASM - IEEE-488 INTERFACE.
                                                             C:SDROMA .ASM
                 :PIA SIGNAL DEFINITIONS:
                 FALL SIGNALS ARE LOW ON THE IEEE BUS WHEN PIA REGISTER CONTAINS "1".
                         PAO
                                 DIO 1
                         PA1
                                 DIO 2
                         PA2
                                 DIO 3
                         PA3
                                 DIO 4
                         PA4
                                 DIO 5
                         PA5
                                 010 6
                         PA6
                                 DIO 7
                         PA7
                                 DIO 8
                 ï
                         CAI
                                 SRQ
                 ;
                         CA2
                                 IFC
                         PBO
                                 ENABLE DATA CUT
                                                        (ENABLED WHEN "O")
                         PB1
                 ;
                                 ENABLE NDAC/NRFD
                                                         (ENABLED WHEN "O")
                         PB2
                                 ENABLE EDI/DAV
                                                        (ENABLED WHEN "O")
                         P83
                                 EOI
                 ÷
                         PB4
                                 ATN
                         PB5
                                DAV
                         PB6
                                NDAC
                 ÷
                         PB7
                                 NRFD
                         CB1
                                NOT USED
                         CB2
                                REN
                 CONTROL WORD FORMAT
                 ;[ 7 ][ 6 ][ 5 ][ 4 ][ 3 ][ 2 ][ 1 ][ 0 ]
                 ;[IRQA1][IRQA2][
                                    CA2 CONTROL
                                                   JE DDRAJE CA1 CONTROL1
                 :[IRQB1][IRQB2][
                                    CB2 CONTROL
                                                   JE DDRBJE CB1 CONTROL]
                         IRQA1
                               0
                                        INTERRUPT FLAG SET BY FALL OF SRO
                         IRQAZ
                                0
                                        NOT USED
                         CA2
                                110
                                        SET IFC HIGH
                                111
                                        SET IFC LOW
                         DDRA
                                0
                                        R/W DATA DIRECTION REGISTER A
                                1
                                        R/W PERIPHERAL REGISTER A
                         CAI
                                10
                                        SET IRQA1 HIGH ON RISE OF SRO
                         IRQ81
                                0
                                        NOT USED
                         IRQ82
                                0
                                        NOT USED
                         CB2
                                110
                                        SET REN HIGH
                                111
                                        SET REN LOW
                         DDRB
                                0
                                        R/W DATA DIRECTION REGISTER B
                                        R/W PERIPHERAL REGISTER B
                                1
                        CB1
                                00
                                        NOT USED
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 78
                                                              C:SDROMA .ASM
BMIEEE.ASM - IEEE-488 INTERFACE.
                 :BIGS CALL 1: CONTROL OUT
                         CAN BE CALLED WHILE IN ANY STATE.
                         EXITS IN THE CONTROLLER STANDBY STATE (ATN HIGH).
                         SOURCE HANDSHAKE MODE
                  :PARAMETER PASSED IN REGISTER C:
                         BIT 0 IF "1". THE IFC SIGNAL IS SET LOW FOR 100 MICRO-SEC
                                 AND ALL PIA SIGNALS ARE INITIALIZED
                  ;
                         BIT 2 1
                             O X NO ACTION
                             1 O SETS REN HIGH
                             1 1 SETS REN LOW
097E
                  IE.CO: PROC
                                 AF
                         PUSH
097E F5
                         PUSH
                                 HL
097F E5
                         BIT
                                 0.0
                                                 :CHECK IFC SUB-COMMAND
0980 CB41
0982 2828 ^09AF$
                          JRZ
                                 :B1C20
                  ; INITIALIZE ALL IEEE-488 SIGNALS
                                 HL.CCRA
0984 210129
                         LK
                                 0011_1010B+[HL] ; ENABLE SRQ AND SET IFC-SUT LOW
                         STO
0987 363A
                                 A+1111_11118
                                                 DIRECT DATA OUT
                         LK
0989 3EFF
                         CTS
                                 A . CPDRA
0988 320029
                         STO
                                 0011_1110B+[HL]
098E 363E
                          XOR
                                                 SET DATA TO ZERO
0990 AF
0991 320029
                         STO
                                 A+CPDRA
0994 210329
                                 HL . CCRB
                         LK
                                 0011_0000B.[HL] :SET REN-OUT HIGH
0997 3630
                         STO
                                                 DIRECTION FOR SOURCE HANDSHAKE
                                 A.0011 11118
                         LK
0999 3E3F
                         STO
                                 A.CPDRB
0998 320229
                         STO
                                 0011 0100B.[HL]
099E 3634
                                                 :VALUES FOR SOURCE HANDSHAKE
                                 A,0000_0010B
09A0 3E02
                         LK
                                 A. CPDRB
09A2 320229
                         STO
                  :LEAVE IFC LOW FOR 100 MICRO-SEC
                                                 DELAY 100 MICRO-SEC
                                 A + 25
09A5 3E19
                         LK
09A7 3D
                  :81C10: DEC
                                 A
                                 :81C10
0948 20FD 409A7$
                          JRNZ
                                 A.0011_0110B
                                                 SET IFC HIGH
                         LK
09AA 3E36
09AC 320129
                         STO
                                 A+CCRA
                                                 CHECK REN SUB-COMMAND
09AF CB51
               $ :B1C20: BIT
                                 2 • C
                                 :81040
09B1 280B ^093E$
                          JRZ
                  SET/CLEAR REN
                                 A,0011_00008
                         LK
0983 3E30
                         BIT
                                 1.0
0985 CB49
0987 2802 ^0988$
                          JR Z
                                 :81030
                                 A.0011_1000B
0989 3E38
                         LK
                  :81C30: STD
                                 A,CCRB
09BB 320329
                  :81C40: POP
                                 HL
09BE E1
098F F1
                          POP
                                 ΑF
0900 09
                          RET
```

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 79 BMIEEE.ASM - IEEE-488 INTERFACE. C:SDROMA .ASM

BIOS CALL 2: STATUS IN

CAN BE CALLED ONLY WHILE IN SOURCE HANDSHAKE MODE.

BIT O OF REGISTER A SET IF SRC IS LOW

09C1		IE.SI:	PROC		
0901	E5		PUSH	HL	
0902	3A0029		LD	A. CPDRA	CLEAR IRQA1
09C5	210229		ŁK	HL, CPDRB	PULSE ENABLE ndac/nrfd
0908	CB8E	\$	CBIT	1.[HL]	
09CA	CBCE	\$	SBIT	1.[HL]	
09CC	3A0129		LD	A+CCRA	SET SRO VALUE IN A
09CF	E680		AND	1000_0000B	
09D1	07		RLC	A	
0902	E1		POP	HL	
0903	C 9		RET		

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 80
BMIEEE.ASM - IEEE-488 INTERFACE. C:SDROMA .ASM

BIOS CALL 3: GO TO STANDBY

CAN BE CALLED ONLY WHILE IN SOURCE HANDSHAKE MODE

INO PARAMETERS PASSED

0904		IE.GTS:	PROC		
09D4	F5		PUSH	AF	
0905	3E02		LK	A.0000_0010B	SET ATN HIGH
09D7	320229		STO	A . CPDR B	
09DA	AF		XOR	A	FLOAT DATA BUS
	320029		STO	A+CPDRA	
09DB			POP	AF	
09DE	F1		RET		
09DF	C9		KEI		

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 81
BMIEEE.ASM - IEEE-488 INTERFACE.
                                                              C:SDROMA .ASM
                  BIOS CALL 4: TAKE CONTROL
                          CAN BE CALLED ONLY WHILE IN THE CONTROLLER STANDBY STATE
                                  (ATN HIGH).
                          EXITS IN THE CONTROLLER ACTIVE STATE (ATN LOW).
                          SOURCE HANDSHAKE MODE.
                  #BIT O OF REGISTER C SET TO TAKE CONTROL ASYNCHRONOUS
                  FERROR CODE RETURNED IN REGISTER A.
09E0
                  IE.TC: PROC
09E0 E5
                          PUSH
                                  HL
09E1 210229
                          LK
                                  HL, CPDRB
09E4 CB41
                $
                          BIT
                                  0 • C
09E6 2022 *0AQA$
                          JRNZ
                                 :B4C30
                  TAKE CONTROL SYNCHRONOUSLY
09E8 3607
                          STO
                                  0000_0111B.[HL] :DISABLE DRIVERS
09EA 3A0329
                         LD
                                  A+CCRB
09ED CB97
                $
                         CBIT
                                  2 . A
09EF 320329
                         STO
                                  A.CCRB
09F2 36D7
                         STO
                                  1101_0111B.[HL] :DIRECTION REGISTER
09F4 CBD7
                         SBIT
                                  2 . A
09F6 320329
                         STO
                                  A . C CRB
09F9 3685
                         STO
                                  1000_0101B.[HL] :SET NRFD LOW
09FB 3E19
                                  A, 25
                         LK
09FD CB6E
                $ :B4C10: BIT
                                 5 + [HL]
09FF 2807 ^0A08$
                         JRZ
                                 :B4C20
                                                 DATA VALID HAS DROPPED
0A01 3D
                         DEC
0A02 20F9 ^09FD$
                         JRNZ
                                 :B4C10
                                                 WAIT 100 MICRO-SEC
0A04 3E81
                                 A.1000_0001B
                         LK
                                                 SET DATA VALID TIMEOUT ERROR
0A06 1816 *OA1E$
                         JR
                                 :84C40
0A08 36C5
                 :84C20: STO
                                 1100_01018.[HL] :SET NDAC LOW
OAOA CBE6
                $ :84C30: SBIT
                                 4.[HL]
                                                 SET ATN LOW
                 SET-UP FOR SOURCE HANDSHAKE
OAOC 3A0329
                         LD
                                 A.CCRB
OAOF CB97
                         CBIT
                                 2 , A
0A11 320329
                         STO
                                 A.CCRB
0A14 363F
                         STO
                                 0011_1111B.[HL] ;DIRECTION REGISTER
DA16 CBD7
                         SBIT
OA18 320329
                         STO
                                 A+CCR8
OA18 3612
                                 0001_0010B,[HL] ;CONTROL SIGNAL INITIAL VALUE
                         STO
OAID AF
                         XOR
                                 A
                                                 CLEAR ERROR CODE
OA1E E1
                 :B4C40: POP
                                 HL
OA1F C9
                         RET
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 82
                                                              C:SDROMA .ASM
BMIEEE.ASM - IEEE-488 INTERFACE.
                 :BIGS CALL 5: OUTPUT INTERFACE MESSAGE
                         CAN BE CALLED WHILE IN ANY MODE OR STATE
                         EXITS IN THE SOURCE HANDSHAKE MODE WITH ATN LOW.
                 :MULTI-LINE MESSAGE IN REGISTER C
                 SERROR CODE RETURNED IN REGISTER A
                 IE.OIM: PROC
DAZO
0A20 E5
                         PUSH
                                 HL
                         LK
                                 HL.CPDRB
0A21 210229
                                                 SET ATH LOW
                                 4+[HL]
OA24 CBE6
                         SBIT
               $
                         BIT
                                 0.[HL]
               $
0A26 CB46
                                 IE.SHK
                         JRZ
0A28 2825 *0A4F$
                 SET-UP FOR SOURCE HANDSHAKE
                                 0001_0111B.[HL] :DISABLE DRIVERS
                         STO
0A2A 3617
                                 A.CCRB
                         LD
0A2C 3A0329
                         CBIT
                                 2 • A
OAZF CB97
                         STO
                                 A. CCRB
0A31 320329
                                 0011_1111B . [HL] :DIRECTION REGISTER
                         STO
0A34 363F
                         SBIT
                                 2 • A
0A36 CBD7
                                 A. CCRB
```

FLOAT EXTERNAL DATA BUS

0001_00108.[HL] ; CONTROL SIGNAL INITIAL VALUE

STO

XOR

STO

STO

JR

Α

A.CPDRA

IE.SHK

OA38 320329

0A3C 320029

0A3F 3612 0A41 180C *0A4F\$

OA3B AF

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 83
BMIEEE.ASM - IEEE-488 INTERFACE. C:SDROMA .ASM

BIOS CALL 6: OUTPUT DEVICE MESSAGE

- CAN BE CALLED ONLY WHILE IN THE SOURCE HANDSHAKE MODE
- WITH ATN HIGH OR LOW.
- EXITS IN THE SOURCE HANDSHAKE MODE WITH ATN HIGH.

*MULTI-LINE MESSAGE IN REGISTER C *EDI REQUEST IN REGISTER B

SERROR CODE RETURNED IN REGISTER A

0A43					
0A43	E5	IE.ODM:			
0844			PUSH	HL	
0A44 0A47	210229 CBA6 \$		LK	HL, CPDRB	
			CBIT	4. [HL]	SET ATN HIGH
0A49	C840 \$		BIT	0 • B	CHECK IF EDI REQUESTED
OA4B	2802 ^0A4F\$		JRZ	IE.SHK	
OA4D	CBDE \$		SBIT	3,[HL]	
				HANDSHAKE	
OA4F		IE.SHK:		5, [HL]	•
0A51	2018 ^0A6E\$		JRNZ	:86C50	DAC TIMEOUT RE-ENTRY
0A53	79		MOV	A+C	PLACE DATA ON BUS
0A54	320029		STO	A+CPDRA	
0A57			LK	A+10	
0A59		:86C20:		7. [HL]	
0A5B	2807 ^0A64\$		JR Z	: B6C30	READY FOR DATA
OA5D	3D		DEC	Α	
0A5E	20F9 ^0A59\$		JRNZ	:B6C20	WAIT FOR 100 MICRO-SEC
0A60	3E82		LK	A,1000_0010B	SET RFD TIMEOUT ERROR
0A62	181F ^0A83\$		JR	:86C80	
		÷			
0A64		:B6C30:	BIT	6.[HL]	
0A66	2004 ^0A6C\$		JRNZ	:B6C40	DATA ACCEPTED LOW
0A68			LK	A+1000_00018	SET DEVICE NOT PRESENT ERROR
OA6A	1817 ^OA83\$		JR	:B6C80	
OA6C		:B6C40:	SBIT	5+[HL]	SET DAV LOW
OA6E		:B6C50:	ŁK	A+255	
0A70		:B6C60:	BIT	6,[HL]	
0A72			JRZ	: B6C70	DATA ACCEPTED
0A74	3 D		DEC	A	
0A75	20F9 ^0A70\$		JR NZ	:B6C60	WAIT 1000 MICRO-SEC
0A77	3E84	!	LK	A+1000_0100B	SET DAC TIMEOUT ERROR
0A79	1808 ^0A83\$		JR	:86C80	
OA7B	CBAE S	:B6C70:	CBIT	5, [HL]	SET DAV HIGH
OA7D	CB9E \$		CBIT	3,[HL]	SET EDI HIGH
OA7F	AF		XOR	A	FREMOVE DATA FROM BUS
08A0	320029	:	STO	A+CPDRA	
0A83	E1	:B6C80: 1	POP	HL	
0A84	C9	5	RET		

```
SURCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 84
                                                               C:SDROMA .ASM
BMIEEE.ASM - IEEE-488 INTERFACE.
                  1810S CALL 7: INPUT DEVICE MESSAGE
                          CAN BE CALLED WHILE IN ANY MODE OR STATE
                          EXITS IN THE ACCEPTOR HANDSHAKE MODE WITH ATN HIGH.
                  DEVICE MESSAGE RETURNED IN BOTH REGISTERS A AND H
                  :ERROR CODE RETURNED IN REGISTER L
0A85
                  IE.IDM: PROC
                          PUSH
                                  DE
0A85 D5
                                  DE.HL
                                                  SAVE RE-ENTRY DATA
                          EΧ
OA86 EB
                                  HL.CPDRB
                          ŁK
0A87
      210229
                                  0.[HL]
                          BIT
DASA CB46
                                  :B7C10
                          JRNZ
DASC 2014 *0448$
                  SET-UP FOR ACCEPTOR HANDSHAKE
                                  0001_0111B+[HL] ;DISABLE DRIVERS
                          STO
OA8E 3617
                          LD
                                  A.CCRB
0A90 3A0329
                          CBIT
0A93 CB97
                                  2 • A
0A95 320329
                          STO
                                  A.CCRB
                                  1101_0111B+[HL] :DIRECTION REGISTER
0A98
     3607
                          STO
OA9A
      CBD7
                          SBIT
                                  2 , A
                          STO
                                  A.CCRB
OA9C
      320329
                                                  FLOAT INTERNAL DATA BUS
                          LK
                                  A,1111_11118
OA9F
      3EFF
                          STO
                                  A+CPDRA
OAA1 320029
                                  0101_0101B,[HL] ;CONTROL SIGNALS INITIAL VALUE
                          STO
OAA4 3655
                          STO
                                  0100_01018.[HL] ;SET ATN HIGH
DAA6 3645
                  *PERFORM ACCEPTOR HANDSHAKE
                                  6.[HL]
DAA8 CB76
                $ :B7C10: BIT
                                                   DATA INVALID TIMEOUT ERROR RE-ENTRY
                                  :B7C50
                          JR Z
DAAA
     2820 ^OACC$
                                                   SET NRFD HIGH
                                  7.[HL]
                          CBIT
DAAC
      CBBE
                                  A-10
OAAE
      3E0A
                          LK
                $ :B7C20: BIT
                                  5,[HL]
OABO
      CB6E
                                                   :DATA VALID
0AB2 2008 *OABC$
                           JRNZ
                                  :87C30
0AB4 3D
                           DEC
                                                   :WAIT 100 MICRO-SEC
                           JRNZ
                                  :B7C20
0AB5 20F9 ^0AB0$
                                                   SET DATA VALID TIMEOUT ERROR
                                  DE+1000_0010B
                          LK
OAB7 118200
OABA 1821 ^OADD$
                           JR
                                   :B7C80
                $ :87C30: SBIT
                                  7, [HL]
                                                   SET NRFD LOW
     CBFE
OABC
                                  A+CPDRA
                                                   READ DATA
                          LD
OABE
      340029
                           MOV
                                   D,A
OAC1 57
                                                   READ EOI
                           LK
                                   E.0
OAC2 1E00
                                   3,[HL]
                           BIT
OAC4 CB5E
                                   :B7C40
OAC6 2802 *OACA$
                           JRZ
                           LK
                                   E • 1
OAC8 1E01
                                                   SET NDAC HIGH
                                   6.[HL]
                $ :87C40: CBIT
 OACA CBB6
                   :B7C50: LK
                                   A,255
 OACC 3EFF
                                   5.[HL]
DACE CB6E
                $ :B7C60: SIT
                                                   :DATA VALID DROPPED
                                   :B7C70
0A00 2809 *0ADB$
                           JRZ
 OAD2 3D
                           DEC
                                                   :WAIT 1000 MICRO-SEC
      20F9 ^OACES
                           JRNZ
                                   :B7C60
 OAD3
                                                   SET DATA INVALID TIMEOUT ERROR
                           SBIT
                                   2 , E
 OAD5 CBD3
                $
                           SBIT
                                   7,E
                5
      CBFB
 OAD7
                                   :B7C80
0AD9 1802 ^OADD$
                           JR
```

6.[HL]

DE.HL

\$:B7C70: SBIT

:87C80: EX

OADB CBF6

OADD E8

SET NDAC LOW

MOVE RESULTS TO REGISTERS A AND HL

SDRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 85
BMIEEE.ASM - IEEE-488 INTERFACE. C:SDROMA .ASM

OADE	70	MOV	A.H
OADF	01	POP	DE
OAEO	C 9	RET	

		SORCIM 809x Assembler ver	3.5E	<:/55/7= 59:92 Page 86
RMIFEF.ASM	_	IFFF-488 INTERFACE.		C:SDROMA .ASM

BIOS CALL 8: PARALLEL POLL

- ; CAN BE CALLED ONLY WHILE IN THE SOURCE HANDSHAKE MODE
- WITH ATN HIGH OR LOW.
- ; EXITS IN THE SOURCE HANDSHAKE MODE WITH ATN LOW.

PARALLEL POLL VALUE RETURNED IN A.

OAE1		IE.PP:	PROC		
OAEL	E5		PUSH	HL	
OAEZ	210029		LK	HL+CPDRA	
OAE5	3E1B		LK	A,0001_1011B	FORM PARALLEL POLL
OAE7	320229		STO	A • CPDR B	
OAEA	36FF		STO	1111_11118.[HL]	FLOAT INTERNAL DATA BUS
OAEC	7E		LD	A,[HL]	READ PARALLEL POLL DATA
OAED	3600		STO	0.[HL]	RE-STORE SOURCE HANDSHAKE MODE
OAEF	210229		LK	HL . CPDRB	
OAF2	3612		STO	0001_0010B+[HL]	
OAF4	El		PCP	HL	
OAF5	C 9		RET		

s10 -	Serial 1/0			Assembler	ver	3.5E	<:/55/7=	59:92 Page 87 C:SDROMA .ASM
OAF6		#[5] SIRST:						
		iMaster :ENTRY	reset	SIO				
		; C	=	\$1.516	or SI	•\$64 fo	r 1200/30	0 baud
		:EXIT						
OAF6			PROC					
OAF6	3E57		LDK	A+SI-MR	ST			
OAF8	32002A		STO	A+H+SCT	₹L	∓ma	ster rese	t
OAFB	79		MOV	A • C		•		
OAFC	32C1EF		STO	A . ACIAD		; la	st-comman	d cell
CAFF	32002A		STO	A+H-SCT	۲L	;se	lect SIO	
0802	C 9		RET					

				ssembler ve	r 3.5E	<:/55/7=	59:92 Page 88
510 -	Serial I/O	Processo	rs.				C:SDROMA .ASM
0803		READER:					
		Input	one byte	from reade	r port		
		: ENTRY					
		None					
		:EXIT					
		; C	=	character	read		
0803			PROC				
0803	CD280B		CALL	ACISTAT			
0806	E601		ANI	SI.RRDY			
0808	28F9 ^0803\$		JRZ	READER	; i	f not read	y t
080A	AF		XRA	A			
0808	32DAEF		STO	A • SERFLG	: \$	ET FLAG	
080E	3A012A		LD	A+H-SREC	i q	et data	
0811	4F		MOV	C+A	_	= A	
0812	C 9		RET				

0B1B C9

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 89
SIO - Serial I/O Processors.
                                                             C:SDROMA .ASM
0813
                 SLST:
                 idet list device status
                 SENTRY
                 :NONE
                 :EXIT
                                 O. IF NOT READY
                 ; A
                         =
                 ; A
                                 OFFH IF READY
                         =
                 ;ZBIT =
                                 SET IF NOT READY FOR CUTPUT
0813
0813 CD280B
                         PR OC
                         CALL
                                 ACISTAT
0816 E602
                         ANI
                                 SI.TRDY
0B18 C8
                         RZ
0819 F6FF
                         OR I
                                 TRUE
```

		SORCIA	4 808 x	Assembler ve	r 3.5E <:/55/7= 59:92 Page 9
S10 -	Serial I/O	Processor	· S •		C:SDROMA .AS
OBIC		LIST:			
		;Output ;ENTRY	one by	yte to list p	ort
		\$ C	=	character	to output
		;EXIT			
		: NONE			
OBIC			PR DC		
OBIC	C 5		PUSH	BC	SAVE CHARACTER
081D	CD130B	:1:	CALL	SLST	GET STATUS
0820	28FB ^0B1D\$		JRZ	:1	
0822	C1		POP	вс	RESTORE CHARACTER
0823	79		MOV	A • C	
0B24	32012A		STO	A.H.SXMT	send chr
0827	C 9		RET		

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 91
SIO - Serial I/O Processors.
                                                            C:SDROMA .ASM
0828
                 ACISTAT:
                 RETURN STATUS OF THE SERIAL PORT
                 ENTRY
                 NONE
                 :EXIT
                 : A
                                STATUS REG
0828
                         PROC
0B28 3A012C
                         LD
                                A+H+VIO+1
0828 OF
                         RRC
                                Α
082C E620
                         ANI
                                20h
OBZE 4F
                         VOM
                                C . A
0B2F 3A002A
                         LD
                                A.H.SSTS
0832 E6DF
                         ANI
                                ODFh
0834 81
                         OR A
                                С
0B35 4F
                         VOM
                                C • A
OB36 3ADAEF
                         LD
                                A+SERFLG
0B39 E601
                         ANI
                                01
083B B1
                        DRA
OB3C 32DAEF
                        STO
                                A. SERFLG
083F C9
                        RET
```

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 92 Disk I/O routines. C:SDROMA .ASM

*[6]

= 000A = EFD0	NRETRY: = SAVTYP =	10 OEFDOH	NUMBER OF RETRYS MUST BE AT LEAST 2 ;DISK TYPE
= EFD1	RDT WRTS:	= OEFD1H	NUMBER OF SECTORS TO READ OR WRITE
= EFD2	CCPADR: =	0EFD2H	This location is assigned in BIOS and filled in by loader in ROM
= FF04	KFYLST: =	DEFD4H	KEY LIST GOES HERE

DISK EQUA	TES	SORCIM 808× A	ssembler ver 3.	5E <:/55/7= 59:92 C:SDRC	Page 93 MA •ASM
= 0	010 MSE	C8: =	010H	#MULTI SECTOR BIT	
= 0	000 D.R	RES: =	000н	:RESTORE	
		SEK: =	010H	SEEK	
		TP: =	020H	STEP	
		TPI: =	040H	STEP IN	
		TPO: =	060H	STEP OUT	
= 0	080 D.R	DS: =	080H	READ SECTOR	
= 0	0A0 D.W	RTS: =	DAOH	*WRITE SECTOR	
= 0	0C0 D.R	DA: =	ОСОН	READ ADDRESS	
= 0	0E0 D.R	DT: =	DEOH	READ TRACK	
= 0	OFO D.W	RTT: =	OFOH	WRITE TRACK	
= 0	0D0 D.F	INT: =	ODOH	FORCE INTERRUPT	
	; DI	SK REGISTERS			
= 2	100 D-C	MDR: =	H. FDC	DISK COMMAND REG	(WRITE)
= 2		TSR: =	H.FDC	STATUS REG	(READ)
= 2		RKR: =	D.CMDR+1	TRACK REG	(KEAD)
= 2		ECR: =	D.CMDR+2	SECTOR REG	
= 2	103 D.D	ATR: =	D.CMDR+3	DATA REG	(R/W)
	;ST	ATUS DEFINITI	IONS		
= 0	000 BS.	BSY: =	0	;BUSY	
= 0		BSY: =	1 SHL BS.BSY		
= 00	001 85.	DRC: =	1		
= 0		INX: =	1 SHL BS.DRQ	SINDEX MARK DETECTE	n
= 00		DRQ: =	DS.INX	OR IS FULL ON READ	-
= 00	002 BS.	TK0: =	2	TRACK ZERO	
= 00		TK0: =	1 SHL BS.TKO	TIMER ZERO	
= 00		LSD: =	DS.TKO	LOST DATA	٠
= 08	008 DS.	CRC: =	08H	CRC ERROR IN ID FI	ELD
= 00	004 BS.	SEK: =	4		
= 00	010 DS.	SEK: =	1 SHL BS.SEK	SEEK ERROR	
= 00	D10 DS.	RNF: =	DS.SEK	RECORD NOT FOUND	
= 00	020 DS.	HDL: =	20H	HEAD LOADED	
= 00		WTF: =	DS.HDL	WRITE FAULT	
= 00	340 05-	WTP: =	40H	:WRITE PROTECTED	
= 00		NRY: =	80H	CRIVE NOT READY	
	:DI:	SK TIMING COU	INTS		
= 00	014 D.D	E L: =	20	DELAY AFTER FUNCTION	אכ

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 94 MACRO DEFINITIONS C:SDRDMA .ASM

ENAROM	MACRO DI OUT LDK STO EI ENDM	O A+O A+ROMRAM
DISROM	MACRO DI OUT LDK STO EI ENDM	1 A•1 A•ROMRAM
PUSHAL	MACRO PUSH PUSH PUSH ENDM	BC DE HL
POPALL	MACRO POP POP POP ENDM	HL DE BC

NEW E	ISK DRIVERS	SORCI	M 808x	Assembler ver	3.5E <:/55/7=	59:92 Page 95 C:SDROMA .ASM
0840		RDRV:				
		RESET	DRIVE			
		SENTRY				
		NONE				
		;EXIT				
		;CBIT	=	SET IF ERROR		
0B40			PROC			
0840	3EOA		LDK	A+NRETRY		
0842	3205EF	:LOOP:	STO	A.RTRY		
QB45	CDA40D		CALL	SELDRV	SELECT DRIV	F
0848	3804 ^0B4E\$		JRC	:1		_
084A	CDF70B		CALL	HOME	HOME DRIVE	
084D	DO		RNC		:IF G000	
084E	3A05EF	:1:	LD	A.RTRY		
0851	3D		DEC	A		
0852	FE01		CMP	1		
0854	20EC ^0B42\$		JR NZ	:L00P		
0856	3E01		LDK	A + 1	A = OFFH FO	R CBIOS
0858	B7		DRA	A		
0859	37		STC		INDICATE ER	ROR
085A	C 9		RET			· · - ·

NEW DISK DRIVERS	SORCIA	1 808x As	ssembler ve	r 3.5E <:/55/7= 59:9Z Page 96 C:SDROMA .ASM
0858	RSEC: :READ SE :*NOTE*			
	; ;ENTRY	No retr	ies are per	formed at this level
	; 8	=	NUMBER OF	SECTORS
	:EXIT			
	;HL	=		DDRESS PLUS ONE IF GOOD TRANSFER
	; ZBIT	=	RESET IF E	
	; A	=	NONZERO IF	
		RTRY	= 1	IF ERROR(SO OLD CBIOS DOESN'T DO RETRYS)
085B		PROC		
0858 FD21750C \$		LDK	IY,READ	
085F CD8408		CALL	R_WSEC	
0862 3802 40866\$		JRC	:1	; IF ERROR
0864 AF		XRA	A	SINDICATE GOOD TO CBIOS
0865 C9		RET		
0866 3E01	:1:	LDK	A+1	
0868 3205EF		STD	A.RTRY	SET RETRY TO 1 FOR OLD CBIOS
0B6B B7		DR A	A	RESET ZERO FLAG TO INDICATE ERROR
086C C9		RET		

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page. 97
NEW DISK DRIVERS
                                                             C:SDROMA .ASM
086D
                  WSEC:
                  WRITE A SECTOR
                  **NOTE*
                         No retries are performed at this level
                  FENTRY
                  ₽B
                                 NUMBER OF SECTORS
                  ;EXIT
                  : HL
                                 LAST DMA ADDRESS PLUS ONE IF GOOD TRANSFER
                  :ZBIT
                        =
                                 RESET IF ERROR
                  ; A
                         =
                                 NONZERO IF ERROR
                         RTRY
                                        1 IF ERROR(SO OLD CBIOS DOESN'T DO RETRYS)
086D
                         PROC
086D FD217DOC $
                         LDK
                                 IY, WRITE
0871 CD8408
                         CALL
                                 R_WSEC
0874 3802 0878$
                         JRC
                                 :1
                                                 :IF ERROR
0876 AF
                         XR A
                                 Α
                                                 :INDICATE GOOD TO CBIOS
0877 C9
                         RET
0378 3E01
                 :1:
                         LDK
                                 A . 1
087A 3205EF
                         STO
                                 A.RTRY
                                                 SET RETRY TO 1 FOR OLD CBIOS
087D B7
                         ORA
                                 Α
                                                RESET ZERO FLAG TO INDICATE ERROR
087E C9
                         RET
087F C9
                         RET
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 98
                                                              C:SDROMA .ASM
NEW DISK DRIVERS
0880
                 SENDEN:
                  READ THE ADDRESS AND SET CHECK FOR SINGLE DENSITY
                  : ENTRY
                  NONE
                  :EXIT
                                  NONZERO IF ERROR
                  ; A
                                  NUMBER OF SECTORS ON ONE TRACK
                  ; B
                                 RESET IF ERROR
                  ; ZBIT
                          SAVTYP IS SET WITH DENSITY AND SECTOR SIZE
                          PROC
0880
                  ≠CHECK DENSITY
                          DENSITY LOCP(CHECK PRESENT DENSITY FIRST)
                                                  HOME DRIVE JUST ONCE
                          LDK
                                  A . 2
0880 3E02
                                  A.RTRY
                  :RL1:
                         STO
0882 3205EF
                          RETRY LOOP BEFORE AND AFTER HOME
                                                  HALF BEFORE HOME AND HALF AFTER
                                  B.NRETRY/2
                          LDK
0885 0605
                                                  SAVE RETRY COUNT
                                  вс
0887 C5
                         PUSH
                  :RL2:
                                                  :SELECT DRIVE
                                  SELDRY
                                                  IND ERROR CHECKING FOR SELDRY BECAUSE NO ERRORS ARE RETURNED AT THIS TIME
OBB8 CDA40D
                          CALL
                          JRC
                                  ?
                                                  :READ ADDRESS
                          CALL
                                  RADR
OB88 CDECOC
                                                  *RESTORE RETRY
                          PCP
                                  ВC
088E C1
                                                  :IF G00D
088F 3004 ^0895$
                          JRNC
                                  : 1
                                                  RETRY IN THIS DENSITY
                          DJNZ
                                  :RL2
0B91 10F4 ^0B87$
                                                  ; IF ERROR HOME DRIVE AND TRY AGAIN
                          JR
                                  :ERR1
0893 1812 ^08A7$
                  $SET "SAVTYP"
                                                  SECTOR LENTH STATUS BYTE
                                  A.DSTSB+3
                  :1:
                          LD
0895 3AOCEF
                                  0000_0011B
                                                  :0-3
                          ANI
0B98 E603
                                  0000_0001B
                                                  :CHECK FOR 256
                          CPI
089A FE01
                                  :ERRI
089C 2009 *0BA7$
                           JRNZ
                                                  SINGLE DENSITY 256
                                  A,0000_01018
                           LDK
OB9E 3E05
                                  A.SAVTYP
                          STO
OBAO 32DOEF
                                                  SET FOR SINGLE DENSITY
                                  8,10
OBA3 060A
                           LDK
                                                  RESET FLAGS
OBA5 AF
                          XRA
                                  A
                                                  GOOD RETURN
                          RET
OBA6 C9
                  *IF DENSITY ERROR CHANGE DENSITY AND RETRY TO :RL1:
                                  HOME
                                          ;HOME DRIVE
 OBA7 CDF70B
                  :ERR1: CALL
                                  A.RTRY
                           LD
 OBAA 3AO5EF
                           DÉC
 OBAD 3D
                                                  RETRY LOOP
 OBAE 2002 *0882$
                                  :RL1
                           JRNZ
                           LDK
                                  A • 1
 0880 3E01
                                                  :FLAGS TO NONZERO
                           OR A
 0BB2 B7
                                                  :ERROR RETURN
                           RET
 0883 C9
```

03EE 37

:FIN: STC

NEW	DISK DRIVERS	SORC I	M 808x A	kssembler ver 3.	5E <:/55/7= 59:92 Page 99 C:SDROMA .ASM				
0884		R_WSEC: :READ 0 :ENTRY	R WRITE	SEGMENT					
		;B ;1Y	=	NUMBER OF SECTO "READ" ADDR OR	RS TO READ OR WRITE "WRITE" ADDR				
		:EXIT :HL :CBIT	=	LAST DMA ADDRES SET IF ERROR	S PLUS ONE IF GOOD TRANSFER				
0884			PROC						
0884 0886	3E0A 3205EF		LDK STO	A•NRETRY A•RTRY					
0889	C 5	:RLOOP:	PUSH	вс					
088A 0888	C5 FDE5 \$		PUSH PUSH	BC IY					
088D 08C0	CDA40D 2805 ^0BC7\$		CALL JRZ	SELDRY :1	TURN DRIVE ON TIF DRIVE WAS SELECTED DON'T READ ADDRESS				
		SET "D.TRKR" TO HEAD POSITION							
08C2 08C5	CD800B 2022 ^08E9\$		CALL JRNZ	SENDEN :ERR1	:READ ADDRESS AND SET CONTROLLER :STOP				
OBC7 OBCA	CD1A0C 381D ^08E9\$:1:	CALL JRC	SEEK :ERR1	SEEK TO TRACK				
08CC 08CE 08CF 08D2 08D3	DDE1 \$ C1 210508 E5 DDE9 \$		POP POP LDK PUSH JMP	IX BC HL.:RTRY1 HL [IX]	;ADDRESS TO CALL IN IX ; NUMBER OF SECTORS TO R/W :FOR RETURN :CALL AND RETURN TO :2				
08D5 08D6	C1 D0	:RTRY1:	PCP RNC	ВС	RESTORE NUMBER OF SECTORS TO READ RETURN IF GOOD				
OBD7 OBDA OBDB	2105EF 35 2811 ^03EE\$		LDK DEC JRZ	HL+RTRY [HL] :FIN	:NO MORE RETRYS				
08DD 08DE 08E0	7E FE09 20D7 ^0889\$		LD CMP JRNZ	A+[HL] NRETRY-1 :RLOOP	GET NUMBER OF RETRY				
08E2 08E5	CD800B 2007 *08EE\$		CALL JRNZ	SENDEN :FIN	CHECK TRACK ON THE SECOND RETRY				
08E7	18D0 ^08B9\$		JR	:RLOOP	:LOSP				
03E9 0BEB	FDE1 \$ C1	:ERR1:	POP POP	1 Y 8C	; IF ERROR SEFORE READ OR WRITE				
OBEC OBED	C1 C9		POP RET	вс					

SCRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 100 C:SDROMA .ASM

NEW DISK DRIVERS

OBEF C9

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 101 C:SDROMA .ASM

NEW DISK DRIVERS

08F0

SCTRKR:

SET CONTROLER TRACK REGESTER
D.TRKR <= SAYTRK

SUSED IN FORMATING WHEN YOU DON'T KNOW WHERE THE HEAD IS

:ENTRY

SAVTRK =

TRACK

:EXIT

D.TRKR =

SAVTRK

08F0 PROC

08F0 3A15EF LD A. SAVTRK 08F3 320121 08F6 C9 STO A.D.TRKR

0C18 37 0C19 C9

SORCIM	808	Assembler	ver	3.58	<:/55/7=	59:92	Page	102
30//01//	000%	A330 (III)				C:SDR	OMA .	.ASM

NEW DISK DR	•	08x Assembler ver 3.5	C:SDROMA •ASM
08F7	HOME: :HOME DISK :DRIVE IS :If "SEKDE :ENTRY :SDISK =	ALDEADY SELECTED AND R	EADY set this proc will check for seek and crc errors
		OKIVE	
	;EXIT ;CBIT =	SET IF ERROR	
08F7 08F7 3A13E 08FA E607 08FC 3213E	F LD	11 0000_01118	SEEK DELAY SPEAD & VERIFY BITS ONLY
08FF 3E00 0C01 CD760 0C04 D8	DD CA	ALL PSEKC	PERFORM HOME COMMAND FIF ERROR
0C05 3A002 0C08 C857 0C0A 280C	\$ B1 ^0C18\$ JR	IT 2+A	IF NOT ON TRACK ZERO
OCOC 3A13I OCOF E604 OC11 C8	EF LE AN RI	VI 0000_0100B	:VERIFY? ;NO VERIFY GOOD RETURN
0C12 3A000 0C15 E618 0C17 C8		NI 0001_1000B	TEST SEEK AND CRC

; IF ERROR

STC RET

:1:

NEW DISK DRIVERS	SDRCIM 808x /	Assembler ver 3.	5E <:/55/7= 59:92 Page 103 C:SDROMA •ASM
OCIA		DEFINED BY SAVTI NTED AND VERIFIED DESIRED TRACK	
	CBIT = IF NO E	SET IF ERROR ERROR CONTROLER 1	RACK = SAVTRK
OC1A OC1A 210121 OC1D 3A15EF OC20 8E OC21 C8 OC22 320321 OC25 3E10 OC27 CD760D OC2A D8 OC28 3A13EF OC2E E604 OC30 C8	CMP RZ STO	A+SAVTRK [HL]	RETURN SET TRACK WANTED PERFORM SEEK COMMAND IF ERROR VERIFY? NO VERIFY GOOD RETURN
0C31 3A0021 0C34 E618 0C36 C8	LD An I RZ	A+D+STSR 0001_1000B	TEST SEEK AND CRC
0C37 37 0C38 C9	STC RET		; IF ERROR

NEW DISK DRIVERS	SORCIM 808	x Assembler ver	3.5E <:/55/7= 59:92 Page 104 C:SDROMA .ASM
0C39	STEP: :STEP ONE TRACK :SAVTRK IS NOT USED IN THIS PROC :CONTROLER TRK REG IS UPDATED :VERIFY IS PERFORMED :ENTRY :NONE		
	:EXIT :CBIT = : IF N	SET IF ERROR O ERROR CONTROLE	R TRACK = TRACK +/- 1
0C39 0C39 3E20 0C3B CD760D 0C3E D8		A+D+STP PSEKC	PERFORM STEP COMMAND
OC3F 3A13EF OC42 E604 OC44 C8	LD Ani Rz	A.SEKDEL 0000_01008	:VERIFY? :NO VERIFY GOOD RETURN
0C45 3A0021 0C48 E618 0C4A C8	LD Ani RZ	A.D.STSR 0001_10008	:TEST SEEK AND CRC :GOOD RETURN
0C4B 37 0C4C C9	STC RET		; IF ERROR

NEW [DISK DRIVERS	SORCI	M 808x	Assembler ver 3	•5E <:/55/7= 59:92 Page 105 C:SDROMA •ASM
0C4D			IS NOT	RACK USED IN THIS PR REG IS UPDATED	oc
		EXIT CBIT		SET IF ERROR ERROR CONTROLER	TRACK = TRACK + 1
0C4D			PROC		
0C4D	3E40		LDK	A.D.STPI	
0C4F	CD760D		CALL	PSEKC	PERFORM STEP-IN COMMAND
0C52	D8		RC		; IF ERROR
0053	3A13EF		LD	A.SEKDEL	
0C56	E604		ANI	0000_01008	;VERIFY?
0C58	C 8		RZ	_	INO VERIFY GOOD RETURN
0059	3A0021		LD	A+D+STSR	
0C5C	E618		ANI	0001_1000B	TEST SEEK AND CRC
0C5E	C 8		RZ	_	GOOD RETURN
0C5F			STC		:IF ERROR
0060	C 9		RET		

NEW D	ISK DRIVERS	SORCII	A x808 P	ssembler ver	3.5E <:/55/7=	59:92 Page 106 C:SDROMA .ASM
0C61		SAVTRK	JT ONE T	USED IN THIS		
		EXIT				
			=	SET IF ERRO	OR .	
		:	IF NO E	RROR CONTROL	ER TRACK = TRACK	- 1
0C61			PR OC			
0061	3E60		LDK	A.D.STPO		
0C63	CD760D		CALL	PSEKC	:PERFORM ST	EP-OUT COMMAND
0066	D8		RC		; IF ERROR	
0067	3A13EF		LD	A+SEKDEL		
0C6A	E604		ANI	0000_0100B	;VERIFY?	
0060	C 8		RZ	_	;NO VERIFY	GOOD RETURN
0C6D	3A0021		LO	A+D+STSR		
0070	E618		ANI	0001_10008	TEST SEEK	AND CRC
0C72	C 8		RZ	·	GOOD RETUR	N
0C73	37		STC		:IF ERROR	
OC74	C9		RET			

SORCIM 808x As:	sembler ver	3.5E	<:/55/7=	59:92	Page 107
-----------------	-------------	------	----------	-------	----------

NEW DISK DRIVERS

C:SDROMA .ASM

OC75

READ: ;ENTRY

FB = NUMB OF SECTORS TO READ

:EXIT

;HL =

LAST DMA ADDRESS PLUS ONE IF GOOD TRANSFER

CBIT = SET IF ERROR

0675

PROC

0C75 3E80 0C77 32D1EF 0C7A C3820C LDK A.D.RDS

STO JMP A+RDT_WRTS
RD_WRT

JMP AND RETURN TO CALLING PROC

NEW DISK DRIVERS	SORCIM	808x	Assembler ver 3.5E <:/55/7= 59:92 Page 108 C:SDROMA .ASM
0C7D	WRITE: :ENTRY :B	=	NUMB OF SECTORS TO WRITE
	7112	=	LAST DMA ADDRESS PLUS ONE IF GOOD TRANSFER SET IF ERROR
OC 7D		PR OC	
OC7D 3EA0 OC7F 32D1EF		LDK STO	A+D+WRTS A+RDT_WRTS
	;	JMP	RD_WRT ;FALLS THROUGH TO RD_WRT

NEW	DISK DRIVERS	SORC	IM 808x	Assembler ver	3.5E <:/55/7= 59:92 Page 109 C:SDROMA .ASM
0C82		RD_WRT TREAD TENTRY	OR WRITE		
		; B	= :RDT_W		DRS TO READ OR WRITE D+RDS OR D+WRTS
		:EXIT	=	LAST DMA ADDR	ESS PLUS ONE IF GOOD TRANSFER
		;CBIT	=	SET IF ERROR	
0082			PROC		
		SET S	ECTOR RE	G	
0C82 0C85			LD STO	A.SAVSEC A.D.SECR	
		SET DE	TO NUM	BER OF BYTES IN	ONE SECTOR
0088	C 5		PUSH	8C	SAVE NUMBER OF SECTORS TO READ OR WRITE
0089			LDK	HL +128	
0C8C	3ADOEF CB3F		LD SRL	A.SAVTYP A	DISK TYPE DUMP TWO BITS
0091		.	SRL	Ä	DOWL ING DI12
0093			ANI	0000_00118	SIZE ONLY
0C95 0C96	B7 2804 ^0C9C	.	ORA JRZ	A ∶ 2	SET FLAGS FIF 128
0098	47		MOV	B+ A	
0C99 0C9A	29 10FD ^0C999	:8LOOP:	ADD DJNZ	HL,HL :BLOOP	SHIFT LEFT ONE BIT
0090	EΒ	:2:	EX	DE . HL	:DE=HL
0C 9D 0C 9E	C1 C5		POP PUSH	BC BC	RESTORE NUMBER OF SECTORS TO READ OR WRITE
		GET CD	NA CNAMM	ID CHECK FOR MUL	
0C9F	78		MOV		
OCAO	0E00		LDK	A+B C+0	GET NUMBER OF SECTORS MAKE NONMULTI-SECTOR
OCA2	FE02		CMP	2	THAKE NOMPOLIT-SECTOR
OCA4	3802 ^OCA8\$		JRC	:1	IF LESS THAN TWO SECTORS
0C A6	0E10		LDK	C+10H	#MAKE MULTI-SECTOR
OCAB OCAB	3AD1EF B1	:1:	LD OR	A+RDT_WRTS C	;GET D⊸RDS OR D∙WRTS ;MAKE MULTI-SECTOR OR NONMULTI-SECTOR
		SET HL	TC NUMB	ER OF BYTES TO	TRANSFER
OCAC	210000		LDK	HL,0	
OCAF	19	:LOCP:	ADD	HL.DE	
0080	10FD AOCAFS		DUNZ	:L00P	
0082	E5		PUSH	HL	SAVE LENTH
		GIVE C	DMMAND		
0C33 0C84	CD8400		DI CALL	FOSK	

NEW D	ISK DRIVERS	SORCIA	4 808x As	ssembler ver 3.	5E <:/55/7= 59:92
0C87 0C88	C1 3003 ^OCBD\$		POP JRNC	BC:7	RESTORE LENTH FIF GOOD
OCBA OCBB	D1		POP EI	DE	RESTORE STACK
OCBC	C 9		RET		FERROR RETURN
		:DO DMA			
OC BD	2A OFEF	:7:	LD	HL . DMADR	;HL = DMA ADDRESS
0CC0 0CC3	11010C D5		LDK PUSH	DE+:6 DE	FOR RETURN
	3AD1EF FE80		LD CMP	A+RDT_WRTS D+RDS	GET COMMAND
	2003 AOCCES		JRNZ	:5	; IF WRITE
	C30A0E C3200E	:5:	JMP JMP	DMARD DMAWRT	READ DMA RETURNS TO =6
		CHECK	FOR BUSY	AND RESET	
0CD1		:6:	LD	A. [DE]	GET STATUS
	CB47 \$		BIT POP	O+A BC	RESTORE NUMBER OF SECTORS
0CD4	280E ^0CE5\$		JRZ	:4	FIF NOT BUSY
0007	05		DEC	В	SUBTRACK ONE FROM THE NUMBER OF SECTORS AND SET THE ZERO FLAG
	2005 *OCDF\$		JRNZ	:A1	; IF MORE THAN ONE, FORCE INTERUPT
OCDA OCDD	CDE60D 1803 ^OCE2\$		CALL JR	WBUSY :A2	; IF NON MULTI-SECTOR R/W WAIT FOR BUSY TO DROP
				F00 THT	ACTEVO BUCA
	CD640D 3A0021	:A1: :A2:	CALL LD	FORINT A.D.STSR	CLEAR BUSY GET STATUS
UCLZ	JAGUET			H,000.0.	
		*CHECK	FOR ERRO	RS	
	E65C 2801 ^OCEA\$:4:	AN I JR Z	0101_1100B :3	;TEST write protect, rnf, crc, and lost data ;IF GOOD
		NOTE ; ;states	If this	was a mult-sect e we left the ch	for function their will not be a Record Not Found error, as the manual lip before it got to the next sector to find it wasn't there.
OCE9	37		STC		; IF ERROR RECORD CONTROLER REGESTERS
OCEA OCEB	C 9	:3:	EI RET		FRETURN

```
NEW DISK DRIVERS
                                                               C: SDROMA .ASM
 OCEC
                   RADR:
                   Read Address info.
                   READS SIX BYTES INTO "DSTSB"
                   SENTRY
                   NONE
                   :EXIT
                                  OFFH IF TIME OUT ERROR
                   ; A
                   : C81T =
                                  SET IF ERROR
                  :D.TRKR =
                                  HEAD POSITION
                  ≉NOTE*
                          SETS TRACK REG IN CONTROLER IF GOOD
OCEC
                          PROC
OCEC 3ECO
                          LDK
                                  A.D.RDA
OCEE
                          DI
OCEF CD840D
                          CALL
                                  FDSK
                                                  function disk
OCF2 3830 ^0D31$
                          JRC
                                  : 1
                  SWAIT FOR FIRST DRQ OR TIME OUT
                          SET REGESTERS FOR DMA TRANSFER
0CF4 010600
                                  BC , 6
                                                  SIX BYTES TO READ
OCF7 2109EF
                          LDK
                                  HL . DSTSB
                                                  FBA FOR DMA
                          ; WAIT FOR 1/4 OF A TRACK(60MS) OR DRQ
OCFA 110811
                          LDK
                                  DE+4363
OCFD 3A0021
                  :L00P:
                         LD
                                  A.D.STSR
                                                  :(13) GET STATUS
0000 1F
                          RAR
                                                  ;(4)
0D01 1F
                          RAR
                                                  ;(4)
0D02 DA120D
                          JC
                                  :3
                                                  :(10) GOT DRQ
0005 18
                          DEC
                                  DE
                                                  ;(6)
0D06 7A
                          MOV
                                  A • D
                                                  ; (4)
ODO7 83
                          CRA
                                  Ε
                                                  ;(4)
ODO8 C2FDOC
                          JNZ
                                  :L00P
                                                  ;(10)
                          :INDICATE TIME CUT ERROR
ODOB CD640D
                          CALL
                                 FURINT
                                                  ;CLEAR BUSY
ODOE 3EFF
                          LDK
                                  A+OFFH
                                                  :A=OFFH
0010 181E ^0030s
                                  : 2
                                                  :INDICATE A TIME OUT ERROR
                          TRANSFER FIRST BYTE AND CALL DMARD FOR LAST FIVE BYTES
OD12 3A0321
                  :3:
                          LD
                                 A.D.DATR
                                                  (13) GET BYTE
0015 77
                          STO
                                 A,[HL]
                                                 :(7) STORE BYTE
0016 23
                          INC
                                 HL
                                                 :(6)
0017 08
                          DEC
                                 вc
                                                 :(6)
OD18 CDOADE
                          CALL
                                 DMARD
                                                 (17) CALL DMARD
                  RETURN FROM DMARD AND WAIT FOR BUSY TO BE RESET
0018 CDE600
                         CALL
                                 WBUSY
OD1E 3811 ^0031$
                                                 :IF TIME OUT ERROR
                          JRC
                                 : 1
OD20 3A0021
                         LD
                                 A.D.STSR
                                                 GET STATUS
```

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 111

2 112
.ASM

CHECK FOR ERRORS

NEW DISK DRIVERS

		JUILUR I	OK EKKO	N.3	
0D23 0D25	E61C 2009 ^0D30s	:	ANI ANI JRNZ	0001_10008 0001_11008 :2	TEST RNF AND CRC TEST RNF, CRC AND DATA LOST FIF ERROR
		SET TR	ACK REGE	STER	
OD27 OD2A OD2D OD2E	3A0221 320121 AF 1801 ^0D31\$		LD STO XRA JR	A,D.SECR A,D.TRKR A:1	GET TRACK SET TRACK RESET CARRY
0030	37	:2:	STC		SET CBIT
0D31 0D32	С9	:1:	EI RET		

NEW DI	SK DRIVERS	SORCI	M 803x A	ssembler ver 3.	•5E <:/55/7=	59:92 Page 113 C:SDROMA .ASM
0033		READTRK READ O		FROM THE DRIVE		
		DMADR	=	FWA OF BUFFER		
		EXIT				
		:CBIT	z .	SET IF ERROR		
0033			PROC			
OD33	3EE0		LDK	A+D+RDT		
0D35			DI			
	CD840D		CALL	FDSK		
0039	380C ^0D47\$		JRC	:1	IF ERROR	
		DO DMA				
0D3B 0)1FFFF		LDK	BC.OFFFFH	FOR ROM 1.	2
0D3E 2	2A OF EF		LD	HL + DMADR	71 OK ((S)) 18	•
0041 0	DOADE		CALL	DMARD	IN ROM	
0D44			ΕI			
0045 A	\F		XRA	A		
0046 0	9		RET			
0D47		:1:	EI			
	.9		RET			

NEW D	ISK DRIVERS	SORCI	4 808x /	Assembler	ver	3.5E	<: /55/7=	59:92 P C:SDROM	
0049		FMTTRK:							
		FORMAT ;ENTRY		-					
			; DMADR	=	FWA	OF BUF	FER		
		;EXIT							
0049		CBIT	≖ PROC	SET IF	ERROR	:			
	3EF0		LDK	A.D.WRT	T				
0D48			DI						
	CD840D		CALL						
0 D 4 F	3810 ^00615		JRC	:1		; 1	F ERROR		
		:DO DMA							
0D51	01FFFF		LDK	BC,OFFF	FH ·	: D	EFEAT COU	NTER	
0054	2AOFEF		LD	HL . DMAD	R				
0057	CD200E		CALL	DMAWRT					
		CHECK F	OR ERR	DR					
OD5A	3A0021		LD	A.D.STS	R	; G	ET STATUS		
0050	E644		ANI	0100_01	00В	: 1	EST write	protect.	and data lost
0D5F	2801 ^0D62\$		JRZ	:2		: I	F GOOD		
0061	37	:1:	STC						
0062		:2:	EI						
0D63	r9	=	RET						

NEW D	ISK DRIVERS	SORCI	M 808x /	Assembler ver	3.5E <:/55/7=	59:92 Page 115 C:SDROMA .ASM
0064		FOR INT:				
		INTERR	UPT DIS	K CONTROLLER		
		:ENTRY				
		NONE				
		:EXIT				
		BUSY CL	LEARED.			
0064			PROC			
0D64	F5		PUSH	AF		
0065	C 5		PUSH	вс		
0066	3 E D O		LDK	A.D.FINT		
0068	320021		STO	A . D. CMDR		
		WAIT FO	OR AT LE	EAST 28 MICROS	ECONDS	
0068	87		OR A	Δ	;(4)	
0060	0607		LDK	8•7	:(7)	
006E	10FE ^0D6E\$:WLOCP:	DJNZ	: WLOOP	;(91) = (13#	TIAW (7:
		CHECK F	OR BUSY	r DRGP		
0070	CDE60D		CALL	WBUSY		
0073	C1		PCP	ec		
0074	F1		POP	AF		
0D75	C 9		RET			

8	NEW D	ISK DRIVERS	SCRCIM	808×	Assembler ver	3.5E	<:/55/7=	59:92 Pag C:SDROMA	e 116 "ASM
Copyright ©1982 Osborne Computer Corporation	0076		PSEKC: OR IN SE ENTRY A	KDEL	AND PERFORM SEE SEEK TYPE COM		COMMAND		
Osborne			FEXIT FCBIT = FCOMMAND		SET IF ERROR TO CONTROLER IS	F NO EF	R OR		
ဂ္ဂ	0076		Р	ROC					
큠	0076	47	M	OV	B+A	; B	= A		
듩	0077	3A13EF	L	D	A.SEKDEL				
9	007A	E617	Α	NI	0001_01118			E,VERIFY, &	SPEAD
δ	0D7C	80	a	RA	В		R IN COMM		
g	0070	C0840D	С	ALL	FDSK	;Fl	INCTION D	ISK	
ora	0080	08	R	С		:11	ERROR		
t i	0081	C3E60D	J	MP	WBUSY				

SORCIM	803x	Assembler	ver	3•5E	<:/55/7=	59:92	Page	117	
						C . CDO:	O MA	ACM	

NEW C	DISK DRIVERS	SORCI	M 803x	Assembler ver	3.5E <:/55/7= 59:92 Page 117 C:SDROMA .ASM
0D84		THIS I	S THE O		T WRITES TO THE COMMAND REGESTER OF THE CONTROLER CHIP DELAY OF AT LEAST 28 MICRO SEC. BEFORE READING THE STATUS ON THE CHIP
		; A	=	FUNCTION CODE	
		EXIT A CBIT	=	OFFH IS TIME SET IF ERROR	CUT ERROR
0D84 0D84 0D87	210021 CB46 \$		PROC LDK BIT	HL+D+STSR O+[HL]	STATUS AND COMMAND REGESTER
0089			JRZ	:1	; IF NOT BUSY
8800	CD640D		CALL	FORINT	RESET BUSY
0D8E	77	:1:	STO	A+[HL]	:FUNCTION DRIVE(WRITE COMMAND TO CONTROLER)
		WAIT F	OR AT L	EAST 28 MICROSE	CONDS
ODBF	87		OR A	A	:(4)
0D90 0D92	0607 10FE ^0D92\$:WLDCP:	DJNZ	B.7 :WLOOP	;(7) ;(91) = (13*7) WAIT
		:WAIT F	OR BUSY	TO BE SET	
0D94 0D96			LDK MOV	A•DFFH B•A	;(7) ;(4) 256 LOOPS
0097 0099 0098	C846 \$ 2004 ^0D9F\$ 10FA ^0D97\$		8IT JRNZ DJNZ	BS.BSY.[HL] :3 :LOCP	:BS.BSY :IF CHIP WENT BUSY :IF NOT TIME-DUT
0D9D 0D9E			STC RET		:IF ERROR A=FF AND CBIT = SET
OD9F ODA2 ODA3		:3:	STO XRA RET	A, DACTVE A	;SET DRIVE ACTIVE COUNTER ;RESET CARRY FLAG

NEW D	ISK DRIVERS	SORCIA	1 808x A:	ssembler ver 3.	5E <:/55/7= 59:92 Page 118 C:SDROMA .ASM
ODA4		SELDRY: :SELECT :ENTRY	DRIVE		
			=	DRIVE TO SELECT	
		EXIT			
		:ZBIT	=		S THE SAME AS SDISK
		ZBIT	=		WAS DIFFERENT THAN SDISK
		CBIT	æ	SET IF THERE AR	E NO INDEX PULSES
ODA4			PROC		
ODA4	CDD40D		CALL	SELDEN	SELECT DENSITY
ODA7	3A17EF		LD	A.SDISK	
ODAA	21C7EF		LDK	HL.DSKSWP	DISK DRIVE SWAP CELL
ODAD	ΑE		XOR	(HL)	SWAP A FOR B IF DSKSWP=1
ODAE	E601		AND	1	CAN ONLY BE O OR 1
ODBO			CMP	1	
ODB2			JRNZ	:1	: IF NOT DRIVE 1
0084	3E40		LDK	A+40H	
0DB6	C640	:1:	ADI	40H	
	4F		MOV	C+A	
0089	3A62EF		LD	A.PIABD	
	47		MOV	B+A	GET DRIVE BITS ONLY
ODBD	E6C0		ANI	1100_00008	FOET DRIVE BITS UNET
ODBF ODCO	89 280B ^0DCD\$		CMP JRZ	C : 2	; IF DRIVE ALREADY SELECTED
		SELECT	DRIVE		
0002	COFFOD		CALL	RDSKD	TURN DRIVE ON
ODC5	3EFA		LDK	A+250	
0DC7	CD2D09		CALL	DELAY	WAIT FOR MOTOR SPIN UP
		;	LDK	A+250	
		;	CALL	DELAY	ZND DELAY
ODCA	3E01		LDK	A+1	SINDICATED DRIVE WAS NOT SELECTED
ODCC	87		ORA	A	SET FLAGS
ODCD	216AEF	:2:	LDK	HL.DACTVE	
0000	36FF		STO	OFFH.[HL]	
ODD2	2011		EI		
0DD3	C9		RET		

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 119 NEW DISK DRIVERS C:SDROMA .ASM ODD4 SELDEN: SELECT SINGLE OR DOUBLE DENSITY SENTRY SAVTYP = BIT 0: ; 1 = SINGLE, 0 = DOUBLE FIXE NONE **‡NOTE** Bit O of "PIAAD" : ; set single density reset = double density DDD4 PR OC 0DD4 3A61EF LD A.PIAAD PRESENT VALUE OF PIA REG ODD7 E6FE ANI 1111_1110B CLEAR BIT O 0DD9 4F MOV C . A SET DENSITY BIT ODDA 3ADOEF LD A.SAVTYP GET DISK TYPE INFO ODDD OF RRC CBIT <= BIT 0 ODDE 3002 *ODE25 JR NC : 1 FIF "SAVTYP" BITO IS O ODEO CBC1 SBIT 0 • C SET BIT O OF REG C ODE2 CD6409 :1: CALL OPAD FUNCTION PIA ODE5 C9 RET

```
C:SDROMA .ASM
NEW DISK DRIVERS
                 WBUSY:
ODE6
                 WAIT FOR BUSY TO CLEAR
                 This routine must wait for 2 seconds
                 ;2 seconds is the time it takes for the chip to seek 39 tracks and have five index holes go by.
                 NONE
                 :EXIT
                                 OFFH IF TIME OUT OCCURRED
                 ; A
                         =
                                 SET " " "
                 CBIT
                         =
                         PROC
ODE6
                         LDK
                                 BC,0
ODE6 010000
                                                 ;(13)
                                 A.D.STSR
ODE9 3A0021
                 :LOOP: LD
                                                 ;(8) DS.BSY
                                 0 . A
OCEC CB47
                         BIT
                                                 ;(7) GOOD RETURN
                         JRZ
ODEE 280E *ODFE$
                                 : 1
                         ЕX
                                 [SP].HL
                                                 ;(23) DELAY
ODFO E3
                                                 ;(23) DELAY
                         ΕX
                                 [SP].HL
0DF1 E3
                                                 (6) DELAY
00F2 28
                         DEC
                                 HL
                                                 (6) DELAY
                         INC
                                 HL
0DF3 23
                         DEC
                                 HL
                                                 (6) DELAY
ODF4 2B
                                                 :(6) DELAY
ODF5 23
                         INC
                                 HL
                                                 :(6)
ODF6 OB
                         DEC
                                 ВC
                                                 ;(4)
0DF7 78
                         MOV
                                 A,B
                                                 ;(4)
ODF8 B1
                         OR
                                 С
ODF9 20EE *ODE9$
                         JRNZ
                                 :LOOP
                                                 ;(12) IF NOT TIME-OUT
                                 A.OFFH
                                                 :TIME OUT ERROR
ODFB 3EFF
                         LDK
                                                 RESET BUSY
                                 FORINT
                 ;
                         CALL
                                                 SET ERROR
                         STC
0DFD 37
ODFE C9
                 :1:
                         RET
```

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 120

NEW D	ISK DRIVERS	SORCI	4 808x	Assembler	ver	3.5E	<:/55/		_	e 121	
ODFF		RDSKD:									
UDFF			DRIVE	BY SETING	THE	"PIA"	WITH THE	E VALUE	SPECI	FIED B	ΥC
		ENTRY									. •
		; C	=	DRIVE							
		EXIT									
		: NONE									
ODFF			PROC								
ODFF	3A62EF		LD	A.PIABD							
0E02	E63F		ANI	0011_111	1 B	; G	ET VIC (DEFSET	AND BE	LL	
0E04	81		OR	С							
0E05	4F		MOV	C • A							
0E06	CD7109		CALL	OPBD		;F	UNCTION	PIO-B			
0E09	C 9		RET								

NEW C	DISK DRIVERS				C: SDRO
OEOA		DMARD:			
		TRANSF	ER DATA	FROM CONTROLER	TO MEMORY
		ENTRY			
		;BC	±	BYTES TO TRANS	SFER
		:HL	=	FWA OF BUFFER	
		EXIT			
		:HL	=	NEXT ADDRESS	
		;DE	=	D.STSR	
OEOA			PR OC		
OEOA	110021		LDK	DE.D.STSR	;(10)
0E0D	1A	:L00P:	£D.	A.[DE]	;(7) GET STATUS
0E0E	1F		RAR		;(4)
OEOF	D 0		RNC		(5) RETURN IF NO BL
0E10	1F		RAR		;(4)
0E11	D20D0E		JNC	:L00P	:(10) IF NO DRQ
0E14	3A0321		LD	A+D-DATR	:(13) GET BYTE
0E17	77		STO	A+[HL]	;(7) STORE BYTE
0E18	23		INC	HL	;(6)
0E19	08		DEC	8C	;(6)
OE1A	78		MOV	A + B	;(4)
0E18	B1		OR A	С	;(4)
0E1C	C20D0E		JNZ	:L00P	;(10)
0E1F	C 9		RET		

NEW D	ISK DRIVERS	SORC I	M 808x A	ssembler ver	3.5E <:/55/7= 59 C	:92 Page 123 :SDROMA .ASM
0E20		DMAWRT: ;Xfer d ;Entry		memory to dis	k	
		; BC	=	BYTES TO TRAN	SFER	
		; HL	=	FWA OF BUFFER		
		;EXIT				
		; HL	=	NEXT ADDRESS		
0E20			PROC			
0E20	110021		LDK	DE.D.STSR		
0E23 0E24	1A 1F	:L00P:	LD RAR	A+[DE]	GET STATUS	
0E25 0E26	D0 1F		RNC RAR		RETURN IF NO	BUSY
0E27	D2230E		JNC	:L00P	; I F NO DRQ	
0E2A	7E		LD	A.[HL]	GET BYTE	
0E2B	320321		STO	A.D.DATR	STORE BYTE	
DEZE	23		INC	HL		
0E2F	08		DEC	8C		
0E30	78		MOV	A . B		
0E31	B1		ORA	С		
0E32	C2230E		JNZ	:LOCP		
0E35	C 9		RET			

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 124
C:SDROMA .ASM
NEW DISK DRIVERS
0E36
                     DDRY:
                     Deselect drive
Entry
SDISK =
                                        current disk drive
0E36
                               PROC
0E36 3A62EF
                              LD
                                        A.PIABD
0E39 E61F
0E3B 4F
0E3C C37109
                                        1_1111b
C+A
                              AND
                              MOV
                               JMP
                                        OPBD
                                                           ideselect last drive
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 125
FORMAT
                                                               C:SDROMA .ASM
                  *[7]
0E3F
                  FOR MAT:
                          This proc will format the next track in IBM 3740 format consisting of 40 tracks, with each
                  strack containing 10 sectors.
                  ;Entry
                  # BC
                                  FWA of buffer
                          ;BUF+0 =
                                          DW length
                          ;BUF+2 =
                                          beginning of data
                          SAVTRK =
                                          THE TRACK TO BE FORMATED
                  :EXIT
                  NONE
0E3F
                          PROC
                  #SET UP BUFFER AND "DMADR"
                          SET DMADR AND GET LBA+1 OF PRESENT BUFFER
0E3F C5
                         PUSH
                                  вc
0E40 E1
                          POP
                                  HL
                                                  :HL = 8C
0E41 4E
                          LD
                                  C+[HL]
0E42 23
                          INC
                                  HL
0E43 46
                          LD
                                  B.[HL]
                                                  :BC = LENTH OF FORMAT DATA
0E44 23
                          INC
                                  HL
0E45 220FEF
                          STO
                                  HL . DMADR
                                                  SET DMA
0E48 09
                          ADD
                                  HL .BC
                                                  HL = HL + BC
                          FTEST DENSITY AND SET REG D TO 04EH OR OFFH
0E49 012003
                          LDK
                                  BC • 800
                                                  $800 BYTES OF PAD FOR END OF TRACK
DE4C 3ADOEF
                         LD
                                 A. SAVTYP
0E4F 164E
                          LDK
                                  D. 04EH
                                                  ;DOUBLE
0E51 OF
                          RRC
0E52 3002 ^0E56$
                                                  ; IF DOUBLE
                          JRNC
                                 : PLOOP
0E54 16FF
                         LDK
                                 D.OFFH
                                                  SINGLE
                         PAD REST OF BUFFER
                  :PLOOP: STO
0E56 72
                                 D. [HL]
0E57 23
                         INC
                                 HL
0E58 0B
                         DEC
                                 ВC
0E59 78
                         MOV
                                 A.B
0E5A 81
                         ORA
                                 С
0E5B 20F9 ^0E56$
                         JRNZ
                                 :PLOOP
                 ≠FUNCTION DRIVE
                         SELECT DRIVE
OESD CDA40D
                         CALL
                                 SELDRY
0E60 3827 ^0E89$
                         JRC
                                 :ERROR
                         :TEST FOR STEP OR NO-STEP
0E62 2115EF
                         LDK
                                 HL, SAVTRK
0E65 3A0121
                         LD
                                 A.D.TRKR
                                                 TRACK REG
0E68 BE
                         CMP
                                 [HL]
0E69 2817 ^0E82$
                         JRZ
                                 : 1
                                                 FIF SAVTRK AND TRACK REG ARE THE SAME SKIP THE STEP
```

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 126 C:SDROMA .ASM FORMAT STEP IN ONE TRACK A.SEKDEL 0E68 3A13EF LD 0001_00003 SUPDATE 0E6E F610 ORI SET UP SEKDEL STO A.SEKDEL 0E70 3213EF STEPIN 0E73 CD4D0C CALL SAVE FLAGS PUSH ΑF 0E76 F5 A.SEKDEL 0E77 3A13EF LD ANI 0000_00118 CONLY SPEAD LEFT 0E7A E603 STO A.SEKDEL RESET SEKDEL 0E7C 3213EF RESTORE 0E7F F1 POP AF JRC :ERROR 0E80 3807 ^0E89\$ FORMAT TRACK **FMTTRK** 0E82 CD490D :1: CALL JRC :ERROR 0E85 3802 ^0E89\$ XRA 0E87 AF 0E88 C9 RET 0E89 3EFF :ERROR: LDK A.OFFH ORA 0E8B B7 RET 0E8C C9 :LWA OF ROM RESIDENT CODE RLWA = 0E8C *LENGTH OF THIS ROM IS = **RLWA MSG

RLWA > OFFCH

Offdh

3

CODE TOO LARGE ..

LENGTH OF THIS ROM IS = 0E8C

SERNO: ds

• 9

IF

org

ERROR

ENDIF

= 0000

OESD = OFFD

OFFD = 0003

EF53 = 0002

UNATRK: DS

2

Track

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 127
 Debug Monitor RAM Storage.
                                                              C:SDROMA .ASM
                  #[R]
 1000 = ED80
                          DRG
                                  MRAM
      = EFDA
                  SERFLG =
                                  0EFDAh
                          Host disk xfer buffer and...
                          Format track template holding buffer
 ED80
                  HSTBUF:
ED80 = 0180
                                  256+128
                          Directory Buffer
      = EE80
                  DIRBUF: =
                                  HSTBUF+256
EF00 = 0006
                  TEM
                          DS
      = EF01
                  RNDV
                          =
                                  TEM+1 :random number seed
      = EF02
                  ERCNT
                          =
                                  RNDV+1 ; DW ERCHT
      = EF04
                  RTRC
                                  ERCNT+2 ; retry count
      = EF05
                  RTRY
                          =
                                  RTRC+1
EF06 = 0001
                  MPCHR
                         DS
                                         :prompt character
                  ECHOP
EF07 = 0001
                          DS
                                         :=0, list ehco off
EF08 = 0001
                  ROMRAM DS
                                 1
                                         :0= RAM. 1= ROM
EF09 = 0006
                  DSTSB
                          DS
                                 6
                                         Disk status bytes
                          Disk operation temps and control
EF0F = 0002
                  DMADR
                         פת
                                 2
                                         :Address for read/write Disk
EF11 = 0002
                  DMAADR DS
                                 2
                                         ;CBIOS, users DMA
                          Note order of xxxSEC.xxxTRK.xxxDSK must be maintained
                          along with length (1,2,1).
EF13 = 0001
                  SEKDEL: DS
                                         :Set for seek-restore command in ROM
                                 1
                                         idepends on disk type. Siemens = 3h. MPI = 0h
EF14 = 0001
                  SAVSEC DS
                                 1
                                         :last sector requested
EF15 = 0002
                  SAVTRK DS
                                 2
                                         ; last track requested
EF17 = 0001
                  SDISK DS
                                         :Selected disk drive (0.1)
     = EF14
                  ACTSEC =
                                 SAVSEC
     = EF15
                  ACTTRK =
                                 SAVTRK
     = EF17
                  ACTDSK =
                                 SDISK
EF18 = 0001
                 SEKSEC DS
EF19 = 0002
                 SEKTRK DS
                                 2
EF1B = 0001
                 SEKDSK DS
                                 1
EF1C = 0001
                 HSTSEC DS
EF1D = 0002
                 HSTTRK DS
                                 2
EF1F = 0001
                 HSTDSK DS
                                 1
EF20 = 0001
                                         :Used in bios only
                 TEMSEC DS
                                 1
EF21 = 0001
                 RDFLAG DS
                                 1
                                         Read flag
EF22 = 0001
                 ERFLAG DS
                                         :Error reporting
EF23 = 0001
                 WRTYPE DS
                                         :Write operation type
EF24 = 000C
                 ALV:
                         DS
                                 ALVS
EF30 = 0020
                 CSV:
                                 CSVS
                         BIOS blocking-deblocking flags
EF50 = 0001
                 HSTACT: DS
                                1
                                        inost active flag
EF51 = 0001
                 HSTWRT: DS
                                1
                                        Host written flag
EF52 = 0001
                 UNACNT: DS
                                1
                                        :Unalloc rec count
```

```
SCRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 128
                                                            C:SDROMA .ASM
Debug Monitor RAM Storage.
EF55 = 0001
                 UNASEC: DS
                                1
                                        :Sector
                                        ¡Logical sector
EF56 = 0001
                 LOGSEC: DS
                                1
EF57 = 0002
                 LDADR DS
                                2
                                        ¿Zero if locked keyboard
EF59 = 0001
                 KEYLCK DS
                                        :current cursor position
EF5A = 0002
                 CURS
                         DS
                                2
                         Keyboard scan temporaries
                                        :Tem holding key
EF5C = 0001
                 TKEY
                         DS
                               1
FF50 = 0001
                 HKCNT
                         DS
                                        Debounce key
                                        :Last valid keystroke
EF5E = 0001
                 LKEY
                         DS
                                1
                        DS
                                        :Last control key
                 CKEY
                                1
EF5F = 0001
                                        :ESC holding flag
EF60 = 0001
                 ESCH
                         DS
                                1
                 ;PIAAD and PIABD must be kept sequential, PIAAD first
                 idependency in VC_HOME of BMKEY-asm
                                        :Holds last PlA-A data
EF61 = 0001
                 PIAAD: DS
                               1
                 PIABD: DS
                                1
                                        Holds last PIA-B data
EF62 = 0001
                         Calendar month, day year
EF63 = 0003
                 IDAY
                                 3
                 IMONTH =
                                 IDAY+1
     = EF64
                                 IDAY+2
     = EF65
                 IYR
                         Wall clock time cells and disk active
                         see UPTIM: in BMKEY.asm
EF66 = 0006
                 HOURS: DS
                                 6
                                 HOURS+1
                 MINS:
     = EF67
                        =
      = EF68
                                 HOURS+2
                 SECS:
                        =
     = EF69
                 SEC 6:
                                 HOURS+3
                         Used to deselect drive when there is NO activity
                         on drive for n seconds. See FDSK routine
                 DACTVE: =
                                 HOURS+4 := 0 by FDSK, Used by UPTIM
      = EF6A
      = EF68
                 BELCHT: =
                                 HOURS+5 ; G bell timer cell
                                        *max #columns in a logical line
EF6C = 0001
                 LLIMIT DS
                                 "LLIMIT = ".LLIMIT."h."
                 :
                         Disk drive current positions
                 LDSEL: DS
                                2 :Last selected drive
EF6D = 0002
                                 LDSEL+1 ;Last track used for non-selected drive
     = EF6E
                 LDTRK =
                                        save current stk ptr
EF6F = 0002
                 IESTK: DS
                         Interrupt stack
EF71 = 0028
                         DS
                                 20*2
EF99 = 0000
                  ISTK: DS
                                 0
                         Stack entry
EF99 = 0028
                         DS
                                 20#2
EFC1
                  BIOSTK:
EFC1 = 0000
                  ROMSTK: DS
                                 0
                                        :last command byte written to ACIA
EFC1 = 0001
                 ACIAD: DS
                                1
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 129
Debug Monitor RAM Storage.
                                                             C:SDROMA .ASM
EFC2 = 0004
                 R179x: DS
                                         :179x register save area
EFC6 = 0001
                 KBDLY: DS
                                         ;keyboard debounce-delay cell
                  since CP/M CANNOT boot off B:, this cell is used
                 to invert the names of the 2 drives:
                         =0, all normal, A=A:, B=B:
                         =1. all inverted. A=B:. B=A:
EFC7 = 0001
                 DSKSWP DS
                         Z80 Alternate Register Set
                 ;
EFC8
                         ALIGN 10h
EFD0
                 RAGS:
EFD0 = 0002
                 DESAX: DS
                                 2
                                         ;DE
EFD2 = 0002
                 BCSAX: DS
                                         :BC*
                                 2
EFD4 = 0002
                 AFSAX: DS
                                         ;AF°
EFD6 = 0002
                 HLSAX: DS
                                         ;HL"
                                 2
EFD8 = 0002
                 IXSAX: DS
                                 2
                                         :IX
EFDA = 0002
                 IYSAX: DS
                                 2
                                        :IY
EFDC = 0002
                 IVSAX: DS
                                         :Interrupt page register
                 ;
                         8080 Register Save Area.
EFDE
                         ALIGN 10h
EFE0
                 REGS:
EFE0 = 0001
                 ESAVE: DS
                                        FE Register save location
EFE1 = 0001
                 DSAVE: DS
                                        D Register save location
                                 1
                                        C Register save location
EFE2 = 0001
                 CSAVE: DS
                                 1
EFE3 = 0001
                 BSAVE: DS
                                        *B Register save location
EFE4 = 0001
                 FSAVE: DS
                                        :FLAGS save location
EFE5 = 0001
                 ASAVE: DS
                                        : A Register save location
EFE6 = 0001
                 LSAVE: DS
                                        IL Register save location
                                1
                 HSAVE: DS
EFE7 = 0001
                                        :H Register save location
                                1
EFE8 = 0002
                 PSAVE:
                         DS
                                2
                                        :PGM COUNTER save location
EFEA = 0002
                                        JUSER STACK pointer save location
                 SSAVE:
EFEC = 0002
                 BKPA:
                         DS
                                2
                                        :last breakpoint address
EFEE = 0001
                 BKPC:
                         DS
                                        :Contents of bkp
                                1
EFEF = 0001
                 VRTOFF DS
                                1
                                        :LAST VERTICAL OFFSET TAKEN FROM COUT
                 :
                 :
                         Interrupt Jump Vector is between EFF8, EFFF.
                 ;
                         Endx
                                MRAM
```

no ERRORs, 687 Labels, 5EDFh bytes not used. Program LWA = EFF0h.

			500514			3	EC / . 155	5/7= 59:9	2 Page 1	120
SIN	ICI F Der	seitv	Monitor for		ssembler 1 system		5E <:/59			ASM
311	IOEE DEI	13163	70111 601 101	Hoder	1 3,300 11	•		-		-
s	a FREQ	OFAO								
-	9KEY	0001	19# 4							
	ACIAD	EFC1	87/14	128#59						
	ACISTA	0828	9/ 2	88/10	89/12	90#18				
n	ACTDSK	EF17	127#38							
n	ACTSEC	EF14	127#36							
n	ACTTRK	EF15	127#37							
n	AFSAX	SFD4	129#16							
S	ALIGN	mac	129/13	129/26						
	ALLPOP		1#46	3/28						
S	ALPHKY	0003	66/44							
		mac	1#37	3/16	58/18					
	ALV	EF24	127#53							
\$	ALVS	000C	127/53							
n	ASAVE	EFE5	129#32							
	BCPM	0283	14/51	15#17						
п	BCSAX	EFD2	129#15	331 4	38/ 8	120427				
	BELCHT		5/21 7/ 2	23/ 6 7# 4	20/ 0	128#37				
_	BIOJP BIOSTK	00E7	128#56	(# 7						
	BKPA	EFEC	129#38							
	BKPC	EFEE	129#39							
s	BKS	0008	19/10	27/ 8						
3	BMON	0036	3/ 3	3#32	3/49	4/13				
	BMON1	006A	3/46	4# 4						
s	BRTBIT		31/11	47/15	53/13					
_	BS.BSY	0000	93#27	93/28	117/32					
	BS.DRQ	0001	93#30	93/31						
	BS.SEK	0004	93#40	93/41						
	BS.TKO	0002	93#34	93/35						
n	BSAVE	EFE3	129#30							
	CBELL	0007	19# 7	27/11						
	CBOOT	0268	4/ 9	4/12	8/ 7	13#28				
n	CCP	0000	1#34		15414	03# (
	CCPADR		7/ 4	14/57	15/16	92# 6				
S	CCRA	2901	78/25	78/45 78/54	79/13 81/21	81/23	81/26	81/40	81/42	
s	CCRB	2903	78/32 81/45	82/20	82/22	82/25	84/19	84/21	84/24	
_	CDEHL	0925	70# 2	62720	02722	62723	04717	04721	01721	
S	CDISK	0004	15/15							
3	CHKEY	0701	60/22	63# 9						
	CI	037E	4/ 4	8/10	20#14					
ก	CKEY	EF5F	128#13							
•	CLRLN	0684	39/ 2	44/ 4	51/2	52#15	54/44			
	COUT	0410	8/11	11/22	11/24	27#18				
	COUT2	044A	26/24	29#20						
s	CPDRA	2900	78/28	78/31	79/ 9	80/12	82/27	83/24	83/50	
			84/26	84/43	86/12					
s	CPDRB	2902	78/35	78/38	79/10	80/10	81/15	82/13	83/15	
			84/13	86/14	86/18					
s	CR	000D	4/ 5	10/2	12/10	12/20	12/28	12/38	12/46	
			27/6	69/ 5						
	CSAVE	EFE2	129#29							
	CSV	EF30	127#54							
5	CSVS	0020	127/54							
S	CTLKY	0002	66/40 67/57	69#43						
	CTLTB	0913 EF5A	28/38	42/33	128# 7					
	D.CMDR		93#19	93/21	93/22	93/23	115/13			
	D.DATR		93#19	103/17	111/49	122/20	123/20			
	JODAIK	2103	, , , , , ,	103711	****	17-20				

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 131 SINGLE Density Monitor for Model 1 system. C:SDROMA .ASM n D.DEL 0014 93#52 D.FINT OODO 93#15 115/12 D-RDA OOCO 93#12 111/16 D-RDS 0080 93#10 107/11 110/16 D.RDT OOEO 93#13 113/10 D.RES 0000 93# 5 102/16 D.SECR 2102 93#22 109/16 112/10 D.SEK 0010 93# 6 103/18 D.STP 0020 93# 7 104/14 D.STPI 0040 93# 8 105/13 D.STPC 0060 93# 9 106/14 D.STSR 2100 93#20 102/20 102/28 103/26 104/22 105/21 106/22 110/35 111/31 111/60 114/22 117/13 120/15 122/12 123/11 D.TRKR 2101 93#21 101/13 103/12 112/11 125/58 D.WRTS ODAO 93#11 108/11 D.WRTT OOFO 93#14 114/ 9 DACTVE EF6A 117/39 118/41 128#35 s DBCT 0001 62/27 DDRV 0E36 23/22 123#27 DELAY 092D 70#19 118/34 n DESAX EFDO 129#14 SD DI mac 3/12 3/33 3/49 5/11 21/11 31/10 33/37 47/13 53/12 55/11 56/16 56/38 58/15 109/60 111/18 113/12 114/11 s DIMBIT 0000 33/38 n DIRBUF EE80 127#12 s DISDIM mac 3/ 3 3/13 5/12 31/13 33/41 47/17 53/15 55/14 56/19 56/41 S DMA 0080 n DMAADR EF11 127#26 DMADR EFOF 14/24 18/ 4 18/17 110/10 113/18 114/17 16/17 125/26 127#25 DMARD DEDA 8/52 110/19 111/53 113/19 121#15 DMAWRT 0E20 8/51 110/20 114/18 122#28 DNARW GOSC 66#11 67/35 DOHOME OSAD 67/38 68#45 DOLF 06A7 40/ 9 53#39 DOLF2 06AA 42/16 54#12 n DOWN 008C 19#38 n DS.BSY 0001 93#28 n DS.CRC 0008 93#38 n DS.DRQ 0002 93#32 DS.HDL 0020 93/45 93#44 DS.INX 0002 93#31 93/32 n DS.LSD 0004 93#36 n DS.NRY 0080 93#48 n DS.RNF 0010 93#42 DS-SEK 0010 93#41 93/42 DS.TKO 0004 93#35 93/36 n DS.WTF 0020 93#45 n DS.WTP 0040 93#47 n DSAVE EFE1 129#28 DSKSWP EFC7 4/ 6 118/15 129# 8 DSTSB EF09 98/37 111/26 127#22 EBDOT 0194 10# 6 14/18 14/34 16/30 17/59 18/28 ECHOP EFO7 5/23 127#20 EDELC 05D5 26/18 46#18 EEOL 05AD 26/21 43#11 EFADR 0010 24# 6 45/ 5

45/14

SORCIM	808x Assembler	ver 3.5E <:/5	
SINGLE Density Monitor for	Model 1 system	•	C:SDROMA .ASM
	2011	45/ 5 45/14	
EFESC 0008 24# 7 EFGR 0001 24#10	28/41 29/26 24/11 49/ 4	49/18	
	24/11 49/ 8	49/21	
	29/ 5 35/44	45/ 3 45/12	
EFSCR 0020 24# 5	45/14		
EFUN 0004 24# 8	24/11 49/11	49/24	
n EFX 0040 24# 4	247 22		
SD EI mac 3/8	3/30 5/11	6/13 21/17	31/14 33/42
47/18	53/16 55/15	56/20 56/42	110/ 6 113/21
118/44			
EINSRT 05EE 26/17	47#20		
EMBOOT 0187 10# 2	10/12		
s ENADIM mac 31/11	33/38 47/14	53/13 55/12	56/17 56/39
s ENAROM mac 5/11	94# 2		
s ERC 007F 69/ 3	69/3 69/5		
	127/17		
n ERFLAG EF22 127#50			
n ESAVE EFEO 129#27			
s ESC 0018 12/4	12/8 12/12	12/12 12/14	12/16 12/18
12/18	12/22 12/26	12/30 12/32	12/34 12/36
12/40	12/44 12/49	12/51 28/47	69/ 3
ESCCAD 0584 26/ 7	44# 7		*
ESCCGR 0617 26/10	49#18		
ESCCHA 061B 26/12	49#21		
ESCCUN 061F 26/14	49#24		
ESCEE 0624 26/19	50# 4	25447	45/ 7 49/15
ESCH EF60 5/24	28/39 29/27	30/15 35/47	45/ 1 49/13
128#14			
ESCHTB 0384 25# 3	29/ 4		
ESCLCK 05A3 26/22	42#46		
ESCRR 0624 26/20	49#31		
ESCSAD 05BE 26/ 8	45#10		
ESCSGR 0607 26/9	49# 3		
ESCSHA 060B 26/11	49# 7		
ESCSUN 060F 26/13	49#11		
ESCULK 05A6 26/23	43# 6 49#29		
ESCZZ 054E 26/16 FXITI 001E 3#19	58/25		
	707 23		
s FALSE 0000 s FCB 005C			
S FCB 005C FDSK 0D84 109/60	111/18 113/12	114/11 116/15	116#18
n FILLC 093F 72#11			
FILLZ 0930 18/53	71#28		
FMTTRK 0D49 8/60	113#26 126/20		
FORINT OD64 8/58	110/34 111/43	114#30 117/17	
FORMAT DESF 8/29	125# 3		
n FSAVE EFE4 129#31	- 2		
S FWAVM F000 38/10	39/13 54/17		
GKEY 071F 5/12	58# 3		
n GKEYX 0739 58#24			
GTMASK 07E5 63/15	63/18 64# 8		
s H.FDC 2100 93/19	93/20		
s H.IEEE 2900			
S H.KEY 2200 65/11			
s H-SCTR 2A00 87/11	87/15		
s H.SIO 2A00			
s H.SREC 2A01 88/17			
s H.SSTS 2A00 91/14			
s H.SXMT 2A01 90/16			7//21 7//25
s H.VID 2C00 3/23	73/ 4 73/ 6	73/ 8 73/10	74/21 74/25

LOOKUP 047C

30/20

31#22

32/20

SINGLE Density Monitor for Model 1 system. C:SDROMA .ASM 75/16 75/20 91/10 HINT 0080 3/39 4#14 n HKCNT EF5D 128#11 n HLSAX EFD6 129#17 HMSCRN 0058 66#12 67/37 HOME 08F7 8/53 95/15 98/51 101#15 HOURS EF66 128#28 128/29 128/30 128/31 128/35 128/37 n HSAVE EFE7 129#34 HSTACT EF50 18/51 18/52 127#57 HSTBUF ED80 127# 8 127/12 n HSTDSK EF1F 127#46 n HSTSEC EF1C 127#44 n HSTTRK EF1D 127#45 n HSTWRT EF51 127#58 IDAY EF63 5/33 128#22 128/23 128/24 IE-CO 097E 5/56 8/34 78#18 IE-GTS 09D4 8/36 80# 7 IE-IDM 0A85 8/40 84#10 IE-ODM 0A43 8/39 83#13 IE.OIM 0A20 82#11 8/38 IE-PP OAE1 8/41 86#10 IE.SHK OA4F 82/16 82/29 83/18 83#21 IE-SI 09C1 79# 7 8/35 IE.TC 09E0 8/37 81#13 IESTK EF6F 3/13 3/28 58/15 128#47 n ILINT 0007 3# 9 n IMONTH EF64 128#23 IMSG 0186 3/44 11#29 s INTBL EFFO 5/13 5/15 s IRPTCT 0018 60/42 ISTK **EF99** 3/14 58/16 128#52 n IVSAX EFDC 129#21 n IXSAX EFD8 129#19 n IYR EF65 128#24 n IYSAX EFDA 129#20 n KBDLY EFC6 129# 2 KBDRVR 073C 58/23 59#57 KBSCAN 0774 60/ 7 61# 9 KBSERV 07F8 60/47 66#14 s KCOLM COO7 60/46 62/ 6 KEYLCK EF59 5/34 20/ 6 43/ 9 58/21 128# 6 KEYLST EFD4 5/25 60/12 61/60 92#8 s KLELEN 0002 5/26 60/52 62/14 KLLEN 0003 5/26 60/13 61/59 s KLUSED 0007 62/ 4 60/20 62/25 s KROWM 0038 60/46 62/ 6 KYCDTB 08C3 66/20 69# 2 s KYSRVD 0006 60/39 60/40 n LDADR EF57 128# 5 LDSEL EF6D 3/43 128#44 128/45 LDTRK EF6E 18/57 128#45 n LEFT 0080 19#39 s LF 000A 10/ 2 12/2 12/2 12/10 12/ 2 12/ 2 12/20 12/28 12/38 12/46 12/46 12/46 19/ 9 27/ 7 LETARW 008D 66# 8 67/29 LIST 091C 8/12 8/13 89#18 LKEY EFSE 5/22 20/ 9 21/11 21/14 60/15 66/49 128#12 LLIMIT EF6C 5/36 37/24 42/ 9 53/16 54/32 123#40 LOGSEC EF56 18/52 128# 2

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 133

SAVTRK EF15

14/27

17/11

18/8

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 134 C:SDROMA .ASM SINGLE Density Monitor for Model 1 system. n LSAVE EFE6 129#33 39/ 3 s LVMEM 1000 19# 9 n MCDOWN 000A n MCLEFT 0008 19#1C MCRIGH 000C 19#11 27/ 9 27/10 MCUP 000B 19# 8 n MINS EF67 128#29 3/17 6/11 127#19 MPCHR EF06 S MRAM ED80 3/40 127/ 3 n MSECB 0010 93# 3 0066 3/47 S NMIA n NORM 038F 21#18 99/46 92# 3 95/11 98/23 99/13 NRETRY 000A s NVDL 0018 73#12 119/26 5/45 34/33 68/14 68/53 OPAD 0964 34/18 38/ 6 39/10 54/55 23/15 28/31 0971 5/51 OPBO 124/ 9 68/42 74#27 121/13 10#15 11/27 3/45 DSTR 0197 119/14 128#18 68/10 74/24 34/29 68/49 PIAAD EF61 37/31 38/ 3 36/ 6 28/24 34/14 35/23 PIABD EF62 23/12 68/32 75/19 68/55 54/45 39/ 7 50/20 54/22 128#19 118/24 121/ 9 124/ 6 s PMCHR 003E 6/10 56/15 56/37 94#24 s POPALL mac n PSAVE EFE8 129#35 103/19 104/15 105/14 106/15 115#28 102/17 PSEKC 0076 PSTESC 0455 28/42 29#29 56/35 94#18 56/13 s PUSHAL mac 128#61 n R179X EFC2 8/22 98/28 110#50 RADR OCEC 129#13 n RAGS **EFDO** n RDFLAG EF21 127#49 66/32 62/42 65# 9 66/28 61/11 61/15 63/20 RDROW 07EF 8/18 94#29 RDRV 0840 RDSKO ODFF 118/32 120#34 108/12 109/47 110/15 RDTWRT EFD1 92# 5 107/12 RDWRT 0C82 107/14 108#15 18/25 96/16 106#28 8/2C READ 0C75 8/14 87#17 88/12 READER 0803 8/59 112#19 READTR OD33 129#26 n REGS EFE0 n REPD 002D 22#15 22#16 n REPK 0005 19#37 n RIGHT 0088 21# 2 21/ 9 RKEY 037E 126#33 126/35 126/36 RLWA DE8C 127#15 127/16 RNDV EF01 8/27 ROMJP1 OODF 3/26 6#14 ROMJP2 00E4 7# 3 8/28 5/11 127#21 ROMRAM EFOS 3/24 ROMSTK EFC1 3/33 128#57 ROWOM 0081 61/14 17/56 95#27 0B5B 8/23 14/31 RSEC 5800 66# 9 67/31 RTARW RTRC EF04 127#17 127/18 97/24 98/19 98/52 99/14 RTRY EF05 95/12 95/18 96/24 127#18 99/41 96/17 97/17 98#59 RWSEC 0884 16/19 109/15 127#32 127/36 14/29 SAVSEC EF14 18/19 101/12 103/13 125/57

	SORC	TM RORV	Assembler	3	EC /1/	EE 17- CO	
SINGLE Density	Monitor f	or Model	ASSEMbler 1 system	ver 3	.5E <:/	55/7= 59	
			1 3,300			C	SDROMA .ASM
	127#33	127/37					
SAVTYP EFDO	3/38	16/38	92# 4	98/43	109/23	119/20	125/33
s SCLFRE 0085	71/13						
SCREEN 04A4	33#43	35/14					
SCTRKR 08F0	9/3	100# 2					
SDISK EF17	3/35	14/13	14/48	16/16	118/14	127#34	127/38
n SEC6 EF69	128#31						
n SECS EF68 SEEK OC1A	128#30						
SEEK OC1A s SEEKTM 0002	8/54 6/ 5	99/29	102#34				
SEKDEL EF13	6/6	102/12	102/1/	102/2/			
JENDEE EI 13	106/18	116/12	102/14 126/ 4	102/24 126/ 6	103/22	104/18	105/17
n SEKDSK EF1B	127#42	110/12	1207 4	1207 6	126/11	126/13	127#30
n SEKSEC EF18	127#40						
n SEKTRK EF19	127#41						
SELDEN ODD4	118/12	118#45					
SELDRY ODA4	8/61	95/13	98/26	99/21	117#42	125/52	
SENDEN 0880	8/26	14/15	16/27	97#28	99/26	99/49	
SERFLG EFDA	88/15	91/18	91/21	127# 4			
n SERNO OFFO	126#41						
SETXY 04CE	30/10	34#36					
s SHFTKY 0004	66/42	67/40					
SHFTTB 08FB s SI.MRS 0057	67/15	69#32					
s SI+RRD 0001	87/10 88/11						
s SI-S16 0055	5/60						
s SI-S64 0056	37.00						
s SI.TRD 0002	89/13						
SIRST OAF6	5/61	8/33	87# 2				
SKEY 0371	8/ 9	19#40	21/ 8				
s SLDRCT 0003	68/20						
SLIDED 0899	67/36	68#28					
SLIDEL 0880	67/30	68# 4					
SLIDER 0884	67/32	68# 7					
SLIDEU 0895 SLST 0813	67/34 8/25	68#25	20111				
SPA0 094F	5/43	88#20 72#26	90/11				
S SRPTCT 0006	60/44	12#20					
SSAVE EFEA	3/41	129#36					
STEP 0C39	8/55	103#32					
STEPIN OCAD	8/56	104#28	126/ 8				
STEPOU OC61	8/57	105#27					
STODIM 06E9	8/47	54#58					
s SVER 0001							
s SYS 0005							
s SYSDAT 0010							
S SYSL 0006 S TAB 0009							
TEM EFOO	69/ 3	17/ 2	17/21	17440			
n TEMSEC EF20	16/21 127#48	17/ 3	17/21	17/40	18/33	127#14	127/15
n TKEY EF5C	128#10						
S TOTROW DOD7	61/28	61/36					
S TRUE FFFF	89/16	-1.50					
n UNACNT EF52	127#59						
UNASEC EF55	18/55	127#61					
n UNATRK EF53	127#60						
UNCUR 0719	35/10	36/ 5	37/ 3	37/13	40/ 2	41/ 2	48/ 4
- 110 - 2221	50/14	54/11	56#43				
N UP 008A UPARW 008A	19#36						
UPARW 008A	66#10	67/33					

					ssembler		5E <:/59	5/7= 59:9	
SIN	IGLE Den	sity	Monitor for	Model	l system	•		C. 3	DROMA .ASM
	UPTIM	0398	22#17	58/19					
n		0005	3# 5	30, 1,					
	VALCTS		27#17	31/19					
	VALETS	0010	26#28	30/18					
	VALIDO	03F6	26#29	27/17	31/18				
	VALIDE	0304	25#12	26/28	30/17				
	VBR IGH		31# 8	33/15					
	VCAD	003D	19#19	26/ 6					
	VCBEL	053E	27/12	37#43					
	VCBKS	0512	27/ 9 27/13	37#11 38#10	49/29				
	VCCLRS VCCR	056F	27/ 7	39#15	47/67				
	VCEBL	0054	19#25	26/20					
	VCHOME		27/14	36# 3					
	VCLF	0578	27/ 8	40# 8					
	VCLRS	001A	19#12	26/15	27/12				
	VCMCRT		27/10	40#11					
	VCMCUP	0509	27/11	36#12					
	VDELC	0057	19#22	26/17					
	ADELL	0052	19#24	26/19	50/25				
	VECTOR		29#10	32/16	32/21			1244	19#32
	VEGH	0047	12/8	12/12	12/18	12/26	12/36	12/44	14425
			26/ 9	24 433					
	VEHI	0028	19#27 19#29	26/11 26/13					
_	VEUL VFLO	006D FFEA	5/44	34/23	68/51				
s	VGRAPH	_	25/ 5	42# 4	00, 31				
	VHAGR	0499	25/ 7	33#34					
	VHALF	0495	25/ 6	33#28					
	VHOME	001E	19#13	27/13					
	VINC	0051	19#21	26/16					
	VINL	0045	19#23	26/18					
	VLDDR	06F1	8/45	48/13	50/48	55#16			
	VLDIR	0705	8/46	39/ 6	47/10	51/16	53/38	56#23	
S	AFDF	0034	2.22					201.2	444 5
5	ALL	0080	5/35	18/56	37/ 5	37/22	37/36	39/ 3	46/ 5
			50/40	51/ 9	52/11	53/25	54/14		
	AFOCK	0023		26/21 30#21	33/ 9	33/20	33/31		
	VNORM VOUTSO	0467	25/ 4 31/14	33/42	42# 5	42/45	33732		
	VOUT85		42/12	42#19	728 3	12712			
	VOUT90		35/48	37/18	37/42	39/14	40/ 6	40/10	42/17
	100170	02.0	42#23	44/ 6	46/17	47/19	51/ 4		
n	VOUT95	0597	42#27						
	VOUT 96	0598	42#29	48/18					
	VOUT97	059E	27/15	29/28	38/ 9	42#36	42/43	43/10	45/ 8
			49/16						
	VRTOFF			28/27	34/13	39/12	54/52	68/58	129#41
	VSAD	0053		26/ 7		12/22	12/20	12/40	19#31
	VSGH	0067		12/12	12/18	12/22	12/30	12/40	17#31
	veu.	0030	26/ 8 10#24	26/10					
	VSHI VSUL	0029 006C	19#26 19#28	26/12					
	VUNDER		25/ 8	33# 6					
	VUNGR	0488		33#12					
	VUNHA	048F		33#17					
	VUNHAG			33#23					
	YUNLK	0022		26/22					
	WBOOT	02AB		14#61					
	WBUSY	ODE6	110/31	111/57	115/23	116/17	119#28		

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 137
SINGLE Density Monitor for Model 1 system. C:SDROMA .ASM

WRITE OC7D n WRTYPE EF23 WSEC OB6D 8/21 97/16 107#15 127#51

8/24 96#27

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 1
Osborne CP/M 2.2 CBIOS.
                                                            E:OCCRAM2 .ASM
       ≄ABS
               0000 EFF0
       ≉CODE
               EFF0 0000
       ⊅DATA
               EFF0 0000
                 :OCCBICO3.ASM
                 *NOTE* FOR USE WITH OCCTXT6.AST ONLY
                 *
                         4D2007-00
                                        MASTER .ASM
                 *
                                        ASSY .ASM
                         202007-00
                 *
                         102007-00
                                        LISTING .PRN
                 **
                         401007-00
                                        MASTER .CCM
                 *
                         201007-00
                                        ASSY .COM
                                CBICS
                         Copyright 1982, Osborne.
                         This product is a copyright program product of
                        Osborne and is supplied for use with the Osborne.
                 ;
                 :REV
                 STAC:
                                FEB 14 1982
                 RWC
                         Revisions:
                                Extensions to CBIOS added by:
                                Microcode Corporation.
                                Fremont, Ca
                                Y. N. Sahae
                                August 1981
                        2.
                                Programmable function keys added by:
                                Roger W. Chapman
                                October 1981
                        3.
                                Printer protocols added by:
                                Roger W. Chapman
                                October 1981
                                Extensions added to BICS and jump table standardized by:
                        4.
                                Roger W. Chapman
                                October 1981
     = 0016
                 VERS: =
                                22
```

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 2
Osborne CP/M 2.2 CBIOS. E:OCC5ICO3.ASM

OCCBIO13.ASM	Jump Table
OCCBIO23.ASM	CP/M aisk definitions
DCC31033.ASM	;Unit record I/O
OCCBID43.ASM	:Non data transfer disk
OCCBID53.ASM	cold and warm boot
CCC3IO63.ASM	Disk cata transfer I/O
DCC81073.AS4	Utility routines
DCC81083.ASM	Utility routines
OCCRAM2.ASM	:Commom ram definitions
OCCB1003.45M	
	OCC31033.ASM OCCB1043.ASM OCCB1053.ASM OCC31063.ASM OCC61073.ASH OCCB1083.ASM OCCB1083.ASM

```
SDRCIM 8C8x Assembler ver 3.5E <:/55/7= 59:92 Page 3
Osborne CP/M 2.2 CBIOS.
                                                             E:OCCBIO13.ASM
                 *****
                         Revisions:
                         YNS
                                 18AUG81
                                                 change bios jump vector to call new routines
                         RWC
                                 050CT81
                                                 standardize cpm jump table (change calls to jumps)
                         RWC
                                 160CT31
                                                 added function key table and user defined switches
                 *****
     = 0005
                 MRTRY: =
                                 5
                                                 :Maximum number of retries.
     = 0030
                 msize: =
                                 60
                                 (msize-8)*1024 : iccation of ccp
                 :ccp: =
     = CF00
                 CCP:
                                 0CF00H
     = E500
                 bios:
                        æ
                                 ccp+1600h
     = D706
                 bdos:
                        =
                                 ccp+806h
                         MSG
                                 "Assemblying BIOS for LWA of ', LWAMEM, h."
     *Assemblying BIOS for LWA of FFFFh.*
                         CP/M to host disk constants
     = 0100
                 HSTSIZ: =
                                 256
                                                 :Blocking/Deblocking buffer size
     = 0010
                 FPYSIB: =
                                 2048/128
                                                 Sectors in floppy disk block
                         CP/M disk control block equates which define the
                 ;
                         disk types and maximum storage capability of each
                 ;
                         disk type.
     = 0000
                 DSKS1: =
                                         ;Single density, single sided.
     = 002E
                 S10SM: =
                                 ((40-3)*2*10)/FPYSIB
                         BDBS constants on entry to write
     = 0000
                 WRALL: =
                                 0
                                                 ;write to allocated
     = 0001
                 WRDIR: =
                                 1
                                                 ;write to directory
     = 0002
                 WRUAL: =
                                 2
                                                 :write to unallocated
                         ROM equates.
     = 0000
                 ENROM: =
                                                 Port to enable RDM
     = 0001
                 DIROM: =
                                 1
                                                 Port to disable ROM
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 4
Osborne CP/M 2.2 CBIOS.
                         Macro for generating Control Blocks for disk drives
                         The format of these disk control blocks are as follows:
                         16 bits = -> translation table.
                         48 bits = Work area for CP/M.
                         16 bits = -> DIRBUF.
                         16 bits = -> Parameter block.
                         16 bits = -> check vector.
                         16 bits = -> allocation vector.
     = 0000
                 NDSK: SET
                                 0
                                                 Number of disk drives
                 NOFOD: SET
     = 0000
                                 0
                                                 Number of floppy disk drives
     = 0000
                 ALVSZ: SET
                                 ٥
                                                 :Allocation vector size
     = 0000
                 CSVSZ: SET
                                 С
                                                 :Check vector size
                         LIST
                                 D.G.M
                 DPHGEN MACRO
                                 TYPE,XLATE,DIRBUF,CPBACR
                 NDSK:
                         SET
                                 NDSK+1
                         DW
                                 %2
                         DW
                                 0.0.0
                         DW
                                 23
                         DW
                                 24
                                 CSV+CSVSZ
                         DW
                         DM
                                 ALV+ALVSZ
                 NOFDE: SET
                                 NGFDD+1
                 CSVSZ: SET
                                 CSVSZ+(64/4)
                 ALVSZ: SET
                                 ALVSZ+((S1DSM+7)/8)
                         ENDM
                         Make sure Systext agrees with assembled size
                         Macro for generating the Disk Parameter Blocks.
                         Disk type definition blocks for each particular mode.
                         The format of these areas are as follow:
                         8 bit = disk type code
                         15 bit = Sectors per track
                         8 bit = 3lock shift
                         8 bit = BS mask
                         3 bit = Extent mask
                         16 bit = Disk size/1024 - 1.
                         16 bit = Directory size.
                         16 bit = Allocation for directory.
                         16 bit = check area size.
                         16 bit = offset to first track.
                 DPBGEN MACRO TYPE+SPT+BSH+BSM+EXM+DSM+DIRSIZ+ALVMSK+OFFSET
                         08
                                 21
                         D₩
                                 22
                         Đ3
                                 23.24.25
                         DW
                                 %6-1.%7-1.REV (%8)
                         WG
                                 (%7+3)/4
                         DW
                         ENDM
```

```
SORCIM 808x Assemblar ver 3.55 <:/55/7= 59:92 Page 5
Osborne CP/M 2.2 CBIOS.
                                                              E:OCCBIO13.ASM
                         The following jump table defines the entry points
                          into the CBIGS for use by CP/M and other external
                          routines; therfore the order of these jump cannot
                          be modified. The location of these jumps can only
                  ;
                          be modified by 400h locations, which is a restriction
                          of MCVCPM.
0000 = E500
                          OR G
                                 2019
E500 C30CE7
                                  CBOOT
                                                  :Cold boot
                          qmi.
E503 C334E7
                          qmi
                                  WBOOT
                                                  :Warm boot
E506 C30BE9
                          qmi
                                  cnsta
                                                  (input)
E509 C310E9
                  CONIN:
                         imo
                                  cnin
                                                  :Console input
E50C C315E9
                 CONDUT: jmp
                                  cnout
                                                  :Console output
E50F C31DE9
                 LIST:
                          jmp
                                  Ist
                                                  :List output
E512 C325E9
                  PUNCH:
                         jmp
                                  pnch
                                                  Punch output
E515 C32DE9
                 READER: jmp
                                 rdr
                                                  :Reader input
E518 C39FE6
                          JMP
                                  HOME
                                                  ;Set track to zero
E518 C380E6
                 RSELDK: JMP
                                                  :Select disk unit
                                  SELDSK
E51E C3DDE6
                          JMP
                                  SETTRK
                                                  :Set track
E521 C3F0E6
                          JMP
                                  SETSEC
                                                  :Set sector
E524 C3F5E6
                          JMP
                                  SETDMA
                                                  Set Disk Memory Address
E527 C3D3E7
                  RRDK:
                          JMP
                                  READ
                                                  Read from disk
E52A C3F0E7
                  RWDK:
                         JMP
                                  WRITE
                                                  Write onto disk
E52D C335E9
                 LISTST: jmp
                                  Istst
                                                  Return LST: device status
E530 C3FAE6
                          JMP
                                  SECTRN
                                                  Sector translation routine
                         Extensions
                  ;
E533 C34FE6
                  RRI:
                          JMP.
                                  ROMRI
    C36AF6
E536
                          JMP
                                  ROMJMP
E539 CD63E6
                  FMTJ:
                          CALL
                                  ROMODE
                                                  Rom resident call
E53C CD63E6
                  SBAUD: CALL
                                  ROMODE
                          IEEE-488 vectors
E53F CD63E6
                  ieblc: CALL
                                 ROMODE
                                                  :Control Out
E542 CD63E6
                  ieb2c: CALL
                                  ROMODE
                                                  Status In
E545 CD63E6
                  ieb3c: CALL
                                  ROMODE
                                                  Go To Standby
E548 CD63E6
                  ieb4c: CALL
                                  ROMODE
                                                  :Take Control
E54B CD63E6
                  ieb5c: CALL
                                  ROMODE
                                                  Output Interface Message
E54E CD63E6
                  ieb6c: CALL
                                  ROMODE
                                                  Dutput Device Message
E551 CD63E6
                  ieb7c: CALL
                                  ROMODE
                                                  ;Input Device Message
E554 CD63E6
                  ieb8c: CALL
                                  ROMODE
                                                  Parallel Poll
E557 CD63E6
                          call
                                  romede
                                                  :extensions
E55A CD63E6
                          call
                                  romode
                                                  ; for
E550 CD63E6
                          call
                                  romode
                                                      memory-mapped video
E560 C3CEEA
                          jmp
                                  acictl
                                                  thook for serial command port write
E563 C3D9EA
                          ami.
                                  acistat
                                                  thook for serial status port read
                  *****************
                          This area is reserved data storage area for
                          the set-up program to install printer drivers.
                          function keys, auto boot command, lobyte value,
                          and auto horizontal scroll flag
                  *****************
E566 40
                  iobite: db
                                  40h
                                                  ;default to serial printer=40h
                                                           parallel printer=80h
                                                               IEEE printer=c0h
```

080E0F1213

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 6
Osborne CP/M 2.2 CBIOS.
                                                               E:OCCBIO13.ASM
E567 00
                  prnter: db
                                  00h
                                                  :default to standard serial=0
                                                  ;Qume
                                                                  ETX/ACK =1
                                                  Diable
                                                                  XON/XOFF
                                                                            = 2
E568 FF
                  ahsenb: db
                                  TRUE
                                                  auto horizontal scroll enable
E569 55
                  brate: db
                                  si - 120
                                                  idefault baud rate = 1200
E56A 80
                  scrsze: db
                                  128
                                                  default screen size = 128
E56B 92E5
                  xitbi: dw
                                  cntrio
                                                  :Fixed length table
E56D 93E5
                          ďм
                                  cntr 11
                                                  contains pointers
E56F 94E5
                          dw
                                  cntr12
                                                  :to strings
E571 95E5
                          dw
                                  cntr13
                                                  ;to decode
E573 96E5
                          d₩
                                  cotr 14
                                                  :function keys
E575 97E5
                          dw
                                  cntr 15
E577 98E5
                          ₫₩
                                  cntr16
E579 99E5
                          dw
                                  cntr 17
E578 9AE5
                          dw
                                  cntr18
E57D 98E5
                          dw
                                  cntr19
E57F
      90E5
                          dw
                                  up
E581 9DE5
                          dw
                                  right
E583 9EE5
                          dw
                                  down
E585 9FE5
                          dw
                                  left
E587 A0E5
                          ĠW
                                  eotb!
                                                  end of table address
E589 01
                  acmd:
                          αb
                                                  ;auto command = 0 ignore auto boot
                                                                = 1 auto on cold boot
                                                                = 2 auto on warm boot
                                                                = 3 auto on both
E58A 07
                  cauto: db
                                  cautol
                                                  :length of auto command here
E588 4155544F53
                          db
                                  *AUTEST *
                                                  auto command goes here
      5420
      = 0007
                  cautol: =
                                  *-cauto-1
E592 30
                  cntri0: db
                                  .0.
                                                  :Variable length table
E593 31
                  cntril: db
                                  •1•
                                                  is placed here by set-up
E594 32
                  cntr12: db
                                  • 2 •
                                                  ;program, with xittb!
E595 33
                  cntrl3: db
                                  •3•
                                                  pointing to the entries
E596 34
                  cntr14: ab
                                  141
E597 35
                  cntri5: db
                                  •5•
                                                  Default values for the
E593
     36
                  cntri6: db
                                  161
                                                  control numerics
E599 37
                  cntri7: db
                                  .7.
                                                  ; are the numbers on the keys
E59A 38
                  cntri8: db
                                  •8•
E59B
     39
                  cntri9: db
                                  191
E590
     90
                  up:
                          db
                                  *K *-40h
                                                  :Default values
E590
     οc
                  right: db
                                  *L *-40h
                                                  for the cusor
E59E
     OΑ
                                  *J*-40h
                  down:
                         db
                                                  keys are standard
E59F 08
                  left:
                                  *H*-40h
                         db
                                                  ;values for CP/M
     = E5A0
                  eotbl: =
                                  *
                                                  space reseverd for full function
                                                  key decoding and 16 byte auto
                                                  ;boot command
                         Sector Translation Tables.
E5A0 = E600
                                 BIOS+256
E600
                         Translation table 2 to 1
                  XLTS:
E600 0001040508
                         03
                                  0, 1, 4, 5, 8, 9, 12,13, 16,17
      090C0D1011
E60A 020306070A
                         ОΒ
                                  2. 3. 6. 7. 10.11. 14.15. 18.19
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 7
Osborne CP/M 2.2 CBIOS.
                                                             E:OCCBIO23.ASM
                         Translation 3 to 1
                         DB
                                  0. 1. 6. 7. 12.13. 18.19
                                  2, 3, 8, 9, 14,15
                         D3
                                  4, 5, 10,11, 16,17
                         BG
                         Translation 4 to 1
                                  0, 1, 3, 9, 16,17
                         DB
                                  2. 3. 10. 11. 18.19
                         DВ
                                  4, 5, 12, 13
                         DВ
                                  6, 7, 14, 15
      = 0000
                         I F
                                 (*-XLTS) <> (MSEC*2)
                         MSG
                                 *Translation table error*, ERROR
                         ENDIF
                 ;
                         Control Blocks for disk drives
E514
                 DPBASE:
E614
                         DPHGEN DSKS1.XLTS.DIRBUF.CPBS1+1
                                                               ¡Drive A:
     += 0001
                 NDSK:
                         SET
                                 NDSK+1
E614 +00E6
                         DW
                                 XLTS
E615 +00000000000
                         DW
                                 0,0,0
     00
E61C +80EE
                         DW
                                DIRBUF
E61E +35E6
                         DW
                                DP BS 1+1
E620 +30EF
                         DW
                                CSV+CSVSZ
E622 +24EF
                         DW
                                 ALV+ALVSZ
    += 0001
                 NOFDC: SET
                                NOFDC+1
    += 0010
                 CSVSZ: SET
                                CSVSZ+(64/4)
    += 0006
                 ALVSZ: SET
                                ALVSZ+((S1DSM+7)/8)
E624
                         DPHGEN DSKS1.XLTS.DIRBUF.CP8S1+1
                                                               Drive B:
    += 0002
                 NDSK:
                         SET
                                NDSK+1
E624 +00E6
                         DW
                                XLTS
E626 +00000000000
                         DW
                                0,0,0
     0.0
E62C +80EE
                         DW
                                DIRBUF
E62E +35E6
                         DW
                                DP BS 1+1
E630 +40EF
                         DW
                                CSV+CSVSZ
E632 +2AEF
                         DW
                                ALV+ALVSZ
    += 0002
                 NOFDC: SET
                                NOFD D+1
                 CSVSZ: SET
    += 0020
                                CSVSZ+(64/4)
    += 0000
                 ALVSZ: SET
                                ALVSZ+((S1DSM+7)/8)
                 ;
                         Disk type definition blocks for each particular mode.
E634
                 DPBS1:
                                :Single density, single sided.
E634
                        E634 +00
                         DВ
                                DSKS1
E635 +1400
                         DW
                                2≑MSEC
E637 +040F01
                         09
                                4,15,1
E63A +2D003F0080
                                S1DSM-1,64-1,REV (1000C000000000000)
     00
E640 +1000
                                (64+3)/4
E642 +0300
                         D₩
```

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 8
Osborne CP/M 2.2 CBIGS. E:OCCBIG23.ASM

= 0000 - -	•AL •9 •AL	IF MSG ERROR ENDIF	ALVSZ <> ALVS *Allocation problems ALVS<> ALVSZ, ALVSZ = * ALVSZ
	:	endx	GS 88 ID \$2

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 9
Osborne CP/M 2.2 CBIOS.
                                                               E:OCCBIC33.ASM
                  ;*****
                          Revisions:
                                                  added lobyte function to listst
                          YNS
                                  18AUG81
                                                  modified romade routine
                                                  movec const and listst to osobios9.asm
                          YNS
                                  30AUG81
                          YNS
                                  23SEP81
                                                  saved hi in ROMCDE routine when returning
                                                  to RAM as IEEE routines return status in
                          RWC
                                  C9N0V81
                                                  Preserved value of HL when calling ROM
                                                  routines, HL used in VLDDR, VLDIR, & STODIM
                                                  preserved HL & DE on exit
                  *****
E644
                  SETRRM: :Set ROM-RAM flag
                          Entry
                                 A= port to output (setting RCM or RAM enable)
                          Exit
                                  none.
                          Uses
                                  Α
E644
                          OI
E644 +F3
                          D3
                                  0F3h
E645 C5
                          PUSH
                                  ВC
E646 4F
                          VOM
                                  C.A
E647 ED79
                          OT.C
                                  A
E649 3208EF
                          STO
                                  A+ROMRAM
E64C C1
                          POP
                                  3 C
E640
                          EI : RET
E64D +FB
                                  0FBh
E64E +C9
                   RET
E64F
                  ROMRI: :Exit ROM resident Interrupt routine.
E64F 3A08EF
                          LD
                                  A+ROMRAM
E652 4F
                          VOM
                                  C.A
                                                  ;port
E653 ED79
                          OT.C
                $
                                  Α
                                                  set RGM or RAM enabled
E655 FDE1
                          POP
                $
                                  ΙY
E657 DDE1
                          POP
                $
                                  ΙX
E659 E1
                          POP
                                  HL
E65A D1
                          909
                                  DE
E658 C1
                          PUP
                                  ВC
E65C F1
                          POP
                                  ΑF
E65D ED7B6FEF $
                          LD
                                  SP.IESTK
                                                  :reset to interrupt entry stk
E661
                          EI ! RET
E661 +FB
                          DB
                                  0FBh
E662 +C9
                   RET
```

```
SORCIM 808x Assembler ver 3.58 <:/55/7= 59:92 Page 10
                                                                E:OCCBIC33.ASM
Osborne CP/M 2.2 CBIOS.
                  ROMCDE: :Call ROM resident processor
E663
                          Entry DE = resident processor to call biased
                                  by CBICS jump vector.
                          NOTE: ROM jump vector must match CBICS vector
                  ;
                          Entry at RCMCD1 with low digit of CBIDS vector in reg E
                                  DE
                                                   Get calling address
E663
      D1
                          POP
                          YOM
                                  A • €
E664 73
E665 D603
                          SUI
                                  3
E667
      5 F
                          MOV
                                  2 . A
                  ROMCD1:
E668
                          LDK
                                  D.high (ROMVEC)
E668
      1601
                  ROMJMP: :Entry here to jump to ROM function code directly
E66A
                                  DE = RCM jump address
                          Entry
                                  BC. HL. IX = any parameters
E66A 229DE6
                          sto
                                  hl.stohl
                          DI
E660
E66D +F3
                          DB
                                  0F3h
                                  HL . O
E66E 210000
                          LOK
                          ADD
                                  HL,SP
                                                   :Old stack to HL
E671 39
                          LDK
                                  SP.BIOSTK
E672 31C1EF
E675 E5
                          PUSH
                                  HL
                                                   :Save old stack pointer
E676 2A9DE6
                           ١d
                                  hi•stohi
                                                   aet user hi
                          ENAROM
E679
E679 +
                          DI
                          28
                                   OF3h
E679 +F3
                          CUT
                                   0
E67A +0300
                                   A . 0
E670 +3500
                           LDK
                                   A. ROMRAM
E67F +3208EF
                          STO
E681 +
                           ΞI
E681 +FS
                           DВ
                                   CFBh
                                                   RCM jump address to IY
E682 D5
                           push
                                   de
                                   ΙY
E683 FDE1
                5
                           pop
                                   GOROM
                           CALL
E685 CD9AE6
                          ÐΙ
E633
                                   0F3b
E688 +F3
                           DB
E689 F5
                           PUSH
                                   AF
                                                    save status returned
E68A
                           DISROM
E68A +
                           DI
E684 +F3
                           08
                                   0F3h
E689 +D301
                           CUT
                                   1
E680 +3E01
                           LDK
                                   A . 1
                                   MARMOR,A
E68F +3208EF
                           STG
E692 +
                           ΕI
                                   OFBh
E692 +F3
                           DB.
E693 F1
                           POP
                                   AF
                                                    Restore old stack pointer
E694 FDE1
                                   įУ
                           qeq
                                   SPoiy
E696 FDF9
                           VCM
E698
                           EI ! RET
                           08
                                   OF Bh
E698 +FB
E699 +C9
                    RET
                   GOROM:
                          E 1
E694
E694 +F8
                           DB
                                   OFBh
                                   [IY]
E698 FDE9
                           JMP
```

STOHL: DS

E690 = 0002

2

E6DC C9

RET

```
SDRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 11
Osborne CP/M 2.2 CBICS.
                                                               E:OCCBIO43.ASM
                          HOME
                          Return disk to home. This routine sets the track number
                          to zero. The current host disk buffer is flushed to the
                          disk.
E69F
                  HOME:
E69F CDAAE8
                          CALL
                                  FLUSH
                                                  :Flush host buffer
E6A2 AF
                          XRA
                                  Α
E6A3 3250EF
                          STO
                                  A. HSTACT
                                                          :Clear host active flag
E6A6 3252EF
                          STO
                                  A. UNACNT
                                                          :Clear sector count
E6A9 3219EF
                          STO
                                  A, SEKTRK
E6AC 321AEF
                          STC
                                  A, SEKTRK+1
E6AF C9
                          RET
E680
                  SELDSK: ;Select disk drive for next transfer.
                          ENTRY C = disk selection value (0..15).
                                  DE and 1 = 0, first call for this disk.
                                 HL = 0, if drive not selectable.
                          EXIT
                                 HL = DPH address if drive is selected.
E6B0 79
                          MOV
                                  A . C
E681 FE02
                          CPI
                                  NDSK
E683 D2D1E6
                          JNC
                                 SELD1
                                                  If invalid drive number
E686 3218EF
                          STO
                                  A. SEKDSK
E689 69
                          MOV
                                 L.C
E58A 2600
                          MVI
                                  H.C
E6BC 29
                          ADD
                                 HL,HL
                                                  ; # 2
E680 29
                          ADD
                                 HL.HL
                                                  ; ≎ 4
E6BE 29
                          ADD
                                 HL.HL
                                                  ; * 8
E68F 29
                          CCA
                                 HL.HL
                                                 ;*16
E6C0 43
                          VOM
                                  8 • E
                                                  ;save initial bit
E6C1 1114E6
                          LOK
                                 DE, DPBASE
E6C4 19
                          ADD
                                 HL.DE
                                                  :HL = DPH address
E6C5 E5
                          PUSH
                                 HL
E6C6 111301
                          LDK
                                 DE,100h + (low RSELDK)
E6C9 78
                          MOV
                                 A . 3
E6CA E601
                          AND
                                 1
E6CC CC6AE6
                          CZ
                                 ROMJMP
                                                  :Select the disk in req C
E6CF E1
                          POP
                                 HL
E6D0 C9
                          RET
E6D1 210000
                 SELD1: LDK
                                 HL.O
E6D4 3A0400
                         LDA
                                 CDISK
E6D7 91
                          SUB
E608 C0
                         RNZ
                                                 ; If default drive not in error
E6D9 320400
                         STO
                                 A. CDISK
```

```
SORCIM 803x Assembler ver 3.5E <:/55/7= 59:92 Page 12
                                                             E:OCCBID43.ASM
Osborne CP/M 2.2 CBIOS.
                         SET TRACK.
                         Set track number. The track number is saved for later
                         use during a disk transfer operation.
                         ENTRY BC = track number.
                 ;
E600
                 SETTRK:
E6DD ED4319EF $
                         STO
                                 BC . SEKTRK
                                                :Set track
E6E1 2A53EF
                         LHLD
                                 UNATRK
                         VOM
                                 A . L
E6E4 7D
                         XRA
E6E5 A9
                                 С
E6E5 4F
                         VOM
                                 C . A
E6E7 70
                         VOM
                                 A + H
                         X P A
                                 В
E6E8 A8
                         DR A
                                 С
E6E9 B1
                                                :If same track
                         RZ
E6EA C8
                         JMP
                                 CUNACT
                         Clear Unallocated block count (force pre-reads).
                                                 :A = 0
E6EB AF
                 CUNACT: XRA
                                                         :Clear unallocated block count
                                 A. UNACNT
E6EC 3252EF
                         STO
                         RET
ESEF C9
                         Set the sector for later use in the disk transfer. No
                         actual disk operations are perfomed.
                         Entry 80 = sector number.
E6F0 79
                 SETSEC: MOV
                                 A,C
                         STO
                                 A. TEMSEC
                                                 sector to seek
E6F1 3220EF
                         RET
E6F4 C9
                         Set Disk memory address for subsequent disk read or
                         write routines. This address is saved in DMAADR until
                          the disk transfer is performed.
                          ENTRY SC = Disk memory address.
                  ;
                          EXIT
                                 DMAADR = 3C.
                 SETOMA:
E6F5
E6F5 ED4311EF $
                                 BC . DMAADR
                          STO
                          RET
E6F9 C9
```

E708 C9

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 13 Osborne CP/M 2.2 CBICS. E:OCCBIC43.ASM Translate sector number from logical to physical. ENTRY DE = 0, no translation required. DE = translation table address. BC = sector number to translate. EXIT HL = translated sector. E6FA SECTRN: E6FA 3A55EF LDA UNASEC E6FD B9 CMP E6FE C4EBE6 CNZ CUNACT :If sectors do not match E701 79 VCM A • C E702 3256EF A. LOGSEC STO E705 69 MOV £ . C E706 60 MOV H+B E707 19 ADD HL.DE E708 6E MOV L+M E709 2500 MVI H . 0

RET

E70C E70C 47 E70D 4 E70D + E70D +F3 E70E +D301 E710 +3E01 E712 +3208EF E715 + E715 +F8 E716 78 E717 320400 E71A 3100CF

E713 3A66E5 E720 320300 E723 3A69E5 E726 4F E727 CD3CE5

E72A 3A6AE5

SDRCIM 803x Assembler ver 3.5E <:/55/7= 59:92 Page 14 Osporne CP/M 2.2 CBIOS. E:OCC91053.ASM

scrsze

lda

CB103.			21300110234404
: *****			
•	0		
;	Revision		warm boot makes dir 2 files across
•	RWC	200CT81 19CCT81	included baud rate and screen size initalization
;	RWC		change lobyte to variable
•	RWC	140CT31	modified auto start feature
:	V41.6	20****521	change lobyte defaults
;	YNS	20AUG31	Change tobyte delaurts
;			

	_		u fra dick
_	;	goot CP/	'M froπ disk•
;			ata central from the cold start
;	ine Cau	or entry point g	ets control from the cold start
;			ole for the basic system initial-
;			s outputting a sign-on message and
;	initiai	izing the follow	ing page zero locations:
•		3 - C - t + a + b a	sematart isma santar
<u>:</u>			armstart jump vector. nitial IO3YTE value.
;			
•		4: Default and l 7: Set to a jump	
•			ere Date and Time are kept
:	40-4	1. POINTS TO WITE	ste bate and time at a kept
;	Bogisto	r r must contain	n the selected drive, which is
;	zero to	select the A dr	rive. The exit address is to
		routine.	
; ;	the co-	1 DECIME.	
;			
;	The MBO	OT entry point (gets control when a warm start
;	OCCUES.	a AC from the	console, a jump to 800S (function
;	0) • 0r	a jumo to locat	ion zero. The W60DT routine reads
•			the appropriate disk sectors.
;			tialize locations C.1.2 and 5.6.7.
;	The WSD	or routines exi	ts with the C register set to the
:	30.00.000	iate drive selec	ction value. The exit address
;		he CCP routine.	
•			
•			
csoor:	Entry	A= drive to bo	ot off of.
	MOV	8 • A	;save requested drive
	DISROM		
	CI		
	D8	0F3h	
	CUT	1	
	LDK	A • 1	
	STO	A,ROMRAM	
	ΕI		
	DB .	0F8h	
	MOV	A • B	restore requested drive
	STO	A. CDISK	;force requested drive
	LOK	SP . CCP	
******	****	****	
	1.4	o iobito	;get iobyte value
	ld STO	a, iobite	Set I/C byte to default
	STO	A+IDSYTE	iset the syste to delault
	10	a, brate	
	mo v	C + 3	teat haud rata
	call	sbaud	set baud rate
	100	SC FS 72	

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 15
Osborne CP/M 2.2 CBIOS.
                                                                 E:OCCBIO53.ASM
E720 326CEF
                           sta
                                   llimit
                                                   set screen size
E730 3E01
                           ldk
                                   a • 1
E732 1814 ^E748$
                           JR
                                   BCCP
                                                    EDO CP/M
E734
                   WBOOT:
                                                   :Warm boot
E734 3100CF
                           LDK
                                   SP . CCP
E737 CD9FE6
                           CALL
                                   HOME
                                                   if lush any buffer
E73A 110301
                   BCPM:
                           LDK
                                   DE .ROMVEC+3*1
                                                   :Set ROM vector address
E73D 0100CF
                           LDK
                                   BC . CCP
E740 CD6AE6
                           CALL
                                   ROMJMP
E743 B7
                           OR A
E744 20F4 ^E73A$
                           JR NZ
                                   BCPM
                                                   :If error in read
E746 3E02
                           mv i
                                   a • 2
                                                   ;indicate warm boot
E748
                  BCCP:
                           :Entry A = 01. if cold boot
                  ;
                                   A = 02, if warm boot
E748 F5
                           PUSH
                                   AF
                                                   Save flags
E749 018000
                           LDK
                                   BC . DBUF
                                                   :Set default data transfer address
E74C CDF5E6
                           CALL
                                   SETDMA
E74F
     2180ED
                           LDK
                                   HL, HSTBUF
E752 220FEF
                           STC
                                   HL . DMADR
                                                   set ROM DMA address
                          Clear console control ESC cell
E755 AF
                           XR A
E756 3260EF
                           STO
                                   A+ESCH
                                                   :clear ESC
E759 3C
                           inc
                                  а
                                                   ;a=1 make directory list two files across
E75A 3282D3
                           sto
                                   a · ccp+04b2h
                                                   :change to ccp
                           Set-up low core pointer cells
E75D 3EC3
                          LDK
                                  A, 003h
                                                   :Store jumps in low memory
E75F 320000
                          STO
                                  A+0
E762 320500
                          STO
                                  A+5
E765 2103E5
                          LDK
                                  HL+3105+3
E768 220100
                          STO
                                  HL,1
E768 2106D7
                          LDK
                                  HL+800S
E76E 220600
                          STO
                                  HL . 5
E771 2163EF
                          LDK
                                  HL . IDAY
E774 224000
                          STO
                                  HL.TIMPTR
                                                   set date-time pointer
E777 218AE5
                          LDK
                                  HL . CAUTO
                  :Digital Research has informed SCRCIM that CP/M 2.2
                  ;CANNOT be booted off B:.
                  :Manipulation of CDISK is kept here to avoid the bugs
                  ; which would appear with its disappearance.
                  ;Booting off B: is accomplished with the RAM cell DSKSWP.
E77A C1
                          pop
                                  bc
                                                   ;cold/warm indicator in b
E778 3A89E5
                          Id
                                  a · acmd
E77E A0
                          and
                                  b
E77F 283B ^E7BC$
                          jΓZ
                                  done
E781 7E
                          ld
                                  a . [h1]
E782 B7
                          CR A
E783 2837 ^E78C$
                          JRZ
                                  DONE
E785 1107CF
                          LDK
                                  DE,CCP+7
E788 0600
                          LDK
                                  B • 0
E78A 4F
                          MOV
                                  C.A
E78B EDBO
                          LDIR
                                                   :Move command line to buffer
E78D 110000
                          ldk
                                  de • 0
E790 1838 ^E7CA$
```

jΓ

done1

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 16 E:OCCBIO53.ASM Osborne CP/M 2.2 CBIOS. E792 SIGNON: *Z*-40h E792 1A D8 *Osborne Computer System* E793 4F73626F72 DB 6E6520436F 6D70757465 7220537973 74656D CR.LF.MSIZE/10+*0*.MSIZE mod 10 + *0* DB E7AA 000A3630 *K CP/M *, VERS/10+*0*, *.*, VERS mod 10 + *0* DЗ E7AE 482043502F 4D20322E32 CBIOSV+'a',CR,LF.0 E788 410D0A00 03 E78C done: E7BC 3E02 mv i a . 2 b E78E 88 cmp E78F 2806 ^E7C7\$ done0 jrz ldk hi,signon E7C1 2192E7 call print E7C4 CDFDE8 done0: E7C7 ldk de • 3 E7C7 110300 E7CA donel: E7CA 2100CF Idk hl .ccp add hl.de E7CD 19 E7CE 3A0400 Id a,cdisk E7D1 4F mo v c + a [hl] E7D2 E9 qmi OSBBIOS5.asm

Endx

Osborne CP/M 2.2 CBIOS.

```
E:OCCBIO63.ASM
E7D3
                           a CP/M 128 byte sector.
                   READ:
                                   A = 0, successful read operation.
                           EXIT
                   ;
                                   A = 1, unsucessful read operation.
                                   Z bit = 1. successful read operation.
                                   Z bit = 0, unsuccessful read operation.
E7D3 CDF2E8
                           CALL
                                   MVINFO
                                                   ;Move information for transfer
E7D6 AF
                           XRA
                                                   ;Set flag to force a read
E7D7 3252EF
                           STO
                                   A, UNACNT
                                                           :Clear sector counter
E7DA CD48E8
                           CALL
                                   FILL
                                                   ;Fill buffer with data
E700 E1
                           POP
                                   HL
E7DE
     D1
                           POP
                                   DE
E7DF
     018000
                           LDK
                                   3C . 123
                                                   :Move 128 bytes
E7E2 EDBO
                           LDIR
E7E4 3A22EF
                           LD
                                   A+ERFLAG
E7E7 B7
                           ORA
E7E8 C8
                           RZ
                                                   :If no error
E7E9
     ΑF
                           XRA
E7EA 3250EF
                           STO
                                   A. HSTACT
                                                   :Clear host active
E7ED F601
                           OR I
                                   001h
                                                   :Set error flag
E7EF C9
                           RET
E7F0
                  WRITE: :the selected 128 byte CP/M sector.
                           ENTRY
                                 C = 0, write to a previously allocated block.
                                  C = 1, write to the directory.
                                  C = 2, write to the first sector of unallocated
                                  cata block.
                                  A = 0. write was successful.
                                  A = 1, write was unsucessful.
                                  Z bit = 1, write was successful.
                                  Z bit = 0. write was unsucessful.
E7FO CDF2F8
                          CALL
                                  MVINEO
                                                   :Move information for transfer
E7F3 79
                          VOM
                                  A • C
                                                   :Write type in c
E7F4 3223EF
                          STO
                                  A, WRTYPE
E7F7 FE02
                          CPI
                                  WRLAL
E7F9 2011 ^E80C$
                          JRNZ
                                  WRIT2
                                                   ; If write to allocated
E7F3 3E10
                          LDK
                                  A+2048/128
E7FD 3252EF
                          STO
                                  A+UNAC NT
E800 2A19EF
                          LD
                                  FL SEKTRK
E803 2253EF
                          STC
                                  HL . UNATRK
                                                   JUNATRK = SEKTRK
E806 3A56EF
                          LD
                                  A, LOGSEC
E809 3C
                          INC
E80A 1819 *E825$
                          J٩
                                  WRIT3
E80C 2152EF
                  WRITZ: LDK
                                  HL . UNACNT
E80F 7E
                          LO
                                  A, [h1]
E810 B7
                          DR A
E811 CA2AE8
                          JZ
                                  WRIT4
                                                   :If no unallocated records
E814 35
                          DEC
                                  [hl]
                                                   idec unalloc record count
E815 3A55EF
                          LD
                                  A. UNASEC
                                                   :Increment logical sector
E813 3C
                          INC
                                  Δ
E819 FE14
                          CPI
                                  2*10
E818 2008 *E825$
                          JR NZ
                                  WRIT3
                                                   ; If not end of track
```

SORCIM BO8x Assembler ver 3.5E <:/55/7= 59:92 Page 17

	SORCI	4 803x A	Assembler ver	3.5E <:/55/7= 59:92 Page 18
Osborne CP/M 2	2.2 CBICS.			E:DCCBID63.ASM
E81) 2453EF E820 23 E821 2253EF E824 AF		LD INC STO XRA	HL •UNATRK HL HL •UNATRK A	
E825 3255EF E828 3EFF	WRIT3:	STO LDK	A.UNASEC A.OFFh	
E82A CD4BE8 E82D D1 E82E E1 E82F C18000 E832 EDB0 E834 3E01 E836 3251EF E839 3A22EF E83C 87 E83D C0	WRIT4:	CALL POP POP LOK LOIR LOK STO LO ORA RNZ	FILL DE HL BC+128 A+1 A+HSTWRT A+ERFLAG A	<pre>;HSTWRT = 1 ;If any errors occurred</pre>
E83E 3A23EF E841 FE01 E843 CCAAE8 E846 3A22EF E849 B7 E84A C9		LD CPI CZ LD ORA RET	A, WRTYPE WRCIR FLUSH A, ERFLAG A	<pre>;write type ;to directory? ;Force write of directory</pre>

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 19
Osborne CP/M 2.2 CBIOS.
                                                                E:OCCBIC63.ASM
                          FILL - fill host buffer with approprite host sector.
                  ;
                          ENTRY A = 0, Read required if not in buffer.
                                  Otherwise read not required.
                          EXIT
                                  On exit the stack will contain the following
                                  values:
                                 POP
                                                   ;x = host record address.
                                        x
                                POP
                                                   ;y = caller's buffer address.
                                        У
E848 3221EF
                  FILL:
                          STO
                                  A, RDFLAG
                                                   Save read flag
E84E 1180FD
                          LDK
                                  DE . HSTBUF
                                                   ;initial offset
E851 218000
                          LDK
                                  HL +128
                                                   :128 byte records
E854 3A18EF
                          LD
                                  A.SEKSEC
                                                   :Get logical sector
E857 EB
                          ΕX
                                  DE.HL
E858
     OF
                          RRC
E859
     3001 ^E85C$
                          JR NC
                                  FILL3
                                                   ; If low bit not set
E858
     19
                          ADD
                                  HL,DE
                                                   :Add bias to offset
E850
     €B
                  FILL3: EX
                                  DE.HL
E850 29
                          CCA
                                  HL.HL
E85E E67F
                          ANI
                                  07Fh
                                                   :Mask sector
E860 3218EF
                          STO
                                  A.SEKSEC
E863 2A11EF
                          LD
                                  HL . DMAADR
E866 E3
                          XTHL
                                                   :Set return parameters
E867
     05
                          PUSH
                                  ĐΕ
E869 E5
                          PUSH
                                  HL
                                                   :Set return address
E869 2150EF
                          LDK
                                  HL, HSTACT
                                                   inost active flag
E86C
     75
                          LD
                                  A. [hl]
E86D
     3601
                          STO
                                  1,[h]]
                                                   ;always becomes 1
E86F
     В7
                          DR A
                                  Δ
2870 2814 *E886$
                          JRZ
                                  FILL6
                                                   :If host buffer inactive
E872
     211CEF
                          LDK
                                  HL . HSTSEC
E875
      1113EF
                          LDK
                                  DE.SEKSEC
E873
     0604
                          LDK
                                  B . SEKDSK-SEKSEC+1
E87A
     1 A
                  FILL4: LD
                                  A.[de]
E878
     35
                          CMP
                                  [hl]
     2005 ^E883$
E87C
                          JRNZ
                                  FILL5
                                                   ; If mis-match
E87E
     23
                          INC
                                  HL
E87F
     13
                          INC
                                  DE
E880 10F8 ^E87A$
                          DJNZ
                                  FILL4
                                                   :If all bytes not checked
E882 C9
                          RET
E883 CDAAE8
                  FILL5: CALL
                                  FLUSH
                                                   ;Flush host buffer
E886 3A1BEF
                  FILL6: LD
                                  A. SEKOSK
                                                   :Move disk and type
E889 321FEF
                          STO
                                  A+HSTDSK
E88C 3217EF
                          STO
                                  A. ACTOSK
E88F 2A19EF
                          LD
                                  HL . SEKTRK
E892 221DEF
                          STO
                                  HL. HSTTRK
E895
     2215EF
                          STO
                                  HL . ACTTRK
E898 3A18EF
                          LD
                                  A. SEKSEC
E898
     321CEF
                          STO
                                  A.HSTSEC
E89E
     3214EF
                          STG
                                  A+ACTSEC
E8A1 3A21EF
                          LD
                                  A.RDFLAG
E8A4
     87
                          CRA
                                  A
E8A5 C0
                          RNZ
                                                   :If no read required
E8A6 3E00
                          LDK
                                  A . 0
                                                   Read
E8A8 181C ^E8C6$
                          J٦
                                  FINAL
```

E:OCCBIC63.ASM Osborne CP/M 2.2 CBIOS. FLUSH - Write out active nost buffer onto disk. E8AA FLUSH: HL . HSTWRT E8AA 2151EF LDK E8AD 75 LD A + [h |] ESAE B7 DRA ; If host buffer already on disk ESAF CS RZ 0.[hi] E8B0 3600 STO E3B2 3A1FEF LD A. HSTDSK :Move disk and type STD A. ACTOSK E885 3217EF L٥ **HL** + HSTTRK E8B9 2A1DEF STO HL . ACTTRK E888 2215EF LD A.HSTSEC E8BE 3A1CEF E8C1 3214EF STO A+ACTSEC E8C4 3E03 LDK A + 3 :Write flag JMP FINAL :Preform final transfer processing. E8C6 FINAL: ENTRY A = 0 .. read disk. = 3 .. write disk. Calls: Rom resident routine to read/write ONE ; sector only. VCM E . A E8C5 5F E8C7 1600 LDK 0.0 HL.ROMVEC+3*13 LDK E8C9 212701 E8CC 19 CCA HL.DE E8CD 2209E9 STC HL . SAVADR HL.ACT SEC E800 2114EF LDK ;update sector+1 INC [hl] E8D3 34 ;Set retry count E804 3E05 LDK A, MRTRY FNL1: A.RTRY :Clear retry count STO E8D6 3205EF HL . SAVADR LD E8D9 2A09E9 €X DE. YL ESDC EB LDK :indicate one sector xfer E800 0601 8 • 1 ROMUMP process read or write ESDF CD6AE6 CALL STO A. ERFLAG set possible error flag E8E2 3222EF :If no errors E8E5 C8 RΖ A+RTRY :Get retry counter E856 3405EF LD DEC E8E9 3D Д :If not permanent error FNL1 E8EA 20EA ^E806\$ JR NZ E8EC F601 CRI 01h STO A. ERFLAG :Set error flag E8E5 3222EF E8F1 C9 RET

0\$8310\$6.asm

;

en dx

SORCIM 303x Assembler ver 3.58 <:/55/7= 59:92 Page 20

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 21
Osborne CP/M 2.2 CBIOS.
                                                             E:OCCBIO73.ASM
                         MVINFO Move information necessary for transfer.
                 ;
E8F2
                  *GR/IVM
E8F2 AF
                         XRA
E8F3 3222EF
                         STO
                                 A. ERFLAG
                                                         :Clear error flag
E8F6 3A20EF
                         LD
                                 A. TEMSEC
E8F9 3218EF
                         STO
                                 A, SEKSEC
E8FC C9
                         RET
                         Print message terminated by zero byte.
                         ENTRY HL -> message buffer. terminated by zero.
                         EXIT
                                 HL -> zero byte + 1.
                                 A = 0.
                                 Z bit set.
                         Destroys only HL, Flags, and A registers.
E8FD 7E
                 PRINT: LD
                                 A.[hi]
                                                Get a character
E8FE B7
                         ORA
E8FF 23
                         INC
                                 HL
E900 C8
                         RΖ
                                                ; If zero the terminate
E901 E5
                         PUSH
                                 HL
E902 4F
                         MOV
                                 C . A
E903 CDOCE5
                         CALL
                                 CONOUT
                                                :Output to the console
E906 E1
                         POP
                                 HL
E907 18F4 ^E8FD$
                         JR
                                 PRINT
E909 = 0002
                 SAVADR: DS
                                 2
                                                Disk transfer routine vector
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 22
Osborne CP/M 2.2 CBIOS.
                                                               E:OCCBIC83.ASM
                  : * * * * *
                          Revisions:
                                                  Initial release
                                  20AUG31
                          YNS
                                                  Expanded trans. table to include ctl/numerics
                                  29AUG81
                          YNS
                                                  Added parallel port support
                                  01SEP81
                          YNS
                                                  Invert data to/from parallel port
                          YNS
                                  05SEP81
                                                  Return character in C as well as A from
                          YNS
                                  06SEP81
                                                  all input routines.
                          YNS
                                  08SEP81
                                                  Fixed "some" ieee bugs
                                                  Recode ieee drivers to send untalk and
                                  20SEP81
                          YNS
                                                  unlisten commands after each char xfr.
                                                  Add auto horiz. scroll
                                  29SEP81
                          YNS
                                                  Reassignment in dispatch table
                          RWC
                                  140CT31
                                                  Redefinition of lobyte assignments
                                                  Printer protocols added to serial list device
                                                   Function key decoding added
                                                  Horizontal scroll toggle added
                                  20CCT81
                          RWC
                                  240CT31
                                                  Horizontal scroll modified
                          RWC
                  ; ****
                  ; the following routines will use the IDBYTE to transfer
                  ; control to the appropriate device driver
                  ;-----
                  ; return console status
                  CNSTA: proc
E903
                                  hl.ptr+cstat
                                                   ; status table
                          ldk
E908 2179E9
                           jr
                                   godisoch
                                                   ; call appropriate rtn
E90E 1808 ^E918$
                  ; read input character from device
                  CNIN:
                          proc
E910
                                                   ; table of input rtns
                                   hl*ptr+cinp
E910 2181E9
                           ldk
E913 1803 ^E918$
                           j٢
                                   godispch
                   ; put output character to device
                   : c contains output character
                  CNOUT: proc
E915
                                                   : table of output rtns
                                   hl.ptr+cout
                           ldk
E915 2189E9
                   godispch:
E918
                                                   inumber of shifts required to align
                           mv i
                                   b, 1
E918
     0601
                                                   ;CONSOLE field
                           jmp
                                   dispch
E91A C33DE9
                   : list device character output
E910
                   LST:
                           pr oc
                           mv i
                                   b • 4
E910 0604
                                                   ;table of list routines
                                   hl.ptr+list
                           ldk
E91F 2199E9
                           jmp
                                   dispch
E922 C33DE9
                   ; output to punch
 E925
                   PNCH:
                           proc
```

```
SDRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 23
 Osborne CP/M 2.2 CBIOS.
                                                               E:0CCBIO83.ASM
E925 0606
                          mv i
                                  b • 6
E927 2189E9
                          ldk
                                  hl.ptr.pnch
                                                  ; punch routines
E92A C33DE9
                          qmi
                                  dispen
                  ; reader input
 E920
                  RDR:
                          pr oc
E920 0608
                          mv i
                                  b • 8
E92F 2181E9
                          ldk
                                  hl.ptr+rdr
                                                  : reader routines
E932 C33DE9
                          jmp
                                  dispch
                          List Status.
                          Return the ready status for the list device.
                                 A = D (zero), list device is not ready to
                                 accept another character.
                                 A = FFh (255), list device is ready to accept
                                 a character.
                          The list status is returned depending upon the lobyte fields
                          LIST field (bits 6,7)
                                 =0:
                                         status of crt. (always ready)
                                         status of serial printer
                                  =1:
                                         status of parallel printer
                                  =2:
                                         status of ieee port (always ready)
                                 =3:
E935
                 LSTST: proc
E935 0604
                         mv i
                                 b • 4
                                                 inumber of left shifts thru carry
                                                 to align LIST field of IDBYTE
E937 2191E9
                          ldk
                                 hl.ptr+1st
                                                 :list status routines
E93A C33DE9
                         jmp
                                 dispch
```

```
SORCIM 803x Assembler ver 3.58 <:/55/7= 59:92 Page 24
                                                               E:0CCBIO83.ASM
Osborne CP/M 2.2 CBIOS.
                  dispen: proc
E930
                          on entry here reg 3 contains the left shift count
                          required to align the lobyte field to bit 1 position.
                          and reg HL contains address of select table
                          A special stack is used to avoid overflows (eg when
                          called by WordStar)
                                  hl.stohl
                                                :Save hl
                          sto
E93D 229DE6
                                  h1.0
E940 210000
                          1dk
                                                fold stack to hi
                                  h1 . 30
E943 39
                          add
                                  sp,disstk
E944 3179E9
                          Idk
                                                ;Save old stack
                          push
                                  hΙ
E947 55
                                  hi,stohl
                                                Restore hi
                          Id
E943 2A9DE6
E94B 3A0300
                          lda
                                  iobyte
                  dspchl:
E94E
                          ral
E945
     17
                                  dspchl
E94F
     10FD ^E94E$
                          djnz
                                                  ;get select field*2
                          ani
                                  5
E951 E606
E953 5F
                          mov
                                  e,a
                                                  ; de = iobyte field # 2
                                  0.65
                          ldk
E954 1600
                          dac
                                  de
E956 19
                                  0 . m
                          mov
E957 5E
                          inx
                                  ht
E958 23
                                                  ; get the routine address
                          mov
                                  h+m
E959 66
                                                  : into h! for xchange with pc
                          mov
E95A 68
                           idk
                                  de,dspret
E95B 1160E9
                                                  :push return address
                          push
                                  de
E955 D5
                                                  jump to routine
E95F E9
                          pchl
                                  iу
                $ dspret: pop
E960 FDE1
                                                  Restore old stack
                                  sp.iy
E962 FDF9
                          mov
                          ret
E964 C9
                                  10#2
                           ds
E965 = 0014
E979 = 0000
                   disstk: ds
                                  0
                  ; addresses of routines
E979
                   ptr + cstat:
                                                   ; keyboard status
                                  const
E979 A1E9
                           dw
                                                   ; serial port input status
                                   sistat
                           dw
E97B 6BEA
                                                   ; parallel input status
                                  pistat
                           dw
E97D D4EB
                                                   ; status of input device on IEEE port
                           dw
                                   ieinstat
E97F F8EA
                   ptr+rdr:
E981
                   ptr+cinp:
E981
                                                   ; get input from keyboard
                                   kevinp
 E981 32E9
                           dw
                                                   : serial port input
                                   spinp
                           dw
 E983 74EA
                                                   ; parallel input
                                   paring
                           dж
 E985 F0EB
                                                   : ieee port input
                                   ieinp
 E987 2FEB
                           ₫₩
                   ptr+pnch:
 E989
                   ctr+cout:
 E989
                                                   ; output character to crt
                                   crtout
 E987 F5E9
                           άW
                                                   ; serial port output
                                   spout
 E98B 87EA
                           dм
                                                   : parallel output
                                   parout
 E980 04EC
                           dw
                                                   ; ieee port cutput
```

ieout

OW

E98F 33EB

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 25 E:0CCBI083.ASM Osborne CP/M 2.2 CBIOS. E991 ptr+1st: E991 F3E9 ₫₩ crstat E993 62EA E995 C1E8 serial output statusparallel output status dw sostat ďж postat E997 F3E9 dw ieostat ; ieee output status E999 ptr+list: E999 F5E9 crtout d₩ E99B 98EA priout dw E99D 04EC E99F 38E8 parout ieout dw ďм ;

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 26 Osborne CP/M 2.2 CBIOS.
                         CCNSOL STATUS
                         This routine samples the Console status and returns the
                         following values in the A register.
                                A = 0 (zero), means no character
                                currently ready to read.
                                 A = FFh (255), means character
                                currently ready to read.
                                 00h
                                                ;indicates key not present
     = 0000
                 nokey
                         equ
                 const: proc
E9A1
                         check if any translated keys are pending
E9A1 3AC2E9
                         ld
                                a,count
E9A4 B7
                         ога
E9A5 2006 *E9AD$
                         jrnz
                                const5
                         if no xlated keys pending, check keyhit flag
E9A7 3A5EEF
                         LO
                                 A. LKEY
                                                Get Key hit flag
E9AA EE00
                         хгі
                                 nokey
E9AC C8
                                                :If cata not available
                         RZ
E9AD
                 const5:
E9AD F6FF
                         OR I
                                 OFFh
E9AF C9
                         RET
```

```
SORCIM 80%x Assembler ver 3.5E <:/55/7= 59:92 Page 27
Osborne CP/M 2.2 CBIGS.
                                                               E:OCCBIO83.ASM
                  ; Routine name: KEYINP - gets keystroke from rom kbd driver. Translates
                                           the codes 80h to 8fh as per table.
                  : Outputs: A = translated code in ASCII
                  ; All registers are destroyed
      = 0080
                  basvio equ
                                  80h
                                                          :lowest value of translatable keys
E980 = 0002
                  xitkey ds
                                  2
                  KEYINP: proc
E982
                          if there are no xlated keys waiting then
                          call the keyboard driver in rom
                          ca 11
E982 CDOFEA
                                  abscrl
E9B5 21C2E9
                          ldk
                                  hi,count
E988 7E
                                  a.[hl]
                          10
                                                          get number of xlated keys
E9B9 B7
                          ora
                                  а
E98A 28C9 ^E9C5$
                                  kinl0
                                                          ; if keys pending then
                          jrz
E9BC DD2AB0E9 $
                          Id
                                  ix,xltkey
                                                          get base address in IX reg
E9CO DD7E
                          db
                                  opph.7Eh
                                                          :simulate LD A. (IX+COUNT)
E9C2 00
                  count:
                          db
                                                          to get next key from table
                                                          increment count
E9C3 34
                          inc
                                  [hl]
E9C4 C9
                          ret
E9C5
                  kin10:
E9C5 1E09
                          ldk
                                  e.low(conin)
E9C7 CD68E6
                          call
                                  romed1
                          When console has returned this code will check
                          for function key and preform some translation
E9CA FE80
                          coi
                                  80h
                                                  :function keys have value
E9CC D8
                          rc
                                                  :80h-8dh
                                                  ido a shift to make pointer
E9CD
    FE8E
                          CD i
                                  8∈n
                                                  ;into table and return if not function key
E9CF DO
                          rnc
E9D0 C827
                          sla
                                  а
E9D2 5F
                          vcm
                                  e•a
E903 1500
                                  d • 0
                          ldk
                                  ix.xitb1
E9D5 DD216BE5 $
                          ldk
E909 0019
                          add
                                  ix•de
                5
E9D3 DD6E00
                          ld
                                  1.[ix+0]
                $
                                  h • [ i x + 1]
E9DE DD6601
                          10
                $
E9E1 DD5E02
                                  e • [ i x + 2]
                5
                          1 d
E9E4 DD5603
                          1d
                                  d.[ix+3]
                                  de.x Itkev
E9E7 ED53B0E9 $
                          sto
E9EB ED52
                          sbc
                                  nl,de
E9ED 70
                          mov
                                  a • 1
E9EE 32C2E9
                          sto
                                  a · count
E9F1 18BF ^E982$
                          jΓ
                                  keyinp
```

```
SCRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 28
Osborne CP/M 2.2 CBIOS.
                                                                E:OCCBIO83.ASM
                  ;**
                  : routine:
                                  CRSTAT
                                  returns status of crt.
                                  crt is always ready
                                  IEOSTAT returns status of ieee
                                  ieee always appears to be ready
E9F3
                  ieostat:
E9F3
                  CRSTAT: proc
E9F3 F6FF
                          or i
                                  OFFh
E9F5 C9
                          ret
                  ; **
                  ; routine name: CRTOUT
                  : inputs: C: output character
      = 0008
                  EF+ESC: =
                                  8
                                                  ;escape flag bit definitions
      = 0001
                  EF+GR: =
                                  1
                  CRTOUT: proc
E9F6
E9F6 3A60EF
                          lda
                                  esch
E9F9
     E509
                          and
                                  ef+esc+ef+gr
                          push
E9FB 2000 AEAOAS
                          jrnz
                                  crtlo
E9FD 79
                          mov
                                  a,c
E9FE FE14
                          cp i
                                  14h
EA00 2008 ^EA0A$
                           jrnz
                                  crt10
EA02 3A68E5
                          Id
                                  a, ansenb
EA05 2F
                          cma
EA06
     3268E5
                          sto
                                  a, ahsenb
                          pop
                                  аf
EA09 C9
                          ret
EAOA
                  crtl0:
                          call
                                  outch
                          pop
                                  af
                          rnz
                          mv i
                                  a + cr
                          cmp
                                  С
                          CZ
                                  ahscrl
                          ret
                          sbrt: outch - calls rom cout routine
EAOA
                  outch:
EAOA 1EOC
                          ldk
                                  e, low(conout)
                                                    ;output to crt
EAOC C368E6
                          jmp
                                  romedl
                          sbrt: abscrl - does auto horizontal scroll if required.
EAOF
                  abscrl: proc
EAOF 3A68E5
                          1d
                                  a, ahsenb
EA12 B7
                          οг
                                  а
EA13 C8
                          ſΖ
EA14 2A5AEF
                          10
                                  hi curs
                                                  ;get cursor
EA17 29
                                  hi •hi
                          add
                          check for cursor in home window
EA18 3E64
                                  a,100
                          ldk
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 29
Osborne CP/M 2.2 CBIOS.
                                                               E:DCCBIC83.ASM
EA1A BD
                          CMD
                                  1
EA18 3809 *EA26$
                          irc
                                  rhc
                                                  :jump if cursor not in home window
EA10 3461EF
                          ld
                                  a, plaad
                                                  check for screen at home
EA20 D6EA
                          sub
                                  vflo
EA22 C8
                          ٢Z
                                                  screen at home
EA23 AF
                          хга
                                  а
                                                  :home screen
EA24 1818 ^EA3E$
                          jr
                                  scrl
EA26
                  rhc:
                          check right-hand margin
EA26 3A61EF
                          ld
                                  a piaad
                                                  ;a=horizontal screen position
EA29 D6EA
                          sub
                                  vflo
EA28 C664
                          add
                                  a, 100
                                                  ;window size*2 (49)
EA2D BD
                          cmp
EA2E DA3BEA
                          jс
                                  :30
                                                  *move screen when cursor about to go off
                                                  the right hand margin
                          check left hand margin
EA31 D65A
                          sub
                                  90
EA33 BD
                          cmp
                                                  ;check left margin
EA34
     D8
                          ΓC
                                                  cursor in window return
EA35 70
                          mov
                                  a, i
EA36 D60A
                          sub
                                  10
EA38 C8
                          ΓZ
                                                  return if cusor at column 2
EA39 1803 ^EA3E$
                          jг
                                  scri
EA3B
                  :30:
EA33 7D
                          mov
                                  a . 1
EA3C D664
                          ธน๖
                                  100
EA3E
                  scrl:
EA3E 1F
                          гаг
EA3F C620
                                  a, ' '
                          add
EA41 2161EA
                          lκ
                                  hl +escsq+3
EA44 77
                          sto
                                  a.[h!]
EA45 3A62EF
                                  a piand
                          l d
EA48 E61F
                          and
                                 1fh
                                 a, 1
EA4A C620
                          add
EA4C 28
                          dec
                                 hl
EA4D 77
                          sto
                                 a.[h1]
                                                         ;escsq+2 = vert. coords
EA45 28
                          dec
                                 hΙ
EA4F 28
                          dec
                                 hi
                                                         ipoint to start of esc seq
EA50 0604
                          Ik
                                 b • 4
EA52
                  :50:
EA52 C5
                          push
                                 bc
EA53 E5
                          push
                                 hΙ
EA54
     4 E
                          10
                                 c.[h]]
EA55
     CODAEA
                          call
                                 outch
EA58
     £1
                                 hI
                         gog
EA59
     C 1
                          pop
                                 bс
EA5A 23
                          inc
                                 hl
EA5B 10F5 ^EA52$
                         dinz
                                 :50
EASO C9
                         ret
EA5E 13
                  escsq
                         db
                                 esc
                                                         ;set screen coord escape sequence
EASF 53
                         ďρ
                                 •5•
EA60 00
                          ďΦ
                                 С
                                                         ;** y coord
EA61 00
                          ďb
                                 C
```

‡** x coord

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 30
                                                               E:OCCBIG83.ASM
Osborne CP/M 2.2 CBICS.
                 : **
                  : routine:
                                  TATEGE
                                  gets status of output device attached to serial port
EA62
                  SOSTAT: proc
EA62 COD9EA
                          call
                                  acistat
                                                  :get 6850 status
EA65 E602
                                  si.trdy
                          an i
EA67 CS
                          rΖ
                                                  return with not ready status
EA68 F6FF
                          or i
                                  true
EA6A C9
                          ret
                  ; **
                                  SISTAT
                  ; routine:
                                  gets status of input device attached to serial port
                  SISTAT: proc
EASB
EA68 COD9EA
                          call
                                  acistat
EA6E E601
                          ani
                                  si.rrdv
EA70 C3
                          ΓZ
                                                  return with not ready status
EA71 F6FF
                          or i
                                  true
EA73 C9
                          ret
                  : **
                                  SPINP
                  ; routine:
                                  Inputs a character from the serial port
                                  Resets serfly to show Receive Data Register has
                                  been read (RDRF bit = 0).
                                  A ROM call isn't used to input since the RCM
                                  doesn't fudge status to get around the hardware timing
                                  problem
EA74
                  SPINP: proc
                                  sistat
EA74 CD6BEA
                          call
                                                          if not ready
EA77 28FB ^EA74$
                          Jr z
                                  SPINE
EA79 CD1EEC
                          call
                                  sw2rom
EA7C AF
                          хга
                                                           :reset RDRF bit
EA70 32D8EA
                          sto
                                  a, serfig
                                                           ;get data
EA80 3A012A
                          ld
                                  a,h.srec
EA83 4F
                          mo v
                                  C+a
EA84 C32CEC
                          jmp
                                  sw2ram
                  ;**
                  ; routine:
                                  SPOUT
                                  Cutputs character in req c to the serial port (list device)
                                  Since the ROM doesn't fudge status to get around the
                                  hardware timing problem. output is done directly
EA87
                  SPOUT: proc
EA87 C5
                                                           save character
                          push
                                  bc
EASS CO62EA
                  :1:
                          call
                                  sostat
EA83 28FB ^EA83$
                                  :1
                                                           ; if not ready
                          jΓZ
EA8D C1
                                  bc
                          pop
EASE CDIEEC
                          call
                                  sw2rom
EA91 79
                                  a.c
                          mo v
EA92 32012A
                          sto
                                  a,h.sxmt
                                                           sena chr
EA95 C32CEC
                                  sw2ram
                          jmp
                  : **
```

; routine does serial i/o and does printer protocols

```
Osborne CP/M 2.2 CBIOS.
                                                                E:OCCBIO83.ASM
      = 0011
                  xon:
                                   11h
                  xoff:
      = 0013
                          =
                                   13h
      = 0003
                  etx:
                          =
                                   3
      = 0006
                  ack:
                          =
                                   6
EA98
                  pr tout:
EA98 CD87EA
                          call
                                   spout
EA9B
      3A67E5
                           Id
                                  a, prnter
EA9E
      87
                          ога
                                  а
EA9F
      C8
                          ΓZ
EAAO
      E602
                          ani
                                   2
EAA2 2013 ^EAB7$
                           jrnz
                                   xonxof
EAA4 3EOD
                          mv i
                                  a, Odh
EAA6
      89
                          стр
EAA7
      CO
                          rnz
EAAB 0E03
                           ldk
                                  c,etx
EAAA CO87EA
                          call
                                  spout
CAAB
                  prt10:
EAAD CO74EA
                          call
                                  spinp
EABO E67F
                          ani
                                  7fh
                                                   :mask out parity bit
EAB2 FE06
                          cpi
                                  ack
EAB4 20F7 ^EAAD$
                          jrnz
                                  prt10
EA86 C9
                          ret
EAB7
                  xonxof:
EAB7 CD6BEA
                          call
                                  sistat
EABA B7
                          ora
EABB C8
                          ΓZ
EASC CO74EA
                          call
                                  spinp
EABF E67F
                          ani
                                  7fh
                                                  mask out parity bit
EAC1 FE13
                          Cp i
                                  xoff
EAC3 CD
                          rnz
EAC4
                  prt20:
EAC4 CO74EA
                          call
                                  spinp
EAC7 E67F
                          an i
                                  7fh
                                                  ;mask out parity bit
EAC9
     FE11
                          CP i
                                  xon
EACB 20F7 ^EAC4$
                          jrnz
                                  prt20
EACD C9
                          ret
                  ; **
                  ; routine:
                                  ACICTL
                                  outputs character in c to the ACIA CTL port.
EACE
                  ACICTL: proc
EACE CDIEEC
                          call
                                  sw2rom
EAD1 79
                          mo v
                                  a.c
EAD2 32002A
                          sta
                                  h.sctr1
EAD5 C32CEC
                          jmp
                                  sw2ram
                  : **
                  ; routine:
                                  acistat
                                  returns usart status in A
                          The ringin signal is read from the pia at address 2c00
                          and merged in at the overrun error bit of the acia status
                          A hardware timing problem results in the RDRF (Receive Data
                          Register Full) sometimes being reset before the Receive Data
                  :
                          Register has been read. To get around this, a flag (serflg) keeps
```

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 31

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 32
                                                             E:DCCBIC83.ASM
Osborne CP/M 2.2 CBIOS.
                         track of the correct status. Every time the status register
                         is read, serflg is updated. If the RDRF bit is ever set in the
                         status register, that bit remains high in serflg until the
                         Receive Data Register is read. The RDRF bit from serflg is
                         ORed in with the status register to give the correct status.
     = 2001
                 riport equ
                                 h.vio+1
                 ribit equ
                                 040h
     = 0040
                 ormask equ
                                 020h
     = 0020
                                                        masks out all bits except RDRF
     = 0001
                 RDRFm
                         equ
                                 001h
                                                        :flag to keep track of RDRF bit
EADS 00
                 serfia db
                                 00
                                                        :(to correct for hardware timing problem)
EAD9
                 acistat: proc
                         call
                                 sw2rom
EAD9 CDIEEC
                         lda
                                 riport
                                                         read in ringin signal
EADC 3A012C
                         rrc
                                                         shift ring in to overrun err
EADF OF
                                                         :position
                                                         :get ring in
                         ani
                                 ormask
EAEO E620
EAE2 4F
                         mov
                                 c,a
EAE3 3A002A
                                 h.ssts
                         Ida
                                                         remove overrun error bit
EAE6 E6DF
                         ani
                                 Offh-ormask
                                                         merge ring in bit
EAE8 B1
                         ога
EAE9 4F
                         mov
                                 C+a
                                 serfig
EAEA 3AD8EA
                         lda
                                                         :get RDRF bit
                                 RORFm
EAED E601
                         an i
EAEF 81
                         ora
                                 С
                                                         :save new status
EAFO 32D8EA
                         sta
                                 serfla
EAF3 C32CEC
                         jmp
                                 sw2ram
```

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 33
Osborne CP/M 2.2 CBIOS. E:OCCBIO83.ASM

```
:***
                           IEEE drivers:
                           The routines IEINSTAT, IEINP and IEOUT are used to
                           transfer characters to and from an IEEE device attached to the
                          OSBORNE IEEE port. The address of the device is specified in
                           the cell IE+ADRS. No facility is provided at present to allow a
                           transient programme to specify the device address. Thus the device
                           attached must be addressable as 0 (zero).
                          The function IEINSTAT returns the status of the input device.
                          Unfortunately there is no standard way by which an IEEE device
                          indicates that it has a character. In order to determine this, one
                          has to read the character device. As a CP/M transient can call
                          IEINSTAT many times before calling IEINP to read a char, and IEINSTAT
                          has to read the char to determine the status, the character read has to
                          be buffered till call to IEIN? is made. IEINSTAT reads the device
                          only when the buffer is empty. As zeros are used to indicate
                          that the bfr is empty, a null character can not be read from the
                          IEEE device.
                          IEEE control codes
      = 0040
                  ie+talk equ
                                  40h
                                                           imake talker
      = 005F
                  ie+utik equ
                                  5fh
                                                          :make untalk
      = 0020
                  ie+lstn equ
                                  20h
                                                          ;make listener
      = 003F
                  ie+ulstn eau
                                  3fh
                                                          :make unlisten
EAF6 00
                  ie+adrs db
                                  0
                                                          idevice address (can be moved to
                                                          :BMRAM)
EAF7 00
                  ie+char db
                                                          ie inp char buffer
                  : **
                  ; routine:
                                  IEINSTAT
                                  gets status of the input device attached to ieee port
                                  if a char is present in ie+char then
                                          return with true status
                                  else
                                          make device talker
                                          read the device
                                          if char read then
                                            store in bfr
                                          endif
                                          make untalk
                                          return with status of buffer
                                  endi f
EAF8
                  IEINSTAT: proc
EAF8 3AF7EA
                          Ida
                                  ie←char
EAFB B7
                          ora
EAFC CA02EB
                          jΖ
                                  iei10
                                                          if char present then
EAFF FOFF
                          or i
                                  Offh
                                                            return with true status
EB01 C9
                          ret
EB02
                  ieil0:
                                                          endif
                                                            :make talker
EBO2 3AF6EA
                          lda
                                  ie+adrs
EB05 C640
                          adi
                                  ie+talk
                                                            iget primary address
EB07 4F
                          mov
EB08 1E48
                          ldk
                                  e, low(ieb5c)
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 34
                                                               E:OCCBIO83.ASM
Osborne CP/M 2.2 CBIGS.
                                                            ;output interface message
                                  romcdl
EBOA CD68E6
                          call
EBOD B7
                          ora
                                                            ;try again if error
EBOE 20F2 ^EB02$
                          jrnz
                                  iei10
                          ***secondary address output may be added here***
                                                          :read a char.
                  iei20:
EB10
                          ldk
                                  e.low(ieb7c)
EB10
     1E51
                                  romedl
                          call
E912
     CD68E6
                          bit
                                  7,1
     CB7D
                $
E815
                                                          if error then
                          jrz
                                  iei30
      2801 ^EB1A$
EB17
                                                            inicate no char recvd
                          xra
EB19
     ΑF
                  iei30:
E81A
                                                          stor the char
                          sta
                                  ie+char
E81A 32F7EA
                                          :make untalk
                  iei40:
EB1D
                                  c.ie+utlk
                          mv i
EB10
     0E5F
                                  e.low(ieb5c)
                          ldk
E81F 1E48
                                  romcd1
                          call
EB21 CD68E6
                          ога
EB24 B7
                                  iei40
EB25 20F6 ^EB10$
                          jrnz
                          return with status of the char
                                  ie←char
EB27 3AF7EA
                          Ida
                          ora
EB2A 87
                          ΓZ
EB2B C8
                                  Offh
                          or i
EB2C F6FF
EB2E C9
                          ret
                  **
                  ; routine:
                                   IEINP
                                   Reads a character from IEEE port
                  IEINP: proc
EB2F
                                   ieinstat
EB2F C)F8EA
                           call
                                                           ;wait till char avail
E832 28F8 ^E82F$
                                   ieinp
                           jr z
                                   hl•ie+char
EB34 21F7EA
                           ldk
                           1 d
                                   a.[hl]
E837 7E
                                                           clear the buffer
                           sto
                                   0,[h1]
EB38 3600
                           ret
EB3A C9
                   : **
                   : routine:
                                   Outputs the character in reg C to IEEE port
                                   Uses ROM resident primitives.
                   IEOUT: proc
 EB3B
                                                           save the char
                           push
                                   bc
 E838 C5
                                                             ;make listener
                   ieo05:
 EB3C
                           lda
                                   ie+adrs
 EB3C 3AF6EA
                                                             iget primary address
                           adi
                                   ie+1stn
 EB3F C620
                                   c,a
                           mo v
 E841 4F
                                   e.low(ieb5c)
                           ldk
 EB42 1E48
                                                              coutput interface message
                                   romedl
                           call
      CD68E6
 EB44
 EB47 B7
                           ога
                                                             try again if error
                           irnz
                                   ieo05
 EB48 20F2 ^EB3C$
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 35
Osborne CP/M 2.2 CBIOS.
                                                             E:OCCBIO83.ASM
                         ***secondary address output may be added here***
                 ;
EB4A
                 ieo20:
EB4A 0600
                         mv i
                                 b • 0
                                                        ido not send eci
EB4C C1
                         pop
                                 b
EB4D
                 ieo22:
E840 C5
                         push
                                 b
                                                        save char again in case of retry
EB4E 1E4E
                         ldk
                                 e · low( ieb6c)
EB50 CD68E6
                         call
                                 romed1
E853 C1
                         gog
EB54 B7
                         ога
E855 20F6 ^E34D$
                         jrnz
                                 i e o 2 2
                                                        try again if error
                                                        ;make unlisten
EB57
                 ieo40:
EB57 0E3F
                         mv i
                                c,ie+ulstn
EB59 1E4B
                         ldk
                                 e · low(ieb5c)
EB5B CD68E6
                         call
                                 romedl
EB5E B7
                         ora
EB5F 20F6 ^EB57$
                         jrnz
                                 ieo40
E861 C9
                         ret
```

```
Osborne CP/M 2.2 CBIOS.
                                                               E:OCCBIO83.ASM
                  : ***
                  ;
                          The Parallel port is actually the IEEE port driven with the centronix
                          protocol. The bit assignments of the PIA and PI3 are as follows:
                          PIA0-7 = data bus
                          PIBO = 0, data bus is output. 1, data bus is input
                          PI81 = set to 1.
                          PIB2 = set to 0.
                          PI63 = 0 output, 1 Input
                          PIB4 = not used
                          PIB5 = output strobe. Active = 1.
                          PIB6 = 0, printer busy. 1, printer is ready.
                          PIB7 = not used.
                          CA2 = going low indicates to device that we are busy.
                          CA1 = low to high transition gates input data to port a.
                          The port is bidirectional but only one direction
                          can be active at any time. The direction of port is determined
                          by which routines are called. If postat or parout are
                          called, it is made an output port and an input port if
                          pistat or parinp are called.
                          port registers
      = 2900
                  pa.dta equ
                                  h.ieee+0
      = 2900
                  pa.dir equ
                                  pa.dta
      = 2901
                  pa.ctl equ
                                  h.ieee+1
      = 2902
                  pb.dta equ
                                  h•ieee+2
      = 2902
                  pb.dir equ
                                  pb.dta
      = 2903
                  pb.ctl equ
                                  h.ieee+3
                  :
                          port ctl register constants.
      = 002A
                  pa.cdr equ
                                  00101010b
                                                  :to address port a direction
      = 002E
                  pa.cdt equ
                                  00101110b
                                                  to address port a data and set
                                                  port a in input program handshake mode.
      = 0000
                  pb.cdr equ
                                  000000000
                                                  ;to address port b direction
                                                  ;to address port b data
      = 0004
                  pb.cdt equ
                                  00000100b
                          direction register constants
      = 00FF
                  pa.dro equ
                                  Offh
                                                  port a output mode
      = 0000
                  pa.dri equ
                                  coh
                                                  port a input mode
      = 00BF
                  pb.dr
                          equ
                                  0bfh
                                                  ;port b direction
      = 0002
                  pb.dto equ
                                  00000010b
                                                  :port b data for output
      = 0008
                  pb.dti equ
                                  00001011b
                                                  port b data for input
      = 0040
                  pp.ordy equ
                                  01000000b
                                                  coutput rdy bit in pib
      = 0080
                  pp.irdy equ
                                  10000000b
                                                  ; input rdy bit in pia ctl reg
      = 0020
                  strb
                                  00100000Ь
                          equ
                                                  strobe bit in port b
                          port modes
      = 0000
                  pp-undef equ
      = 0001
                  pp.out eau
                                  1
      = 0002
                  ni.ca
                         equ
EB62 00
                  pp.mode db
                                  pp.undef
                  ***
                  ; sbrt:
                                  CV2OP.
                                                  initializes the port to a parallel output
                                                  port.
E353
                  cv2op: proc
EB63 3A62E3
                          Ida
                                  pp.mode
```

SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 36

```
SDRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 37
Osborne CP/M 2.2 CBIOS.
                                                                 E:OCCBIO83.ASM
E866 FE01
                           cpi
                                   pp.out
EB68 C8
                           ٢Z
                                                    return when in output mode
                           set port a to output on all lines
£869 3E2A
                           Ik
                                   a,pa,cdr
EB6B 320129
                           sta
                                   pa.ct1
                                                    select direction reg
EB6E 3EFF
                           lk
                                   a.pa.dro
E870 320029
                           sta
                                   pa.dir
                                                    ;output constant to dir. reg to put
                                                    a port in output mode
EB73
     3E2E
                           ١k
                                   a,pa.cdt
EB75 320129
                           sta
                                   pa.ctl
                                                    ;select port a data reg.
E878
     3E00
                           lk
                                   a,pb.cdr
EB7A 320329
                           sta
                                   pb.ctl
                                                    select port b direction
E370
     3EBF
                           lk
                                   a.pb.dr
EB7F
     320229
                           sta
                                   pb.dir
                                                    :all lines are output except the output
                                                    busy signal on bit 6
EB82
     3504
                           lk
                                   a, pb.cdt
EB84
      320329
                           sta
                                   pb.ctl
                                                   select data register
EB87
      3E02
                           lk
                                   a.pb.dto
EB89
     320229
                           sta
                                   pb.dta
                                                   initialize port b data
EB8C
      3E01
                           lk
                                   a · pp · out
E88E
     3262E8
                           sta
                                   pp.mode
EB91
     C9
                           ret
                  ***
                  ; sbrt:
                                   CV2IP.
                                                   initializes the port to a parallel input
                                                   port.
EB92
                  cv2ip:
                          proc
EB92
     3A62EB
                           1 da
                                   pp • mode
EB95
     FE02
                           cpi
                                   pp.in
EB97
     C 8
                           ٢Z
                                                   return when in input mode
                           set port a to input on all lines
EB98
      3E2A
                           lk
                                   a · pa · cdr
EB9A
      320129
                           sta
                                   pa.ctl
                                                   select direction reg
EB9D
     3E00
                           lk
                                   a.pa.dri
EB9F
     320029
                           sta
                                   pa.dir
                                                   ;output constant to dir. reg to put
                                                    a port in input mode
EBA2
     3E2E
                           lk
                                   a,pa.cdt
EBA4
     320129
                           sta
                                   pa.ctl
                                                   ;select port a data reg.
EBA7
     3E00
                           lk
                                   a, pb.cdr
EBA9
     320329
                           sta
                                   pb.ct1
                                                   select port b direction
EBAC
     3EBF
                           lk
                                   a.pb.dr
EBAE
     320229
                           sta
                                   pb.dir
                                                   fall lines are output except the output
                                                   busy signal on bit 6
E881
     3E04
                           lk
                                   a,pb.cdt
EBB3
     320329
                           sta
                                   pb.ctl
                                                   ;select data register
EBB5
     3E08
                           lk
                                  a.pb.dti
EBB8
     320229
                           sta
                                   pb.dta
                                                   ;initialize port b data
EBB3
      3E02
                           lk
                                   a, pp.in
EB8D
     3262EB
                          sta
                                   pp.mode
E8C0
     C9
                          ret
                  ;**
```

; routine:

POSTAT

attached to the ieee port

gets status of the parallel (centronix) printer

EC07 28FB ^EC04\$

jrz

parout

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 38
Osborne CP/M 2.2 CBICS.
                                                                E:OCCBIO83.ASM
                  POSTAT: proc
EBC1
EBC1 CD1EEC
                          call
                                  sw2rom
EBC4 CD63E8
                          call
                                  CV20D
                                                   convert to output
EBC7 3A0229
                          Ida
                                  pb.dta
                                                   iget port b data
EBCA E640
                          an i
                                  pp.ordy
EBCC 2802 ^EBDO$
                          jrz
                                  pos10
EBCE F6FF
                                  true
                          or i
EBD0
                  poslo:
EBDO C32CEC
                                  sw2ram
                          jmp
                  ; **
                  ; routine:
                                  PISTAT
                                  gets status of the input device attached to the
                                  parallel port
EBD3 00
                  piacti do
EBD4
                  PISTAT: proc
EBD4 CD1EEC
                          call
                                  sw2rom
EB07 CD92EB
                          call
                                  cv2ip
EBDA 3AD3E8
                          Ida
                                  piactl
EBDD
     E680
                          an i
                                  pp.irdy
EBDF
     200A ^EBEB$
                                                   ; if saved status indicates there is a char
                          jrnz
                                  pis20
                                                   ; in the PIA
EBE1 3A0129
                          Ida
                                  pa.ct1
EBE4 32D3E8
                                                   this is saved as reading the
                          sta
                                  piactl
                                                   ipia clears the status
EBE7
     E680
                          an i
                                  ybai.qq
EBE9
     2802 ^EBED$
                          jΓZ
                                  pis30
6883
                  pis20:
EBEB F6FF
                          or i
                                  true
EBED
                  pis30:
EBED C32CEC
                          qmį
                                  sw2ram
                  : **
                  : routine:
                                  PARINP
                                  inputs a character from parallel port.
EBFO
                  PARINP: proc
EBFO CDD4EB
                                  pistat
                          call
EBF3 28FB ^EBF0$
                                  parino
                                                   ;wait till char in pia
                          jrz
EBF5 CD1EEC
                          call
                                  sw2rom
EBF8 AF
                          хга
EBF9 32D3EB
                          sta
                                  piactl
                                                   clear saved status
EBFC 3A0029
                          Ida
                                  pa.dta
EBFF 2F
                          cma
                                                   :invert data
EC00 4F
                          mov
                                                   also in c
                                  C • a
ECO1 C32CEC
                          qmi
                                  sw2ram
                  ; **
                                  PAROUT
                  : routine:
                                  outputs the character in c to the IEEE port treating the
                                  port as a parallel port.
EC04
                  PAROUT: proc
ECO4 CDC1E8
                          call
                                  postat
```


EC09	CD1EEC ·	call	sw2rom	
EC00	79	me v	a + C	
ECOD	25	ста		;invert data
EC02	320029	sta	pa•dta	
EC11	3E 22	lk	a.pb.dto+strb	
EC13	320229	sta	pb•dta	;set strobe
EC16	3E02	lk	a.pb.dto	7500 301 000
EC18	320229	sta	pb.dta	clear strobe
EC13	C32CEC	jmp	sw2ram	701021 301030

```
SORCIM 803x Assembler ver 3.55 <:/55/7= 59:92 Page 40
Osborne CP/M 2.2 CBICS.
                                                                E:OCCBICB3.ASM
                  $ 浓浓浓
                  ; sbrt:
                                  SWIZEOM
                                  switches to rom
                                  saves all registers
EC15
                  SW2ROM: proc
EC15
                          di
EC1E +F3
                          DB
                                  OF 3h
EC1F F5
                                  af
                          push
EC20
                          enarom
EC20 +
                          οI
EC20 +F3
                          DВ
                                  0F3h
EC21 +0300
                          OUT
                                  C
EC23 +3E00
                          LDK
                                  A+C
EC25 +3208EF
                          STO
                                  MARMCR.A
EC28 +
                          ΕI
EC28 +F5
                                  OFBh
                          D9
EC29 F1
                                  af
                          pop
EC2A
                          еi
EC2A +FB
                          08
                                  0F3h
EC28 C9
                          ret
                  ***
                  ; sbrt:
                                  SWZRAM
                                  switches to ram
                                  preserves all registers
EC2C
                  SW2RAM: proc
EC2C
                          dí
EC2C +F3
                          08
                                  CF3h
EC2D F5
                                  af
                          push
EC2E
                          disrom
EC2€ +
                          ΒI
EC2E +F3
                          DB.
                                  OF 3h
EC2F +D301
                          DUT
                                  1
EC31 +3E01
                          LDK
                                  A . 1
                          STO
                                  A+ROMRAM
EC33 +3208EF
EC36 +
                          εI
                                  OFBh
EC36 +F3
                          DB
EC37 F1
                                  af
                          pop
EC38
                          еi
EC38 +FB
                          03
                                  0F3h
EC39 C9
                          ret
      = EC3A
                  xxx:
                          if
                                  xxx>MR AMEX
      = 0000
                                  CODE TOO LARGE ..
                          error
                          end if
EC3A = EC70
                          OR G
                                  EIOS+770H
                                                           This is location ED70h in 60K system
EC70 00CF
                          DW
                                  CCP
                                                           This location needed by RCM for
                                                           relocating boot leader
                                                           :last sector read bombs out part
                                                           iof BMRAM in 60% system
```

:OCCRAM2.ASM

EF30 = 0020

CSV:

0.5

CSVS

```
SORCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 41
Debug Monitor RAM Storage.
                                                           F:OCCRAM2 .ASM
                       Used to assembly ROM resident and CBIDS
EC72 = ED70
                        ORG
                                MRAMEXT
ED70 = 0002
                 copadr: DS
                                2
                                                       This location is assigned in RICS
                                                       and filled in by loader in ROM
ED72 = 0006
                 KEYLST: DS
                                KL+LEN#KLE+LEN
ED78 = ED80
                        ORG
                                MAAM
                         Host disk xfer buffer and...
                         Format track template holding buffer
E080
                 HSTBUF:
ED80 = 0180
                                256+128
                        Directory Buffer
     = EE80
                 DIRBUF: =
                                HSTBUF+256
EF00 = 0006
                 TEM
                        DS
     = EF01
                 RNDV
                                TEM+1 Frandom number seed
                        =
     = EF02
                                RNDV+1 +DW ERCHT
                 ERCNT =
     = EF04
                 RTRC
                                ERCNT+2 :retry count
     = EF05
                 RTRY
                                PTRC+1
EF06 = 0001
                 MPCHR DS
                                        :prompt character
EF07 = 0001
                 ECHOP
                                1
                                        :=0. list ehco off
EF08 = 0001
                 ROMRAM DS
                                       :0= RAM. 1= ROM
EF09 = 0006
                 DSTS8 DS
                                        Disk status bytes
                        Disk operation temps and control
EFOF = 0002
                 DMADR DS
                             2
                                    ;Address for read/write Disk
EF11 = 0002
                 DMAADR DS
                                2
                                        (CEIOS, users DMA
                        Note order of xxxSEC.xxxTRK.xxxDSK must be maintained
                        along with length (1.2.1).
EF13 = 0001
                 SEKDEL: DS
                              - 1
                                      :Set for seek-restore command in RCM
                                        ;depends on disk type. Siemens = 3h. MPI = 3h.
                 SAVSEC DS
EF14 = 0001
                                       :last sector requested
                                1
EF15 = 0002
                 SAVTRK DS
                                2
                                       :last track requested
EF17 = 0001
                 SDISK DS
                                1
                                        :Selected disk drive (0.1)
     = EF14
                 ACTSEC =
                                SAVSEC
     = EF15
                 ACTTRK =
                                SAVTRK
     = EF17
                 ACTOSK =
                                SDISK
EF18 = 0001
                 SEKSEC DS
EF19 = 0002
                 SEKTRK DS
                                2
EF18 = 0001
                 SEKDSK DS
EF1C = 0001
                 HSTSEC DS
EF10 = 0002
                 HSTTRK DS
EF1F = 0001
                 HSTDSK DS
FE20 = 0001
                 TEMSEC DS
                                        ;Used in bios only
EF21 = 0001
                 RDFLAG DS
                                1
                                        Read flag
                 ERFLAG DS
EF22 = 0001
                                1
                                        #Error reporting
                 WRITYPE DS
EF23 = 0001
                                        :Write operation type
EF24 = 000C
                 ALV:
                        0.5
                                ALVS
```

```
SDRCIM 308x Assembler ver 3.5E <:/55/7= 59:92 Page 42
                                                          E:OCCRAM2 .ASM
Debug Monitor RAM Storage.
                      310S blocking-deblocking flags
                                       thost active flag
EF50 = 0001
                HSTACT: DS
                              1
6F51 = 0001
                HSTWRT: DS
                                       :Host written flag
EF52 = 0001
                UNACHT: DS
                                       :Unalloc rec count
                               1
EF53 = 0002
                UNATRK: DS
                                       Track
                               2
EF55 = 0001
                UNASEC: DS
                                       Sector
                               1
£F56 = 0001
                LOGSEC: DS
                                       :Logical sector
FF57 = 0002
                LDADR DS
                                       ¿Zero if locked keyboard
EF59 = 0001
                KEYLCK DS
                               1
                                       current cursor position
EF54 = 0002
                 CURS
                        Keyboard scan temporaries
                                       Tem holding key
EF5C = 0001
                 TKEY .
                        2.0
                             1
                                       Debounce key
EF50 = 0001
                 HKCNT
                        DS
                               1
                             1
                                       :Last valid kevstroke
                        DS
EF5E = 0001
                 LKEY
                        25
                                       :Last control key
                 CKEY
                               1
EF5F = 0001
                                       :ESC holding flag
EF60 = 0001
                 ESCH
                 :PIAAD and PIABD must be kept sequential, PIAAC first
                 idependency in VC+HOME of 2MKEY.asm
                                       Holds last PIA-A data
                 PIAAD: OS
                             1
EF61 = 0001
                                       Holds last PIA-6 cata
                PIABD: OS
EF62 = 0001
                               1
                        Calendar month, day year
5E63 = 0003
                 IDAY DS
                             2
                 IMONTH =
                               IDAY+1
     = EFó4
                               IDAY+2
     = EF65
                 IYR
                        Wall clock time cells and disk active
                        see UPTIM: in BMKEY-asm
                 HOURS: DS
EF65 = 0006
                                HOUR S+1
     = EF67
                 MINS: =
                                HOUR S+2
     = EF68
                 SECS: =
                                HOURS+3
     = EF69
                 SEC6: =
                        Used to deselect drive when there is NO activity
                       on drive for a seconds. See FOSK routine
                             HOURS+4 :=0 by FDSK, Used by UPTIM
                 DACTVE: =
     = EF64
                 SELCAT: =
                                HOURS+5 : AG bell timer cell
     = 8568
                                     max #columns in a logical line
FF60 = 0001
                 LLIMIT DS
                                *LLINIT = *.LLIGIT. *h. *
                        MSG
                        Disk drive current positions
                            2 :Last selected drive
                 LOSEL: DS
EF6D = 0002
                                LDSEL+1 :Last track used for non-selected drive
                 LOTRK =
     = EF6E
                                2 ;save current stk ptr
EF6F = 0002
                 ISSTK: DS
                        Interrupt stack
EF71 = 0028
                        0.5
                             20*2
FF99 = 0000
                 ISTK: DS
                                0
```

Stack entry

```
SORCIM 803x Assembler ver 3.5E <:/55/7= 59:92 Page 43
Debug Monitor RAM Storage.
                                                             E:OCCRAM2 .ASM
EF99 = 0028
                                 20#2
EFC1
                 310STK:
EFC1 = 0000
                 ROMSTK: DS
EFC1 = 0001
                 ACIAD: DS
                                         :last command byte written to ACIA
                                 1
EFC2 = 0004
                 R179x: DS
                                         :179x register save area
                                 4
EFC6 = 0001
                 KBDLY: OS
                                 1
                                         keyboard debounce-delay cell
                 since CP/M CANNOT boot off R: this cell is used
                 ito invert the names of the 2 drives:
                         =0, all normal, A=A:, B=B:
                         =1. all inverted. A=3:, B=A:
EFC7 = 0001
                 DSKSWP DS
                         Z30 Alternate Register Set
EECS.
                         ALIGN 10h
EFC8 += 0008
                         DS
                                 (*+(10H)-1)/(10H)*(10H)-*
EF00
                 RAGS:
EFD0 = 0002
                 DESAX: DS
                                 2
                                         :05.
EF02 = 0002
                 BCSAX: OS
                                         :30
                                 2
EF04 = 0002
                 AFSAX: DS
                                         : 4 = *
                                 2
EFD6 = 0002
                 HLSAX: OS
                                         :HL
                                 2
EFD8 = 0002
                 IXSAX: DS
                                 2
                                         :1X
EFDA = 0002
                 IYSAX: DS
                                         :IY
                                 2
EFDC = 0002
                 ZG :XAZVI
                                         :Interrupt page register
                         8080 Register Save Area.
EFDE
                         ALIGN 10h
EFDE += 0002
                         DS
                                 (*+(10H)-1)/(10H)*(10H)-*
EFE0
                 REGS:
EFE0 = 0001
                 ESAVE: DS
                                 1
                                         :E Register save location
EFE1 = 0001
                 DSAVE: DS
                                         *D Register save location
                                 1
EFE2 = 0001
                 CSAVE: DS
                                         C Register save location
                                 1
EFE3 = 0001
                 BSAVE: DS
                                 1
                                         :3 Register save location
EFE4 = 0001
                 FSAVE: DS
                                 1
                                         :FLAGS save location
EFE5 = 0001
                 ASAVE: DS
                                         A Register save location
                                 1
EFE6 = 0001
                 LSAVE: DS
                                 1
                                         L Register save location
EFE7 = 0001
                 HSAVE: DS
                                 1
                                         iH Register save location
EFE3 = 0002
                 PSAVE: DS
                                         :PGM CCUNTER save location
EFE4 = 0002
                 SSAVE: DS
                                         JUSER STACK cointer save location
EFEC = 0002
                 BKP4:
                         DS
                                 2
                                         :last breakpoint address
EFEE = 0001
                 BKPC: DS
                                 1
                                         :Contents of bkp
EFEF = 0001
                 VRIDEE DS
                                         FLAST VERTICAL OFFSET TAKEN FROM COUT
                         Interrupt Jump Vector is between EFF8. EFFF.
                         Encx MRAM
```

no ERRORs. 517 Labels, 6AD5h bytes not used. Program LWA = EFFOn.

			E0351M	2036	Assembler	W0.5	3.55	/./55/	7= 59:9	2 Page 44
Cst	orne CA	7M 2.2		503 X	ASSERDIEL	A 6 1	2.02	(./ 55/		CCRAM2 .ASM
S	9FREQ	OFAO	. 0 11 -							
n	ACIAD	EFC1	43# 5	21476						
	ACISTA		5/46 5/47	31#45		32#1	4			
	ACK	0006	31# 5	31/22		J	•			
	ACMD	E589	6#24	15/45						
	ACTOSK	EF17	19/48	20/10	41#43					
	ACTSEC		19/54	20/14		41#4	+1			
	ACTTRK		19/51	20/12	2 41#42					
n	AFSAX	EFD4	43#23 27/16	28#51						
	AHSENB		21710 6# 4	28/30		28/5	52			
s	ALIGN	mac	43/19	43/33			-			
•	ALV	EF 24	7/28	7/41						
s	ALVS	0000	8/ 2	41/58	3					
	ALVSZ	00 OC	4#12	7/28	3 7/31	7#3	31	7/41	7/44	7#44
			8/ 2							
	ASAVE	EFE5	43#40							
1	3ASVLO 3CCP	6748	27# 9	15#16						
	3CPM	E73A	15/ 3 15# 9	15/13						
n	3CSAX	EFD2	43#22	13/1.	,					
••	3005	0706	3#15	15/3	5					
n	3ELCNT		42442							
	SCIB	E500	3#14	5/ 1	3 6/54	15/	34	40/49		
	BIOSTK		10/24	43#	2					
	BKPA	EFEC	43#46							
n	BKPC	EFEE	43#47		_					
_	BRATE	E569	6# 5	14/5	ſ					
n	BSAVE	EFE3 E58A	43#38 6#28	6/3	1 15/40					
	CAUTOL		6/28	6#3						
s	CBIOSV		16/11		_					
_	CROOT	E70C	5/10	1443	9					
	CCP	CFOO	3#13	3/14	4 3/15	14/	51	15/ 5	15/10	15/28
			15/54	16/2	2 40/50					
	CCPADR		41# 4	11/5	2 14/50	16/	26			
s	CDISK	0004 EF 5 F	11/49 42#18	11/5	2 14730	157	Z 4			
11	CNIN	E910	5/13	22#3	7					
	TUGNO	E915	5/14	22#4						
	CNSTA	E90B	5/12	22#3						
	CNTRLO		6/ 8	6#3						
	CNTRL1		6/ 9	6#3						
	CNTRL2		6/10	6#3						
	CNTRL3		6/11	6#3 6#3						
	CNTRL4		6/12 6/13	6#3 6#3						
	CNTRL6		6/14	6#3						
	CNTRL7		6/15	6#4						
	CNTRLS		6/16	6#4						
	CNTRL9		6/17	6#4						
	CONIN	E509	5#13	27/2						
	TUUNCS		5#14	21/2						
	CONST	E9A1	24/45	26#1						
	CONST5		26/18 26/16	26#2 27/1		27/	50			
s	S OUNT CR	E902 000D	26/16 16/ 3	16/1		211.	JU			
3	CRSTAT		25/ 2	28#						
	CRTIO	EAGA	28/26	28/2						
			-							

			SORCIM	808x A	ssembler	ver 3	•5E <:/5	5/7= 59:	92 Page 45
0s	borne C	P/M 2.2	C810S.			•0.	• > = (•,)		92 Page 45 GCCRAM2 ASM
	CRIOUT	E9F6	24/57	25/ 7	28#22				
n	CSAVE	EFE2	43#37						
	CSV	EF30	7/27	7/40	41#59				
s	CSVS	0020	41/59						
	SSVSZ	0020	4#13	7/27	7/30	7#30	7/40	7/43	7#43
	CUNACT		12#25	13/12					
	CURS CV2IP	EF54	28/56	42#12					
	CV21P	EB92 EB63	37#28 36#59	38/21					
n	DACTVE		42#40	38/ 3					
s	DBUF	0080	15/19						
	DESAX	EFDO	43#21						
sD	10	mac	9/21	10/21	10/29	10/39	10/43	14/43	40/ 7
			40/11	40/23	40/32	10,5,	10,43	14/43	407 1
	DIRBUF		7/25	7/38	41#17				
n	DIROM	0001	3#46						
_	DISPCH		22/49	22/56	23/ 3	23/10	23/34	23#38	
s	DISROM		10/42	14/42	40/31				
s	DISSTK DMA	0080	24/12	24#39					
•	DMAADR		12/53	10400					
	DMADR	EFOF	15/22	19/23 41#30	41#31				
	DONE	E7BC	15/50	15/53	16#13				
	DONEO	E7C7	16/16	16#19	10,15				
	DONE 1	E7CA	15/59	16#21					
	NWOG	E59E	6/20	6#45					
	DPBASE		7#19	11/38					
	DPBGEN		4#50	7/54					
	DP BS 1	E634	7/26	7/39	7#51				
_	DPHGEN DSAVE		4#16	7/21	7/34				
*1	DSKS1	EFE1	43#36						
n	DSKSMb	0000 EEC7	3#30 43#14	7/54					
	DSPCH1		24#17	24/19					
	DSPRET		24/29	24#33					
n	DSTSB	EF09	41#27	L 1/1/37					
n	ECHOP	EF07	41#25						
	EFESC	8000	28#19	28/24					
_	EFGR	0001	28#20	28/24					
sD	ΕI	mac	9/28	9/46	10/34	10/48	10/53	10/57	14/48
s	ENAROM		40/16	40/19	40/37	40/40			
-	ENROM	0000	10/28 3#45	40/10					
	EOTSL	E5A0	5#45 6/22	6# 47					
	ERCNT	EF02	41#21	41/22					
	ERFLAG	EF22	17/16	18/16	18/23	20/41	20/48	21/ 5	11466
n	ESAVE	EFEO	43#35			20, 11	20740	217 5	41#55
s	ESC	0013	29/53						
	ESCH	EF60	15/26	28/23	42#19				
	ESCSQ	EA5E	29/32	29#53					
-	ETX Falsé	0003 0000	31# 4	31/17					
s s	FCB	0000							
3	FILL	E848	17/11	10/0	10811				
	FILL3	E85C	17/11 19/17	18/ 9 19#19	19#11				
	FILL4	E874	19#35	19/41					
	FILL5	E883	19/38	19#44					
	FILL6	E886	19/32	19#46					,
	FINAL	E8C6	19/60	20#21					
	FLUSH	ESAA	11/3	18/22	19/44	20# 3			

n IXSAX EFD8

43#25

```
SDRCIM 808x Assembler ver 3.5E <:/55/7= 59:92 Page 46
Osborne CP/M 2.2 CBIOS.
                                                              E:OCCRAM2 .ASM
n FMTJ E539
                   5#31
  FNL1 E3D6
                   20#36
                          20/45
   FPYSIS 0010
                   3#24
                           3/32
n "SAVE EFE4
                  43#39
S FWAVM FOOD
   GODISP E918
                  22/33
                                  22#45
                          22/39
   GOROM E694
                  10/37
                          10#56
                                  36/27
s 4.1EEE 2900
                  36/24
                          36/25
                                          36/29
s H.SCTR 2A00
                  31/49
s H-310 2A00
s 4.SREC 2401
                   30/36
                  32/21
s H.SSTS 2A00
                  30/55
s H.SXMT 2A01
                  32/ 7
s H.VIO 2000
n HKCNT
         EF50
                   42416
n HLSAX EFD6
                   43#24
   HOME
         E69F
                   5/18
                          11# 7
                                  15/ 7
   HOURS EF66
                           42/34
                                  42/35
                                           42/35
                                                  42/40
                                                         42/42
                   42#33
                   43#42
n 4SAVE EFE7
                   11/10
                                  19/28
                                           42# ?
   HSTACT EF50
                          17/20
   HSTBUF ED80
                  15/21
                          19/12
                                  41#13
                                           41/17
                  19/47
   HSTDSK EF1F
                          20/ 9
                                  41#51
   HSTSEC EFIC
                   19/33
                                  20/13
                                           41#49
                          19/53
 n HSTSIZ 0100
                   3#23
                   19/50
                           20/11
                                  41#50
   HSTTRK EFID
   HSTWRT EF51
                   18/15
                          20/ 4
                                  42# 3
   IDAY EF63
                   15/38
                           42#27
                                  42/28
                                           42/29
  JEADRS EAF6
                   33#29
                           33/57
                                  34/53
 n IE81C E53F
                    5#35
 n IE82C E542
                    5#36
 n IE830 E545
                    5#37
 n IE34C F548
                    5#38
                    5#39
                          3 3 / 60
                                  34/19
                                           34/55
                                                  35/17
   IE850 E548
   IE360 E545
                    5#40
                          35/ 8
   1837C E551
                    5#41
                          34/ 8
 n IE880 E554
                    5#42
                                  34/14
                                           34/25
                                                  34/38
   IECHAR EAF7
                   33#31
                          33/50
   IEI10 E302
                   33/52
                           33#55
                                  34/ 3
 n IE120 E310
                   34# 7
                   34/11
                           34#13
   IEI30 EB1A
                          3 4 / 22
   TE140 E310
                   34417
   IEINP EB2F
                   24/54
                          34#35
                                  34/37
   IEINST EAF8
                   24/48
                          33#49
                                  34/36
                          34/54
   IELSTN 0020
                   33#25
                   34#52
                           34/59
   16005 EB30
                   35# 3
 n IEO20 EB4A
                   35# 5
                          35/12
   IE022 E340
   1E040 E857
                   35#15
                          35/20
   IEOSTA E9F3
                   25/ 5
                          28# 3
   TEOUT EB38
                   24/60
                          25/10
                                  34#49
                    9/44
                           42#52
   IESTK EF6F
                          33/53
                   33#23
   TETALK 0040
                   33#25
                          35/16
   IEULST 003F
   IEUTLK 005F
                   33#24
                          34/19
                   42#23
 n IMONTH EF64
   1031TE E566
                    5#58
                          14/55
s 103YTE 0003
                   14/55
                           24/16
 n ISTK EF99
                   42#57
 n IVSAX EFDC
                   43#28
```

Osborne CP/M 2.2		803x	Assembler	ver 3.5	E <:/55	/7= 59:9	Page	
						E • t	JUCKANZ	• A3F
n IYR EF65	42#29							
n IYSAX EFDA	43#27							
n KBDLY EFC6	43#18							
CEYINP E982	24/51	27#12	27/51					
n KEYLCK EF59	4 2 # 11							
n KEYLST ED72	41# 6	2742	,					
KIN10 E9C5	27/20	27#27						
s KLELEN 0002 s KLLEN 0003	41/6 41/6							
n LDADR EF57	42#10							
LDSEL EF6D	42#49	42/50	3					
n LOTRK EF6E	42#50	, 2, 5,	•					
LEFT E59F	6/21	6# 48	<u> </u>					
s LF COOA	16/ 8	16/11						
n LIST E50F	5#15							
n LISTST E52D	5#25							
LKEY EF5E	26/21	42#1	7					
LIMIT EF6C	14/61	42#4	5					
LOGSEC EF56	13/14	17/49	3 42# 7					
n LSAVE EFE6	43#41							
LST E91D	5/15	2 2 # 5						
LSTST E935	5/25	23#3)					
s LVMEM 1000								
s LWAMEM FFFF	3/19							
n MINS EF67	42#34							
n MPCHR EF06 s MRAM ED80	41#24 41/ 9							
S MRAM EDBO S MRAMEX ED70	40/44	41/	2					
MRTRY 0005	3#10	20/3						
s MSEC 000A	7/10	7/5						
MSIZE 003C	3#11	16/						
MVINFO E8F2	17/ 8	17/3	9 21# 3					
NDSK 0002	4#10	7/2	1 7#21	7/34	7#34	11/28		
NOFDD 0902	4#11	7/2	9 7#29	7/42	7#42			
NOKEY 0000	26#12	26/2	2					
s NVDL 0013								
DRMASK 0020	32# 9	32/1						
DUTCH EAGA	28#46	29/4						
PA.CDR 002A	36#32	37/						
PA-CDT 002E	36#33	37/				20.00		
PA-CTL 2901	36#26	37/		37/34	37/39	38/26		
PA.DIR 2900 PA.DRI 0000	36#25	37/ 37/3						
PA.DRO OOFF	36#40 36#39	37/						
PA+DTA 2900	36#24	36/2		39/ 4				
PARINP EBFO	24/53	38#4		277 1				
PARCUT ECO4	24/59	25/		38/60				
PB.CDR 0000	36#35	37/1		30,00				
PB.CDT 0004	36#35	37/1						
PB.CTL 2903	36#29	37/1		37/42	37/47			
PB.DIR 2902	36#28	37/1	5 37/44					
PB.DR 00BF	36#41	37/1	4 37/43					
PB.DTA 2902	36#27	36/2		37/49	38/ 4	39/ 6	39/8	
PB.DTI 000B	36#43	37/4						
98.DTO 0002	36#42	37/1		39/ 7				
PIAAD EF61	29/ 3	29/1						
PIABD EF62	29/34	42#2	-	2011				
PIACTL EBD3	38#17	38/2		38/45				
PIS2O EBEB PIS3O EBED	38/24 38/30	38#3 38#3						
7133U E8EU	5 6 / 3 U	J 0 # j	٠					

Osl	b or ne C	P/M 2.2		808x	Assembler	ver	3.5E	<:/55	/7=		2 Pag	
	PISTAT		24/47	38#19	38/41							
	PNCH	E925	5/16	22#60)							
	POS10	EBDO	38/ 5	38# 8	3							
	POSTAT	EBC1	25/ 4	37#61	38/59							
	PP.IN	0002	36#52	37/30	37/51							
	PP.IRD	0080	36#45	38/23								
	PP.MOD	EB62	36#54	36/60	37/23	37/	29 3	7/52				
	PP-DRD		36#45	38/ 5				., ,,				
	PP.OUT		36#51	36/61								
	PP.UND		36#50	36/54								
	PRINT	E8FD	16/18	21#23								
	PRNTER		5#61	31/ 9								
	PRT10	EAAD	31#19	31/23								
	PRTZO	EAC4	31#33	31/37								
	PRTOUT											
_	PSAVE	EFE8	25/ 8 43#43	31# 7								
13												
	PTRCIN		22/38	24#50								
	PTRCOU		22/45	24#56								
	PTRCST		22/32	24#44								
	PTRLIS		22/55	25# 6								
	PTRLST		23/33	24#61								
	PTRPNC	E989	23/ 2	24#55	•							
	PTRRDR	E981	23/ 9	24#49								
n	PUNCH	E512	5#16									
n	R179X	EFC2	43# 7									
n	RAGS	EF DO	43#20									
	RDFLAG	EF 21	19/11	19/55	41#54							
	RDR	E920	5/17	23# 7								
	ROREM	0001	3 2 # 10	32/27								
	READ	E7D3	5/23	16#29								
_	READER		5#17	10#27								
	REGS	EFE0	43#34									
14	KHC	EA26		20# 0								
_	RIBIT	0040	29/ 2	29# 9								
13			32# 8									
	RIGHT	E590	6/19	6#44								
	RIPORT		32# 7	32/16								
	RNDV	EF01	41#20	41/21								
	ROMCD1	E668	10#12	27/29		33/	51 3	4/ 9	34/	20	34/57	
			35/ 9	35/19								
	ROMODE	E663	5/31	5/32	5/35	5/	36	5/37	5/	38	5/39	
			5/40	5/41	5/42	5/	43	5/44	5/	45	9#48	
	ROMJAP	E66A	5/30	10#15	11/44	15/		0/40	_ •			
	ROMRAM	EF08	9/25	9/35		107		4/46	40/	14	40/35	
			41#26		- · · · · -		-					
	ROMRI	E64F	5/29	9#34								
n	ROMSTK		43# 3	7 IF 2 T								
s	ROMVEC		10/13	15/ 9	20/30							
	RRDK	E527	5#23	101 9	20/30							
	RRI	E533	5#29									
Li												
	RSELDK		5#19	11/41								
	RTRC	EFC4	41#22	41/23								
	RTRY	EF05	20/36	20/44	41#23							
n	RWDK	E524	5#24									
	SIDSM	002E	3#32	7/31	7/44	7/	57					
	SAVADR	E909	20/32	20/37	21#33							
	SAVSEC	EF14	41#37	41/41								
	SAVTRK	EF15	41#38	41/42								
		E53C	5#32	14/59								
	SBAUD	2336	ンドンと									
	SEAUD SCRL	EA3E	29/ 7	29/24								

XLTKEY E980

27#10

27/21

27/47

SCRCIM 308x Assembler ver 3.5E <:/55/7= 59:92 Page 49 Osborne CP/M 2.2 CBIGS. E:DCCRAM2 .ASM 41/43 SDISK EF17 41#39 n SEC6 EF69 42#36 n SECS EF68 42#35 13# 9 SECTRN ESFA 5/26 n SEKDEL EF13 41#35 SEKDSK EF18 11/30 19/35 19/46 41#47 19/22 19/34 19/35 19/52 21/ 7 41#45 SEKSEC EF18 19/14 19/49 41#46 SEKTRK EF19 11/12 11/13 12/ 9 17/45 SELD1 E6D1 11/29 11#49 SELDSK E680 5/19 11#19 SERFLG EADS 30/35 32#11 32/25 32/29 SETOMA E6F5 5/22 12#52 15/20 n SETRRM E644 9#16 SETSEC ESFO 5/21 12#37 5/20 12# 8 SETTRK E6DD 6/ 5 s \$1.120 0055 s \$1.RRD 0001 30/16 SI-S16 0055 s \$1.564 0056 s S1.TRD 0002 30/ 6 SIGNON E792 15#61 16/17 SISTAT EA6B 24/45 30#14 30/30 31/25 SOSTAT EA62 25/ 3 30# 4 30/49 31/20 31/29 31/34 SPIN2 EA74 24/52 30#29 30/31 30#47 31/ 3 31/18 SPOUT EA87 24/58 n SSAVE EFEA 43#44 STOHL E69D 10/19 10/26 10#60 24/ 9 24/14 STRB 0020 36#47 39/ 5 s SVER 0001 31/50 32/30 38/ 9 38/34 38/49 30/38 30/56 SW2RAM EC2C 39/ 9 40#26 38/43 SW2ROM EC1E 30/33 30/53 31/47 32/15 38/ 2 38/20 38/61 40# 5 s SYS 0005 SYSDAT 0010 S SYSL 0006 EF00 41#19 41/20 TEM 12/33 21/ 6 41#53 TEMSEC EF20 s TIMPTR 0040 15/39 n TKEY EF5C 42#15 38/ 7 30/18 38/32 s TRUE FFFF 6/ 4 30/8 17/45 17/52 42# 4 UNACNT EF52 11/11 12/25 17/10 UNASEC EF55 17/57 18/ 6 42# 6 13/10 JNATRK EF53 17/47 17/61 18/ 3 42# 5 12/10 UP E590 6/18 6#43 0016 1#48 16/ 9 16/ 9 VERS s VFLO FFEA 29/ 4 29/12 0034 s VLDL n VRTOFF EFEF 43#49 #BOOT E734 5/11 15# 5 n WRALL 0000 3#36 WRDIR 0001 3#37 18/21 WRIT2 E80C 17/43 17#52 17/50 17/60 WRIT3 E825 18# 6 WRIT4 E82A 17/55 18# 9 WRITE E7FO 17#27 5/24 WRTYPE EF23 17/41 18/20 41#56 WRUAL 0002 3#38 17/42 XLT3L E568 6#8 27/41

SORCIM 3C8x Assembler ver 3.5E <:/55/7= 59:92 Page 5C Csborne CP/M 2.2 CBIOS. E:OCCRAM2 .ASM

KLTS	E600	6#55	7/10	7/22	7/35
XOFF	0013	314 3	31/31		
XON	0011	31# 2	31/36		
XGNXCE	EAB7	31/13	31#25		
XXX	EC3A	40#43	40/44		

ROM/BIOS 1.4

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 1
                                                                3:RDM141 .45M
RAM STORAGE LOCATIONS
        ZSA≎
                0000 OFFF
                DEEF 0000
        ≄CDDE
                OFFF 0000
        ;.Date: 9/13/82
                  :.Author: Daniel E. Brown & Roger W. Chapman
                  ; Title: DOUBLE DENSITY ROM : REV 1.41
                  :.Comments:
                                 Double Density Monitor
0000 = 0000
                          ORG
                                   0
                                                   :FWA of memory
                                   *G*-40h
                                                   Ring the Bell
                  135LL: =
      = 0007
                                   *K*-40h
                                                   :Move cursor up
                   MCUP: =
      = 0008
                                   *L*-40h
                                                   :Move cursor right
      = 0000
                   MCRIGH: =
                  VCLRS: =
                                   *Z*-40h
                                                   :Clear and home cursor
      = 001A
                                   * ^ * - 40h
      = 001E
                   = :3MCHV
                                                   Home Cursor
                                                   Lock Keyboard
                  VLOCK: =
      = 0023
                                   . ..
                                                   Unlock Keyboard
      = 0022
                   VUNLK: =
                                   • = •
                                                   :Cursor Addressing
                   VCAD: =
      = 003D
                                   .5.
                                                   Screen Addressing
      = 0053
                   VSAD:
                                   •0•
                                                   ;Insert Char
                  VINC: =
      = 0051
                  VDELC: =
                                   . W.
                                                   Delete char
      = 0057
                                   . .
                                                   :Insert line
                  VINL:
      = 0045
      = 0052
                  VDELL: =
                                   * R *
                                                   ;Delete line
                                   ...
                                                   :Clear to end of line
                  VCEOL: =
      = 0054
                                                   :Start half intensity
                  *IFRV
                                   * ) *
      = 0029
                                   * { *
                                                   ;end
      = 0028
                  VEHI:
                                   . .
                                                   ;Start underline
      = 006C
                  VSUL:
                  VEUL:
                                   * E *
                                                   ;end
      = 006D
                                                   ;Start graphics
      = 0067
                  VSSH:
                                   * g *
                  VEGH:
                                   * G *
                                                   :End
      = 0047
                  ROWOM: =
                                   081H
      = 0081
                                                   :Master reset
                  SI.MRST =
                                   0_10_101_11b
      = 0057
                  $1.$16: =
                                   0_10_101_016
                                                   ;Select 16x clock, xmit/rec
      = 0055
                                   01
                                                   Receiver ready
      = 0001
                  SI.RRDY =
                  SI.TRDY =
                                                   :Transmit ready
      = 0002
                                   02
                                                   :NMI address
      = 0066
                   MMIA: =
                                   66h
                  LVMEM: =
                                  128#32
                                                   :Length of video memory
      = 1000
      = FFEA
                                                   :First line video offset
                  VFLO:
                                   -22
                                                   ;Length of one video line
      = 0030
                  VLL:
                                   128
                                                   :for DELAY routine
                  SCLFRE: =
                                   0B5H
      = 0085
                                                   ;^J, LF = Line Feed
                  LF:
                                   OAh
      = 000A
                                                   :^M. CR = Carriage Return
                                   ODh
      = 000D
                   CR:
                                                   :^[, ESC = Escape
      = 0018
                  ESC:
                                   185
      = 007F
                   ERC:
                                   7Fh
                                                   :illegal kay
                          =
                                   08h
                                                   :BACKSPACE
      = 0008
                  BKS:
                                   09h
                                                   ; TAB
                  TAB:
                          =
      = 0009
                                                   KEY LIST LENTH
                  KL LEN: =
      = 0003
                                  3
                                                   *KEY LIST ENTRY LENTH
                   KLE_LEN =
      = 0002
                                   2
```

*KEYLIST ENTRY USED

KL_USED =

7

= 0007

r jeugnego. L

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 2
RAM STORAGE LOCATIONS
                                                                3:R3M141 -45M
      = 0006
                  KY SRVD =
                                  6
                                                   *KEY SERVICED ONCE
                  KROW_M: =
      = 0038
                                  38H
                                                   FROW NUMBER MASK
      = 0007
                  KCBL_M: =
                                  7 H
                                                   COL NUMBER MASK
                  DB_CT: =
      = 0001
                                  1
                                                   IDEBOUNCE COUNT
                  IRPTOT: =
                                                   FINITIAL REPEAT COUNT (400MS)
      = 0018
                                  24
                  SRPTCT: =
      = 0006
                                  6
                                                   SECOND REPEAT COUNT (100MS)
      = 0007
                  TOT_ROW =
                                  7
                                                   :TOTAL ROWS
      = 0002
                  CTL_KY: =
                                  2
                                                   COLUMN NUMBER OF STLEALPHA AND SHIFT KEYS
                  ALPH KY =
      = 0003
                                  3
      = 0004
                  SHFT KY =
                                                   REPEAT COUNT FOR SLIDE (EYS (50MS APPROX)
      = 0003
                  SLD_RCT =
                                  3
      = 0080
                  BRTBIT: =
                                  80h
                                                   iset brt/din nemory BRIGHT
      = 0000
                  DIMBIT: =
                                  00h
                                                   ;set brt/dim memory DIM
      = 000A
                  WRETRY: =
                                  10
                                                   : NUMBER OF RETRYS
                  :MEMDRY MAPPED I/O
     = 2100
                                  02100H
                                                   :Floopy disk DISK COMMAND REG
                                                                                   (WRITE)
                  D.CMDR: =
                  D.STSR: =
                                                   STATUS REG
     = 2100
                                  D. CMOR
                                                                           (READ)
      = 2101
                  D.TRKR: =
                                  D.CMOR+1
                                                   TRACK REG
                                  D.CMDR+2
                                                   :SECTOR REG
     = 2102
                  D.SECR: =
     = 2103
                  D.DATR: =
                                  D.CMDR+3
                                                   :DATA REG
                                                                           (R/W)
     = 2200
                  H.KEY: =
                                  02200H
                                                   :Keyboard
     = 2900
                  CPDRA: =
                                  02900H
                                                   Peripheral/Direction register A
     = 2901
                                                   :Control register A
                  CCRA:
                                  CPDRA+1
                                                   Peripheral/Direction register 8
                  CPORS: =
                                  CPDRA+2
     = 2902
     = 2903
                  CCRB:
                                  CPDRA+3
                                                   *Control register 3
     = 2900
                  PA.DTA =
                                  CPDRA+0
     = 2900
                  PA-DIR =
                                  PA-DT4
     = 2901
                  PA.CTL =
                                  CPDRA+1
     = 2902
                  PB.DTA =
                                  CPDRA+2
     = 2902
                  P3.DIR =
                                  P8-DTA
     = 2903
                  28.CTL =
                                  CPDRA+3
     = 2400
                  H.SCTRL =
                                  HC0AS0
                                                   :Set control reg
                                                                           (write)
     = 2400
                  4.SSTS: =
                                  HCCASC
                                                   :Status reg
                                                                           (read)
     = 2A01
                  H.SXMT: =
                                  02A004+1
                                                   :Transmit address
                                  02A00H+1
                                                   Receive (read from address)
     = 2A01
                  +.SREC: =
     = 2000
                  = :CIV.H
                                  02C00H
                                                   :Video memory controls
                  FRAM MEMORY LOCATIONS
     = EF00
                  TEM:
                          ÷
                                  DEFOOH
                                                   ;(1) USED IN BOOT ROUTINES
     = EF35
                  ?T?Y: =
                                  DEF05H
                                                   ;(1) RETRY COUNTER
     = EF38
                  ROMRAM: =
                                  0EF08H
                                                   ;(1) ROM/RAM FLAG
     = EF09
                  DSTSB: =
                                  OEF09H
                                                   ;(1) SIX BYTES FOR DISK INFO
     = EFOF
                  TECAPAC
                                  DEFOFH
                                                   ;(1) DISK DMA ADDRESS
     = EF13
                  SEKDEL: =
                                  0EF13H
                                                   ;(1) DISK STEP DELAY
     = EF14
                  SAVSEC: =
                                  CEF14H
                                                   :(1) SECTOR
     = EF15
                                                  :(1) TRACK
                  SAVTRK: =
                                  0EF15H
     = EF17
                  = :X21C2
                                  0EF17H
                                                  ;(1) DISK
     = EF50
                  HSTACT: =
                                  0EF50H
     = EF55
                  UNASEC: =
                                  0EF55H
     = EF56
                 LOGSEC: =
                                  DEF55H
     = EF59
                  KEYLCK: =
                                  0EF59H
                                                  :(1) KEYBDARD LOCKED CELL
     = EF5A
                 CURS:
                                  OEF5A4
     = EF5E
                                  DEFSEH
                 LKEY:
                                                  ;(1)
     = EF60
                 ESCH:
                                  DEFAOH
     = EF61
                 PIAAD: =
                                  0EF614
                                                  :(1)
     = EF52
                 P1480: =
                                  DEF62H
                                                  ;(1)
     = EF6A
                 DACTVE: =
                                  OEF6AH
                                                  :(1) DISK ACTIVE FLAG
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 3 RAM STORAGE LOCATIONS B:ROM141 .ASM = EF5B BELCUT: = 0EF5BH ;(1) IS BELL RINGING = EF6C LLIMIT: = OEF6CH = EFSE LDTRK: = OEF6EH IESTK: = = EF6F OEF6FH ;(2) SAVE STACK POINTER HERE = EF99 ISTK: = DEF99H :(-40) INTERUPT STACK = EFC1 ACIAD: = DEFC1H = EFC1 ROMSTK: = OEFC1H :(-40) ROM STACK = EFC7 DSKSWP: = OEFC7H (1) DISK SWAPED CELL = EFCA NUMSEC: = DEFCAH ;(2) NUMBER OF SECTORS TO R/W = EFCC SE0: = DEFCCH (2) COUNTER = EFD0 SAVTYP = OEFDOH ;(1) DISK TYPE = EFD1 = :MCOH_F **DEFDIH** ;(1) NUMBER OF SECTORS TO READ OR WRITE = EF02 CCPADR: = **DEFD2H** \$(2) This location is assigned in BIOS and filled in by loader in ROM = EF04 KEYLST: = DEFD4H :(6) KEY LIST GOES HERE = EFDA SERFLG: = DEFDAH ;(1) IE_ADRS = = EFOB **DEFDBH** ;(1) device address = EFDC IE_CHAR = DEFDCH :(1) IE inp char buffer PIACTL = = EFDD **OEFDDH** ;(1) = EFDE PP.MODE = DEFDEH ;(1) Parallel port input, output, undefined = EFEF VRTOFF: = DEFEFH :(1) LAST VERICAL DEFSET = EFFO INTBL: = DEFFOR ;(16) interrupt vector table = F000 FWAVM: = 0F000H FIRST ADDRESS OF MEMORY MAP

SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 4 8:RDM141 .45M IEEE EQUATES :port ct1 register constants. ASCC = PA.COR = 00101010b ; to address port a direction = 002E PA.CDT = 001011106 to address oort a data and set :port a in input program handshake mode. 00000000 to address port b direction = 0000 PB.CDR = to address port b data 00000100ь = 0004 PB.CDT = idirection register constants 0FFh sport a output mode = 00FF PA.DRD = stor tucni a troc: = 0000 PA.DRI = 00h port b direction PB.DR = 0BFh = 00BF port b data for output PB.DTD = 000000105 = 0002 sport b data for input PB.DTI = 000010115 = 000B = 0040 PP. GRDY = 010000000 toutput rdy bit in pib = 0080 PP.IRDY = 100000005 ; input rdy bit in bia ctl reg = 0020 STRB = 001000000 strobe bit in port b port modes = 0001 PP.OUT = 1 = 0002 PP.IV = 2 :IEEE control codes = 0040 IE_TALK = 40h :make talker = 005F IE_UTLK = 5Fh :make untalk = 0020 IE_LSTN = 20h :make listener = 003F IE_ULST = 3Fh :make unlisten

DISK EQUATES

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 5 8:ROM141 .4SM

=	0010	D.SEK:	=	010H	;SEEK
=	0020	D.STP:	=	020H	;STEP
=	0040	D.STPI:	=	040H	STEP IN
=	0060	D.STPO:	=	060H	STEP OUT
=	0080	D.RDS:	=	080Н	READ SECTOR
=	00A0	D.WRTS:	=	DAOH	WRITE SECTOR
=	0000	D.RDA:	=	эсон	READ ADDRESS
=	00E0	D.RDT:	=	0E0H	READ TRACK
=	00F0	D. WRTT:	=	OFOH	WRITE TRACK
=	0000	D.FINT:	=	ОДЭН	FORCE INTERRUPT

:MACRO DEFINITION

ENADIM: MACRO

DUT 2

ENDM

DISDIM: MACRO

DUT 3

ENDM

Monito	or Main Loop.		A ×808	ssembler ver 3	3.5E <:	/55/7= =	9:92 Page B:ROM141	• 6 • 4 S M	
		¢(1)							
0000		START: :Initial	ize all	dependent hard	dware.				
	31C1EF CD360E		PROC LDK CALL	SP.ROMSTK FORINT	;SET ;DISA	STACK BLE CUR	RENT DISC C	IF «CNAMPC	AN
		;DISABLE	DIM BI	т					
0006			MIGZIC						
		SET INT	ERUPTS						
			SET MO	DE 2 INTERUPTS					
0008	EDSE \$		IM2						
			SET IN	TERRUPT REGIST	ER				
A000 3000	3EEF ED47 \$		LDK MOV	A•high INTBL I•A					
			SET KE	YBOARD VECTOR					
	21FC06 22F8EF		LDK STO	HL.GKEY HL.INTBL+(4#2)) ;set	keyboar	d interrup	t	
			SET SE	RIAL VECTOR					
			SET IE	EEE VECTOR					
		#INITIAL	IZE MEN	ORY					
		CLEAR A	ALL BUT	INTERUPT VECTOR	RS				
0014 0017	2100EF 06F0		LDK LDK	4L+05F004 B+0F0H	;STAR ;LENT				
0019	AF		XRA	A					
001A 001B 001C	77 23 10FC ^301A\$:CLOOP:	STO INC DJNZ	A,[HL] HL :Clogp	;CLEA	A LOOP			
5010	20,0	SET VAL	LUES OF	ONE					
001E 001F	3C 3259EF		INC STO	A A+KEYLCK	;A = ;indi		T locked		
0022	4F		MOV	C • A	;FOR	"IE.CO"			
		SET VAL	LUES OF	TWO					
0023 0024	3C 3213EF		INC STO	A A•SEKDEL	;A = ;set	TWO seek st	ep rate FO	R SEMIENS	

CALL

0027 CD5800

SPAO

;set up for output (SAVES REG C)

Manii	tor Main Loop	SORCIM 808x	Assembler ver	3.5E <:/55/7= =9:92 Page 7
30111	tor main Eggp	•		B:RDM141 .4SM
		;Intialize IEā	E port	
002A	CD3609	CALL	IE.CO	REG C=1 (SAVES REG C)
		:Sat beginning	line to 0	
0020	o D	DEC	С	;C=0
002E	CD8600	CALL	OP BD	
		:set for -10 c	nar position AN	ALISNEC STREED STREED
0031	DEEA	LDK	C,VFLO	
0033	CD7930	CALL	CARD	
0036	3E80	LDK	4,VLL	
0038	326CEF	STO	A.LLIMIT	set max line limit
		Reset-Master	clear the SIO (ACIA)
0038	DE55	LK	C+SI-S16	select 16x block for 1200 baud
0030	CD8208	CALL	SIRST	;reset
		#SIGN ON PROMP	r	
0040	119F01	LDK	DE + I MSG	
3043	СОВООО	CALL	DSTR	Dutput initial message
0046	FB	ΞI		*ENABLE INTERUPTS
2047	CD7303	CALL	CI	;Get character
004A 004C	FE1B	CMP	ESC	
3046	CA4DOF	JZ	HCSDDT	SIE COLD SOOT OFF OF HARD DISK
004F	21C7EF	LK	HL+DSKSW?	idisk swap cell
0052 0054	FEOD CA5502	CMP	CR	
3054	CA3532	JZ	CBOOT	if cold boot off of A
0057	34	INC	[hi]	;swao drives: A=B, B=A
0058 005A	FE22 CA5502	CMP JZ	CBOOT	*if gold boot off of 3
30 JA	0.000	JL	20901	if cold boot off of 3
0050	1841 ^0000\$	J۹	START	;LD0P

SORCIM 803x Assembler ver 3.5E <:/55/7= =9:92 Page 8
Monitor Main Loop.
3:ROM141 .45M

#INTERUPT VECTOR FOR RESET BUTTON (NON MASKABLE INTERUPT)

005F = 0066 ORG NMIA

0066 1898 ^0000\$ JR START :START

Monit	tor Main Loop	SORCI.	M 808× A	ssembler	ver 3.	5E <:/55/7=	=9:92 Page 9 B:ROM141 •45M
0068		SPAO: Set PI ENTRY INDNE	A for ou	tout			
		;EXIT	;HL	=	H•VIO+2		
		:CHANGE	:HL				
0068			PROC				
0068	210120		LDK	HL.H.VIO	+1	:H.VID+1	
0068	3603		STO	3,[HL]		set data di	rection
3060	28		DEC	1L		:H.VID	
005E	36FF		STO	OFFh.[HL]	set all A l	ines as output
0070 0071 0072	23 23 23		INC INC INC	HL HL		;H.VIO+1 ;H.VIO+2 ;H.VIO+3	
0073	3600		STO	0,[HL]			
0075	23		DEC	HL		;H.VIO+2	
0076	36FF		ots	OFFH.[HL	3	set all 3 li	nes as output
0078	C 9		RET				

```
SDRCIM 803x Assembler ver 3.5E <:/55/7= =9:92 Page 10 8:RDM141 .4SM
Monitor Main Loop.
                 CPAD:
0079
                Output data to pia A register
                        PIA definition.
                         7 6 5 4 3 2 1 0
                        +--+--+--+--+--+
                        1 horizontal offset [DD]
                :
                        +--+--+--+--+--+
                *NOTE The DO(double density) bit is inverted and the jumper must be installed on the oc board.
                        If the O bit is LOW double density is set if it is HIGH single density is set.
                 *NOTE Bit 0 of "PIAAD" :
                                       single density
                        set =
                                       double density
                        reset =
                 #∃TCM#
                 SAVE HL
                 :ENTRY
                 ;C =
                                data
                 ;EXIT
                 :NONE
                        PROC
0079
                                A + 4+3
0079 3E07
                         LDK
                                4. H. VID+1
0078 320120
                        STO
                         VOM
                                A . C
007E 79
                                CAAI9.A
                        STO
007F 3261EF
                                               isend data
                                CIV.H.A
                        STO
32002C
                        RET
0085 C9
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 11 B:R0M141 .4SM
Monitor Main Loop.
0086
                  OPBD:
                 Dutput data to pia B register
                         PIA definition.
                           7 6 5 4 3 2 1 0
                         +--+--+--+--+--+
                         ID11001^G! vert offset !
                         +--+--+--+--+--+
                 ; ENTRY
                 ; C
                         =
                                 data
                 :EXIT
                 ; NONE
0086
                         PROC
0086 3E04
                         LDK
                                 A , 4
0088 320320
                         STO
                                 A+H-VIO+3
308B 79
                         MOV
                                 A . C
008C 3262EF
                         STO
                                 A.PIABD
008F 32022C
0092 C9
                         CTS
                                 A.H.VID+2
                                                send data
                         RET
```

Monit	or Main Loop		4 808 ×	Assembler ver	3.58 <:/55/7= =9:92 Page 12 3:R3M141 .4SM
0093 0096	113316 1803 ^0098\$	ROMJP1:	LDK JR	DE+1533h BIOJP	offset in bios jump table
2098	113616	10MJ25:	LDK	DE •1636h	offset in bios jump taple
009B 009E 009F	2AD2EF 19 E9	BIDDs:	LD ADD JMP	HL+CCPADR HL+DE [HL]	form address

SORCIM 803x Assembler ver 3.5E <:/55/7= =9:92 Page 13
Monitor Main Loop. 8:ROM141 .4SM

DOAO DODA EMBODT: DB CR.LF

00A2 424F4F5420 DB 'BOOT ERROR'

DOAC AD

DC • •

DOAD EBOOT:

:BOOT ERROR MESSAGE ROUTINE

SENTRY

:NONE

CACO

PROC LDK

00AD 11A000

DE . EMB DOT

THERE ON BOOT ERROR

FALL THROUGH TO DSTR

SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 14 Wonitor Main Loop. B:RDM141 .ASM

0080		OSTR:												
			STRING	TO CONSOLE				C-143		FORMAT	7:	DEGEAT	COUNT.	CHAR
		:ETCM;	DSTR RE	COGNIZES 7F AS A	IN ESCAPE	SEQUENCE	IJ KEPEAI	CHAK	N 11MC).	FURMAI	12: 1-1	KEPEAI	COUNTY	CHAT
		ENTRY		5114 DE 6011365										
		;DE	=	FWA OF SOURCE										
		; EXIT												
		NONE												
0080			PR OC											
0080	1 A		LD	A.[DE]										
0031	87		OR	A										
0082	F5		PUSH	AF										
0083	E67F		AND	07FH										
0085			CMP	07FH										
0087	4F		MOV	C+A										
0088	2000 -0006\$		JRNZ	: 4	; IF NOT	REPEAT								
DO-BA	13		INC	DE										
0088			LD	A,[DE]										
00BC			DEC	A										
OOBD			MOV	B • A	:REPEAT	TAUGO								
008E	13		INC	DE										
DOBF	1 A		LD	A, [DE]	GET REP	EAT CHAR								
0000	4F		MOV	C • A										
0001	CDE003	:2:	CALL	COUT	: DUTPUT	SHAR								
	10FB ^0001\$		DJNZ	:2	:IF NOT	DONE								
9006	CDE003	:4:	CALL	COUT	; DUTPUT	IT								
0009			INC	DE										
ADOCA			POP	AF		2011								
3008	F2B000		JP	DSTR	; IF NOT	DO AC								
DOCE	C9		RET											

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 15
8:ROM141 .4SM
Monitor Main Loop.
DOCF
                  DELAY:
                  ; 'N' Milliseconds
                  FENTRY
                  ; A
                                  Number of Milliseconds to delay
                  SCLFRE =
                                  (Freg/1000)/25
                  :EXIT
                  NONE
DOCF
                          PROC
00CF 4F
                          VOM
                                  C.A
00D0 3E35
                  :1:
                          LDK
                                  A. SCLFRE
00D2 3D
                  :MLOOP: DEC
                                  A
                                                  ;(4 tics)
00D3 40
                          MOV
                                  B . B
                                                  ;(4 tics)
00D4 49
                          VOM
                                  0.0
                                                  (4 tics)
00D5 20FB ^00D2$
                          JRNZ
                                  :MLDDP
                                                  :(10 tics) If 1 ms not elapsed
00D7 0D
                          DEC
                                  C
00D8 20F6 ^00D0$
                          JRNZ
                                  : 1
                                                  :If requested msec not done
DODA C9
                          RET
                  SCLFRE =
                                 2000/22 ; Z80, 2mhz
                  :...defined in OCCTXT.ast
```

0172 031100

B:ROM141 .ASM Monitor Main Loop. 0008 = 0100 ORG 100h ROM JUMP TABLE Jmps used mainly by CBIOS CBIOS = Jmps used mainly by SuperCalc SC = JMP CBOOT CBIOS cold boot 0100 C35502 CBIDS warm boot WBOOT 0103 C39C02 JMP JMP ;CBIOS keyboard status SKEY 0106 C36603 :CBIDS keyboard input JMP 13 0109 C37303 :CBIOS console output JMP COUT 010C C3E003 ;CBIOS list output 010F C3D90B JMP LIST JMP LIST tugtue danue 20183; 0112 530908 READER :CBIOS reader input JMP D115 C38F08 Disk I/O #CBIDS HOME JMP RDRV D118 C3020C CBIOS SELECT DISK 0118 69 RET NOP 011C 00 NOP 0110 00 ; READ SECTOR JMP READ 011E C3300D WRITE ; WRITE SECTOR JMP 0121 033700 READ SECTOR ANY SECTOR HEADER JMP RADR ; 0124 C3A50D JMP RSEC CBIDS DISK SECTOR READ 0127 C31C0C JMP WSEC CBIOS DISK SECTOR WRITE 012A C3230C 012D C3000B JMP SLST CBIDS List device status CBIDS SENSE THE DENSITY OF DRIVE 0130 C3690C JMP SENDEN JMP ROMJP1 CBIOS: 0133 239300 JMP ROMJP2 :CBIDS CBIDS FORMATING ROUTINE FORMAT 0139 C30F0F JMP IEEE :CBIOS SID reset JMP SIRST 013C C3B2OB JMP IE.CO CBIOS IEEE Control But 013F C33609 IE.SI :CBIOS Status In JMP 0142 037909 So To Standby JMP IE.GTS :CBIOS 0145 C38C09 IE.TC ; CBIOS Take Control JMP 0148 039809 **Butput Interface Message** JMP MIC.BI CBIOS: 0148 030809 Dutput Device Message :CBIOS JMP IE.ODM 014E C3F809 Input Device Message ;CBIOS 0151 C33D0A JMP IE.IDM Parallel Poll CBIOS: JMP IE-PP 0154 C3990A SuperCalc VIDED BLOCK MOVE DEC ;SC JMP VLDDR 0157 C3CE06 VIDED BLOCK MOVE INC ;sc 015A C3E206 JMP VLDIR STO reg B IN [HL] MIGCTZ :50 D15D C3C606 JMP DISK I/O ; DMA WRITE TO CONTROLER DMAWRT JMP 0160 C3F00E DMA READ FROM CONTROLER JMP DMARD ; D163 C3DADE JMP HOME ; HOME DISK DRIVE 0166 C3D80C JMP SEEK ; SEEK TO TRACK 0169 C3FA0C JMP STEP ; STEP SAME DIRECTION 016C C3090D STEPIN STEP IN JMP D16F C30D0D JMP. STEPOUT STEP OUT

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 15

4oni t	or Main Loop.	SOSCIM 808x	Assembler ver	3.58 <:/5	55/7= =9:92
0175	C3360E	JMP	FORINT	;	FORCE INTERUPT
0178	C3EBOD	JMP	READTRK	;	READ TRACK
017B	C3010E	JMP	FMTTRK	;	Format one track
017E	C3710E	JWD	SELDRV	;	SELECT DRIVE
0181	C3E80B	GML	ACISTAT	CBIDS;	SERIAL PORT STATUS
0184	C3D10C	JMP	SCTRKR	;	SET TRACK REGESTER IN CONTROLER CHIP WITH VALUE IN SAVTRK
0187	C3B10A	JMP	IEINSTAT	;CBIOS	ISSS
D18A	C3AEDA	JMP	IEOSTAT	;CBIOS	IEEE
018D	C3E10A	JMP	IEINP	\$CB13\$	·IESE
0190	C3EDOA	JMP	IEDUT	\$CB10S	IEEE
0193	C3780B	JMP	PISTAT	;CB10S	IEEE
0196	C36COB	JMP	POSTAT	CBIOS	IEEE
0199	C38E0B	JMP	PARINP	;CBIDS	IEEE
0190	C39D0B	JMP	PAROUT	;CBIDS	IEEE

Copyright @1982 Osborne Computer Corporation

Z-40n+lf+if+if+if

07Fh, 24, "W"-40h

ESC. VSGH. 1. ESC. VEGH

ESC. VSGH. 4. ESC. VEGH

07Fh, 11, * *

ESC. VSGH

Q-40h

E-40h

ESC. VEGH

ESC, 'I'

ESC, "n"

cr•lf 07Fh. 11. * *

ESC. VSGH

07Fh.24.1 1

A-40h

D-40h

cr.lf

ESC. VESH

0530RNE 1

01C1 186C

DIDS DDOA

01E0 1B67

31E2 01

01E6 04

01E7 1847

DIE9 ODOA

0185 1867011847

D1BA 2020202020

01C3 4F53424F52 01CC 186D

01CE 2020202020

0106 1867041847

08 DB DB DΒ DB DB

96

DB

DB

DΒ

cr•lf 07Fh, 11, ' ' DB D8

DВ D8 DB

DB ЭB DB

010D 7F0820 DB DΒ 01E3 7F1820 DB

DΒ DB 08

01EB 7F0820 DB 07Fh, 11, " " ESC. VSGH 01EE 1867 DB 01F0 01 DB *A - 40h ESC. VEGH 01F1 1847 DB 08 ESC. ')' 01F3 1329

D1F5 2020526576 DB * Rev 1.41 (c) 1982 DCC * 0200 1828 DB ESC, "(" 020F 1867 DВ ESC+VSGH

DВ *D*-40h 0211 04 0212 1847 DB ESC. VEGH 0214 0D0A DΒ or.if

07Fh, 11, ' ' 0216 7F0B20 DВ 0219 1867 DΒ ESC. VSGH 021B 1A DB *Z*-40h 07Fh, 24, "X"-40h 021C 7F1818 DВ

021F 03 DB *E*-40n 0220 1847 DΒ ESC, VEGH

DZZZ DDDADADA 98 or.lf.lf.lf 96 07Fh, 4, ' ' 0226 7F0420 'Insert disk in Drive ' 0229 495E735572 DB 023E 1860 ESC. 11 ье

0240 41 • 4 • DB ESC. nº 0241 1860 D8

* and press RETURN* 0243 20616E5420 DВ 0254 AE DC . .

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 19
 3 opt C 2 / M from disk.
                                                              3:R3M141 .ASM
                  #[2]
 0255
                  CBDOT:
                  $LDAD ALL THE OPERATING SYSTEM INCLUDING THE CBIDS
                  :ENTRY
                  :NONE
                  :EXIT
                  ; A
                                 DRIVE TO BOOT FROM
 0255
                          DCS9
                  #SET "SAVTYP"
0255 CD020C
                  :1:
                          CALL
                                  RDRV
                                                 HOME DRIVE
0258 006900
                          CALL
                                  SENDEN
                                                 DETERMINE DENSITY
0258 2805 ^0262$
                          JRZ
                                  : 2
                                                 ; IF GOOD
0250 CDAD00
                  :ERR:
                         CALL
                                 TCCE3
                                                 PRINT ERROR
0260 18F3 ^0255$
                          JR
                                 : 1
                  *READ AND SET FBA OF CCP
0262 210000
                  :2:
                          LDK
                                 HL . 00000H
0265 220FEF
                          STO
                                  HL . DMADR
                                                 SET DMA
0268 E5
                          PUSH
                                 HL
0259 3E01
                  :3:
                          LDK
                                 A . 1
0258 3214EF
                          STO
                                 A.SAVSEC
                                                 SET SECTOR
D26E 47
                          VOM
                                 B+A
026F CD1C0C
                         CALL
                                 RSEC
                                                 READ SECTOR ONE
0272 2805 ^0279$
                          JRZ
                                 : 4
                                                 :IF G000
0274 CDAD30
                         CALL
                                 EBOOT
                                                 PRINT ERROR
3277 18F0 ^0269$
                         JR
                                 :3
                  *CHECK FIRST TWO BYTES OF THE CCP
0279 E1
                 :4:
                         POP
                                 HL
                                                HC = ODOOOH
027A 7E
                         LD
                                 A. [HL]
                                                FIRST BYTE
027B FEC3
                         CMP
                                 0C3H
027D 20DE ^025D$
                         JRNZ
                                 :ERR
                                                FIF NOT THE SAME
027F 23
                         INC
                                 HL
                                                :HL = 0D001H
3280 7E
                         LD
                                 A,[HL]
                                                SECOND BYTE
0281 FE5C
                         CMP
                                 05CH
0283 2008 ^0250$
                         JRNZ
                                 :ERR
                                                FIF NOT THE SAME
0285 23
                         INC
                                 HL
                                                #HL = 0D002H
                 SET LOAD ADDRESS
0286 7E
                         LD
                                 A.[HL]
                                                ;get cco address/1001 + 3
0287 0603
                         SU3
                                3
0289 2E00
                         LDK
                                L.0
D28B 57
                         MOV
                                H.A
```

SORCIM 808x Assembler ver 3.55 <:/55/7= =9:92 Page 20 8 o o t C > / M from disk. 8:ROM141 .4SM

#SET NUMBER OF 128 BYTE BLOCKS TO READ FOR BOOT

38 50	063C LDK		B • 60	CCP/BDOS/CBIOS
		#READ SYSTEM		
028E	E5	PUSH	HL	SAVE FWA FOR MCCPADRM Shoot system
028F	CDA132	Call	BCPM	
0292	E1	Pop	HL	
		METRYR SMUL#		·
0293	AF	XRA	A	DRIVE BOOTED FROM
0294	22D2EF	Sto	HL•CCPADR	SET "CCADR"
0297	110016	LDK	DE+1600h	ioffset for bibs
029A	19	ADD	HL+DE	laddress of bibs in all
029B	E9	Jmp	[HL]	lenter com

029E 2AD2EF

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 21
Boot C 7 / 4 from disk.
                                                        B:RDM141 .45M
0290
                *8 20T:
                FLOAD ONLY THE CCP AND THE BOOS FROM DRIVE A
                ; ENTRY
                #NONE
                :EXIT
                ⇔NOTE≄
                #: THIS ROUTINE DOES NOT EXIT. IT ONLY SETS PARAMITERS FOR BCPM:.
                *;3
                              NUMBER OF 128 BYTE BLOCKS TO READ FOR BOOT
                *;HL =
                              DMA ADDR FOR CCP
329C
                       PROC
029C 062C
                       LDK
                              B • 44
                                            CCP/BDOS and don't read CBIDS
```

HL . CCP ADR

LD

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 22
                                                              B: R 3 M 1 4 1 . 4 S M
Boot C?/4 from disk.
02A1
                  BCPM:
                  :LOAD ALL OR PART OF CPM FROM THE DISK
                  ≑NOTE
                          This loader will load single or double density and any number of sectors per track or bytes
                  per sector. TEM is not zero if there are an uneven number of sectors to read. If this is true the
                  :last sector is read into a temporary puffer and the part needed is moved into the memory.
                  SENTRY
                                  NUMBER OF 128 BYTE BLOCKS TO READ FOR BOOT
                  :8
                                 DMA ADDR FOR SCP
                  ;HL
                  TEXIT
                  :NONE
02A1
                          PROC
                  *SET "SDISK", "DMADR" AVD "SAVSEC"
                                 HL+DMADR
                                                 SET DMA
02A1 220FEF
                          STO
                          XRA
02A4 AF
                                  Α
                                  A.SDISK
                                                  A BVISG MCSE YUNC TODS:
                          STO
3217EF
                                                  :MAKE TEM ZERO
                          CT2
                                  A. TEM
3200EF
                          INC
02A8 3C
02AC 3214EF
                          STO
                                  A.SAVSEC
                                                 ;set sector
                  #SET "SAVTY" AND GET NUMBER OF SECTORS PER TRACK
                                                 SAVE NUMBER OF 128 BLOCKS
                          PUS-I
                                 вС
02AF C5
                                  RDRV
                                                  SVIRG BRCH:
3230 CD020C
                  :RL1:
                          CALL
                                                 :DETERMINE DENSITY
0293 CD690C
                          CALL
                                  SENDEN
                                                 :IF G000
0286 2805 A0280$
                          JRZ
                                  : 1
                                  EBOOT
                                                  PRINT ERROR
                          CALL
0238 CDAD00
                                 :RL1
0288 18F3 ^0280$
                          JR
                                                  :D=NJMBER OF 128 BYTE 3LOCKS
                  :1:
                          POP
                                  DE
0280 01
                                                 ISAVE NUMBER OF SECTORS IN ONE TRACK
                                 BC
02BE C5
                          PUSH
                  *SET NUMBER OF SECTORS TO READ
02BF 3AD0EF
                          LD
                                  A. SAVTYP
02C2 CB3F
                          SRL
02C4 CB3F
                5
                          SRL
                                                 :A=NUMBER OF BYTES IN ONE SECTOR(0-3)
                          ANI
                                  0000_00113
02C6 E603
                                                 ; IF 128 BYTES SECTORS
0208 2818 402525
                          JRZ
                                  : 2
                          GET NUMBER TO DEVIDE BY
                                                 *B=NUMBER OF BYTES IN ONE SECTOR(1-3)
02CA 47
                          VOM
                                  B • A
02CB 3E01
                          LDK
                                  A - 1
                                                 CKT SEMIT:
02C0 CB27
               $ :1L039: SLA
                                 :1L00P
02CF 10FC ^02CD$
                          DJNZ
                                                 *NUMBER TO DIVIDE BY
                          VCK
                                  B • A
0201 47
```

3 o o	t C ? / 4	SORCI f r o		ssembler ver 3 s k•	8.5E <:/55/7= =9:92 Page 23 B:RJM141 .4SM
0202	7 A		MOV	A • D	A=NUMBER OF 128 BYTE BLOCKS
0203	1600		LDK	D • 0	
0205	90	:2L00P:	SUB	В	SUBTRACK WITH DIVISOR
0206	08 s		EΧ	AF	SAVE FLAGS
0207	14		INC	Ð	*COUNT
3208	08 \$		EX	ĀF	RESTORE FLAGS
0209	2807 ^ 02E2\$		JRZ	: 2	(SRCTORS) IF REZULT IS ZERO (NO PARTIAL SECTORS)
9626	30F8 ^0205\$		JR NC	:2L00P	;LOOP
32D0	ED44 \$		NE G	Δ	;2 COMP
32DF	3200EF		STO	A.TEM	SAVE REMAINDER AND INDICATE A PARTIAL SECTOR
02E2	21	:2:	POP	80	#B=NUMBER OF SECTORS IN ONE TRACK
02E3	4A		VOM	C + D	C=NUMBER OF SECTORS TO READ

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 24
                                                             B:RJM141 .ASM
3 oot 2 > / 4 from disk.
                 *READ SYSTEM
                                                : A = 0
                         XRA
32E4 4F
                                                SET TRACK
                                 A, SAVTRK
                 :TLOOP: STO
02E5 3215EF
                         CHECK FOR ALL SECTORS READ
                                                SECTORS TO READ
                                 A,C
                         VOM
D2E8 79
                         OR A
D2E9 87
                                                FIF C IS NOT ZERO CONTINUE
                                 :3
02EA 2008 *02F4$
                         JRNZ
                                 CHECK FOR NO PARCIAL SECTOR
DZEC 3ADOEF
                         LD
                                 A,TEM
                         ORA
                                 Δ
02EF 97
                                                STOP IF C=0 AND TEM=0
                         JRZ
                                 :9
02F0 285B ^034D$
                                                READ PARCIAL SECTOR
                         JR
02F2 1826 ^031A$
                         CARS CT THEL SECTORS LEFT TO READ
                                                SUBTRACK SECTORS IN ONE TRACK
                                 В
                         SUB
02F4 90
                 :3:
                                                 :A>B MORE THAN ONE TRACK LEFT TO READ
02F5 3002 *02F9$
                          JRNC
                                : 4
                         FIF THIS IS LAST TRACK ZERO NUMBER OF SECTORS LEFT TO READ
                                                 READ ALL THE REMAINING SECTORS
                          MOV
                                 B + C
02F7 41
                                                 :THIS WILL ZERO REG C
                         XRA
D2F8 AF
                         SCHECK FOR NONZERO VALUE IN TEM AND THE LAST SECTOR TO READ
                                                 SAVE REMAINING SECTORS TO READ
                                 C.A
                 : 4:
                          VOM
02F9 4F
                                 A. TEM
                          LD
D2FA 3ADDEF
02FD 37
                          DRA
                                                 FIF TEM IS ZERD SKIP THIS
02FE 2807 0307$
                         JRZ
                                 :5
                                 Δ
                          XRA
0300 AF
                          ARC
0301 81
                                                 FIF REG C IS NOT ZERO SKIP THIS(NOT LAST TRACK)
0302 2003 ^0307$
                                 : 5
                          JR NZ
                                 FREAD ONE LESS THAN THE LAST SECTOR
                                                 :8=8-1
                          DEC
0304 05
                                                 FIF ONLY ONE SECTOR LEFT TO READ
                                 : 7
                          JRZ
0305 2813 *031A$
                          READ ONE TRACK
                                                 :READ (BC IS SAVED)
                                 RSEC
0307 001000
                  :5:
                          CALL
                                                 :IF G000
                          JRZ
                                 : 5
030A 2805 ^0311$
                                                 REPORT ERROR
                                 EBOOT
                          CALL
030C CDADOO
                                 :5
                          JR
030F 18F6 ^0307$
                          SUPDATE DMA
                                                 SET DMA
                                 HL,DMADR
                  :6:
0311 220FEF
                          :UPDATE TRACK
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 25 8 o o t C ' / M from d i s k. 3:ROM141 .4SM

0314 3A15EF 0317 3C 0318 18CB ^02E5\$ A • SAVTRK A LD INC

JR *TL00P TRACK LOOP

SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 25 B o o t C P / M f r o m d i s k. 3:ROM141 .4SM

*READ A PARTIAL SECTOR TO PTISM OF SERCOA BVALTE PUSH HL 031A E5 :7: RADDRESS OF HOST BUFFER IN BIOS HL, OEASOH LDK 031B 2130EA SET DMA STO HL . DMA DR 031E 220FEF SET TRACK IF NEEDED TIE BEO THEN SAVTRK WAS NOT INCREMENTED JRZ :10 0321 2804 40327\$ HL . SAVTRK LDK 0323 2115EF :SAVTRK = SAVTRK - 1 [HL] 0326 35 DEC SET THE SECTOR TO 3 + 1 INC 3 :10: 0327 04 MOV A - B 0328 78 A.SAVSEC ;SET SECTOR STO 0329 3214EF READ SECTOR INTO HOST BUFF LDK 8 • 1 0320 0601 READ ONE SECTOR 032E CD1COC :RL2: CALL RSEC :IF G000 0331 2805 ^03385 JRZ : 8 CALL EBOOT REPORT ERROR 0333 CDADOO :RL2 J٦ 0336 18F6 *032E\$ SET NUMBER OF BYTES TO TRANSFER LD A.TEM 0338 3A00EF :8: #3=NJMBER OF 128 BYTE BLOCK TO TRANSFER VCM B + A 0338 47 LDK HL,0 0330 210000 LDK DE+128 033F 118000 :3LOOP: ADD HL.DE 0342 19 DJNZ :3L03P 0343 10FD ^0342\$ HL PUSH 0345 E5 :BC=NUMBER OF BYTES TO TRANSFER вc POP 0346 01 TRANSFER BYTES SOURCE HL.DEABOH LDK 0347 2180EA

POP

LDIR

034A D1

034B ED80

DΕ

:DESTINATION

: MOVE

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 27 Boot C 3 / M from disk. 8:ROM141 .4SM

#CLEAR BUFFERS SET PARR. AND RETURN TO SYSTEM

034D	2150EF	:9:	LDK	HL. HSTACT	
0350	3600		STO	0.[hi]	; 1st byte
0352 0355	010600 1151EF		LDK LDK	BC.(LOGSEC-HSTAC	T) DE = HL + 1
3358	ED30	\$	LDIR		· overlapping move
035A 035C	3EFF 32555F		LDK STO	A+OFFh A+UNASEC	
035F 0361	3E7F 326EEF		LDK STO	A.VLL-1 A.LDTRK	set other drive NOT int
0364 0365	AF 59		XRA RET	Α	:Clear error indicator

	(eyboard and	SORCIM 808x Assembler ver Console Routines•	7 3.5E <:/55/7= =9:92 Page 23 3:R3M141 .4SM
Copy		*[3]	
Copyright ©1982 Osborne Computer Corporation	0366	SKEY: :Get status of keyboard	
982 Ost		<pre>;EXIT ;Coit set if no data ready</pre>	
or Ti	0356 3A59EF	LD A+KEYLCK	
0	0369 87	A SC	
Con	336A C8	RZ	if locked keyboard
put	036B 3A5EEF	LD A+LKSY	
œ.	036E 87	ORA A	CHECK FOR ZERO
Corp	036F C8	R Z	•
ora	0370 =6FF	ORI OFFH	FIF NOT ZERO MAKE OFFH
ation	0372 69	RET	; IF DATA

SORCIM 808x Assembler ver	3.5E	<:/55/7= =9:92	Page	29
Keyboard and Console Routines.		3:R0	M141	. 4 S M

0373		Read	next kev	from keyboard	
		;EXIT	=	last key	
		,,	_	last Key	
0373			DGR9		
0373	CD6603		CALL	SKEY	
3376	28FB ^3373\$		JRZ	RKEY	if NO data
0378	F3		DI		
3379	3A5EEF		LD	A.LKEY	GET CHARACTER
037C	4F		MOV	C + A	
03 7 0	AF		XRA	Δ	
037E	325EEF		STO	A+LKEY	iclear key from hold
0381	79		VCM	A • C	
3382	FB		ΞI		
0383	C 9		RET		

SORCIM 808x Assembler ver 3.5E <:/p> SORCIM 808x Assembler ver 3.5E <:/p> Solution (2.155)/7 = =9:92 Page 30 Seyboard and Console Routines.

Bit definitions for ESCH flag byte Note Bit 7 is currently free.

= 0020	EF_SCR: =	32 ;B5=	Screen/Cursor Addressing
= 0010	EF_AOR: =	16 ;84=	expegting address-chr
= 0008	EF_ESC: =	8 ; 83=	Slast char was ESC
= 0004	EF_UN: =	4 ;82=	Underline mode
= 0002	EF_HA: =	2 ;81=	Half Intensity mode
= 0001	EF_GR: =	1 ;80=	Graphics mode
= 0007	EF_MSK: =	EF_UN+EF_H4+EF_GR	:Mask to get mode.

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 31 Keyboard and Console Routines. B:ROM141 .ASM

:Vector (branch) table for video output mode selection ;controlled by ESCH mode

0384		ESCHTB:		
0384	3704	DW	VNORM	O Normal mode
0386	5405	DW	VGRAPH	:1 Graphics mode
0388	6504	DW	VHALF	12 Half intensity mode
038A	5904	D₩	VHA_GR	#3 Half and graphics
038C	5704	DW	VUNDER	;4 Underline mode
038E	5804	DW	VUN_GR	5 Under and graphics
0390	5F04	DW	VUN_HA	# Under and half intensity
0392	6304	DW	VUN_HA_GR	;7 Under and half and graphics

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Pag= 32 Keyboard and Console Routines. 3.5E <:/55/7= =9:92 Pag= 32

0394		VAL I DE					
				quence Tat		MD1100 1/2	-t of outsign in VALETS
							ctor. no. of entries is VALETS
		Follow	ring bo	dy of tabl	le is 2	byte No-M	atch aors
0394	30		DВ	VCAD	: DW	ES CC AD	Cursor Addressing
0397	53		DB	VSAD	: DW	ESCSAD	Screen Addressing
039A	57		DB	VSGH	: DW	ESCSGR	:Set graphics mode
039D	47		DB	VEGH	: DW	ESCCGR	Clr graphics mode
0340	29		DB	VSHI	: DW	ESCSHA	Set half int. mode
23A3	28		DB	VEHI	: DW	ESCCHA	Cir half int. mode
03A6	6C		DB	VSUL	1 DW	ESCSUN	:Set underline mode
0349	6D		90	VEUL	. DM	ESCCUN	Clr underline mode
DAC	1 A		DB	VCLRS	: DW	ESCZZ	Clear screen to blanks
03AF	51		DB	VINC	: DW	EINSRT	:Insert char
0382	57		DB	VDELC	! DW	EDELC	Delete char
0385	45		3C	VINL	: DW	ESCEE	:Insert line
0388	52		DB	VDELL	: DW	ESCRR	Delete line
0388	54		DB	VCEOL	: DW	EEOL	Clear to end of line
03BE	23		DB	AFDCK	: DW	ESCLCK	:Lock (eyboard
0301	22		ЭВ	VUNLK	: DW	ESCULK	FUnlock Keyboard
03C4	1404	:end:	DW	COUTZ	; No Ma	tch exit	

Fignore charupon undefined ESC-Sequence (to treat undefined char after ESC as a regular data char, should go to COUT2).

= 0010 VALETS: = (:end-VALIDE)/3 ;# of entries in table

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 33 Keyboard and Console Routines. B:ROM141 .45M 0306 VALIDC: ;Valid control character table ;3 bytes per entry: Ascii char , "DW"- Vector no. of entries is VALCTS Following body of table is 2 byte No-Match adrs 03C6 0D DB CR : DW VC_CR :carriage return routine 03C9 0A DΒ VC_LF : line feed LF # OW 03CC 08 03C° 0C DВ 3 K S : DW VC_BKS ; back space DB MCRIGH ! DW VC_MCRT : move cursor right 0302 OB ЭB MCUP ! DW VC_MCUP :move cursor up 0305 07 DB CBELL : DW VC_BEL Ring bell 03D8 1A VCLRS ! DW VC_CLRS ;clear screen D8 03DB 1E 98 WC ! SMOHV VC_HOME : Carsor Home 03DE 7805 VOUT97 :No match--ignore undef control char

:Number of valid entries

 $VALCTS: = ((\pm -2) - VALIDC)/3$

8000 =

```
SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 34
                                                                B:R3M141 .454
Keyboard and Console Routines.
03E0
                  COUT:
                  General output routine to Video Screen
                  SENTRY
                  ; C
                                  Character
                          :CURS
                                 =
                                          Cursor
                          :ESCH
                                          Flag+Mode
                  :CURS & ESCH undated, A=Character
                  :(bc. de. hi preserved)
                          ESCH is flag + mode byte as follows
                                  Normal mode & Last chr Esc flag false
                                  Normal mode & Last chr Esc flag True
                          =01,02,04 Mode is Graphics. Half, or Under, respectively and Last ohr Esc flag is False.
                                          As above, but mode is combination
                          =3,5,6,7
                                          Last chr Esc flag True; otherwise like 1-7.
                          =9-15
                          PROC
03E0
                  RESET VETICAL OFFSET WITH VRTOFF
                                  A۶
                          PUSH
03E0 F5
                                  вс
                          HZUSH
03E1 C5
                          LD
                                  A.PIASO
                                                   :PRESENT VALUE
03E2 3A62EF
                          CNA
                                  111000003
                                                   *HOUSEKEEPING
03E5 E6E0
03E7 47
                          VOM
                                  B . A
                                                   :LAST VERTICAL DEFSET
03E8 3AEFEF
                          LD
                                  A-VRTOFF
                          ANO
                                  000111113
                                                   CICIV YING;
03EB E61F
                                                   :ADD HOUSEKEEPING
                          DR A
03ED 80
                          MOV
                                  C . A
03EE 4F
                                                   SET DEFSET
                                  DPBD
                          CALL
03EF C08600
03F2 C1
                          POP
                                  3 C
                                  ΑF
03F3 F1
                          POP
                          PUSH
                                  HL
03F4 E5
03F5 05
                          PUSH
                                  DΕ
03F6 C5
03F7 2A5AEF
                          PUSH
                                  80
                                  HL .CURS
                                                   THE will usually be carsor/
                          LD
                                  A.ESCH
                          LD
D3FA 3A60EF
                                                   is will be ESCH for a while
                          VCM
                                  B • A
03FD 47
                                                   test flag bit
03FE E608
                          AND
                                  EF ESC
                          JRNZ
                                  PSTESC
                                                   :IF last car was ESC
0400 2023 40425$
                  ;Current chr is NOT ESCaped. Is this chr ESC?
                                  A . C
                                                   :Chr
0402 79
                          VOM
0403 FE1B
                          CMP
                                  ESC
                                                   : (A=ESCH)
0405 78
                          VCM
                                  A . B
                                                   if this onr = ESC
                          JR 7
                                  :ESC
0406 2815 ^0410$
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 35 (eyboard and Console Routines. B:ROM141 .ASM

		:Here w	ith 4=3	ŧ	ESCH	
0408	55	:out:	PUSH	HL		
3409	219403		LDK	HL.ESCH	Т3	
0400	E607		CMA	EF MSK		:Mode bits only
040E	37		ADD	A • A		Times two
040F	5 F		VOM	E • A		
0410	1600		LDK	D • 0		:DE = offset
0412	19		ADD	HL.DE		HL = tbl addrs
0413		VECTOR:				entry point. note hi on stack.
0413	7E		LÐ	A+[HL]		(1st byte (low order adrs)
0414	23		INC	HL		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
3415	56		LD	H.[HL]		:2nd byte (hi order adrs)
0416	6F		MOV	L • A		HL=adrs from table
0417	E3		XTHL			Restore hi from stack stack=tol adrs
0418	79		VCF	4 • C		:Chr. note B=ESCH byte value
0419	09		RET			enter routine per table adrs.

\$CRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 36

(eyboard and Console Routines. 3:ROM141 .4SM

	78 18E3 ^0408\$	COUT2: MCV JR	A+B :out	recall ESCH value contout onr per current settings
0410		:ESC: :Current chr is	ESC. Set flag an	nd exit
041D 041F 0422	F608 3260EF C37B05	OR Sto Jmp	EF_ESC A•ESCH VOUT97	:indicate last char= ESC :Exit

```
Keyboard and Console Routines.
                                                                3:RJM141 .45M
0425
                  PSTESC:
                  :Last chr was ESC
                  Entry
                                  EF_ESC
                  ; A
                  ; 8
                                  ESCH
                  ; C
                                  Char to output
                  ;HL
                                  curs
0425
                          PROC
0425 CB50
                $
                          BIT
                                  4 + B
                                                  is this our really an address?
D427 2075 ^D49E$
                          JRNZ
                                  SETXY
                                                  :...if chr is part of an addr
                  ;no cursor/screen addressing in effect:
D429 A8
                          XOR
                                  В
                                                   #CIr EF_ESC bit (for next time)
042A 47
                                                   :Set up B = ESCH byte value.
                          MOV
                                  B . A
042B 3260EF
                          STO
                                  A.ESCH
042E E5
                          PUSH
                                  HL
                                                  save Curs
042F 219403
0432 1E10
0434 79
                          LDK
                                  HL . VALIDE
                                                  Branch table adrs
                          LDK
                                  E. VALETS
                                                  Table size
                          VCM
                                  A . C
                                                  Chr to A
3435 1815 A344C$
                          JR
                                  LOOKUP3
                                                  Go to routine to branch per tol
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 37

SDRCIM 808x Assembler ver 3.55 <:/55/7= =9:92 Page 38 Keyboard and Console Routines. 3:R04141 .45M

3437		*M SC NV			
		:NORMAL ;ENTRY	node ch	aracter processi	ng.
		; A	=	char to output	
		;HL	=	curs	
0437	FE20		CMP	• •	
0439	3809 ^0446\$		JR C	: 2	:IF control chr
0438	F3	VBRIGH:	DI		
043C			ENADIM	;9th bi	t memory
043E 0440	3680		STD MICZIO	BRTBIT,[1]]	;set this chr 3RIGHT
3442	FB		ΕI		
0443	C35E05		JMP	CSTUOV	
2446	E 5	:2:	PUSH	HL	Save Curs
0447	210603		LDK	HL, VALIDO	Stranch table adrs
044A	1608		LDK	E.VALCTS	:Table size
		;	JMP	LOOK JP3	Scan table of valid control cars and branch to appropriate routine.

```
SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 39
Keyboard and Console Routines. 3:ROM141 .45M
```

3440		LOCKUPB:							
			Logic to scan 3 byte branch table						
						edo not CALL.			
			;HL	<pre>= lst byte of table (match code) :(2nd+3rd bytes = branch adrs)</pre>					
				;(table	repeats	[3 byte entries])			
			; E	=	is table	e size (no. of entries)			
				(table body is followed with 2 byte "No-Match" adrs)					
				Stack has HL saved as top entry.					
			: C	=					
			; A	=	value to	o scan for possible match			
044C	BE			CMP	[HL]				
344D	23			INC	HL	(2nd byte of this 3 byte entry)			
3445	2803	^)413\$		JRZ	VECTOR	:If match process			
3450	23			INC	HL	(3rd byte of this entry)			
0451	.23			INC		:1st byte of next entry			
0452	10			D∈C		Dec count of entries remaining			
3453	20F7	^044C\$		JRNZ		Continue thru body of table			
0455	1380	^04131		٦٩	VECTOR	;No-Match. hl=points to vector			

SORCIM BOBX Assembler ver 3.5E <:/55/7= =9:92 Page 40 Geyboard and Console Routines. 3:ROM141 .4SM

:PROCessing for modes other than normal.

		:PRODess	sing for	modes other than	n normai.
		:VGRAPH			Normal mode EXCEPT: cnt1 chrs are printed
0457		VUNDER:			
0457			CMP	• •	
3459	38DC ^3437\$;	JRC JR	VNDR M VUN_GR	<pre>;if cntl-cnr, process as normal ;continue</pre>
045B		VUN_GR:	ined Grad	ah i os	
045B	E 4 9 0	• O TOST T	DR	80h	underline bit
	180C ^0438\$		78	VBRIGH	;set this chr BRIGHT
045F		VUN_HA:	ine and b	Half intensity	
045F	FE20	, U lust 1	CMP	1 1	
3451	3804 ^0437\$		JRC	VNORM	if cntl-onry process as normal
3431	3654 34313	;	JR	VUN_HA_GR	
0463		D_AH_PUV			
5465				Intensity, Grap	phics
0463	F680	, , , , , , ,)R	80h	set underline bit
		;	18	VHA_GR	
2445		VHALF:			
0465			ntensity		
0465	FE20	*112 *1 11	CMP	• •	
3467	38CE ^0437\$		JRC	VNORM	if cntl-car, process as normal
3.3.	300	;	JR	VHA_GR	
2442		VHA_GR:			
0469			HL=Curs		
2469	F3	75-0-17 9	01		
046A			ENADIM		
D45C	3600		STO	DIMBIT,[1]	set dim field bit
046E			MICZIC		
0470	FB		€I		
0471	C35E35		JMP	VOUTSO	:continue

Keybo	ard and Cons			assembler ver 3.	5E <:/55/7= =9:92 Page 41 3:ROM141 •45M
3474		SCREEN: ;SetXY ;ENTRY		en movement	
		; B	=	ESCH	
		: A	=	new co-ord val.	NO OFFSET
0474			DCSS		
0474	CB70 \$		BIT	6.5	
3476	2012 ^ 348A\$		JRNZ	:sX	if X-coordinate
	561F	:sY:	AND	0001_11116	#mod 32
	4F		MOV	C • A	
	32EFEF		STO	A.VRTOFF	SET VERTICAL OFFSET FOR COUT
	3A62EF		LD	A.PIABD	
	E6E0		AND	1110_00005	
0483	81		OR	C .	
0484			VOM	C • A	A. A. W
	CD8600 182E *0438\$		CALL	OPBD	set Y coordinate
3465	182E *******		JR	:exitY	
348A	87	:sX:	ADD	A • A	idouple A
	C6E4		ADD	A,VFLO	PIA A-reg magic offset constant
	E6FE		AND		clear bit 0
348F	4F		MOV	C • A	
		SET DE	16 YTIZN	Т	
0490	3A61EF		LD	A,PIAAD	GET OLD VALUE
0493	E601		ANI	0000_03018	SAVE DENSITY BIT
0495	81		DRA	С	FOR IN HORIZONTAL OFFSET
3496	4F		VOM	C+A	
	CD7900		CALL	OPAD	FUNCTION PIA
	CBAS \$		CBIT	5,8	ifinished screen-addressing
049C	1824 ^0402\$		JR	:exitX	

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 42
                                                              B:R3M141 .45 M
Keyboard and Console Routines.
                 SETXY:
049E
                 ;Set X-Y value for Cursor/Screen Addressing
                 ; ENTRY
                 :HL
                                 oursor_addr
                 ; 3
                                 ESCH
                 : C
                                 chr
                 to VOUT90: ESCH updated
049E . CDE606
                         CALL
                                 UN_CUR
                                 A,-( * *)
3441 3EE0
                         LDK
                                                 remove cursor bias
                          GCA
04A3 81
                                                 :cursor/screen addressing?
                          BIT
34A4 CB68
                                 5.8
                          JRNZ
                                 SCREEN
                                                 if screen addressing
34A6 20CC ^34745
                 cursor addressing:
                                                 shift HL left
0448 29
                          ADD
                                 HL.HL
04A9 0870
                          BIT
                                 6.3
                                                 :X/Y coordinate?
04AB 2010 1043D$
                         JRNZ
                                 :cX
                                                 ;if X coordinate
                 :cY:
                          VCM
                                 H,A
                                                 save
D4AD 67
                                 A,PIABO
044E 3462EF
                          LD
                                                 toffset by start-Y co-ord of video
                          ADD
24B1 34
                                                 ;bitO(A) -> CY, shift A right
3482 1F
                          242
                                                 ;CY -> bit7(1)
0'4B3 CB1D
                          २२
                                 L
                          ЭR
                                 OFOh
                                                 iturn on upper nybl
0485 F6F0
                          MOV
                                 4 , A
                                                 The new cursor addr
94B7 67
                                                 inext addr-chr will be X-coord
0498 3E40
                  :exitY: LDK
                                 A+0100_0000b
                          OR
34BA 80
0483 1808 *0405$
                          J٦
                                 :exit2
                          RAL
                                                 trash 7th bit
04BD 17
                 :cX:
                                                 ;bitO(H) -> CY, pit7 stays 1
048E CB2C
                          SRA
                                                 ; ... CY -> oit7(A)
04C0 1F
                          RAR
                          MOV
                                 L.A
04C1 5F
                  :exitX: LOK
                                 A.EF_MSK
04C2 3E07
                          AND
                                 В
                                                 ifinished addressing: reset addr bits
04C4 40
34C5 3260EF
                  :exit2: ST3
                                 A.ESCH
                          JMP
                                 VOUT90
0408 037305
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 43 Keyboard and Console Routines. B:ROM141 .4SM

Control Code character processing

0468	VC_1	HOME:		:Home Cursor
34CB		PROC		
	CDF606	CALL	UN_CUR	
04CE	3462EF	LD	A.PIABD	
0401	1F	RAR		;bit0 => CY
0402	2E00	LDK	L+0	
0404	CB1D \$	₹R	L	<pre>;CY => bit7* trash bit0</pre>
0406	67	MOV	H • A	
3497	1830 ^3539\$	JR	:fixhl	;HL := HL or F000h

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 44

Keyboard and Console Routines. 8:RDM141 .4SM

34D9		VC_MCUP	}		*Move Cursor Jo.
		\$4=C=Ch	-=MCUP.	HL=Curs.	
	CDF606		CALL	NN_C JR	And discourse which has an otrack
04DC			HZUS	HL	iold cursor must be on stack
	0180FF		LDK	BC + (-VLL)	:at this entry point
34E0	1817 ^04=9\$		JR	:fwa	***** CIIS SHOLY DOLLE
0482		AC BK2:			
		;HL=Sur:	nerrup=z	t (old) char	
34F2	CDF606		CALL	UN_CUR	clear 30h bit
04E5			LDK	A,7Fn	
34E7			AND	L	
	2804 ^04EE\$		JRZ	- :wrap	if must wrap from col 0 to LLIMIT
34EA	23		DEC	HL	
34 EB	C37305		JMP	VOUT90	;Exit
34EE	E.5	:wrap:	PUSH	HL	save old cursor
	017FFF	· Al up	LDK	BC+-(VLL+1)	
34E2	09		ADD	HL.BC	<pre>;HL = prev_fine, (-1)st column</pre>
	3A6CEF		LD	A.LLIMIT	:LLIMIT = #columns on screen
	4F		MOV	C • A	
	0600		LDK	3,0	
5. , ,	0000			-,-	
04F9	09	:fwa:	ADD	HL.BC	
04FA	E3		XTHL		get old cursor, save new
	29		GGA	HL•HL	ishift line# into d reg.
04FC	3452EF		LD	A,PIABD	
04FF	F650		DR .	1110_00006	:A = line# of UL corner
0501	3C		CMP	н	iset Zflag: @home?
0502	51		POP	HL	:get new cursor
0503	2004 ^0509\$		JRNZ	:fixhl	if NOT avideo home
2505	010000		LDK	8C,(24*VLL)	twrap constant
0503	010000	_	ADD	HL.BC	141 Ap 80.1342 10
0508	U 7		400	1,2 700	
0509	3EF0	:fixal:	LDK	A.DFOh	
050B	84)R	4	<pre>;modulo result: keep cursor</pre>
35 OC	57		MOV	H • A	inside video memory.
050D	1864 ^0573\$		JR	VOUT 90	

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 45
Keyboard and Console Routines. 8:ROM141 .4SM

050F		VC_BEL: Ring the bel!	via setting PIAS	2**5 bit
050F	3A62EF	LD	A+PIABD	
0512	F620	3R	0010_00006	ibell bit
0514	4F	MOV	C.A	· · · · · ·
0515	CD3600	CALL	DP BD	function PIA3
3518	3E1E	LDK	A • 30	ring bell for 30 ticks
351A	326BEF	STD	A.BELCNT	; = 1/2 second
3510	1850 ^0578\$	JR	VOUT97	exit no change

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 45 Keyboard and Console Routines. 8:ROM141 .45M

351F		AC_CTd2:		
051F	2100F0	LDK	HL.FWAVM	
0522	CD6106	CALL	CLRLN	clear 1st line
0525	01800F	LDK	BC,LVMEM-VLL	
0528	05	PUSH	DE	
2529	DDE1 \$	POP	IX	
0528	CDE206	CALL	VLDIR	clear remaining lines
052E	3A62EF	LD	A . P I 430	Reset for 1st line of display mem
2531	E6E0	CMA	not(1_11115)	
0533	4F	VOM	C • A	
2534	CD8530	CALL	CPBO	
0537	AF	XRA	Δ	TZERO A
2538	32EFEF	CTS	A+VRTOFF	SET VERTICAL OFFSET FOR COUT
0538	21 0 0F0	LDK	HL,FWAVM	inew cursor
253E	1833 ^3573\$	JR	VOUT90	;Exit

SORCIM 808x Assembler ver 3.55 <:/55/7= =9:92 Page 47 Keyboard and Console Routines. 3:ROM141 .48M

0540		VC_CR:			
0540	CDF606		CALL	UN_CUR	erase cirsor
0543	3E80		LDK	A+80n	Carriage Return
0545	A5		AND	L	,
0546	6F		MOV	L • A	
2547	182A ^0573\$		٦X	VOUT 90	
0549		VC_LF:			
3549	CD8436	_	CALL	DO LF	Line Feed
354C	1825 ^0573\$		JR	VOUT90	, L 1110 7 00 u

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 48 Keyboard and Console Routines. 8:ROM141 .ASM

054E

VC_MCRT

:Move Cursor Right

 D54E
 CDF606
 CALL
 UN_CUR

 0551
 7E
 LD
 A+[hi]

 0552
 180A ^055E\$
 JR
 VOUT80

re-acho current car

.

Keyboard and Console Routines.

= 05DC

```
0554
                  VGRAPH:
3554 CB6F
                          BIT
                                  5 . A
0556 2806 ^055E$
                                  VOUTBO
                          JRZ
0558 CB77
              $
                          BIT
                                  6 . A
355A 2802 ^355E$
                          JR Z
                                  CSTUCV
055C E69F
                          ANI
                                  9FH
055E
                  VOUT80:
                  :Exit points for COUT
                  Here to store new data and to update cursor
055E 77
                          STO
                                  A+[hl]
                                                  :This exit path stores A (new char)
055F 50
                          VOM
                                  E,L
0560 C838
                          CBIT
                                                  (rearta) los = 3;
                                  7,5
0562 3A6CEF
                          LD
                                  A.LLIMIT
0555 30
                          DEC
                                  А
                                                  :A = last_legal_col
0566 93
                          รบธ
                                                  ;A = last_legal_col - col(cur)
0567 2009 40572$
                          JRNZ
                                  VOUT 85
                                                  if not allIMIT
0569 3E80
                          LDK
                                  A,301
056B A5
                          AND
                                 L
056C 6F
                          MOV
                                 L . A
                                                  ;do CR...
056D CD8706
                          CALL
                                 DD_LF2
                                                  :...and LF.
0570 1801 ^0573$
                          JR
                                  VDUT90
2572 23
                  VOUT85: INC
                                 HL
                                                 :move cursor
                  #Here if NO cursor update
0573 7E
                  VOUT90: LD
                                 A+[HL]
                                                 This exit path turns on 80h bit
                  Here if new data already in A
0574 17
                          RAL
                                                 :Make this our cursor
3575 3F
                  VOUT96: CMC
                                                 finvert cursor bit
0576 1F
                          RAR
0577 77
                          STC
                                 A.[hl]
0578 225AEF
                         STO
                                 HL,CURS
                                                 supdate cursor
                  ;Here if no change to cursor, restore reg and exit
0578 01
                  VOUT97: POP
                                 вС
057C D1
                         POP
                                 DE
057D E1
                          POP
                                 HL
057E 79
                          MOV
                                 A . C
                                                 Exit with A=chr
057F C9
                          RET
                                                 ;return, end of cout subr.
     = 04FA
                 :First = V0UT97 - (127 + 2)
                                               earliest possible JR
```

;latest possible JR

:Last = VOUT80 + (128 - 2)

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 49

2:RJM141 .45M

(eybo	ard and Cons			Assembler ver	- 3.5E <:/55/7= =9:92 Page 5D 8:ROM141 .ASM	
3580		ESC_LCK	:		:Lock Keyboard	
0580			PROC			
0580 0581	AF 1802 ^3585\$		XOR JR	A : 2		
0583	3EFF	ESC_ULK	LDK	A. OFFh	:Unlock Keybbard	
0585 0588	3259EF 18F1 ^0578\$:2:	9L 19	A.KEYLCK VOUT97		

SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 51 e Routines. 3:ROM141 .ASM Keyboard and Console Routines.

258A

Erase to end of line

058A E5

PUSH

save cursor

058B CD6106 058E E1

CALL POP

CLRLN HL

058F 1852 ^0573s

VOUT90

НL

SORCIM 808x Assembler ver	3.5E	<:/55/7= =9:92 Page	52
Keyboard and Console Routines.		B:ROM141 • 4	IS M

2591		CJCSOL SCTCVD:	: Addressi	ing						
0591 0593 0594	3E07 40 F618		LDK AND OR	A+EF_MSK B EF_ESC or	EF_ADR	;next	chr	411	bэ	Y-coord
0596 0599	3260EF 18E0 ^357B\$:exit3:	STO JR	A+ESCH VOUT97						
0598		ESC_SAD:	: Addressi	ing						
059B 059D 059E 05A0	3E07 A0 F638 18F4 ^0596\$		LDK AND OR JR	A.EF_MSK B EF_ESC or :exit3	EF_ADR or	EF_SCR				

SORCIM BOSX	Assembler ver	3.5E	<:/55/7= =9:92 Page 53
Keyboard and Console Routines.			3:ROM141 .4SM

D5A2		EDELC: ;Delete	Charact	er	
35A2	E5		PUSH	HL	save cursor_addr
05A3 05A6 05A7 05A9 05AA 05AD	CDD405 E5 DDE1 s 23 CDE206 3620		CALL PUSH POP INC CALL STO	CALC HL IX HL VLDIR * **[hi]	<pre>;calculate BC ;HL = cursor_addr + 1 ;move characters ;last car becomes blank</pre>
05AF 0580 0582 0583 0585 0587	F3 28 3680 F3		DI ENADIM DEC STO DISDIM EI	;enable HL BRT3IT+[nt]	9th bit memory ;HL = last ohr on this line ;set ohr BRIGHT ;main memory
0588 0589	E1 1888 ^0573\$		JR JR	HL VOUT90	restore cursor_addr ;next

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 54
Keyboard and Console Routines. 3:ROM141 .4SM

3588		EINSRT:			
		;Insert	Charact	er	
0588	CDF606		CALL	UN_CUR HL	;save cursor_addr
05BE 05BF 05C2	E5 CD0405 3E7F		CALL	CALC A+7Fh	calculate B5
05C4 05C5	85 6F		OR MOV	L L•A	HL = last_car on this line
05C6 05C7	55 DDE1 \$		PUSH POP	HL IX	
05C9 05CA	2B CDCED6		DEC CALL	HL VLDDR	ido move
05CD 05CE 05CF	E1 7E 17		POP LD RAL	HL A+[h1]	restore cursor get underline bit of this chreinto CY
0500 0502	3E40 18A1 ^0575\$		JR JR	A.	ichange this chr to ' ' jexit

SORCIM 808x Assembler ver	3.55	<:/55/7= =9:92 Page 55
Keyboard and Console Routines.		B:R3M141 .45M

0504				ELC and EINSRT: f move zero chrs. never return.
0504 0506	3 E 7 F 4 D	LDK MOV	A+VLL-1 C+L	A= max #cnrs to be moved
3507	CBB9 \$	CBIT	7 • C	(rosucollos = 0;
3509	91	SUB	C	A = #chrs to move
05DA	2804 ^35E0\$	JRZ	:end	if move zero characters
05DC 05DD 05DF	4F 0600 C9	MOV LDK Ret	C • A B • O	:8C = #cars to move
05E0 05E1 05E2	E1 E1 188F ^0573\$	end: POP POP JR	HL HL VOUT90	<pre>;trash return_addr ;cursor_addr</pre>

Keyboard and	SORCIM 808x d Console Routines.	Assembler ver	3.5E	<:/55/7= =9:92 Page 55 3:RDM141 •ASM
05E4	ESCSGR: ;ESC-Sequence	processing.		
2554	PR OC			

05E4			PROC		
	3E01 1806 ^05EE\$		LDK JR	A, EF_GR :125	<pre>:ESC-g ;set graphics mode.</pre>
	3E02 1802 ^05EE\$		LDK JR	A+EF_H4 :125	<pre>:ESC-) set half intensity :go set flag bit</pre>
05EC	3E04	ESCSUN:	LDK	A, EF_UN	;ESC-1 set underline
055E	30	:125:	DR .	В	Reg B is ESCH Byte value
	3260EF 1887 ^0578\$:130:	STO JR	A.ESCH VOUT97	<pre>#store desired value. #Exit</pre>
	3EFE 1806 ^05FE\$		LDK JR	A.NOT EF_GR :140	;ESC-G Clear graphics mode ;go clear ESCH bit
)5F8)5FA	3EFD 1802 ^05FE\$		LDK JR	A.NOT EF_HA :140	;ESC-(Clear half intensity
)5FC	3EFB	ESCCUN:	LDK	A+NOT EF_UN	;ESC-m Clear underline
05FE 05FF	A0 18EE ^05EF\$		AND JR	8 :130	Clear bit Go store ESCH byte
	= 051F	ESCZZ:	=	VC_CLRS	:ESC-Z Clear spreen -same as :Control-Z routine.

```
Keyboard and Console Routines.
                                                                3:RJM141 .45M
0601
                  ESCRR:
                  Delete Line
0601
                  ESCEE:
                  :Insert Line
                  FENTRY
                  :HL
                         =
                                  cursor
                  ; C
                          =
                                  chr
                  :EXIT
                  screen updated
                                  new cursor ...to VOUT90
0601
                          PRIOC
0601 CDF606
                          CALL
                                  UN CUR
0604 3E80
                          LDK
                                  A.1000_000b
0606 A5
                          AND
0607 5F
                          MOV
                                  L+A
                                                   do CR
3608
     E5
                          PUSH
                                  HL
                                                   save new cursor
0609 29
                          ADD
                                  HL.HL
060A 3A52EF
                          LĐ
                                  A.PIABD
060D C618
                          ADD
                                  A . 24
                                                   A = addr(25th line)
060F 94
                          SUB
                                                  :A = lines_to_move + 1
0610 E61F
                          AND
                                  0001_1111b
                                                  ; mod 32
0612 47
                          MOV
                                  8 . A
0613 3E52
                          LDK
                                  A. VDELL
3615 39
                          CMP
3616 78
                          VCM
                                  A . B
                                                  recall #lines to move
0617 2823 A063C$
                          JRZ
                                  :delt
                                                  if deleting a line
                  :Insert a line
0619 84
                  :insrt: ADD
                                                  A = addr(25th line)
061A 57
                          MOV
                                  D.A
061B 1E00
                          LDK
                                  E . 0
061D CB1A
                          RR D
                $
361F CB18
                          २२ ∈
                $
                                                  shift right DE
0621 18
                          DEC
                                  DE
                                                  ;DE = addr(Ist_chr_on_ist_line)
0622 78
                          YOM
                                  A • 3
                                                  :A = #lines to move
0623 2180FF
                          LDK
                                  HL . - VLL
0626 19
                          ADD
                                  HL.DE
                                                  :HL = addr(line above DE)
                                                  :DE := DE or F000h; HL := HL or F000h
3627 1806 A362F$
                          JR
                                  :istrt
0629 05
                 :icont: PUSH
                                  DΕ
062A DDE1
                          PCP
                                  īΧ
362C CDCE96
                                                  imove 1 line down
                          CALL
                                  VLDDR
062F CD5206
                 :istrt: CALL
                                  :vmod
0632 20F5 *0529$
                          JR NZ
                                  :icont
                                                  if must move more lines
3634 23
                          INC
                                                  ;HL => 1st car of new line
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 57

Keybo	SDRCI ard and Console Rout		3.5E <:/55/7= =9:92 Page 58 3:ROM141 .4SM
0635	:exit:		
0635	CD6106	CALL CEREN	
2638	E1	POP HL	recover carsor
2639	C37305	JMP VOUT90	Main Exit
063C 063D 063E	01 :delt: 05 218000	POP DE PUSH DE LDK HL•VLL	trecover new cursor
0641 0642	19 1806 ^364A\$	ADD HL.DE JR :dstrt	noznub_woled_eril = JH;
0644 3645 3647	DDE1 \$ CDE206	PUSH DE POP IX CALL VLDIR	imove 1 line up

:vmod :dcont

HL.DE

:exit

EX JR get addr of line to clear

064A CD5206 :dstrt: CALL 064D 20F5 ^0644\$ JRNZ

064F EB 0650 18E3 ^0635\$

SORCIM 808x Assembler ver 3.5E <:/p> C:/55/7= =9:92 Page 59 Keyboard and Console Routines. 8:ROM141 .4SM

0652		<pre>:vmod: :HL = HL or F0 :simple nod-40</pre>		or F000h to keep pointers INSIDE video memory
0652	F5	PUSH	AF	save A = #lines to move
0653	3EF0	LDK	A,OFDh	
0655	84	OR	H	
0656	67	MOV	H • A	set upper nybl of H
0657	3E=0	LDK	A. OF Oh	
0659	82	OR	D	
065A	57	MDV	D + A	imodulo 4096
0658	018000	LDK	BC.VLL	
065E	F1	POP	AF	
065F	3 D	DEC	A	decrement line_count
0660	C 9	RET		

```
3:RJM141 .454
Keyboard and Console Routines.
0661
                 CLRLN:
                 :Clear to end of line
                 SENTRY
                 ;HL
                                 Cursor
                 :EXIT
                 iclear to EOL
                                 All.
                         Uses
0661
                         PROC
                                 • •,[hl]
0651 3620
                         STO
                                                 ;clear cursor...
0663 F3
                         DI
                         MICANA
0664
                                 BRTBIT.[n]]
                                                 ;set cursor 3RIGHT
3666 3680
                         STO
                         DISDIM
0668
D66A FB
                         ΞI
                                 A.LLIMIT
366B 3A6CEF
                         LD
                                                 ;max_#cols => maximum_col_#
365E 3D
                         D€C
                                 A
                         MOA
                                 E,L
D66F 5D
3670 CBBB
                         CBIT
                                 7,5
0672 93
                         SUB
                                 Ε
                                                 ;A = col(fOL) - col(cursor)
                                                if aEDL, done
0673 08
                         ٩Z
                                                ;if inside logical_video_line
3674 3004 A367A$
                         JR NC
                                 : 2
                                 A.VLL
0676 3E80
                         LDK
                                                :...else cir to end of 128-chr line
3678 93
                         SUB
                                 Ε
                                                ; if cursor @ column #127
0679 C8
                         RΖ
                 :2:
                         MCV
                                 C+A
067A 4F
                                 3.0
                                                :3C = chrs to move
                         LDK
0600
                         PUSH
                                 HL
067D E5
                         PDP
                                 1 X
367E DDE1
3680 DD23
               $
                         INC
                                 IΧ
3682 185E ^36E2$
                         JR
                                 VLDIR
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 60

```
Keyboard and Console Routines.
                                                                B:ROM141 .4SM
0684
                   DO LF:
                   3Do Line Feed processing
                   FENTRY
                   ;HL
                                   cursor_addr
                   ; EXIT
                   :Cursor cleared
                  ;HL updated for current cursor pos
                   ; window moved if necessary
0684
                           PROC
0684 EDF606
                           CALL
                                   UN_CUR
                                                   clear cursor
0687 E5
                   DO_LF2: PUSH
                                   HL
                                                   save original cursor
0688 018000
                           LDK
                                   BC . VLL
                                                   :line length
0688 09
                           ADD
                                   HL.BC
368C 3004 40692s
                           JR NC
                                   :nowap
                                                   if not wrapping from LWAVM to FWAVM
368E 0100F0
                                   BC.FWAVM
                           LDK
0691 09
                           ADD
                                   HL.BC
                                                   :HL = new cursor a top of VM
3692 E3
                   :nowap: XTHL
                                                   ;save new cursor, get old
0693 29
                           ADD
                                   HL.HL
                                                   shift HL left
3A62EF
                           LD
                                   A.PIABD
3697 0617
                           ADD
                                   A . 23
                                                   istart + 23 = last_video_line
0699 94
                                                   #A = I_line - curr_line
                          SUB
069A E61F
                           AND
                                   0001_11115
                                                   ; modulo 32
369C 2802 *3640$
                           JRZ
                                  : v no v
                                                   if cursor is on 24th line of screen
069E E1
                  :end:
                          POP
                                   HL
                                                   get new cursor
069F C9
                          RET
D6AO 3A6CEF
                                  A.LLIMIT
                  :vmov:
                          LD
36A3 CB3D
                $
                          SRL
                                  L
                                                   ;unshift L register
D6A5 95
                          SUB
                                                   ;A = LLIMIT - col(cursor)
                                  L
36A6 38F6 ^069E$
                          JRC
                                  :end
                                                   if cursor is outside logical line
                  cursor is on last line of screen, inside of logical line.
                  must move screen to follow cursor down through video memory.
06A8 E1
                          POP
                          PUSH
06A9 E5
                                  HL
06AA 3E80
                          LDK
                                  A . 80h
DOAC A5
                          AND
06AD 6F
                          MOV
                                  L.A
                                                   :HL = beginning of line
06AE CD6106
                          CALL
                                  CLRLN
                                                   ;erase to EOL
0681 3A62EF
                                  A.PIABD
                          LD
0684 47
                          MOV
                                  B , A
3685 E6E0
                          AND
                                  not 31
                                                   :A = line zero
36B7 4F
                          MOV
                                  C + A
                                                   #C = housekeeping bits 5..7
0688 3E1F
                          LDK
                                  A,31
36BA 34
                          INC
                                  В
                                                  :increment line#
0688 40
                          AND
                                                  :A = line#
D6BC 32EFEF
                          STO
                                  A, VRTOFF
                                                  SET VERTICAL OFFSET FOR COUT
06BF B1
                          OR
                                  С
                                                  ;A = new line# OR nousekeeping_bits
06C0 4F
                          VCM
                                  C+A
                                                  C = new value for DPBD
0601 008600
                          CALL
                                  OP8D
                                                  ;move video screen down 1 line in memory
06C4 E1
                          POP
                                  HL
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 61

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 62 e Routines. 3:ROM141 .ASM Keyboard and Console Routines.

0605 C9 RET

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 63
Keyboard and Console Routines.
                                                             B:R0M141 .45M
3606
                 :MIGCT2
                 STORE THE CONTENTS OF THE B REG IN THE ADDR POINTED TO BY THE HL PAIR
                 : ENTRY
                 ;8
                                 VALUE
ADDRESS
                 ; HL
                         =
                 :EXIT
                 SNONE
3606
                         PROC
06C6 F3
                         DI
0607
                         ENADIM
                                                :ENABLE DIM
0609 70
                         STO
                                 B.[HL]
                                                STORE
A36C
                         MICZIC
                                                DISABLE DIM
DECC FB
                         ΕI
06CD 09
                         RET
```

Keybo	ard and !	SORCI Console Rout	M 803x As	ssembler	ver 3.	5E <:/55/7=	=9:92 Page 64 3:RDM141 •45M
36CE		SENTRY	Block Mo	v e			
		;EXIT ;LDDR o	on main & Uses	9th bit BC. DE.			
06D0	DDE5	\$	PUSH POP	I X DE			
0601 0602 0603	C5 D5 E5		PUSH PUSH PUSH	BC DE HL			
3604	EDB8	\$	LDDR			main memor	y
0606 0607 0608	E1 D1 C1		POP POP POP	HL DE BC			
06D9 06DA	F3	\$	DI ENADIM LDDR			:9th bit ma	mory
06DE 06DE 06E0 06E1	EDB8 FB C9	39	DISOIM EI RET			,,, 5,0	

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 65 Keyboard and Console Routines. B:ROM141 .4SM

3652) [? :				
			deo Block	Move			
			ITRY				
		; B3	, IX, HL	set			
		;E)	(IT				
			IR on mai	2 & 9th	hit	nenorv	
		:	Uses		DE.		
		•	5505	501	02,		
36E2	DDE5	\$	PUSH	IX			
06E4	D1		POP	DE			
06E5	C 5		PUSH	вс			
36E6	05		PUSH	DE			
06E7	E 5		PUSH				
			, , , , , , , , , , , , , , , , , , , ,				
36E8	EDB0	\$	LDIR				imain memory
		•	201				,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
D6EA	E1		POP	HL			
06E8	01		POP	DE			
DOEC	C1		POP	ВC			
0000	U 1		101	00			
06ED	F3		DI				
06EE	· -		ENAD	TM			
36F0	ED80	\$	LDIR				:9th bit memory
06F2	2000	•	DISD				TOTAL DIE MEMOLY
06F4	FB			171			
			EI				
06F5	59		RET				

SORCIM 808x Assembler ver	3.5E	<:/55/7= =9:92	Page	66
Keyboard and Console Routines.		B:RDM	141	. 4 S M

06F6		UN_CUR:			
		;Undo/I	nvert C	บเรอเ	
		; ENTRY			
		;HL	=	nbts_rozrup	
		:EXIT			
		:cursor	invert	ed	
		;	Uses	A. CY.	
06F6	7 E		LD	A+[h]]	:get the chr
36F7	17		RAL		<pre>;cursor_pit => CY</pre>
06F8	3F		CMC		;invert it
06F9	1F		RAR		
36FA	77		STO	A • [h]]	;
D6FB	Ė9		RET		

```
KEYBOARD SCANNING & DECODE
                                                                8:R3M141 .45M
                  *[]
06FC
                   GKEY:
                  *KEYBOARD INTERRUPT PROCESSOR
                  SENTRY
                  SNONE
                  :EXIT
                  *KEYBOARD PROCESSING DONE, RESULT IN LOKEY.
06FC
                          PR OC
06FC F3
                          DΙ
36FD ED736FEF $
                                  SP. IESTK
                                                   SAVE INTERRUPTED PROCESS STC
                          STO
0701 3199EF
                          LDK
                                  SP.ISTK
                                                   SET TO RAM INT STC
0704 F5
                          PUSH
                                  AF
                                                   SAVE ALL REGESTERS
0705 C5
                          PUSH
                                  80
0706 05
                          PUSH
                                  DΕ
0707 E5
                          PUSH
                                  HL
3708 DDE5
                          PUSH
                $
                                  ΙX
D70A FDE5
                          PUSH
                                  ΙY
                  Routine checks to see if the disk drive motor should be turned off by updating DACTIVE....Routine ALSD
                  schecks to see if bell is currently ringing: if so, decrement counter. If counter turns zero,
                  ;saut off bell.
                          CHECK BELL
070C 2168EF
                          LDK
                                  HL.BELCNT
O7OF AF
                          XOR
0710 B6
                          DR
                                  [hl]
                                                  :cell=zero ?
0711 280C ^071F$
                          JRZ
                                  : 1
                                                  if bell now off
0713 35
                          DEC
                                  [h1]
                                                  :...bell is on. decrement counter
0714 2009 ^071F$
                          JRNZ
                                  : 1
                                                  ; if bell should stay on awhile yet
                          TURN BELL OFF
0716 3A62EF
                          LD
                                  A.PIABD
3719 E6DF
                                  1101_1111b
                          AND
                                                  iclear bell bit
071B 4F
                          VOM
                                  C + A
071C CD8600
                          CALL
                                  OPBD
071F 28
                  :1:
                          DEC
                                  HL
                                                  THL = HL - 1 DACTVE
0720 TE
                          LD
                                  A.[hl]
0721 37
                          OR
                                  Δ
0722 2804 ^0728$
                          JRZ
                                  : 2
                                                  RETURN if inactive
                          TURN DRIVE DEF IF DACTVE = 1
0724 35
                          DEC
                                  [hl]
                                                  reset delay
0725 CC060F
                          CZ
                                  DDRV
                                                  ; if deselect drive
                  SUPDATE COUNTER
0728 ZACCEF
                  :2:
                          LD
                                  HL.SEQ
                                                  GET LOW TWO BYTES
0728 23
                          INC
                                  HL
                                                  ;+1
072C 22CCEF
                          STO
                                  HL,SEQ
                                                  STORE
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 67

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 68 KEYBDARD SCANNING & DECODE 8:RDM141 .45M

READ KEYBOARD

072F 0732 0733	B 7	LD DR SNZ	A+KEYLCK A KBDRVR	READ KEYBJARD IF K	EYLDCK NO	OT ACTIVE

 \pm Exit interrupt code via exiting to RAM and then enable or disable RDM code depending on the value \pm contained in RDMRAM cell•

0736	3A002C	LD	A+H•VID	clear interrupt
0739 0730	3A08EF	LD OR	A+ROMRAM A	; IS ROM IN OR DUT?
2730	C29300	JNZ	ROMJP1	FAR cturn to RAM
0740	FDE1	\$ POP	IY	RESTORE REGESTERS
3742	DDE1	\$ POP	IX	
0744	51	POP	HL	
0745	01	POP	DE	
0746	Cl	POP	BC	
0747	F1	POP	AF	
3748	ED786FEF	\$ LD	SP.IESTK	get users stack back
074C	FB	ΕI		
074D	C 9	RET		

```
KEYBOARD SCANNING & DECODE
                                                               B:R3M141 .45M
                          This file contains the 2-key roll over keyboard driver for
                          the OSBORNE 1 comuter.
                         Author:
                         Microcode Corporation.
                         Fremont. CA.
                         Y. N. Sahae
                 :
                         September 1981
                 :
                         Revisions:
                 :
                         2-Key roll over keyboard driver.
                 ;
                         DESCRIPTION:
                         The keyboard driver gets control via the 60hz interrupt, i.e. once
                         every 16 ms. It scans the keyboard to detect any struck keys. If a
                         key is found, it is entered into the keylist if there is space
                         in the keylist and the key is not already in the list. At the end of
                         the scan, the keys in the list are processed. If the key is still
                         on, it is placed in Ikey (or special action taken) after translating
                         the keynumber. A count is also stored in the list and the key will
                         be serviced again at the end of this count if it is still on. Thus
                         the key will repeat if it is held down. If a key which is in the
                         list is not on it is removed from the list.
                 :
                         The keyboard driver consists of the following routines:
                         KBDRVR - Examines the keylist, calls CHKEY to determine if key
                         is still on. Removes the key from the list if it is not on. If
                         key is on, it decrements the count associated with the key, when
                         the count goes to zero, it calls KBSERV to service the key. Calls
                         KBSCAN to enter any new keys into the list.
                         KBSCAN - This routine scans the keyboard, detects a struck
                         key and enters it into the keylist. The key is entered
                         into the keylist if the key is not already present in the keylist
                         and there is an empty slot in the keylist.
                 ;
                         KBSERV - It calls the routine CHKEY to check if shift/ctl or alphlock
                         keys are on. It then translates the keynumber into the ASCII
                         code and places it in the LKEY for the CBIDS to read. For some
                         special cases, it calls ROM resident routines to process the key.
                 :
                :
                         CHKEY - It checks if a given key is on.
                        Data structure:
                        The main structure used is the kaylist. The format of each entry is:
                        Byte O:
                                bit ? : Set indicates entry is in use.
                                bit 6 : Set indicates key has been serviced once.
                :
                                bits 5..3 : contain the row number of struck key.
                                bits 2..3 : contain the column number of struck key.
                        3vte 1:
                                bits 7..0: contain the repeat count for the key.
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 69

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 70
KEYBOARD SCANNING & DECODE
                                                               3:234141 .454
374E
                  KBORVR:
                  DETECTS AND PROCESSES KEYSTROKES.
                  : ENTRY
                  SNONE
                  :EXIT
                                          KEYSTROKE
                          :LKEY =
                          PRICE
374E
                                  KBSCAN
                                                  ISCAN KEYBOARD AND ENTER KEYS INTO KEYLIST
074E CD8607
                          CALL
                  REXAMINE REPLIST. IF KEY FOUND IN REPLIST, CALL CHREY TO SEE IF REY IS STILL ON. REMOVE FROM LIST WHEN NOT ON.
                                                  ; POINT TO FIRST ENTRY OF KEYLIST
                          LDK
                                  HL.KEYLST
0751 21045F
0754 0603
                          LDK
                                  B.KL_LEN
0756 3A5EEF
                  :1:
                          LD
                                  A, LKEY
0759 37
                          CR
                                  Δ
                                                  RETURN WHEN A KEY IS WAITING IN LKEY
075A CO
                          RNZ
                                                  GET BYTE DOF ENTRY
                                  A.[HL]
375B 7E
                          L D
375C C87F
                          BIT
                                  KL_USED.4
                                                  THE ENTRY IS IN USE THEN
                          JR Z
                                  :5
075E 2821 ^0781$
                                                  CHECK IF STILL ON
                          CALL
                                  CHKEY
0760 CDE207
                                                  FIF KEY IS NOW DEE THEN
2763 2004 407695
                          JRNZ
                                  : 2
0755 3600
                          STO
                                  0.[HL]
                                                  REMOVE KEY FROM LIST
0767 1318 ^07315
                          JR
                                 : 5
                  *KEY IS ON. DECREMENT ITS REPEAT COUNT. IF COUNT GOES TO ZERO THEN IT IS TIME TO SERVICE THE KEY.
                                                  YEAVE PTR TO FIRST BYTE OF ENTRY
0769 55
                  :2:
                          2US4
                                  ЧL
                                                  POINT TO REPEAT COUNT
076A 23
                          INC
                                  HL
                          DEC
                                  [HL]
0753 35
                                                  SEXIT WHEN NOT TIME TO SERVICE THE KEY.
076C 2012 ^0780$
                          JRNZ
                                 : 4
                 :IT IS TIME TO SERVICE THE KEY. SET THE NEXT REPEAT COUNT
076E E3
                          ΕX
                                  [SP].HL
                                                  POINT BACK TO THE FIRST BYTE OF ENTRY
076F 7E
                          LD
                                  A.[HL]
3770 0877
                          BIT
                                  KY_SRVD.4
                                                  *CHECK IF IT IS SERVICED BEFORE
                          SBIT
                                  KY SRVD. [HL]
                                                  SET THE SERVICED DNCE FLAG
3772 CBF6
                                                  POINT BACK TO THE REPEAT COUNT
                                  [S2].HL
0774 53
                          ΞX
                                                  :AND STORE RPT COUNT AS PER SERVICED FLAG
                          STO
                                  IRPTOT, [HL]
0775 3618
2777 2802 ^2773$
                          JRZ
                                  : 3
                                  SRPTCT.[HL]
2779 3606
                          STO
                                  KROW_M+KCOL_M
077B E63F
                  :3:
                          AND
                                                  CALL TO SERVICE THE KEY
077D CD0908
                          CALL
                                  KBSERV
                                                  GGET PTR TO FIRST BYTE OF ENTRY AGAIN
0780 51
                  :4:
                          POP
                                  HL
                 :5:
3781
                          ECHO
                                 KLE_LEN
```

POINT TO NEXT ENTRY

INC

ENDM

HL

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 71 CEYBDARD SCANNING & DECODE 8:ROM141 .ASM

0783 1001 40756\$ DJNZ :1 SUNTIL COMPLETE LIST SCANNED

0785 C9 RET ;RETURN

D78C 2813 ^0701\$

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 72
                                                               3:RJM141 .45M
KEYBOARD SCANNING & DECODE
                  KBSCAN:
0786
                  SCAN KEYBOARD AND ENTER DETECTED KEYS IN THE CEYLIST.
                  SENTRY
                  ENONE
                  :EXIT
                                          CONTAINS ANY KEYS DETECTED.
                          :KEYLST =
                          PROC
0786
                                                  ISEE IF ANY KEY PRESSED
                                  L.OFFH
                          LDK
0786 2EFF
                                  RDROW
0788 CD0008
                          CALL
                                                  RETURN WHEN NONE
                          ٩Z
078B C8
                          LDK
                                  L.ROWO_M
                                                  GET ROW O
078C 2E81
                                  RDROW
                          CALL
078E CD0008
                                                  FREMOVE CT_/SHIFT AND ALPHA LOCK
                                  111000113
                          AND
0791 E6E3
                                  B.TOT_ROW
                          LDK
0793 0607
                  ; IN THIS LOOP, REG B CONTAINS TOTROW CURRENT ROW BEING SCANNED
                                                  :IF ANY KEY IS PRESSED THEN
                                  : 8
0795 2843 ^373A$ :1:
                                                  SAVE LOOP COUNT
                          PUSH
                                  ВC
0797 C5
                                                   ;E = COLUMNS
                           MDV
                                  E • 4
0798 5F
                                  A. TOT_ROW
D799 3E07
                          LDK
                          SUB
0798 90
                          RAL
079C 17
                          RAL
079D
     17
                          RAL
079E 17
                                                  ID = ROW NUMBER # B
079F 57
                           407
                                  D • A
                                                  :INITIALIZE COLUMN COUNTER
                          LDK
                                  C.0
07A0 0E00
                  SCAN THIS ROW FROM RIGHT TO LEFT TO GET THE COLUMN NUMBER
                                                   SHIFT COLUMN BIT INTO CARRY
                          SRL
                                   Ε
27A2 CB38
                $ :2:
                                                   FIF A KEY IS FOUND THEN
                          JRNC
                                  : 7
07A4 302E ^07D4$
                  SENTER THE KEY WHOSE COLUMN NUMBER IS IN C AND ROW #8 IS IN D INTO THE KEYLST PROFUNDED THE KEY IS NOT
                  SALREADY IN LIST AND THERE IS AN EMPTY SLOT IN THE LIST.
                           VCM
                                   A . D
07A6 7A
                           ADD
                                   A . C
D7A7 81
                           PUSH
                                   вс
07A8
     ۵5
                                                   C = KEY NJ4BER
                           VOM
                                   C . A
07A9
     4F
                                                   SAVE DE
                           PUSH
                                   DE
     05
AA7C
                                                   SAVE HL
                           PUSH
                                   HL
D7AB
     E5
                                                   LENGTH OF KEYLIST
                                   B.KL_LEN
D7AC 0603
                           LDK
                           LDK
                                   HL.KEYLST
DTAE 2104EF
0781 110000
                                   DE.O
                           LDK
                                   A. [HL]
                  :3:
                           LD
3784 7E
                          BIT
                                   KL_USED. A
     CB7F
2785
                                                   ; IF ENTRY IS USED THEN
                           JRZ
                                   : 4
D787 2807 ^D7C0$
                                   KROW_M+KCOL_M
                           AND
0789 E63F
                                                   CHECK WITH CURRENT KEY
                           CMP
                                   С
078B B9
                                                   :EXIT IF THIS KEY IS IN LIST
                                   :6
                           JR Z
```

KEYBO	DARD SCANNING	SORC E DECO	IM 808× A DE	ssembler ver 3	•5E <:/55/7= =9:92 Page 73 B:RJM141 •4SM
07BE	1802 ^0702\$		JR	:5	
07C0 07C1	50 54	:4:	VOM VOM	E,L D,H	(CUUD 21 YATME YTEME NA) SELE; ED NI YATME YTEME TO SEGA EVAS;
07C2		:5:	ECHO INC ENDM	KLE_LEN HL	NEXT ENTRY
0704	10EE ^0734\$		DJNZ	: 3	TILL LIST SCANNED
		CHECK	IF AN EM	PTY ENTRY WAS F	• enuo
37C6 37C7 37C8	7A 87 2807 ^0701\$		MBV OR JRZ	A • O A : 6	; IF EMPTY ENTRY WAS FOUND THEN
07CA 07CB 07CC 07CE	EB 71 C8FE \$ 23 3601		EX STO SBIT INC STO	DE.HL C.[HL] KL_USED.[HL] HL DB_CT.[HL]	
07D1 07D2 07D3	E1 D1 C1	:6:	POP POP POP	HL DE BC	RESTORE ALL REGSTERS
0704 0705 0706 0707	OC AF BB	:7:	INC XOR CMP	C A E	FINCREMENT COLUMN NUMBER
	2009 ^0742\$		JRNZ	: 2	FUNTIL ALL COLUMNS SCANNED
0709	C1		POP	BC	RSTORE 3C
37DA 37DC 37DF	CB25 \$ CD0008 1084 ^0795\$:8:	SLA CALL DJNZ	L RDROW :1	*MOVE TO NEXT ROW
07E1	C9		RET		

CEYBOARD SCANNIN		k Assembler ver	3.5E <:/55/7= =9:92 Page 74 8:RJM141 .45M
0 7 E2	CHKEY: :CHECKS IF KI :ENTRY	EY NUMBER IS ON.	
	; A =	KEYNJMBER	
	;EXIT ;Z CLR =	KEY IS DEF.	
	; Z SET =	KEY IS ON.	
07E2	PR OC		
07E2 E5	PUSH	HL	SAVE CALLERS HL
07E3 F5	PUSH	AF	SAVE KEYNJMBER
07E4 1F	RAR		
07E5 1F	RAR		
07E6 1F	RAR		RIGHT JUSTIFY ROW NUMBER
07E7 CDF607	CALL	GTMASK	
07EA F1	POP	AF	GET KEY NJ43ER
07EB D5	PUSH	DE	SAVE ROW MASK
37EC CDF607	CALL	STMASK	GET COL MASK (COL NUM IS IN BITS D2)
07EF E1	POP	HL	#MOVE ROW MASK TO L
07F0	CALL	RDRDW	GET ROW OF KEYS ADRSED BY L
D7F3 A3	AND	ε	; Z IND = VALUE OF KEY
37F4 E1	POP	HL	
D7F5 C9	RET		

		SUKCIM BUBX ASsembler ver	3.55	<:/55/7= =9:92 Page 75
KEYBOARD SCANNING	3	DECODE		B:RJM141 .454

07F6		GTMASK:	:	
			TES MASK	.TEZ TIE BNO HTIW
		ENTRY		
		; A	=	BIT NUMBER (07)
		;EXIT		
		;E	=	MASK
07F6			PROC	
97F6	1E01		LDK	E•1
37F8	E607		AND	7
D7FA	28	:1:	RZ	
37FB	CB23 s		SLA	Ε
37FD	3D	*		=
			DEC	Α
07FE	18FA ^37FA\$	•	JR	:1

	KEYBOA	ARD SCANNING			ssembler ver	3•5E <	:/55/7=	=9:92 Page 8:RDM141 •	75 45 M
	0800		RDROW: FREADS FENTRY	A ROW OF	KEYS	OF ADRS	TO REAS	WCS 3⊦T C	
			:EXIT	=	ROW VALUE				
,	0800			PR OC					
	0800 0802 0803	2622 7D ED4F \$		LDK MOV MOV	H•HIGH(H•KEY) A•L R•A		:HL	= PRT ADRS F	OR GIVEN ROW
	0805 0806 0808	7E EEFF C9		LD XOR RET	A,[HL] OFFH		:14	VERT VALUES	

```
KEYBOARD SCANNING & DECODE
                                                              B:RDM141 .ASM
                 LFT_ARW =
                                 8DH
     = 008D
     = 0088
                 RT_ARH =
                                 8BH
                 JP_ARW =
                                 8AH
     = 008A
     2300 =
                 DN_ARW =
                                 8CH
     = 0053
                 HM_SCRN =
                                 .1.
                 KBSERV:
0809
                 SERVICES THE KEY
                 :ENTRY
                                 KEYNJMBER
                 ; A
                 ;[SP]-4 =
                                 POINTER TO KEYLST ENTRY (USED FOR SLIDE FNC ONLY)
                 :EXIT
                 : NONE
                 PRESERVES REG B
                         PROC
0809
                 SETUP HE TO POINT TO KEYCODE TABLE ENTRY FOR THIS KEY
                         VCM
                                 E,A
0809 5F
                                                 SUSED HERE AND LATER
080A 1600
                         LDK
                                 D.0
                                 HL.KYCOTB
080C 210408
                         LDK
D80F 19
                         ADD
                                 HL + DE
0810 7E
                         LD
                                 A.[HL]
                                 • •+1
0811 FE21
                         CMP
                                                 FIGNORE SHIFT/CTL ETC FOR CHARS LESS THAN 214
                                 KEYE
0813 381F ^0834$
                          JRC
                         PUSH
                                 AF
0815 F5
                                                 ROW O ADRS
0816 2E01
                         LDK
                                 L • 1
                                                 GET ROW CONTAINING CTL+SHIFT AND ALPHA KEY
0818 CD0008
                         CALL
                                 RDROW
0818 F5
                         PUSH
                                 AF
                                 L,80H
081C 2E80
                         LDK
                         CALL
                                 RDROW
081E CD0008
0821 E608
                         ANI
                                 8
0823 5F
                         MOV
                                 E,A
                         POP
                                 ۸F
0824 F1
                                 Ε
                         OR
0825 B3
                         MOV
                                 E,A
0826 5F
                                                 RESTORE KEYCODE
                         POP
                                 AF
0827 F1
                                 CTL_KY.E
0828 CB53
                         BIT
382A 202E 4085A$
                         JRNZ
                                 KEY4
                                                 GO PROCESS CTL KEY
382C CB63
                         BIT
                                 SHFT_KY+E
D82E 2014 ^0844$
                         JR NZ
                                 KEYZ
                                                 GO PROCESS SHIFT KEY
3830 CB58
                         BIT
                                 ALPH_KY+E
                                                 GO PROCESS ALPHA KEY
3832 2004 *3838$
                         JR NZ
                                 KEY1
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 77

FALL THROUGH TO "KEYE"

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 78

KEYBOARD SCANNING & DECODE 3:ROM141 .4SM

3834

KEYE:

STORE KEY CODE INTO "LKEY" AND RETURN

0834 325EEF

STO A+LKEY

0837 C9

RET

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 79 KEYBDARD SCANNING & DECODE 3:ROM141 .4SM

0838		KEY1:			
2838	FE61		CMP	'a'	PROCESS ALPHA KEY
283A	38F8 ^0834\$		JRC	KEYE	SEXIT WHEN LESS THAN "a". ALPHA HAS NO EFFECT
383C	FE80	:27:	CMP	80H	
383E	30F4 ^0834\$		JRNC	KEYE	FOR WHEN >= 80H
0840	EE20	:28:	XOR	20H	FOLD CHAR TO UPPER CASE
3842	18F0 ^0834\$		JR	KFYE	

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 80 KEYBDARD SCANNING & DECODE 8:ROM141 .45M

0844		KEY2:		
3844	FE51	CMP	'a'	:PROCESS SHIFT KEY
3846	30F4 ^083C\$	JRNC	:27	:GOTO ALPHA WHEN CHAR > "a"
0848	FE5B	CMP	•1•	
384A	3806 ^0852\$	JRC	KEY3	GOTO PROCESS SHIFT NUMERICS ETC
384C	20F2 ^3840\$	JR NZ	:28	:INVERT SHIFT BIT FOR "\"
384E	3E50	LDK	A • *] *	
0850	18E2 ^0834\$	JR	KEYE	CONVERT [TO]

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 31
KEYBDARD SCANNING & DECODE 8:ROM141 .4SM

KEY3: 0852

CHARS . TO > (ASCII CODES 27H TO 3EH) ARE CONVERTED USING

THE SHFT_T3. D=0 FROM BEFORE

MOV E , A

0852 5F 0853 21E508 0856 19 HL.SHFT_TB - **** LDK

ADD HL.DE

A.[HL] 0857 7E KEY34: LD 0858 1804 A0834\$ KEYE

	SORCIM	808x	Assembler	ver	3.55	<:/55/7=	=9:92	Page	82
KEYBOARD SCANNING 8	DECODE						8:RJM	141	- 45 M

085A		:BITS. :IF CHAR IS BE	DL KEY TWEEN AZ THEN TURN OFF THE 3 HIGH DRDER TWEEN ',''?' IT IS TRANSLATED AS PER TABLE CTL_TB' E ARROW KEYS OR THE ']'''[' KEY THE SLIDE FUNCTIONS
		FARE CALLED	
085A	FE8D	CMP	LFT_ARW
385C	2833 ^0891\$	JRZ	SLIDEL
385E	FE8B	CMP	WFA_TR
2042	2022 610056	10.7	ST THED

385E	FE8B		CMP	RT_ARW	
0860	2833	^0895\$	JR Z	SLIDER	
0862	FE8A		EMP	JP_ARW	
0864	2840	^3846\$	JRZ	SLIDEU	
0866	FE8C		CMP	DN_ARW	
868C	2840	*DBAAS	JRZ	SLIDED	
386A	FE58		CMP	HM_SCRN	
386C	2850	^083E\$	JRZ	DOĤOME	
386E	CB63	\$	віт	SHFT_KY•=	TEST FOR ONTL SHIFT
3870	2808	4A78C^	JRZ	KEY5	:IF NOT
3872	FE2F		CMP	• / •	;IS IT ?
3874	2004	^387A\$	JRNZ	KEY5	; IF NOT *?*
0876	3E7F		LDK	A.07FH	;DELEAT KEY
2278	1884	A38348	12	KEYE	

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 83 KEYBDARD SCANNING & DECODE 8:RDM141 .ASM

087A		KEY5:						
087A	FE40	CMP	• a •					
0870	3808 ^0886\$	JRC	KEY6	;GOTO	TRANSLATE	CHARS	FROM	TABLE
387E	FE7B	CMP	*z*+1					
088C	30B2 ^0834\$	JRNC	KEAE					
0882	E61F	AND	1FH					
3884	184E ^0834\$	JR	KEYE					

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 84 KEYBOARD SCANNING & DECODE 3:ROM141 .45M

0886		KEY6:		
0886	FE2C	CMP	1,1	
888C	38AA ^0834\$	JRC	KEYE	OND TRANSLATION IF CHAR BELOW ","
A88C	21F808	LDK	HL,CTL_T3-*,*	
088C	5F	MOV	E • A	
				ID=O FROM ABOVE
388C	19	ADD	HL,DE	
388 F	1806 ^0857\$	JR	KEY3A	

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 85 KEYBDARD SCANNING & DECODE B:ROM141 .ASM

:SLIDE FUNCTIONS.

		SLIDE	FUNCTION	15.	
0891 0891 0893	0E02 1802 ^0897\$	SLIDEL:	LDK JR	C+2 SLR1	
0895 0895	DEFE	SLIDER:	LDK	C•-2	
0897 089A 089B	3461EF 81 4F	SLR1:	LD ADD MOV	A.PIAAD A.C C.A	GET HORIZONTAL CORD.
389C	CD7900		CALL	OPAD	FUNCTION PIA
		SET RE	PEAT COU	NT FOR THESE KEY	S (OVERRIDE COUNT SET BY THE KBDRVR)
389F 38A0	91 E1	SLR2:	POP POP	DE HL	GET RETURN ADRS POINTER TO REPEAT ENTRY
2841	3603		STO	SLD_RCT,[HL]	REPEAT COUNT FOR SLIDE CEYS
08A3	E5 D5		PUSH PUSH	HL DE	RESTORE STACK
0845	C 9		RET		

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 86 KEYBDARD SCANNING & DECODE B:ROM141 .ASM

0846	DE01	SLIDEU:	LDK	C • 1	
8 A 8 C	1802 *08AC\$		٦ર	SLD1	
AA80	OEFF	SLIDED:	LDK	C • -1	
DBAC	2162EF	SLD1:	LDK	HL.PIABD	MERGE NEW VERTOFFSET TO LOWER 5 BITS OF PIAS
7ABC	7E		LD	A.[HL]	
0880	81		ADD	A,C	
08B1	E61F		AND	1FH	:MODIFY CURRENT WITH +1/OR-1
0883	4F		VOM	C • A	
3884	7E		LD	A, [HL]	
0885	E6E0		GMA	DEOH	
0887	B1	SLD2:)R	С	
0888	4F		MCV	C • A	
2889	CD8600		CALL	OPBD	
0830	18E1 ^389F\$		JR	SLR2	

			x808	Assembler	ver	3.5E	<:/55/7=	=9:92	Page	87
KEYBOARD SCANNING	3	DECODE						8:ROM1	41	. 4 S M

08BE DOHOME:

SET DENSITY BIT

D8BE	3451EF	LD	A, PIAAD	GET OLD VALJE
0801	E601	ANI	0000 00013	SAVE DENSITY BIT
0803	F6EA	OR I	VFLO	FOR IN HORIZONTAL OFFSET
3805	4F	MOV	C + A	
0806	CD7900	CALL	DPAD	FUNCTION PIA
0809	3A52EF	LD	A.PIA3D	
3380	E5E0	AND	OEOH	HOUSE KEEPING BITS
DSCE	4F	MOV	C • A	7
08CF	3AEFEF	LD	A. VRTOFF	GET LAST VERTICAL DEFSET
2802	18E3 ^38B7\$	JR	SLD2	AND THE VERT TO O ALSO

SORCIM 803x Assembler ver 3.5E <:/55/7= =9:92 Page 88 (EYBDARD SCANNING & DECODE 3.ROM141 .ASM

KEY CODE TRANSLATION TABLES

0804 0804	18097F7F	KYCDT8:	3 5	esc•	tab.	arc.	erc	
2808	7F0D275B		OB	erc,	cr, •	•••,	• [•	
368C	31323334		DB	•1••	121,	• 3•,	• 4•	
038C	35363738		DB	•5•,	151,	• 7 • •	•8•	
08E4	71776572		D8	•q•,	• • •	'e',	· r •	
38E8	74797569		DB	't',	• y • •	•u•,	• i •	
38EC	61736466		23	'a',	's',	•4••	• f •	
048C	67686A5B		DB	'g',	•n•,	•j••	•k•	
03F4	74785376		23	'z'•	* x * ,	°c*,	• v •	
08F8	626E6D2C		DВ	· o · ,	'n',	• # m •	•,•	
08FC	3A8D3020		DB	8ah•	8 dh •	•0••	• •	
0900	25706F39		DB	••••	* o * •	• 0 • •	•9•	
0904	383C2D2F		28	85h•	Bch.	•-••	•/•	
0908	38506030		DB	٠;٠,	• • • •	• • • •	• = •	
0900		SHFT_T3:	:					
390C	2200000000	310 7 _ 1 3	DB	••••	00h,	00h•	00h•	00h
2911	3C5F3E3F29		96	1<1,	'-' '	•>••	1?1,	•) •
3916	2140232425		ЭВ	• • • •	. 3. 4	• # • •	•\$•,	٠,٣٠
3918	5E262A2800		ОВ	*^*,	• 8 • •	***,		30h
0920	34002800		DВ	٠:٠,	00h,	'+',	00h	
3924	781F7D7E	STL_TB:	08	,,,		4)h •	• > • •	,
0928	8081828334	3,2_,3	08	80h.	- 81h,		83h•	84h
0920	8586873839		DB	35h•	85h,	37h•	88h,	89h
	00000050		D8	00h•	00h,	00H•		- · · ·
3932	30000000		90	50119	30.17	30117	50,.	

SORCIM 803x Assembler ver 3.5E <:/55/7= =9:92 Page 89 IEEE-488 INTERFACE. 8:ROM141 .45M

†[]

: ENTERED 05/01/81 FROM TNW XEROX. SEH. :

;LAST EDITED AT 09:29 DN 11 NOV 80

THERE ARE FOUR COMMANDS TO THE 6821

;	90	PERIPHERAL/DIRECTION REGISTER A	: PDRA
;	01	CONTROL REGISTER A	CCRA
;	10	PERIPHERAL/DIRECTION REGISTER B	CPDRB
;	11	CONTROL REGISTER B	CCRB

#BIT 2 OF THE CONTROL REGISTER (4 AND B) ALLOWS SELECTION OF EITHER A PERIPHERAL INTERFACE REGISTER OR A DATA DIRECTION REGISTER. #A "1" IN BIT 2 SELECTS THE PERIPHERAL REGISTER.

THE TWO DATA DIRECTION REGISTERS ALLOW CONTROL OF THE DIRECTION OF DATA THROUGH EACH CORRESPONDING PERIPHERAL DATA LINE.

A DATA DIRECTION REGISTER BIT SET AT "O" CONFIGURES

THE CORRESPONDING PERIPHERAL DATA LINE AS AN INPUT.

*DATA DIRECTION IS ALWAYS SET FOR DUTPUT FOR THE DATA REJISTER.

\$THE INTERFACE IS IN SOURCE HANDSHAKE MODE IF DATA ENABLE (PBO)

\$THE INTERFACE IS IN SOURCE HANDSHAKE MODE IF SET TO "1".

\$THE INTERFACE IS IN SOURCE HANDSHAKE MODE IF SET TO "1".

\$THE INTERFACE IS IN SOURCE TO ACCEPTOR HANDSHAKE,

\$THE INTERFACE IS IN SOURCE TO

STANDARD VALUES USED:

;CCRA 0011(IFC)(DIR)10

CCR3 0011(REN)(DIR)00

CPDRA	SOURCE	DIRECTION DATA	1111_1111 DATA	
CPDRA	ACCEPTOR	DIRECTION DATA	1111_1111 1111_1111	
;CPDR3	SOURCE	OIRECTION DATA	0011_1111 0004_0010	; 4 = 4TN
:CPDRB	ACCEPTOR	DIRECTION	1101_0111 0100_0101	

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 90 IEEE-488 INTERFACE. B:ROM141 .45M

```
:PIA SIGNAL DEFINITIONS:
TALL SIGNALS ARE LOW ON THE IEEE BUS WHEN PIA REGISTER CONTAINS "1".
        PAO
                010 1
        PA1
                DIC 2
        PAZ
                DID 3
                010 4
        PA3
                DID 5
        PA4
        PA5
                DID 6
                D10 7
        PA6
                B CIC
        PA7
        CAL
                SRQ
                IFC
        CA2
                ENABLE DATA DUT
                                         (EVABLED WHEN "O")
        PBO
                                         (ENABLED WHEN "O")
        PB1
                ENABLE NDAC/NRFD
                                         (EVABLED WHEN "O")
        P82
                VACICE EDI/DAV
        2B3
                EOI
        PB4
                ATN
        PB5
                DAV
        P86
                NDAC
        P87
                NRED
        CB1
                NOT USED
        CB2
                REN
CONTROL WORD FORMAT
;[ 7 ][ 6 ][ 5 ][ 4 ][ 3 ][ 2 ][ 1 ][ 0 ]
                    CAZ CONTROL
CBZ CONTROL
                                   IE DDRAIE CAI CONTROLI
IE DDRAIE CBI CONTROLI
;[IRQA1][IRQA2][
:[IRQB1][IRQB2][
                        INTERRUPT FLAG SET BY FALL OF SRQ
        IRQA1
                0
                        DESU TCV
        IRQA2
               0
                        SET IFC HIGH
        CA2
                110
                111
                        SET IFC LOW
                        RIN DATA DIRECTION REGISTER A
        DDRA
                0
                        RIN PERIPHERAL REGISTER A
                1
                        SET IRQA1 HIGH DN RISE OF SRQ
        CAI
                10
        IRQ81
                0
                        NOT USED
                        NOT USED
        IRQB2
                0
                        SET REN HIGH
        CB2
                110
                        SET REN LOW
                111
        DORB
                0
                        RIN DATA DIRECTION REGISTER B
                1
                        R/W PERIPHERAL REGISTER B
        CBI
                00
                        NOT USED
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 91 IEEE-488 INTERFACE. B:R34141 .454

BIOS CALL 1: CONTROL OUT

CAN BE CALLED WHILE IN ANY STATE.

EXITS IN THE CONTROLLER STANDBY STATE (ATN HIGH), SOURCE HANDSHAKE MODE

PARAMETER PASSED IN REGISTER C:

; BIT O IF "1", THE IFC SIGNAL IS SET LOW FOR 100 MICRO-SEC

; AND ALL PIA SIGNALS ARE INITIALIZED

BIT 2 1

οх NO ACTION

1 0 SETS REN HIGH

1 1 SETS REN LOW

IEEE-4	488 INTERFACE		808× As	sembler ver 3.5	E <:/55/7= =9:92 Page 92 8:RDM141 •45M
0936 0936		1E.CO:	PROC		
0936 0937	F5 55		PUSH PUSH	AF HL	
3938 393A	CB41 \$ 2828 ^0967\$		BIT JRZ	0,C :81C20	CHECK IFC SUB-COMMAND
		:INITIAL	IZE ALL	IEEE-488 SIGNALS	
093C 093F	210129 363A		LK STD	HL + CCR A 0011_10103+[HL]	SENABLE SRQ AND SET IFC-DJT LOW
3941 3943 3946	3EFF 320029 363E		LK STO STO	A,1111_11113 A,CPDRA 0011_11103,[HL]	TLO ATAC TSBRIC:
0948 0949 094C 094F	AF 320029 210329 3630		XRA STO LK STO	A A,CPDRA HL,CCRB 0011_0000B,[HL]	;SET REN-CUT HIGH
0951 0953 0956	3E3= 320229 3634		LK STO STO	A+0011_11113 A+CPORB 0011_01008+[HL]	EXAMEGNAH EDRUCZ RCH NOITDERID:
0958 095A	3E02 320229		LK STD	A+0000_00103 A+020RB	EVALUES FOR SOULCE REF REPUBLIES
		:LEAVE I	TEC LOW F	FOR 100 MICRO-SE	:
095 0	3E19		LK	A • 25	;DELAY 100 MICRO-SEC
095F 0960	3D 20FD ^395F\$:81010:	DEC JRNZ	A :B1C10	
0962 0954	3E35 320129		LK STO	A+0011_01108 A+CCRA	SET IFC HIGH
3967 3969	0851 5 2808 ^0976\$:31020:	3IT JRZ	2.5 :31040	CHECK REN SUB-COMMAND
		:SET/CL	EAR REN		
0958 0960 096F	3E34 0349 \$ 2802 ^0973\$		LK BIT JRZ	A,0011_01008 1.C :31C30	
2971	3E3C		LK	4,0011_11008	
0973	320329	:81030:	STO	A+CCR8	
0976 0977 0978	E1 F1 C9	:81040:	POP POP RET	HL AF	

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 93 8:RDM141 .4SM IEEE-488 INTERFACE.

0979 IE.SI:

:BIOS CALL 2. STATUS IN
:CAN BE CALLED ONLY WHILE IN SOURCE HANDSHAKE MODE.
:BIT O OF REGISTER A SET IF SRQ IS LOW

0979			PROC		
0979	E 5		PUSH	HL	
097A 097D 0980 0982 0984 0987	3A0029 210229 CB8E C3CE 3A0129 E680 07	\$ \$	LD LK CBIT SBIT LD AND RLC	A+CPDRA HL+SPDRB 1+[HL] 1+[HL] A+CCRA 1000_000B A	;CLEAR IRQA1;PULSE ENABLE ndac/nrfd;SET SRQ VALJE IN A
098A 098B	E1 C9		PGP RET	HL	

	SORCIM 808x Assemble	rver 3.5	E <:/55/7=	=9:92	Page	94
IEEE-488 INTERFACE.				B:83M	141 .	ASM

398C		IE.GTS: :BIOS CALL 3 G :CAN BE CALLED :ENTRY :NONE		SOURCE HANDSHAKE MODE
0980		PR DC		
0980	F5	PUSH	AF	
098D 098F 0992	3E02 320229 AF 320029	LK STO XOR STO	A+0000_0010B A+CPDRB A A+CPDRA	:SET ATN HIGH
0996 0997	F1 C9	POP RET	AF	

09D7 59

RET

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 95
IEEE-488 INTERFACE.
                                                                B:R3M141 .45M
0998
                  IE.TC:
                  *BIOS CALL 4 TAKE CONTROL
                  ;CAN BE CALLED ONLY WHILE IN THE CONTROLLER STANDBY STATE (ATN HIGH).
                  SEXITS IN THE CONTROLLER ACTIVE STATE (ATN LOW). SOURCE HANDSHAKE MODE.
                  $BIT O OF REGISTER C SET TO TAKE CONTROL ASYNCHRONOUS
                  ; EXIT
                                          :ERROR CODE
                          ; A
3998
                          PROC
0998 E5
                          PUSH
                                  HL
0999 210229
                          LK
                                  HL . CPDRB
099C CB41
                          BIT
                                  0,0
099E 2022 ^0902$
                          JRNZ
                                  :B4C30
                  TAKE CONTROL SYNCHRONOUSLY
                          STO
                                  0000_0111B.[HL] ;DISABLE DRIVERS
3607 CAPC
09A2 3A0329
                          LD
                                  A+CCRB
09A5 CB97
                          CBIT
                                  2 • A
                $
                                  A. CCRB
09A7 320329
                          STO
                          STO
                                  1101_0111B.[HL] :DIRECTION REGISTER
09AA 3607
39AC CBD7
                          SBIT
                                  2 • A
                $
09AE 320329
                          STO
                                  A.CCRB
                          STO
09B1 3685
                                  1000_0101B+[HL] ;SET NRF0 LOW
                                  A, 25
09B3 3E19
                          LK
3985 CB6E
                $ :B4C10: BIT
                                  5 + [HL]
39B7 2807 ^09C0$
                          JRZ
                                  :84C20
                                                  CESSER CALL TAND ATAM
0989 3D
                          DEC
39BA 20F9 ^39B5$
                          JRNZ
                                  :B4C10
                                                  :WAIT 100 MICRO-SEC
09BC 3E81
                                  A,1000_00018
                                                  SET DATA VALID TIMEDUT ERROR
                          LK
09BE 1816 ^0906$
                          JR
                                  :B4C40
0900 3605
                  :84C20: STO
                                  1100_01018.[HL] ;SET NDAC LOW
                                  4 + [HL]
                                                  SET ATN LOW
39C2 CBE6
                $ :B4C30: SBIT
                  SET-UP FOR SOURCE HANDSHAKE
09C4 3A0329
                          LD
                                  A+CCR8
09C7 CB97
                $
                          CBIT
                                  2 • A
                                  A+CCRB
0909 320329
                          STO
09CC 363F
                          STO
                                  0011 11118, [HL] ; DIRECTION REGISTER
39CE CB37
                          SBIT
                $
                                  2 • A
0900 320329
                          STO
                                  A, CCRB
                          STO
                                  0001_00103.[HL] :CONTROL SIGNAL INITIAL VALUE
0903 3612
0905 AF
                          XOR
                                  Α
                                                  :CLEAR ERROR CODE
                  :84C40: POP
0906 E1
                                  HL
```

D9F4 320029

39F9 180C ^3A07\$

09F7 3612

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 95
                                                              B:R3M141 .454
IEEE-488 INTERFACE.
                 IE.OIM:
39D8
                 BIOS CALL 5 DUTPUT INTERFACE MESSAGE
                 CAN BE CALLED WHILE IN ANY MODE OR STATE
                 :EXITS IN THE SOURCE HANDSHAKE MODE WITH ATN LOW.
                  :EXIT
                                         ERROR CODE
                         ; A
                                         MULTI-LINE MESSAGE
                         ; C
                                 =
                         PROC
0908
0908 E5
                         PUSH
                                 HL
                                 HL.CPDRB
0909 210229
                         LK
                                 4,[HL]
                                                 SET ATN LOW
                         SBIT
DODC CBE6
               $
                                 0,[HL]
                         BIT
39DE C346
               $
                                 IE.SHK
39E0 2825 ^DA37$
                         JRZ
                  SET-UP FOR SOURCE HANDSHAKE
                                 ODO1_D1118,[HL] ;DISABLE DRIVERS
3617 3617
                         STO
                         LD
                                 A.CCRB
39E4 3A0329
                         CBIT
                                 2 • A
39E7 CB97
                                 A,CCRB
09E9 320329
                         STO
                                 0011_1111B.[HL] ;DIRECTION REGISTER
D9EC 363F
                         STO
                         SBIT
                                 2 . A
DYEE CBD7
                                 A.CCRB
                         STO
09F0 320329
                  FLOAT EXTERNAL DATA BUS
                         XOR
09F3 AF
                                 A.CPDRA
                         STO
```

IE-SHK

STO

0001_00108.[HL] :CONTROL SIGNAL INITIAL VALUE

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 97 IEEE-488 INTERFACE. 8:ROM141 .4SM

itt-	488 INTERFAC	t•			B:RUM141	• 4 2 M			
09FB		CAN BE	CALLED		LE IN TH	ÁGE E SOURCE HANDSHAKE MODE MODE WITH ATN HIGH.	WITH HTIW	HIGH OR	LD#•
		; EXIT	;C ;B ;A	= = =	MULTI-L EDI REQI ERROR CI				
09FB			PROC						
09F8	E5		PUSH	HL					
09FC 09FF 0A01 0A03	210229 C3A6 \$ CB40 \$ 2802 ^OAO7\$		LK CBIT BIT JRZ	HL.CPDRE 4.[HL] 0.B IE.SHK	3	;SET ATN HIGH ;CHECK IF EDI REQUESTE:)		
3A05	CBDE \$		TIBZ	3,[HL]					
		*PERFOR	M SOURCE	HANDSHAK	Œ				
0A07 0A09	C86E \$ 2018 ^3A26\$	IE.SHK:	BIT JRNZ	5,[HL] :86050		; ;DAC TIMEDUT RE-ENTRY			
DAOB DAOC DAOF	79 320029 3E0A		MOV STD LK	A+C A+CPDRA A+10		PLACE DATA ON BUS			
DA11 DA13	CB7E \$ 2807 ^DA1C\$:B6C20:	BIT JRZ	7.[HL]:B6C30		READY FOR DATA			
DA15 DA16	3D 20F9 ^DA11\$		DEC JRNZ	A :B6C20		SECTION COL SOF TIAWS	;		
DA18 DA1A	3E82 181F ^0A3B\$		JR JR	A+1000_0 :36C80	0103	SET RFD TIMEDUT ERROR			
DA1C DA1E	CB76 \$ 2004 ^3A24\$:86030:	BIT JRNZ	6+[HL] :B6C40		DATA ACCEPTED LOW			
0A20 0A22	3E81 1817 ^DA39\$		LK JR	A.1000_0 :86C80	301B	SET DEVICE NOT PRESENT	ERROR		
DA24	CBEE \$:B6C40:	SBIT	5+[HL]		SET DAV LOW			
3426	3EFF	:86050:	LK	A • 255					
8SAC ASAC	CB76 \$ 2807 ^DA33\$:86050:	BIT JRZ	6.[HL] :B6C70		DATA ACCEPTED			
DA2C DA2D	3D 20F9 ^DA28\$		DEC JRNZ	A :36C50		#WAIT 1000 MICRO-SEC			
DA2F DA31	3E84 1808 ^0A38\$		ŁK JR	A+1000_0 :B6C80	1005	SET DAC TIMEDUT ERROR			

\$:B6C70: CBIT 5+[HL] ;SET DAV HIGH

DA33 CBAE

SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 98 B:RJM141 .ASM IEEE-488 INTERFACE.

3A35	CB9E	\$ CBIT	3,[HL]	SET EDI HIGH
2437	AF	XUS	Δ	REMOVE DATA FROM BUS

DA37 AF DA38 320029 XOR Sto A A,CPDRA

0A3B E1 0A3C C9 :86C80: POP HL

RET

DATC CBSE

DA7E 2802 ^OA82\$

BIT

JRZ

3,[HL]

:37040

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 99
IEEE-488 INTERFACE.
                                                                B:R0M141 .454
DA3D
                  IE.IDM:
                   IBIOS CALL 7 INPUT DEVICE MESSAGE
                   CAN BE CALLED WHILE IN ANY MODE OR STATE
                  SEXITS IN THE ACCEPTOR HANDSHAKE MODE WITH ATM HIGH.
                  :EXIT
                           ;L
                                          ERROR CODE
                                          DEVICE MESSAGE
                           ; A
                           : H
                                          DEVICE MESSAGE
DA3D
                          PROC
0A3D 05
                          PUSH
                                  DE
DA3E EB
                           ΕX
                                  DE.HL
                                                  SAVE RE-ENTRY DATA
DA3F 210229
                          LK
                                  HL . CPDRB
JA42 CB46
                          BIT
                                  0,[HL]
DA44 201A ^DA60$
                          JRNZ
                                  :87010
                  SET-UP FOR ACCEPTOR HANDSHAKE
                                  0001_01118+[HL] :DISABLE DRIVERS
DA46 3617
                          STO
DA48 3A0329
                          LD
                                  A+CCR8
0A4B CB97
                $
                          CBIT
                                  2 • A
DA4D 320329
                                  A, CCRB
                          STO
DA50 36D7
                          STO
                                  1101_0111B,[4L] ;DIRECTION REGISTER
DA52 CBD7
                          SBIT
                                  2 - A
0A54 320329
                          STO
                                  A.CCRB
                                  A.1111_11118
DA57 3EFF
                          LΚ
                                                  FLOAT INTERNAL DATA BUS
DA59 320029
                          STO
                                  A+CPDRA
0A5C 3655
                          STD
                                  0101_01018. [HL] ; CONTROL SIGNALS INITIAL VALUE
DA5E 3645
                          STO
                                  0100_0101B,[HL] ;SET ATN HIGH
                  PERFORM ACCEPTOR HANDSHAKE
3A60 CB76
                $ :87C10: BIT
                                  6 . [HL]
3A62 2820 ^3A84$
                                  :87050
                          JRZ
                                                  YPTHE-BE FORFE TUDEMIT CILAVAL ATAC;
DA64 CBBE
                          CBIT
                                  7,[HL]
                                                  SET NRED HIGH
                $
DA66 3E0A
                          LK
                                  A . 10
3468 CB5E
                $ :87C20: BIT
                                  5 . [HL]
2008 ADAC4
                          JRNZ
                                  :B7C30
                                                  CIJAV ATAD;
OASC 3D
                          DEC
DA6D 20F9 ^0A68$
                          JRNZ
                                  :87020
                                                  WAIT 100 MICRO-SEC
DA5F 118200
                          LK
                                  DE,1000_00108
                                                  SET DATA VALID TIMEDUT ERROR
0A72 1821 ^0A95$
                          JR
                                  :B7C80
DA74 CBFE
                $ :87C30: SBIT
                                  7,[HL]
                                                  SET NRED LOW
3A76 3A0029
                                                  FREAD DATA
                          LD
                                  A FC 9 DR A
DA79 57
                          VCM
                                  D . A
DA7A 1E00
                          LK
                                  E • 0
                                                  FREAD EDI
```

IEEE-	488 INTERFACE		M 808× A:	ssembler ver	3.5E <:/55/7= =9:92 Page 100 8:ROM141 .45M
08AC	1601		LK	E • 1	
28 A C	CBB6 \$:B7C40:	CBIT	6.[HL]	SET NDAC HIGH
3484	3EFF	:B7C50:	LK	A+255	
388C 88AC	CB6E \$ 2809 ^OA93\$:87050:	BIT JRZ	5.[HL]:B7C70	CAMPORD DESCRIPTION OF THE COLUMN STATE
ABAC EBAC	3D 20F9 ^3A86\$		DEC JRNZ	A:87C60	;WAIT 1000 MICRO-SEC
DASD DASF DA91	CBD3 \$ CBFB \$ 1802 ^3A95\$		SBIT SBIT JR	2,E 7,E :87C80	SET DATA INVALID TIMEDJE ERROR
DA93	38F6 \$:B7C70:	SBIT	6,[HL]	SET NDAC LOW
0A95 0A96	E B 7 C	:37030:	EX MOV	DE,HL A,H	MOVE RESULTS TO REGISTERS A AND HL
0A97 0A98	D1 C9		POP RET	DE	

DAAD C9

RET

```
SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 101
IEEE-488 INTERFACE.
                                                               B:RDM141 .ASM
DA99
                  IE.PP:
                  *BIOS CALL 8 PARALLEL POLL
                  SCAN BE CALLED ONLY WHILE IN THE SOURCE HANDSHAKE MODE WITH ATN HIGH OR LOW.
                  SEXITS IN THE SOURCE HANDSHAKE MODE WITH ATH LOW.
                  ;EXIT
                          ; A
                                  =
                                          PARALLEL POLL VALUE
DA99
                          PROC
0A99 E5
                          PUSH
                                  HL
DA9A 210029
                          LK
                                  HL . CPDRA
DA9D 3E18
                                  A+0001_1011B
A+CPDRB
                          LK
                                                 FORM PARALLEL POLL
DA9F 320229
                          STO
DAA2 36FF
                          STO
                                 1111_11118. [HL] :FLOAT INTERNAL DATA BJS
DAA4 7E
                          LD
                                  A,[HL]
                                                  READ PARALLEL POLL DATA
3AA5 3600
                          CTZ
                                 0,[HL]
                                                  FRE-STORE SOURCE HANDSHAKE MODE
DAA7 210229
                                 HL, CPDRB
                          LK
DAAA 3612
                          STO
                                 0001_00108.[HL]
DAAC E1
                          POP
                                 HL
```

SCRCIM 808x Assembler ver 3.56 <:/55/7= =9:92 Page 102 IEEE-488 INTERFACE. 8:RDM141 .45M

≉[]

:IEEE drivers:

The routines IEINSTAT, IEINP and IEOUT are used to transfer characters to and from an IEEE device attached to the IDSBORNE IEEE port. The address of the device is specified in the cell IE_ADRS.
The function IEINSTAT returns the status of the input device.
Unfortunately there is no standard way by which an IEEE device indicates that it has a character. In order to determine this, one that to read the character device. As a CP/M transient can call IEINSTAT many times before calling IEINP to read a char, and IEINSTAT that to read the char to determine the status, the character read has to be buffered until cell to IEINP is made. IEINSTAT reads the device only when the buffer is empty. As zeros are used to indicate that the bfr is empty, a null character can not be read from the IEEE device.

SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 103 8:RDM141 .ASM IEEE-488 INTERFACE.

DAAE

IEDSTAT:

returns status of IEEE IEEE always appears to be ready

BAAE PROC

DAAE FOFF DRI OFFh

0AB0 C9 RET

```
SORCIM 803x Assembler ver 3.5E <:/55/7= =9:92 Page 104
IEEE-488 INTERFACE. 8:RDM141 .4SM
```

DAB1 IEINSTAT:

gets status of the input device attached to IEEE port if a char is present in IE_char then return with DF=H status

;else

imake device talker Read the device if char read then store in bfr make untalk

return with status of buffer

DAB1		PROC		
0A81 0A84	3ADCEF B7	LDA Ora	IE_CHAR A	
3A85	2803 ^DA3A\$	JRZ	1E110	if char present then
OAB7	F6FF	ORI	OFFh	return with OFFH status
DAB9	C 9	RET		

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 105
IEEE-488 INTERFACE. 8:ROM141 .ASM

DABA		ISI10: :make t	alker		
	CD3809 B7		LDA ADI MOV CALL DRA JRNZ	IE_ADRS IE_TALK C+A IE+OIM A IE110	<pre>;get primary address ;output interface message ;try again if error</pre>
0AC6		IEI20: :read a	char.		
DAC6 DAC9 DACB			CALL BIT JRZ	IE.IDM 7.L IEI30	; if error then
DACD	AF		XRA	A	inicate no char recvd
DACE	32DCEF	16130:	STA	IE_CHAR	stor the char
DAD1		IEI40: :make ur	ntalk		
DAD1 DAD3 DAD6 DAD7			LDK CALL ORA JRNZ	C+IE_UTL < IE+OIM A IE143	
		;return	with sta	atus of the char	
DAD9 DADC DADD	3ADCEF B7 C8		LDA Dra Rz	IE_CHAR A	
DADE DAEO	F6FF C9		DRI RET	OFFh	

SORCIM 803x Assembler ver 3.5E <:/55/7= =9:92 Page 105 5:RDM141 .ASM IEEE-488 INTERFACE.

0.[HL]

DAEL

IEINP:

Reads a character from IEEE port

DAEL

PROC

	CDB10A 28FB ^0AE1\$	CALL Jrz	IEINSTAT IEINP	wait till char avail
DAE6	21DCEF	LDK	HL.IE_CHAR	
DAE9	7E	LD	A.[HL]	

DAEA 3600 DAEC C9

STO RET

clear the buffer

080D C9

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 107
IEEE-488 INTERFACE. 8:ROM141 .ASM

OAED IEDUT:
;Outputs the character in reg C to IEEE port
;Uses ROM resident primitives.

RET

DAED			PROC		
0.450					
DAED	しち		PUSH	BC	save the char
					:make listener
DAEE	3A DBEF	IE005:	LDA	IE_ADRS	
04F1	0620		ADI	IE_LSTN	get primary address
DAF3	4F		MOV	C + A	
DAF4	CD0809		CALL	IE.DIM	output interface message
OAF7	37		DR A	Α	11 11 11 11 11 11 11 11 11 11 11 11 11
DAF8	20F4 ADAEES		JRNZ	IED05	try again if error
					again 1, 5,10,
DAFA	C 1		PCP	8	
DAFB	0600		LDK	B•0	ido not send eoi
				3.0	700 Hot Jena sol
DAFD	25	IE322:	PUSH	9	save char again in case of retry
DAFE	CDFB09		CALL	IE-DDM	Fourt char again in tase of lating
0801	C1		POP	В	
0802			DRA	A	
DB03	• •		JRNZ	IED22	**************************************
	20.0 04.00		SKAL	16022	try again if error
0805		1E040:			
		imake u	nlisten		
0805	0E3F		LDK	C.IE_ULST	
0807	CD0809		CALL	IE.DIM	
OBOA	37		DRA	Δ	
0808	20F8 ^0805s		JRNZ	I E O 4 0	
			O IN IN E	1 - 0 - 0	

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 108 IEEE-488 INTERFACE. B:RJM141 .4SM

The Parallel port is actually the IEEE port driven with the centronix protocol. The bit assignments of the PIA and PIB are as follows: PIAO-7 = data bus
PIBO = 0. data bus is output. 1. data bus is inout
PIBI = set to 1.
PIB2 = set to 0.
PIB3 = 0 output. 1 Input
PIB4 = not used
PIB5 = putput strobe. Active = 1.
PIB6 = 0. printer busy. 1. printer is ready.
PIB7 = not used.

CA2 = going low indicates to device that we are busy.
CA1 = low to high transition gates input data to port a.

The port is bidirectional but only one direction can be active at any time. The direction of port is determined by which routines are called. If postat or parout are called, it is made an output port and an input port if ipistat or parinp are called.

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 109
IEEE-488 INTERFACE. B:ROM141 .ASM

080E		CV2OP:		
			he port to a	PArallel output port.
OBOE		PROC		
OBOE	3A)EEF	LDA	PP.MODE	
0811	FE01	CPI	PP•BUT	
0813	C 8	RZ	11.000	return when in output mode
		set port a to	output on al	llines
0814	3E 2A	LDK	A.PA.CDR	
0816	320129	STA	PA.CTL	select direction req
0819	3EFF	LDK	A.PA.DRD	, , , , , , , , , , , , , , , , , , , ,
0818	320029	STA	PA.DIR	coutput constant to dir. reg to put a port in putput mode
0015	2525			
081E 0820	3E2E 320129	LK	A.PA.CDT	
3520	320129	STA	PA.CTL	select port a data reg.
0823	3E00	LK	A.PB.CDR	
0825	320329	STA	PB.CTL	select port b direction
0B28	3EBF	LK	A.PB.DR	
3B2A	320229	STA	PB.DIR	fall lines are output except the output busy signal on bit 6
0820	3E04	LK	4 DO COT	
082F	320329	STA	A.PB.CDT	
0832	3E02	LK LK	PB.CTL A.PB.DIO	select data register
0834	320229	STA		
7054	750557	31A	P8.DTA	;initialize port b data
0837	3E01	ŁK	A.PP.OUT	
DB39	32DEEF	STA	PP.MODE	
083C	۲9	RET		

1556-	488 INTERFA		Assembler ver	3.5E <:/55/7= =9:92
DB3D		CV2IP: ;initializes t	ne port to a o	arallel input port.
0330		PR OC		
083D 0840 0842	3ADEEF FE02 C8	LDA CPI RZ	PP.MODE PP.IN	;return when in input mode
		set port a to	input on all	lines
0843 0845 0848	3E2A 320129 3E00	LK STA ŁK	A•PA•CDR PA•CTL A•PA•DRI	select direction reg
284A	320029	STA	PA.DIR	;output constant to dir. reg to put a port in input mode
0840 084F	3E2E 320129	L K S T A	A.PA.COT PA.CTL	;select port a data reg.
0852 0854 0857	3E00 320329 3E3F	LK STA LK	A, P8.CDR P8.CTL A. P8.DR	select port b direction
3359	320229	STA	P3.DIR	fall lines are output except the output ousy signal on bit 6
085C 085E 0861	3504 320329 3508	LK STA LK	A.PB.CDT PB.CTL A.PB.DTI	select data register
3853	320229	STA	PB. DT4	finitialize port b data
0856 0858 0868	3E02 32DEEF 09	LK Sta Ret	A.PP.IN PP.MODE	

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 111 1EEE-488 INTERFACE. 3:ROM141 .ASM

386C		POSTAT:		the parallel	(centronix)	printer	attached	to the	IEEE	oort
086C			PROC							
086C 086F 0872 0874	SD0E08 3A0229 E640		LDA	CV2OP PB+DTA PP+DROY	convert; get port		ıt.			
0875			OR I	OFFH						
3B77	C 9	POS10:	PET							

	SORCIM	808x	Assembler	ver	3.5E	<:/55/7=	=9:92	Page	112
IEEE-488 INTERFACE.							B:ROM1	41	- 4S4

3878		PISTAT:	tatus of	the input	device	attached	to the	e oaral	lel (oort				
3878			PROC											
0878 0878 0876 0880	CD3D0B 3ADDEF E680 2009 ^083B\$		CALL LDA ANI JRNZ	CV2IP PIACTL PP•IRDY PIS20	;	if saved	status	indic	at as	there	is a	char	in the	· 214
0882 0885	3A0129 32DDEF		LDA STA	PA • CTL PIACTL		this is pia clea				tne				
388C	E680 C8		ANI RZ	YGFI.qq										
2886 2880	F6FF C9	21820:	DRI RET	OFFH										

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 113 8:ROM141 .4SM IEEE-488 INTERFACE.

SBB€		PARINP: iinputs	a chara	cter from PArall	el port.
3886			PROC		
088E 0891	CD780B 28FB ^338E\$		CALL JRZ	PISTAT PARINP	wait till char in bia
0893 0894 0897 089A 089B	AF 32DDEF 340029 2F 4F 59		XRA STA LDA CMA MOV RET	A PIACTL PA.DTA C.A	clear saved status invert data also in c

SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 114 IEEE-488 INTERFACE.

3 89D		PAROUT: ;outputs the	character in c	to the IEEE port treating the port as a parallel port.
389 0		PR OC		
089D 0840	CD6C0B 28FB ^389D\$	CALL JRZ	POSTAT PAROUT	
09A2 08A3 08A4 03A7	79 2F 320029 3E22	MOV CMA STA LK	A+C PA.DTA A+PB.DTO+STI	;invert data
38A9 38AC	320229 3E02	STA LK	PB.DTA A.P3.DTO	set strope
08AE 0881	320229 C9	STA RET	PB.DTA	iclear strobe

		SORCI	4 808x	Assembler ver	3.5E <:/55/7= =9:92 Page 115
\$10 -	Serial I/O) Processo	rs•		8:ROM141 •45
		#[5]			
0882		SIRST:			
		:Master	reset	\$10	
		; ENTRY			
		; C	=	\$1.\$16 or \$1	I.S64 for 1200/300 baud
		:EXIT			
		#NONE			
0882			PROC		
0882	3E57		LDK	A.SI.MRST	
0884	32002A		STO	A+H+SCTRL	imaster reset
3887	79		MOV	A + C	
3888	32C1EF		STO	A+ACIAD	:last-command cell
38BB	32002A		STO	A.H.SCTRL	select SIO
388C	C 9		RET		

SID - Secial I/O		Assembler ver 3.5E	<:/55/7= =9:92 Page 115 3:RDM141 .ASM
OBBF	READER: :Input one byte :ENTRY :None	e from reader port	
	; EXIT =	character read	

		;C	=	character read	
38BF			PR DC		
088F 08C2 08C4	CDE808 E601 28F9 ^089	3 F \$	CALL Ani Jrz	ACISTAT SI•RRDY READER	;if not ready
08C6 08C9	21DAEF CB86	s	LDK CBIT	HL•SERFLG O•[HL]	
OBCB OBCE OBCF	3A012A 4F C9		LD MOV RET	A • d • SREC C • A	:get data :C=A

\$10) -	Serial	1/0	SORCI Processo		Assembler	ver	3.5E	<:/55/7=	=9:92 Page 3:ROM141 •	
980	00			SLST: :Get li :ENTRY :NONE	st dev	ice status					
				EXIT A A ZBIT	= =	O. IF NO OFFH IF SET IF N	READY	,	or סעדיטד		
эвс	00				PROC						
080 080 080	3	CDE808 E602 C8			CALL Ani Rz	ACISTAT SI.TRDY		; R	ETURN		
380 380		F6FF C9			ORI RET	OFFH					

SIO - Serial I/O		3x Assembler ver	3.5E <:/55/7=	=9:92 Page 118 8:ROM141 •ASM
0809	LIST: :Output one :ENTRY	byte to list por	t	
	; C =	character to	outout	
	:EXIT			
0809	PROC			
0809 C00008 0800 2868 *0809	SALL S JRZ	SLST LIST	GET STATUS	
08D5 79	MOV	A + C		
32012A	CTS	TMX2.F.A	send chr	
08E2 21DAEF 08E5 088E	LDK B CBIT	HL•SERFLS 1•EHL]		
3857 C9	RET			

SC SID - Serial I/O Probe		Assembler ver 3.5E <:/55/7= =9:92 Page 1: 8:ROM141 .45	
09E8 AC15	STAT:		
		S OF THE SERIAL PORT	
;EN	ΓRΥ		
1CN :	۸Ē		
;EX1	ΙŤ		
; A	=	STATUS REG	
38EC	PRIDC		
08E8 C5	PUSH	BC	
OBE9 3A012C	LD	A+H+VID+1	
OBEC OF	RRC	A	
0BED 5620	ANI	20h	
DBEF 4F	VOV	C • A	
08F0 34002A	LD	A+H+SSTS	
DBF3 E6DF	ANI	00Fh	
OBF5 81	DR A	C	
73F6 4F	MOV	C • A	
OBET SADAEF	LO	A. SERFLG	
08FA E603	ANI	03	
0BFC 31	DR 4	C	
OBFD 32DAEF	CTS	A. SERFLG	
0C00 C1	POP	BC	
0001 09	RET		

NEW DISK DRIVERS	SORCI	M 808×	Assembler	ver :	3.5E	<:/55/7=	=9:92 Page 123 3:RJM141 •45M
	* [6]						
0002	RDRV: ;RESET ;ENTRY ;NONE	DRIVE					
	;EXIT	±	RESET II	ERROI	₹		
0002		PROC					
OCO2 3EDA OCO4 3205EF OCO7 CD710E OCOA 3805 ^OC115	:L30P:	LDK STO CALL JRC	A, NRETRY A, RTRY SELDRY :1	(; S	ELECT DRI	∀ 5
0000 000800 000F 3009 A001A9		CALL JRNC	HOME: END			HOME DRIVE IF GOOD	
0C11 3A05EF 0C14 3D 0C15 20ED ^3C04	:1:	LD DEC JRNZ	A•RTRY A :LOGP				
0C17 3C 0C18 37 0C19 C9		INC STC RET	Δ			MAKE NOT Z INDICATE E	
DC1A AF DC1B C9	:CV3:	XRA Ret	4				

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 121
NEW DISK DRIVERS
                                                          B:ROM141 .ASM
OC10
                RSEC:
                READ SECTOR
                ;*NOTE#
                        No retries are performed at this level
                ENTRY
                ;₿
                              NUMBER OF SECTORS
                       =
                :EXIT
                ; HL
                               LAST DMA ADDRESS PLUS ONE IF GOOD TRANSFER
                :ZBIT
                       =
                               RESET IF ERROR
                ; A
                               NONZERO IF ERROR
                        RTRY = 1 IF ERROR(SD OLD CBIDS DOESN'T DD RETRYS)
0010
                        PR DC
OC1C 3E80
                        LDK
                               A.D.RDS
0C1E 3201EF
                        STO
                               A+R_WCOM
0021 1805 ^0028$
                        JR
                               R_WSEC
```

_Ω	NEW D	ISK DRIVERS	SORCI	4 x808 M	ssembler ver 3.	•5E <:/55/7= =9: 3:	:92 Page 122 :RDM141 •45 M
Copyright ©1982 Osborne Computer Corporation	0023		WSEC: :WRITE :*NOTE*	A SECTOR			
1982			: :ENTRY	No retr	ies are performa	ed at this level	
2 Os			;3	=	NUMBER OF SECTO	ORS	
b or a			; EXIT				
e C			; aL	Ξ	LAST DMA ADDRES	SS PLUS ONE IF GO	COD TRANSFER
ğ			; ZBIT	=	RESET IF ERROR		
p			; A	=	NONZERO IF ERRO		
uter				; RTRY	= 1 IF ER	RROR(SO OLD DBIOS	S DOESN'T DO RETRYS)
Corp	DC 23			PROC			
ŏ	0023	3 E 4 D		LDK	A.D. WRTS		
ation	DC 25	32015F		STO	MC3W_F+A		

FALLS THROUGH TO "R_WSEC"

NEW	DISK DRIVERS	SORCI	M 803x #	kssembler ver 3	•5E <:/55/7= =9:92 Page 123 B:RDM141 •45M				
0028			R_WSEC: READ OR WRITE SEGMENT FENTSY						
		: B	= ;R_WCOM		ETIPW NG CAEN CT SNG STPW-G NG				
		;EXIT ;HL ;ZBIT	= = ;RTRY	RESET IF ERROR	SS PLUS ONE IF 3000 TRANSFER				
DC 28			PR DC						
3C28	ED43CAEF 1	\$	STO	BC . NUMSEC	SAVE BC				
0C 2E			LDK STO	A+NRETRY A+RTRY	SET RETRY NUMBER				
		; SELECT	DRIVE						
0031 0034	CD710E 2805 ^0C3Bs	:RLOOP:	CALL JRZ	SELDRV :1	NC BYING PRUT: SZERCCA CABR TINCC NC BYING BI:				
		SET "D	TRKR" T	NCITIZON CABH C					
0036 0039		,	CALL JRC	RADR :ERR	READ ADDRESS AND SET CONTROLLER GOTS:				
		:SEEK							
0C38 0C3E		:1:	SALL JRC	SEEK :ERR	SEEK TO TRACK				
		READ OF	RRITE						
	ED4BCAEF \$ CD3CDD 3017 ^DC50\$		LD CALL JRNC	BC+NUMSEC RD_WRT ÷END	:8 = NUMBER OF SECTORS TO R/W :READ/WRITE PER R_MCOM :IF GOOD				
		RETRY?							
0049 0040 0040	2105EF 35 2800 ^0058s		LDK DEC JRZ	HL,RTRY [HL]:ERR	;GET RETRYS NO MORE RETRYS				
0C4F	7E			A. [HL]	GET NUMBER OF RETRY				
0C50 0C52	FE09 2000 ^0C31\$		CMP	NRETRY+1 :RLOOP	LOOP IF NOT FIRST RETRY				
0C54 0C57	CDA500 3802 ^0C58\$		CALL	RADR :ERR	CHECK TRACK ON THE FIRST RETRY STOP IF ERROR				
0059	1806 ^0031\$		JR	: ?L DDP	:L00°				
3C5B					:INDICATE ERROR				
0€50 0€5€	37 1801 ^0C61\$			A :2	:EXIT				
JC60	AF	:END:	×₹Δ	Δ	:INDICATE SOOD				

SORCIM 808x Assembler ver 3.55 <:/55/7= =9:92 Page 124 8:RJM141 .ASM

NEW DISK DRIVERS

ISET "RTRY" AND REGESTER B

OC61 3205EF :2: STO A,RTRY ;SET RETRY TO 1 FOR ERROR AND 0 FOR GOOD

DC64 ED4BCARE \$ LD BC.NUMSEC :BC = RESTORE BC

0C68 C9 RET

```
SORCIM 803x Assembler ver 3.5E <:/55/7= =9:92 Page 125
 NEW DISK DRIVERS
                                                               3:ROM141 .454
 0069
                   SENDEN:
                  *DETERMINE THE DENSITY AND NUMBER OF SECTORS PER TRACK OF THIS DISK DRIVE
                  :ENTRY
                  SNONE
                  ;EXIT
                  ; 8
                          =
                                  NUMBER OF SECTORS ON ONE TRACK
                  ; Z3IT
                                  RESET IF ERROR
                          SIZE RETERS OF YELLOW FIRM THE SET SIZE
 0069
                          PROC
                  *CHECK DENSITY
                          FHOME LOOP
0C69 3E02
                          LDK
                                  A . 2
3205EF
                          STO
                                  A, RTRY
                          DENSITY LOOP(CHECK PRESENT DENSITY FIRST)
3C6E 0602
                  : RL1:
                         LDK
                                  8,2
                                                 SYTIZMEC HTGE XDBHD:
0070 05
                  :RL2: PUSH
                                  ВC
                                                 SAVE COUNT
                          CHECK THIS DENSTIY
0C71 CD710E
                         CALL
                                 SELDRY
                                                 SELECT DRIVE
                          JRC
                                 ?
                                                 IND ERROR CHECKING FOR SELDRY BECAUSE NO ERRORS ARE RETURNED AT THIS TIME
0C74 CDA500
                         CALL
                                 RADR
                                                 READ ADDRESS
0077 01
                         POP
                                 вс
                                                 RESTORE DENSITY RETRY
0078 3017 ^0091$
                         JRNC
                                 : 1
                                                 ; IF GOOD
                  *IF DENSITY ERROR CHANGE DENSITY AND LOOP TO :RL2:
DC7A 3ADOEF
                         LD
                                                 PRESENT DENSITY
                                 A. SAVTYP
0C7D EE01
                         XRI
                                                 CHANGE DENSITY BIT
3C7F 32D0EF
                         STO
                                 A. SAVTYP
                                                 :NEW DENSITY
3C82 10EC ^3C70s
                         DJNZ
                                 :RL2
                                                 FDENSITY LOOP
                 *IF 30TH DENSITYS FAIL HOME DRIVE AND TRY AGAIN
0C84 2105EF
                         LDK
                                 HL,RTRY
0087 35
                         DEC
                                 [HL]
DC88 2843 *DCCD$
                         JRZ
                                 :ERET
                                                 FEND IF SECOND TIME THROUGH
DC8A CD980C
                         CALL
                                 HOME
                                                 HOME DRIVE
OC8D 383E ^OCCD$
                         JRC
                                 :ERET
                                                 :END IF ERROR IN HOME
OC8F 180D ^OC6E$
                         JR
                                 :211
                                                TRY AGAIN
                 #SET "SAVTYP"
0C91 3A0CEF
                 :1:
                         LD
                                 A+DSTS9+3
                                                SECTOR LENTH STATUS BYTE
3C94 E603
                         ANI
                                 0000_00118
                                                ;0-3
OC96 CB27
                         SLA
                                 A
3098 0827
               $
                         SLA
                                 Α
                                                BXX00_0000 ZAW BCOXX_0000 ZI WONE
```

NEW 0	DISK DRIVERS	SORCI	M 808x	Assembler ver 3.	.5E <:/55/7= =9:92 Page 126 8:R3M141
0C9A	47		MOV	B • A	\$SAVE
OCAD	3ADDEF E6F3 B0 32D0EF		LD ANI DRA STO	A • SAVTYP 1111_00116 8 A • SAVTYP	CLEAR BITS FOR IN SECTOR LENTH
		#READ 4	DORESS	AND SET NUMBER OF	SECTORS CVA RETURN
0CA4 0CA7	340BEF 57		LD MOV	A, DSTS3+2 D, A	SECTOR JUST READ
			;RETRY	LOOP	
	3E03 3205EF	: २८3:	LDK STO	Δ,3 Δ,RTRY	SET RETRYS
			:READ	HEADER LOGP	
DCAD DCAE DCB1	CD4500	:L30P:	HZU9 LJA3 909	DE RADR DE	;SAVE LAST SECTOR ADDR ;READ ADDRESS
	3811 ^3005\$		JRC	: FRR	:IF ERROR IN RADR
			:CHECK	FOR LAST MEADER	
0CB7 0CB8 0CB9	7 A		LD MOV MCV SUB JRZ	A+DSTS3+2 A+D B :LOOP	######################################
эсвс	3003 ^00015		JRNC	: 2	FIF THE VALUE IN A WAS THE LAST SECTOR OF THE TRACK
OCBE OCBE	50 13EC ^3CADs		MDV Je	0+8 :L00?	:D=LAST SECTOR READ ;LOOP TILL YOU FIND THE LAST TRACK
			SET N	JMBER DE SECTORS	PER TRACK
0CC1 0CC2	47	:2:	INC MOV	Α 9• Δ Δ	RESET FLASS
0CC4			XR A RET	4	GOOD RETURN
		≠IF NU	48. SEC.	ERROR MAKE LAST	SECTOR READ ZERO AND RETRY TO :LOOP1
	1600 3A05EF	:	LDK LD DEC	D+0 A+RTRY A	
	2000 ACCAAS		JRNZ	: ?L 3	RETRY
0CCD 0CCF 0CD0		:ERET:	LDK ORA RET	A • 1 A	:FLAGS TO NONZERO SERROR RETURN

NEW DISK DRIVERS	SORCIM 808x	Assembler ver 3.5E <:/55/7= =9:92 Page 127 3:RJM141 .4SM					
3CD1	SCTRKR: :SET CONTROLER TRACK REGESTER :D.TRKR <= SAVTRK						
	;USED IN FORMA ;ENTRY ;SAVTRK =	SI CABH BHT BRBHW WORN TINDO LOY NBHW BNITA					
	*EXIT						
0001	PROC	SAVTRK					
DCD1 3A15EF DCD4 320121 DCD7 C9	LD STO RET	A•SAYTRK A•D•TRKR					

	SORCIM	808x	Assembler	ver	3.5E	<:/55/7=	=9:92	Page 128	
DRIVERS	33.10.						8:R0M	141 -454	

NEW DISK DRIVERS	33.01			B:RJM141 •A5M
3C 98	* 0.2 THE	ISK DRIV IS ALREA KDEL" ha	DV SELECTED AND	READY set this proc will check for seek and one errors
	SDISK	=	DRIVE	
	;EXIT	=	SET IF ERROR	
DC D8		PROC		
0008 3A13EF 0008 E607		LD Ani	A.SEKDEL 0000_01118	GET SEEK DELAY SPEAD & VERIFY BITS ONLY
0CDD CD480E 0CE0 08		CALL RC	FDSK	; FUNCTION DISK ; IF ERROR
DCE1 CDB8DE DCE4 D8		CALL	WBUSY	:WAIT FOR BUSY TO DROP
OCE5 3A0021		L D	A.D.STSR	
OCEA 2800 ^OCEAS		3IT JRZ	2,A :1	:IF NOT ON TRACK ZERO
OCEC 3A13EF OCEF E694 OCF1 08		LD Ani RZ	A,SEKDEL 0000_0100B	:VERIFY? :NO VERIFY GOOD RETURN
0CF2 3A0021 0CF5 E618 0CF7 C8		LD Ani RZ	A+0+STSR 0001_10008	TEST SEEK AND CRC
OCF8 37 OCF9 09	:1:	STC RET		:IF ERROR

NEW D	ISK DRIVERS	SORCI	M 808x	Assembler	ver	3.5€	<:/55/7=	=9:92 P: B:RDM14	
OCFA		:TRACK :ENTRY	RES UPO	C DEFINED COME DATE	VER I F				
2654		;EXIT ;CBIT ;		SET IF E		R TRACE	(= SAVTRK	ζ.	
DCFA DCFA DCFD DD00 DD01	210121 3A15EF 3E C8		PRDC LDK LD CMP RZ	HL.D.TRK A.SAVTRK [HL]		;RE	TURN		
0002	320321		CTZ	A.D.DATR	Ł	; S E	T TRACK W	CATRA	
0005 0007	0610 1800 ^0015\$		LDK JR	B.D.SEK PSEKC		;P8	RFORM SEE	K COMMANO	

0620

DD08 1808 ^DD15\$

```
SDRCIM 808x Assembler ver 3.56 <:/55/7= =9:92 Page 130
8:ROM141 .45M
NEW DISK DRIVERS
                  STEP:
0009
                  STEP ONE TRACK
                  SAVTRK IS NOT USED IN THIS PROC
                  CONTROLER TRK RES IS UPDATED
                  ; VERIFY IS PERFORMED
                  ; ENTRY
                  ; NONE
                  ; EXIT

■ SET IF ERROR

                  :CBIT
                          IF NO ERROR CONTROLER TRACK = TRACK +/- 1
                          PROC
2009
```

B.D.STP

PSEKC

:PERFORM STEP COMMAND

LDK

JR

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 131 NEW DISK DRIVERS B:ROM141 .ASM

ODOD STEPIN:

SSTEP IN ONE TRACK
SSAVTRK IS NOT USED IN THIS PROC
CONTROLER JRK REG IS UPDATED

; ENTRY

INDNE

:EXIT

CBIT = SET IF ERROR

IF NO ERROR CONTROLER TRACK = TRACK + 1

0000 PROC

0000 0640 LDK B.D.STPI

DDOF 1804 ^DD15\$ PSEKC CHAMMES MI-SATE MADRASS

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 132
B:ROM141 .4SM
```

NEW DISK DRIVERS

STEPOUT: 0011

STEP OUT ONE TRACK

SAVTRK IS NOT USED IN THIS PROC CONTROLER TRK REG IS UPDATED

:VERIFY IS PERFORMED

:ENTRY : NONE

;EXIT

SET IF ERROR :CBIT

IF NO ERROR CONTROLER TRACK - 1

PROC 0011

B.D.STPC LDK

0D11 0660 0D13 1800 ^0D15\$ *PERFORM STEP-OUT COMMAND PSEKC JR

NEW DISK DRIVERS	SORCIM 808x	Assembler ver 3	8.5E <:/55/7= =9:92 Page 133 B:RJM141 .4SM
0015	; ENTRY	AND PERFORM SEEK	
	; B =	SEEK TYPE COMM	GNA
	;EXIT ;C3IT =	SET IF ERROR	
0D15	PR DC		
0015 3A13EF 0018 E617 001A B0	LD Ani Ora	A • S E K D E L 0001_01118 8	FONLY UPDATE, VERIFY, & SPEAD
0018 CD480E 001E 08	CALL RC	FDSK	FUNCTION DISK
0D1F CD880E	CALL	WBUSY	STATE FOR BUSY TO DROP
	CHECK FOR ERR	OR S	
DD22 3A13EF DD25 E604 DD27 C8	LD Ani Rz	A+SEKDEL 0000_01003	:VERIFY? :ND VERIFY SOOD RETURN
0D28 3A0D21 0D2B E618 0D2D 08	LD Ani RZ	A+D+STSR 0001_10008	:TEST SEEK AND CRC :GOOD RETURN
0D2E 37 0D2F C9	STC RET		; IF ERROR

NEW D	ISK DRIVERS	SORCI	M 808x	Assembler ver 3.5% <:/55/7= =9:92 Page 134 3:ROM141 .45M
2030		READ:		
		:ENTRY		
		‡ 3	=	NUMB OF SECTORS TO READ
		:=xiT		
			=	LAST DMA ADDRESS PLUS ONE IF GOOD TRANSFER
			-	SET IF ERROR
		•6513	-	261 11 67/27
0030			PR DC	
0030	3.500		LOK	4.0.305
3032	3201EF		210	MC SW_F, A
0035	1805 ^0D3C\$		JR	RD_WRT :JMP AND RETURN TO CALLING PROC
	2030 2030 2030 2030 2032	0030 0030 3£90 0032 32016F	NEW DISK DRIVERS 2030 READ: :ENTRY :3 :EXIT :HL :CBIT 2030 2030 2030 2032 32016F	DD30 READ:

xecs MIDFOS	Assembler	ver	3.5E	<:/55/7=	=9:92	Page	135	
					3:RDM1	41	4 S M	

2037

NEW DISK DRIVERS

WRITE:

:ENTRY :3 =

NUMB OF SECTORS TO WRITE

; EXIT

LAST COCC TEMPORARY COCCA AMONG TRANSFER SET IF ERROR

:HL = :C3IT =

0037

PRIDS

0037 3EA0 0039 3201EF

LDK STO A.D. WRTS A.R_WCOM

FALLS THROUGH TO RO_WRT

```
SORCIM 803x Assembler ver 3.58 <:/55/7= =9:92 Page 136
                                                           A:R7M141 .45M
NEW DISK DRIVERS
003C
                 RD WRT:
                 READ OR WRITE A SECTOR
                 SENTRY
                              NUMB OF SECTORS TO READ OR WRITE
                 ; 3
                        TR_WOOM = D.ROS OR D.WRTS
                 :EXIT
                                LAST DMA ADDRESS PLUS ONE IF GOOD TRANSFER
                 ;HL
                                SET IF SERDE
                 :C3IT =
                        PROC
0.030
                 SET SECTOR REG
                        LD
                                4.SAVSEC
303C 3A14EF
                        STO
                                A.D.SECR
2D3F 320221
                                               SAVE NUMBER OF SECTORS TO RIVA
0042 05
                        PUSH
                              30
                 SET DE TO NUMBER DE BYTES IN ONE SECTOR
                                HL,128
                         LDK
218000
                                                :DISK TYPE
0046 34D0EF
                        LD
                                A. SAVTYP
                                                STIF CHT SMUC:
0049 C83F
                         SRL
                                Α
               4
0.048 CB3F
               5
                         SRL
                                                SIZE ONLY
                                0000_00118
0040 E603
                         ANI
                                                :SET FLAGS
004F 97
                         OR A
                                Δ
                                                :IF 128
0050 2804 00056$
                         JRZ
                                : 1
                                B • A
                         MCV
0052 47
                                                SHIFT LEFT ONE BIT
                :3LODP: ADD
                                HL.HL
0053 29
0D54 10FD ^0D53$
                                :BLOOP
                         DUNZ
                                               CONTRACTOR OF STATES IN ONE SECTOR
                                DE. HL
0056 EB
                 :1:
                         5 X
                         PO2
                                3.6
                                                :RESTORE
0057 C1
                                                SAVE NUMBER OF SECTORS TO RIW
                                3.8
0058 05
                         PUSH
                 SET SOMMAND AND CHECK FOR MULTI-SECTOR
                                                GGET NUMBER OF SECTORS
                         VCM
                                5 . A
0059 78
                                                MAKE NONMULTI-SECTOR
005A 0E00
                         LOK
                                C • 0
005C FE02
                         CMD
                                               :IF LESS THAN TWO SECTORS
DD5E 3802 ^0D62$
                         JRC
                                : 2
                                C+134
                                                :MAKE MULTI-SECTOR
0010 DE10
                         LDK
                         LD
                                MCCW_S+A
                                                GET D.RDS DR D. HRTS
0062 3A01EF
                 :2:
                                                *MAKE MULTI-SECTOR OR NONMULTI-SECTOR
0D65 B1
                         ુર
                                С
                 SET HE TO NUMBER OF BYTES TO TRANSFER
                                HL.O
0055 210000
                         LOK
                                 HL.OF
                :L0021: ADD
0069 19
006A 10F0 000695
                         DUNZ
                                :10091
```

ΗL

PUSH

006C E5

SAVE LENTH

SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 137 VEW DISK DRIVERS 3:ROM141 .ASM

TOTAL COMMAND

		ISIVE C	CVAMMO		
3D6D 3D6E 3D71	F3 CD430E 3004 ^0D77s		DI CALL JRNC	FDSK :3	;IF S000
		:17 430	RT REFOR	E DMA	
0073 0074 0075	01 01 F8		202 202 E I	DE DE	FRESTORE STACK
0076	C 9		RET		RETURN IF ERROR IN FOSK
		SET RE	CRP MRUT	SCCA AMC .AMG M	SHANNART OF SETYS TO TRANSFER
0077 0073	C1 2A0FEF	:3:	PB2 LD	3C HL,DMADR	;RESTORE LENIH ;HL = DMA ADDRESS
357B 357E	113ACD 05		FDK PUSH	DE,:RET DE	;FOR RETURN
		AMC CO:			
	3401EF FE80		LD CMP	A+R_HCDM D+RDS	;(13) GET COMMAND ;(7)
0084	SADADE		JZ	DMARD	TER: CT ZVRUTER AMC CABE (01):
3087	C3F00E		JMP	DMAWRT	:(10) WRITE DMA RETURNS TO FRET
		; RETJRN	FROM DM	A AND CHECK FOR	BUSY AND RESET
ASGC	C1	:RET:	POP	3C	SECTORS OF SECTORS
	1A CB47 6		LO SIT	A+[DE]	GET STATUS
38GC	1A CB47 \$ 230E ^009E\$		LO BIT JRZ	A.[DE] 0.A :4	GET STATUS :IF NOT BUSY
380C	CB47 \$		BIT	O • A	
008C 008E 0090 0093	CB47 \$ 230E ^009E\$		BIT JRZ LDK	0,4 :4 DE+:RET1	; IF NOT BUSY
008C 008E 0090 0093	CB47 \$ 230E ^009E\$		BIT JRZ LDK PUSH	0.4 :4 DE.:RET1 DE	:IF NOT BUSY
008C 008E 0090 0093	CB47 \$ 230E ^309E\$ 119300 35		BIT JRZ LDK PUSH DEC	0.4 :4 DE,:RET1 DE	; IF NOT BUSY ; FOR RETURN ; SUBTRACK ONE FROM THE NUMBER OF SECTORS AND SET THE ZERO FLAG
008C 008E 0090 0093 0094 0095	CB47 \$ 230E ^3D9E\$ 11930D >5 05 CA330E	:RET1:	BIT JRZ LDK PUSH DEC JZ	0.4 :4 DE.:RET1 DE: 3 WBUSY	FOR RETURN SUBTRACK ONE FROM THE NUMBER OF SECTORS AND SET THE ZERO FLAG IF NON MULTI-SECTOR R/W WAIT FOR BUSY TO DROP
008C 008E 0090 0093 0094 0095	CB47		BIT JRZ LDK PUSH DEC JZ	0.4 :4 DERET1 DE 3 WBUSY FORINT A.D.STSR	:IF NOT BUSY :FOR RETURN :SUBTRACK DNE FROM THE NUMBER OF SECTORS AND SET THE ZERO FLAG :IF NON MULTI-SECTOR RAW WAIT FOR BUSY TO DROP :CLEAR BUSY
008C 008E 0090 0093 0094 0095 0098	CB47		BIT JRZ LDK PUSH DEC JZ JMP	0.4 :4 DERET1 DE 3 WBUSY FORINT A.D.STSR	:IF NOT BUSY :FOR RETURN :SUBTRACK DNE FROM THE NUMBER OF SECTORS AND SET THE ZERO FLAG :IF NON MULTI-SECTOR RAW WAIT FOR BUSY TO DROP :CLEAR BUSY
008C 008E 0090 0093 0094 0095 0098	CB47	:CHECK F	SIT JRZ LDK PUSH DEC JZ JMP LD FOR ERRIP	0.4 :4 DE. : RET1 DE 3 WBUSY FORINT A.D.STSR RS 0101_11008	:IF NOT BUSY :FOR RETURN :SUBTRACK DNE FROM THE NUMBER OF SECTORS AND SET THE ZERO FLAG :IF NON MULTI-SECTOR RAW WAIT FOR BUSY TO DROP :CLEAR BUSY :RETURN AND GET STATUS

```
SDPCIM 808x Assembler ver 3.55 <:/55/7= =9:92 Page 133
                                                             R:ROM141 .49Y
NEW DISK DRIVERS
0045
                 RADR:
                 :Read Address info.
                 READS SIX BYTES INTO "OSTS9"
                 : ENTRY
                 INDNE
                 ; EXIT
                                 OFFH IF TIME OUT ERROR
                 ; A
                 :C3IT =
                                 SET IF ERROR
                                 HEAD POSITION
                 ;D.TRKR =
                 ≠NOTE#
                         SETS TRACK RES IN CONTROLER IF GOOD
                         PRIDC
3045
                         LDK
                                 4.7.374
0045 3500
ODA7 F3
                         OΙ
                                                :function disk
20A8 CD432E
                         CALL
                                 FDSK
                         JRC
                                 : 1
DDA8 3830 *0DE9$
                 TUD BMIT FOR CRO TERF PORT TIME BUT
                         SET REGESTERS FOR DMA TRANSFER
                                                 SIX BYTES TO READ
                         LDK
                                 3C•5
0040 010500
                                                :FBA FOR DMA
                         LDK
                                 HL.DSTSB
0030 2109EF
                         :WAIT FOR 1/4 OF A TRACK(60MS) OR DRO
                                 DE + 4353
                         LOK
0083 110311
                                                 :(13) GET STATUS
                                 A.D.STSR
2006 340021
                 :L009: L0
                                                 : (4)
0039 1F
                         ₹ Д ₹
                                                 : (4)
303A 1F
                         RAR
                                                 ;(10) 30T DR0
                         JC
                                 :3
DACBOD BEGC
                                                 ;(6)
                                 95
0D85 19
                                                 ; (4)
                         MOV
                                 4.0
DDSF 7A
                                                 :(4)
ODEO B3
                          23.4
                                 :L002
                                                 ;(10)
                         JNZ
0001 028600
                         FINDICATE TIME OUT ERROR
                                                 CLEAR RUSY
                         CALL
                                FURINT
0004 C0360E
                                                 :A=05FH
                         LDK
                                 A.DEEH
DDC7 3EFF
                                                 SCREET TUG BRIT & STADICKI;
                         J٩
0009 181B *0058$
                         *TRANSFER FIRST BYTE AND CALL DMARD FOR LAST FIVE BYTES
                                                 ;(13) GET BYTE
3008 3A0321
                  :3:
                         LD
                                 A.D. DATE
                                                 ;(7) STORE BYTS
                          STO
                                 A.[HL]
000E 77
                                                 ; (6)
                          INC
                                 ΗL
DDCF 23
                                                 130 = 5
                                                 :(17) CALL DMARD
                                 CSAMO
                         CALL
3000 000ADE
                  TRETURN FROM OMARD AND WAIT FOR BUSY TO BE RESET
                                  WBUSY
0003 C0880E
                         CALL
                                                 FREST TLC BMIT FIR
                         JRC
                                 : 1
0006 3811 *0DE9$
```

NEW 3	DISK DRIVERS	SOPCIM	303x	Assembler ver	3.5E <:/55/7= =9:92 Page 139 3:RDM141 .48M
3008	3A0021	L	. Đ	A.D.STSR	:GET STATUS
		CHECK FO	१९ इत्रह	OR S	
	E610 2009 *00E8\$		NI RNZ		TEST RNE, CRC AND DATA LOST
		SET TRACK	K REST	ESTER	
0DDF 0DE2 0DE5 0DE6	320121 AF	ST	D TO RA R	A+D+SECR A+D+TRKR A	:GET TRACK :SET TRACK :RESET CARRY
0058	37	:2: ST	rc		;SET CBIT
ODE9 ODEA	FB C9	:1: EI			

NEM DIZK DSIAES	SORCIN	4 828x A:	ssembler ver 3.	5E <:/ 55/7= =	9:92 Page 143 8:ROM141 •45M
DDEB	READTRK: ;READ D! ;ENTRY ;DMADR	: NE TRACK	FROM THE DRIVE		
	:EXIT	=	SET IF ERROR		
ODEB		PRICC			
ODEB 3EE0 ODED F3 ODEE CD43DE ODF1 380C ^ODFF	s.	LDK DI CALL JRC	A.D.ROT FDSK :1	:IF SRROR	
	AMC CC;				
0DF3 01FFFF 0DF6 2A0FEF 0DF9 0DJA0E 0DFC 5B 0DFD AF 0DFE 09		LDK LD CALL EI XRA RET	C+OFFFFH RCAMD RCAMD CRAMD	;FOR ROM 1.2 ;IN ROM	
ODFF FB 0.500 C9	:1:	EI RET			

,

	SCRCIM	308x	Assembler	ver	3.5E	<:/55/7=	=9:92	Page	141
SEBAISC NSI							B:ROM1	41	• 4 S M

NEW :	SESVIEC NSIC	SORC	IM 308x ∈	Assemblar	ver 3	•5E	<:/55/7=		Page 141 41 •45M	
0501		FMTTRK: #FDRMAT #ENTRY	: F ONE TR	4CK						
		,,,,,,,	:8C ;DMADR	=	LENTH FWA OF	auff	Ε ૨			
		:EXIT	=	SET IF S	ERROR					
0501			PR OC							
		:TEST	ENSITY A	AND SET RE	во ото	04EH	GR DEF4			
0E01	3ADOEF		LD	A.SAVTY	,					
0E04	164E		LDK	D.04EH		:00	UBLE			
0E06	OF		RRC	A		• • • •	0322			
3E07	3002 ^0E08\$		JRNC	: 1		; I F	DOUBLE			
0609	16FF		LDK	D.OFFH		\$ \$1	NGLE			
		GIVE C								
0E0B	3EF0	:1:	LDK	A+D. HRTT	•					
0 E O D	F 3 D 5		DI	25						
DEOF	C5		PUSH PUSH	DE 8C			LL BYTE			
0.01			-0311	ьс		:LE	N 1 Cl			
DE10	CD480E		CALL	FDSK						
DE13	C 1		POP	вс		; L E	NTH			
3E14	01		POP	DE			LL BYTE			
2615	381C ^DE335		JRC	: 3		;IF	ERROR			
		AMC CC:								
3E17	D5		PUSH	DE		;FI	LL SYTE			
0E18 0€18	2AOFEF CDFODE		LD Call	HL.DMADR						
		:PAD RE	ST OF TR							
0E1E 0E1F	C1 210321		POP LDK	BC HL,02103	4		FILL BY			
0E22 0E23	1 A 1 F	:L00P:	LD RAR	A,[DE]		;GE1	STATUS			
0E 24	3006 ^DE2C\$		JRNC	: 2		:FIA	ISHED IF	NO BUSY		
0E26	1F		RAR	-			.13002	.40 5051		
DE 27	30F9 ^0E22\$		JRNC	:L00P		;IF	NO DRQ			
0E29	70		STO	B.[HL]		; S T C	RE BYTE			
DEZA	18F6 ^3E22\$		JR	:L00P						
		;CHECK 1	יסרגא דכי	₹						
0E2C	340021	:2:	LD	A.D.STSR		.CET	STATUS			
0E2F	E644		ANI	0100_010				ratect-	and data lo	· c t
DE31	2801 ^DE34\$		JRZ	:4		; IF	GOOD	., 0 6 3 6 6 7	and data 10	, 3 6
							•			

NEW DISK DRIVERS	SORC I	M 808x Assembler ver	3.5E	<pre><:/55/7= =9:92 Page 142 B:ROM141 •ASM</pre>
DE33 37	:3:	STC		
0E34 FB 0E35 C9	:4:	E I RET		

NEW DISK DRIVERS	S03CIW 808×	Assembler	ver	3.55	<:/55/7=	=9:92 Page 143 8:RJM141 .454	

DE36 FORINT:

#INTERRUPT DISK CONTROLLER

:ENTRY

; EXIT

BUSY CLEARED.

PROC

3E36

0E3A 320021

0536 F5 PUSH AF 0E37 C5 PUSH 3C

DE38 3EDD LDK A+D+FINT

WAIT FOR AT LEAST 28 MICROSECONDS

A . D . CMDR

DE3D 87 ORA A :(4)
DE3E 0607 LDK B•7 :(7)

STO

DE40 10FE ^DE40\$:WLDDP: DJNZ :WLDDP :(91) = (13*7) WAIT

CHECK FOR BUSY DROP

DE42 CDB80E CALL WBUSY

0E45 C1 POP BC 0E46 F1 POP AF

0E47 C9 RET

NEW D	ISK DRIVERS	13505	M 808 x A	ssembler ver 3.	5E <:/55/7= =9:92 Page 144 3:RJM141 •45M				
3 E48		THIS I	S THE ON	I DISK ROUTINE THE ONLY ROUTINE THAT WRITES TO THE COMMAND REGESTER OF THE CONTROLER CHIP THE ONLY ROUTINE THAT WRITES TO THE COMMAND REGESTER OF THE CONTROLER CHIP THE CHIP WE STATUS ON THE CHIP					
		; 4	=	FUNCTION CODE					
		EXIT A CBIT	=	OFFH IS TIME DUT ERROR SET IF ERROR					
0E48			PROC						
	210021		LDK	HL.D.STSR 0.[HL]	STATUS AND COMMON RESERVER				
	C846 \$ 2803 ^0E52\$		3IT JRZ	:1	:IF NOT 3JSY				
0E4F	CD360E		CALL	FORINT	;RESET BUSY				
DE52	77	:1:	CTZ	A+[HL]	(FUNCTION DRIVE(SHIPE COMMED TO CONTROLER)				
		;WAIT F	;WAIT FOR 56 SINGLE AND 28 DOUBLE						
0E56 0E58			LD LDK RRC	A+SAVTYP B+5 A	;(13) DISK TYPE ;(7) ;(4)				
0E5C	O25F0E AF		JNC XRA	ACCCH:	:(10) IF DOUBLE DENSITY :(4) RESET CARRY FLAG				
0E5D	0600		LOK	B • 13	;(7)				
)E5F	10FE ^0E5Fs			:WLGOP	;(13) WAIT				
		WAIT F	OR BUSY	TO BE SET					
DE51 DE63			LDK MOV	A + 0 F F H B + A	;(7) ;(4) 256 LJOPS				
	CB46 \$ 2004 ^0E6C\$:r305:	BIT JRNZ	0,[HL]:3	:TEST BUSY BIT :IF CHI? WENT BUSY				
DE 68	10FA ^0E545		SALC	:L00P	; IF NOT TIME-DUT				
086A 0868			STC RET		FIF ERROR 4=FF AVD CRIT = SET				
0E6C 0E6F 0E70		:3:	STO XRA RET	A DACT VE A	SET DRIVE ACTIVE COUNTER RESET CARRY FLAG				

NEW C	DISK DRIVERS	1 3 5 6 2	M 808x #	Assembler ver 3.	5E <:/55/7= =9:92 Page 145 B:RJM141 .45M	
0E71		SELDRV:				
		:SELECT	DRIVE			
		SOISK	=	DRIVE TO SELECT		
				JATE 10 322201		
		; EXIT				
		;Z3IT	=		S THE SAME AS SDISK	
		;Z3IT	=		SZICZ WAHT TWEFEREIG ZAW	
		:CBIT	=	SET IF THERE AR	E NO INDEX PULSES	
3E71			DC SQ			
0E71	CDA6DE		CALL	SELDEN	SELECT DENSITY	
0E74	3A17EF		LD	A.SDISK		
0E77			LDK	HL.DSKSW>	DISK DRIVE SWAP CELL	
DE7A	AS		XDR	[HL]	SWAP A FOR 3 IF DSKSWP=1	
0E78	E601		AND	1	CAN ONLY BE D DR 1	
DE7D	FE01		CMP	ī		
757F	2002 ^0E83\$		JRNZ	:1	FIF NOT DRIVE 1	
3E81	3E40		LDK	4 • 4 0 त		
DE83	5640	:1:	ADI	40H		
0585	4 F		MOV	C + A		
DE86	3A62EF		LD	A.PIABD		
DE89	47		MOV	B • A		
A83C	E6C0		ANI	1100_00003	GET DRIVE BITS ONLY	
0E8C	B 9		CMP	С		
DE8D	2810 ^DE9F\$		JRZ	: 2	CETTERIES YDABILA BYISG AIF	
		;SELECT	DRIVE			
DESF	CDCFOE		CALL	RDSKD	TURN DRIVE ON	
0 E92	3EFA		LDK	A • 250		
	CDCFOO		CALL	DELAY	WAIT FOR MOTOR SPIN UP	
0597	3E 14		LDK	A • 20		
DE 99	CDCFOO		CALL	DELAY	: 2ND DELAY	
DE9C	3E01		LDK	A + 1	;INDICATED DRIVE WAS NOT SELECTED	D
DE9E	B7		OR A	A	SET FLAGS	_
DE9F	2164EF	:2:	LDK	HL.DACTVE		
DEA2	36FF	•	STO	OFFH.[HL]		
DEA4	FB		EI	21 1 119 E 1E2		
DEA5	59		RET			

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 146
                                                           B:RDM141 .AS 4
NEW DISK DRIVERS
                 SELDEN:
DEA6
                 SELECT SINGLE OR DOUBLE DENSITY
                 ;ENTRY
                 SAVTYP =
                                BIT 0:
                                1 = SINGLE, 0 = DOUBLE
                 ;EXIT
                 SNCN:
                 #NOT =
                       Bit O of "PIAAD" :
                        set =
                                       single density
                        reset =
                                       double density
                        PROC
DEA6
                                               PRESENT VALUE OF PIA RES
                                A.PIAAD
                        LD
DEA6 3A61EF
                                1111_11108
                                               CLEAR BIT O
DEA9 E6FE
                        ANI
                        VCM
                                C . A
DEAB 4F
                 SET DENSITY BIT
                                               GET DISK TYPE INFO
DEAC 3ADDEF
                        LD
                                A. SAVTYP
                                               :CBIT <= BIT 0
DEAF OF
                        RRC
                                               FIF "SAVTYP" BITD IS O
                        JRNC
                                : 1
DEBO 3002 ^DEB4$
                                0.0
                                               SET BIT O OF REG C
DEB2 CBC1
                        SBIT
                                               :FUNCTION PIA
                 :1:
                        CALL
                                OPAD
DEB4 CD7900
                        RET
DEB7 C9
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 147
NEW DISK DRIVERS
                                                               3:R0M141 .45M
0E88
                  WBUSY:
                  WAIT FOR BUSY TO CLEAR
                  :This routine must wait for 2 seconds
                  $2 seconds is the time it takes for the chio to seek 39 tracks and have five index holes go by.
                  SNONE
                  ; EXIT
                  : A
                                  OFFH IF TIME OUT OCCURRED
                  :CBIT
                          =
DEB8
                          PRIDC
9E88 010000
                          LDK
                                  80.0
DEBB 3A0021
                  :LOOP:
                         LD
                                  A.D.STSR
                                                  ;(13)
DEBE CB47
                          BIT
                                  0 • A
                                                  1(8) DS.3SY
DECO 2800 ^DECES
                          JRZ
                                  : 1
                                                  (7) GOOD RETURN
0EC2 E3
                          EΧ
                                  [SP].HL
                                                  :(23) DELAY
DEC3 E3
                          ΕX
                                  [SP].HL
                                                  :(23) DELAY
0EC4 E3
                          ΕX
                                  [SP].HL
                                                  ;(23) DELAY
0EC5 E3
                          ΕX
                                  [SP].HL
                                                  ; (23) DELAY
DEC6 DB
                          DEC
                                  вс
                                                  ;(6)
DEC7 78
                          VCM
                                  A+B
                                                  ;(4)
DEC8 B1
                          DR
                                  С
                                                  ; (4)
DEC9 20F0 ^DEB8$
                          JR NZ
                                  :L00P
                                                  F(12) IF NOT TIME-OUT
DECB 3EFF
                          LDK
                                  A. DEFH
                                                  TIME OUT ERROR
                  :
                          CALL
                                  FORINT
                                                  RESET BUSY
DECD 37
                          STC
                                                  SET ERROR
DECE C9
                  :1:
                          RET
```

SORCIM 808x	Assembler	ver	3.5E	<:/55/7=	=9:92	Page	148	
					2 + D 7 M			

?	NEW D	ISK DRIVERS									3 : R	DM141	. AS!	4	
	DECF		RDSKD: :SELECT ;ENTRY	DRIVE	вү	SETING	THE	"PIA"	WITH	THE	VALUE	SPEC	IFIED	ву	ε
			; C	=		DRIVE									
			:EXIT												
	DECF			PROC											
	DECF DED2 DED4	3A62EF E63F B1		LD ANI DR		A, PIABD 0011_11 C		; (GET V	10 3	FFSET	AND B	FLL		
	0ED5 0ED6 0ED9	4F CD8600 C9		MOV CALL RET		C • A OPBD		: (FUNCT:	ION I	F-C I 9				

NEW DISK DRIVERS	SORCI	IM 808x ∘	Assembler ver 3	•5E <:/55/7= =9:92 Page 149 3:RJM141 •454
DEDA	DMARD: ;TRANSF;ENTRY ;BC ;HL	FER DATA = =	FROM CONTROLER BYTES TO TRANS FWA OF BJFFER	
DEDA	;EXIT ;HL ;DE	= =	NEXT ADDRESS D.STSR	
0EDA 110021		PR OC	DE+D+STSR	;(10)
DEDD 1A DEDE 1F DEDF DO DEEO 1F DEE1 D2DD0E	:L30>:	LD RAR RNC RAR JNC	:LOOP	:(7) GET STATUS :(4) :(5) RETURN IF NO BUSY :(4) :(10) IF NO DRQ
DEE4 3A0321 DEE7 77 JEE8 23 DEE9 0B DEEA 78 DEEB 31 DEEC C2DDJE		LD STD INC DEC MOV DRA JNZ	A,D.D.ATR. A,EHL] HL BC A,8 C :LOOP	;(13) GET 3YTE ;(7) STORE BYTE ;(6) ;(6) ;(4) ;(4) ;(10)
DEEF C9		RET		

NEW DISK DRIVERS	203C1*	A ×808 M	ssembler ver 3.	5E <:/55/7= =9:92 Page 150 B:ROM141 •45M
DEFO	DMAWRT: :Xfer d: :ENTRY :BC :HL	ata fron = =	memory to disk BYTES TO TRANSF	ER
	;EXIT	=	NEXT ADDRESS	
0EF0		PR GC		
DEFO 110021		LDK	DE+O+STSR	
0EF3 1A 0EF4 1F 0EF5 00 0EF6 1F	:L30º:	LD RAR RNC RAR	A.[DE]	GET STATUS RETURN IF NO BUSY
DEF7 D2F3DE		JNC	*L00P	FIF NO DRQ
DEFA 7E DEFB 320321 DEFE 23 DEFF 08 DF00 78 DF01 B1 DF02 C2F30E		LD STD INC DEC MOV ORA JNZ	A.FHL] A.D.DATR HL BC A.B C :LOJP	GET BYTE STORE BYTE
0F05 C9		₹≣Τ		

```
SDRCIM 808x Assembler ver 3.55 <:/55/7= =9:92 Page 151 5:RJM141 .45M
NEW DISK DRIVERS
0F06
                    DORV:
                    Deselect drive
                    Entry
                    ;SDISK =
                                      current disk drive
0F06
                             PROC
0F06 3A62EF
0F09 E61F
0F0B 4F
0F0C C38600
                            LD
                                      A.PIABD
                             AND
                                      1_11115
                                      C.A
CPBD
                             VCM
                             JMP
                                                       deselect last drive
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 152
                                                             B:ROM141 .ASM
FORMAT
                 #[7]
                 FOR MAT:
OFOF
                         This proc will format the next track in IBM 3740 format consisting of 40 tracks, with each
                 track containing 10 sectors.
                 ;Entry
                               FWA of buffer
                 ;80
                                         OW length
                         :BUF+0 =
                                         beginning of data
                         ;BUF+2 =
                                         THE TRACK TO BE FORMATED
                         SAVTRK =
                 :EXIT
                 :NONE
                         PROC
OFOF
                                                 SAVE BC
                                 BC.OMADR
OFOF ED430FEF $
                         STO
                 SELECT DRIVE
                                 SELDRY
                         CALL
0F13 C0710E
                                 :ERROR
                         JRC
3F16 3831 ^3F49$
                 TEST FOR STEP OR NO-STEP
                                 HL . SAVTR <
                         LDK
0.F18 21155F
                                                 :TRACK REG
                                 A.D. TRKR
OF18 340121
                         LD
                         CMP
                                 [HL]
OFIE BE
                                                 SIF SAVTRY AND TRACK RES ARE THE SAME SKIP THE STEP
DF1F 2817 ^DF38$
                                 : 1
                         JRZ
                 STEP IN ONE TRACK
                         LD
                                 A.SEKDEL
0F21 3A13EF
                                                 ;UPDATE
                         DR I
                                 0001_00003
0F24 F610
                                                 SET UP SEKDEL
                         STD
                                 A.SEKDEL
DF26 3213EF
                                 STEPIN
                         CALL
DF29 CD0D0D
                                                 ; SAVE FLAGS
                         PUSH
                                 ΔF
OF2C F5
                                 A. SEKOEL
                         LD
OF2D 3A13EF
                                                 CONLY SPEAD LEFT
                                 0000_00113
                         ANI
DF30 E603
                                                 RESET SEKDEL
                         STO
                                 A.SEKDEL
0F32 3213EF
                                                 :RESTORE
                          POP
                                 ٩F
0F35 F1
DF36 3811 ^DF49$
                          JRC
                                  :ERRDR
                  :SET "DMADR"
                                  HL . DMADR
                                                 GET ADDRESS
DF38 ZAOFEF
                         LD
                  :1:
                                 C.[HL]
                          LD
OF3B 4E
                          INC
                                  HL
OF3C 23
                                                 ;BC = LENTH OF FORMAT DATA
                                  3,[HL]
                          LD
0F3D 46
                          INC
DF3E 23
                                                 SET DMA
                                  HL.DMADR
                          STO
DE3F 220FEF
```

FORMAT TRACK

```
SURCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 153
FORMAT
                                                            3:R0M141 .45M
DF42 CD010E
                         CALL
                                EMTTRK
0F45 3802 ^0F49$
                         JRC
                                :ERROR
DF47 AF
                        XRA
                                Α
3F48 C9
                         RET
3F49 3EFF
                 :ERROR: LDK
                                A.DFFH
0F48 B7
                        DR A
                                Α
0F4C C9
                        RET
OF4D
                 HCBDOT:
                 THE THEOR IS PRESENT IN COLD BONCE TO THE FIRST TRUCH TREST TRUCH SERVICE OF BONCERS OF BONCERS.
                 THAN THE FLOPPY ONE SUPPLIED.
                 : ENTRY
                 :NONE
                 ;EXIT
                 #NONE
OF4D
                        PROC
0F4D C30000
                        JMP
                                START
     = 0F50
                RLWA
                        =
                                *
                                              FCCC TREDIESE MCF RC AWAIF
                        MSG
                                *LENGTH OF THIS ROM IS = **RLWA+1
     *LENGTH OF THIS ROM IS = OF4F*
     = 0000
                        ΙF
                                RLWA > OFFBH
                • 9
                        ERROR
                               CODE TOO LARGE..
                        ENDIF
                        ECHO
                                OFFFH-RLWA ! DB OFFH
                        ENDM
                ;
                        END
```

no ERRORs, 472 Labels, 6770h bytes not used. Program LWA = OFFFn.

						ee /•/5	5/7= =9:	92 Page 15
RAM STORAG	E LOSAT		M 808× A	ssembler	ver 3.	5E <1/5		ROM141 •45
		2 " .	115/15					
ACIAD	EFC1	3# 6 17/ 5	115/15 116/12	117/14	119# 2			
ACISTA		2# 9	77/55	11//14	117- 2			
ALPHKY	0241	20/ 3	22# 2					
BCPM		2#51	45/10	67/30				
BELCHT		12/3	12# 8	51,55				
BIOJP	0098 0008	1#55	33/ 9					
BKS BRTBIT		2#12	38/13	53/17	60/16			
	0504	53/ 7	54/ 7	55# 2	30, 11			
CALC C3ELL	0007	1#19	33/12	JJ# 2				
CBOOT	0255	7/36	7/40	16/ 8	19# 3			
CCPADR		3#13	12/8	20/14	21/17			
	2901	2#25	92/13	92/40	93/15			
CCRA CCRB	2901	2#27	92/22	92/53	95/22	95/24	95/28	95/43
CCAB	2703	95/50	95/54	96/23	95/25	96/29	99/24	99/25
		99/30	73734	707 LJ	,3,2,	, , , ,		
CHKEY	0752	70/27	74# 2					
CI	0373	7/30	16/11	29# 2				
CLRLN	0651	45/ 5	51/ 6	58/ 3	60# 2	61/48		
COUT	0351 03E0	14/29	14/32	16/12	34# 2			
	041A	32/25	36# 2	10,11	•			
COUT2 CPDRA	2900	2#24	2/25	2/25	2/27	2/28	2/30	2/31
CFDIA	2,00	2/33	92/17	92/21	93/11	94/15	95/34	97/29
		98/ 3	99/33	99/55	101/14			
CPDRB	2902	2#26	92/25	92/30	93/12	94/13	95/15	95/15
CFUNG	2 7 0 2	97/16	99/16	101/16	101/22			
C٦	3030	1#52	7/35	13/ 2	13/10	18/20	13/28	18/40
LX	3000	18/48	33/ 7	89/ 7	• • • • • • • • • • • • • • • • • • • •			
CTLKY	0002	2# 8	77/49					
CTLTB	0924	84/ 6	88#45					
CURS	EF54	2#55	34/40	49/40				
CV2IP	0830	110# 2	112/ 7					
CV2DP	080E	109# 2	111/ 7					
D.CMDR		2#18	2/19	2/20	2/21	2/22	143/15	
D.DATR		2#22	129/19	138/51	149/22	150/2?		
D.FINT		5#11	143/14					
D.RDA	0000	5# 8	138/18					
D.RDS	0080	5# 6	121/17	134/12	137/25			
D.RDT	00E0	5# 9	140/12					
D.SECR	2102	2#21	136/18	139/11				
D.SEK	0010	5# 2	129/21					
D.STP	0020	5# 3	130/16					
D.STPI	0040	5# 4	131/15					
D.STP3		5# 5	132/16					
D.STSR	2100	2#1.9	128/23	128/31	133/27	137/48	138/33	139/ 2
		141/57	144/15	147/17	149/14	150/13		
D.TRKR	2101	2#20	127/15	129/14	139/12	152/28		
D.WRTS		5# 7	122/17	135/12				
D.WRTT	00F0	5#10	141/24					
DACTVE		2#60	144/48	145/44				
DBCT	0001	2# 4	73/24					
DORV	OF36	57/53	151# 2					
DELAY	300F	15# 2	145/37	145/39				
DIMBIT	0000	2#13	40/43					
MICSIG	nac	5#21	6/13	38/15	43/45	53/19	50/18	63/17
		64/28	65/23					
DMADR	EFOF	2#46	19/25	22/21	24/57	26/ 7	137/17	140/20
		141/38	152/18	152/50	152/57			
DMARD	DEDA	16/55	137/27	138/55	140/21	149# 2		
DMAWRT	0 E = 0	16/54	137/29	141/39	150# 2			

RAM STORAGE LOCA	SORCI	M 808x	4ssembler	ver 3	•5E <:/	55/7= =9:	
(AII 3)3K402 2834	111300					31	ROM141 .ASM
DNARW DOSC	77# 5	82/19					
DOHDME 083E	82/23	87# 2					
DOLF 0684 DOLF2 0687	47/10	61# 2					
DOLF2 0.687 DSKSWP EFC7	49/24	61#16					
DSTSB EFD9	3# 8 2#45	7/34					
EBOOT DOAD	13# 6	19/20		125/27 22/38	138/28 24/52	25/28	
EDELC 05A2	32/19	53# 2		22/33	24/52	25/25	
EEOL 058A	32/22	51# 2					
EFADR 0010	30# 6	52/ 7	52/17				
EFESC 0008	30# 7	34/43	36/ 9	52/ 7	52/17		
EFGR 0001	30#10	30/11	56/ 7	55/20			
EFHA 0002	30# 9	30/11	56/10	55/23			
EFMSK 0007	30#11	35/ 6	42/41	52/ 5	52/15		
EFSCR 0020	30# 5	52/17					
EFUN 0004 EINSRT 053B	30# 8	30/11	56/13	56/26			
EMBOOT OOAO	32/13 13# 2	54# 2					
ENADIM Trac	13# 2 5#16	13/13 38/13	40/43	53/16	40414	(2415	(112)
evasta nac	65/26	30/13	40745	23/10	60/16	63/15	64/26
ERC DOTE	1#54	88/ 5	88/ 5	88/ 7			
ESC 0018	1#53	7/31	18/ 4	18/ 8	18/12	18/12	18/14
	13/16	18/13	18/13	18/22	18/26	18/30	13/32
	13/33	18/35	18/36	13/38	18/42	13/46	13/51
	18/53	34/49	88/ 5				
ESCCAD 0591	32/ 3	52#2					
ESCCGR 05F4	32/11	56#20					
ESCCHA 05F8	32/13	56#23					
ESCCUN OSFC	32/15	56#26					
1000 BBD2B	32/20	57# 5					
ESCH EF50 ESCHTB 0384	2#57 31# 5	34/41	36/10	37/19	42/44	52/ 9	56/17
ESCLCK 0580	32/23	35/ 5 50# 2					
ESCRR 0601	32/21	57# 2					
ESCSAD 0598	32/9	52#12					
ESCSGR 05E4	32/10	56# 2					
ESCSHA 05E8	32/12	56#10					
ESCSUN D5EC	32/14	56#13					
ESCULK 0583	32/24	50# 9					
ESCZZ D51F	32/17	56#31					
FOSK DE48		133/16	137/ 4	138/20	140/14	141/29	144# 2
FMTTRK DED1		141# 2	152/61				
FORINT DE36 FORMAT DEDE	5/ 8 15/32	16/51	137/45	138/45	143# 2	144/19	
FWAVM FOOD	3#22	152# 3 46/ 4	46/16	61.621			
GKEY 05=C	6/27	67# 3	40/15	61/21			
GTMASK 07F6	74/17	74/21	75# 2				
H.KEY 2200	2#23	76/12	137 2				
H.SCTR 2A00	2#34	115/12	115/16				
H.SREC 2401	2#37	116/19					
H.SSTS 2400	2#35	119/19					
H-SXMT 2A01		118/15					
H.VID 2000	2#38	9/15	10/28	10/32	11/13	11/22	68/10
MEDDOE OFFE	119/14	152412					
HIBOOT OF4D HMSCRN DO5B	7/32 77# 6	153#13 82/22					
HOME OCOS		120/19	125/50	128# 2			
HSTACT EF50	2#51	27/ 4	27/ 8	27/ 9			
IE.CO 0936	7/ 3	16/37	92# 2				
IE.GTS D98C	15/39	94# 2					

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 156
RAM STORAGE LOCATIONS B:ROM141 .4SM

IE.IDM 0A3D	16/43	99# 2	105/15				
IE.JDM J9FB	16/42	97# 2	107/21			107/20	
IE-DIM 0908	16/41	96# 2	105/8	105/27	107/13	107/30	
IE-PP DA99	16/44	101# 2 96/37	97/19	97#25			
IE-SHK DAD7	96/18		71717	71767			
IE-SI 0979	15/38	93# 2 95# 2					
IE.TC 0998	16/40 3#16	105/ 5	107/10				
IEADRS EFOR	3#17	104/15	105/21	105/33	106/10		
IECHAR EFDC IEI10 OABA	104/17	104/13	105/10	103733	100,10		
IEI20 DAC6	104/17	1034 2	103710				
IEI30 DACE	105/17	105#21					
IEI40 DADI	105#23	105/29					
IEINP DAET	17/10	106# 2	106/ 8				
IEINST DA31	17/8	104# 2	106/ 7				
IELSTN 0020	4#31	107/11					
IEOOS DAEE	107#10	107/15					
IEO22 DAFD	107#20	107/24					
IE040 3835	107#26	107/32					
IEOSTA DAAE	17/ 9	103# 2					
IEOUT DAED	17/11	107# 2					
IESTK EF6F	3# 4	67/14	58/23				
IETALK 0040	4#29	105/ 6					
IEULST DO3F	4#32	107/29					
IEUTLK DOSF	4#30	105/26					
IMSG 019F	7/25	18# 2					
INT3L EFFO	3#21	6/22	6/28				
IRPTCT 0018	2# 5	70/47					
ISTK EF99	3# 5	67/15 70# 2					
KBDRVR D74E	68/ 5 73/12	72# 2					
KBSCAN 0786 KBSERV 0809	70/53	77# 9					
KOOLM DOD7	2# 3	70/52	72/53				
KEY1 0838	77/56	79# 2	12, ,,				
KEY2 3844	77/53	80# 2					
KEY3 2852	80/ 7	81# 2					
KEY3A 3857	81#10	84/10					
KEY4 085A	77/50	82# 2					
KEY5 087A	82/26	82/29	83# 2				
KEY5 0836	83/ 4	84# 2					
KEYE 3834	77/30	78# 2	79/ 4	79/ 7	79/10	83/12	81/11
	82/32	83/ 7	83/10	34/ 4			
KEYLOK EF59	2#54	6/50	28/ 9	50/11	58/ 3		
KEYLST EF04	3#14	70/16	72/51				
KLELEN 0002	1#59	70/58	73/ 3				
KLLEN DOD3	1#58	70/17	72/50	72/22			
KLUSED 0007	1#50	70/24	72/55	73/22			
KROWM 0038	2# 2	70/52	72/53				
KYCOTB 0804	77/26	38# 4	70115				
KYSRVD DOD6	1#61	70/44	70/45				
LOTRK EFSE	3# 3	27/17 13/ 2	18/ 2	13/ 2	18/ 2	18/ 2	18/10
LF DODA	1#51 18/20	18/23	18/40	18/48	18/48	13/48	33/ 8
LFTARW DOSD	77# 2	82/10	15749	10,40	10170	10,10	<i>33.</i> 3
LIST DBD9	16/13	16/14	118# 2	119/12			
LKEY EFSE	2#56	23/13	29/15	29/18	70/19	78/ 5	
LLIMIT EFSC	3# 2	7/16	44/25	49/16	60/19	61/35	
LOGSEC EF56	2#53	27/ 8					
LOOKUP 044C	37/24	39# 2	39/23				
LVMEM 1000	1#47	46/ 6					
24.12.1	•						

DAM STODAY	CE 1054	SORCI	x808 M	Assemble	rver 3	3.5E <:/	55/7= =9	
RAM STORAL	of LULA	1110N2					В	:ROM141 .4SM
MCRIGH		1#21	33/10)				
MCUP	000B	1#20	33/11					
NMIA	0056	1#46	8/ 4					
NRETRY		2#14	120/14		123/48	ı		
NUMSEC		3#9	123/15		124/ 6			
DPAD	3079	7/13	10# 2		85/16		145/28	
OPBD	0086	7/ 8	11# 2		41/20		46/13	61/59
OSTR	0000	67/43	86/17		151/11			
PA.CDR	0030	7/26 4# 4	14# 2					
PA.CDT		4# 4 4# 5	109/13					
PA-CTL		2#30	109/15		110/1/			
PA.DIR		2#30	109/14		110/14	110/19	112/12	
PA.ORI		4#13	110/15					
PA.DRD		4#12	109/15					
PA-DTA		2#28	2/29		114/12			
PARINP		17/15	113# 2		114/12			
PARQUT		17/16	114# 2					
P3.CDR		4# 7	109/21	110/21				
P3.CDT	0004	4# 8	109/26	110/26				
P3.CTL	2903	2#33	109/22	109/27	110/22	110/27		
PB.DIR	2902	2#32	109/24	110/24				
P8.DR	003F	4#14	109/23	110/23				
PB.DTA	2902	2#31	2/32	109/29	110/29	111/8	114/14	114/16
ITG.E9	_	4#16	110/28					
P8.DT0		4#15	109/28	114/13	114/15			
	EF61	2#58	10/31	41/30	85/12	87/ 6	146/16	
CEAIG	EF52	2#59	11/21	34/26	41/16	42/25	43/ 9	44/32
		45/ 5	46/10	57/23	61/26	61/49	67/40	85/ 7
		87/12	145/27	148/11	151/ 8			
PIACTL		3#18	112/ 8	112/13	113/11			
	0888	112/10	112#18					
PISTAT n POS10		17/13	112# 2	113/ 7				
POSTAT	0877	111#14 17/14	1114 2	11// 2				
	0002	4#25	111# 2 110/ 8	114/ 7				
PP.IRD		4#19	112/ 9	110/31 112/15				
P2.400		3#19	109/ 7	109/32	110/ 7	110/32		
PP. DRD		4#18	111/ 9	107732	1137	110/32		
PP. DUT		4#24	109/ 8	109/31				
	0015	129/22	130/17	131/16	132/17	133# 2		
PSTESC	0425	34/44	37# 2		132,1,	155" 2		
RADR	0045	15/25	123/27	123/51	125/32	126/21	133# 2	
RORDW	0830	72/13	72/17	73/38	74/24	76# 2	77/35	77/40
RDRV	0002	16/19	19/16	22/34	120# 4			
RDSKD	OECF	145/35	148# 2					
	3D3C	123/38	134/15	136# 2				
	0030	16/23	134# 2					
READER		15/15	116# 2	116/14				
READTR		17/ 2	140# 2					
	3373	29# 3	29/12					
RLWA (0F50	153#27	153/30	153/31	153/35			
ROMJP1 (12# 2	16/30	68/14				
ROMRAM		12# 6 2#44	16/31					
ROMSTK		2#44 3# 7	68/12 5/ 7					
	0081	1#41	72/16					
	0031	16/26	19/33	24/49	25/25	1214 2		
	0088	77# 3	82/13	L 7/ 47	23/23	121# 2		
-	F35	2#43	120/15	120/22	123/18	123/43	124/ 4	125/19
_					L J / 10	163143	1277 4	163/17

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 158 B:ROM141 .4SM RAM STORAGE LOCATIONS 125/46 126/16 126/49 3#12 121/18 122/18 134/13 135/13 136/50 137/24 RWCOM EFD1 121/20 123# 2 RWSEC 0028 22/28 26/20 136/17 19/31 2#48 SAVSEC EF14 26/13 127/14 129/15 152/27 24/61 24/ 5 SAVTRK EF15 2#49 22/46 125/38 125/40 126/ 3 126/ 6 136/25 SAVTYP EFOO 3#11 141/15 144/25 146/22 15/13 SCLFRE 0035 1#50 41# 2 42/16 SCREEN 0474 127# 2 17/ 6 SCIRKE OCOL 22/24 145/16 2#50 SDISK EF17 16/57 123/32 129# 2 SEEK OCEA 6/57 128/14 128/27 133/12 133/23 152/34 2#47 SEKDEL EF13 152/41 152/43 152/36 146# 2 145/14 SELDEN DEA6 120/16 123/22 125/29 145# 2 152/22 SELDRY DE71 17/ 4 22/35 125# 2 19/17 SENDEN DC59 16/29 67/59 SEQ EFCC SERFLS EFDA 3#10 67/57 116/16 118/17 119/24 119/27 3#15 37/13 42# 2 SETXY 349E 2#10 77/52 82/25 SHFTKY 0004 88#34 81/ 7 SHETTB 3900 1#42 115/11 SI.MRS 0057 1#44 116/13 SI-RRD DOD1 7/20 SI-S16 0055 1#43 1#45 117/15 SI.TRD DOD2 16/36 115# 2 7/21 SIRST DB32 28# 3 29/11 SKEY 0356 15/10 86# 7 85/ 3 SLD1 D84C 86#15 87/16 SLD2 0837 2#11 85/23 SLDRCT 0003 82/20 86# 5 SLIDED D84A 82/11 85# 4 SLIDEL 0891 85# 9 SLIDER 0895 82/14 82/17 86# 2 SLIDEU 3846 85/ 6 85#12 SLR1 3897 86/18 85#20 387F SLR2 15/28 117# 2 118/11 SLST 0800 9# 2 6/59 SPAD 0058 70/50 SRPTCT 0006 2# 6 8/ 6 153/24 7/42 5# 3 START 0000 16/58 130# 2 0009 STEP 16/59 131# 2 152/38 STEPIN ODOD 15/50 132# 2 STEPOU DD11 ST0014 0606 16/50 63# 2 4#20 114/13 STR3 0020 88/ 5 1#56 0009 TAB 25/33 23/13 24/15 24/34 22/25 2#42 TEM EF30 72/28 2# 7 72/20 TOTEDH DOOT 27/14 UNASEC EF55 2#52 44/ 5 44/14 48/ 5 54/ 5 47/ 3 42/12 43/ 8 UNCUR 36F6 66# 2 57/17 61/14 82/16 77# 4 UPARW 008A 33#18 38/21 VALCTS DOD8 37/22 VALETS DO10 32#30 38/20 33/18 33# 2 VALIDO 0306 37/21 32/30 32# 2 VALIDE 0394 40/16 VBRIGH 043B 38#11 32/ 7 1#27 VCAD DO3D 45# 2

33/13

VCBEL 050F

SOR RAM STORAGE LOCATIONS	CIM 808x	Assembler	ver 3	•5E <:/9	55/7= =9: 8:	92 Page 159 ROM141 +454
KAN STORAGE LOCATIONS					0.	JUNET #434
VCBKS 04E2 [33/1	0 44#11					
VCCLRS 051F 33/1		56/31				
VCCR 0540 33/						
VCE3L 0054 1#3						
VCHDME 0408 33/1						
VCLF 0549 33/						
VCLRS DOIA 1#2		33/13				
VCMCRT 0548 33/1		33, 13				
VCMCUP 0409 33/1						
VDELC 0057 1#3						
VDELL 0052 1#3		57/28				
VECTOR 0413 35#1		39/25				
VEGH 0047 1#3		18/12	18/18	18/26	13/32	18/33
18/4				20120	13,75	20,33
VEHI 0028 1#3						
VEUL 005D 1#3						
VFLO FFEA 1#4	8 7/12	41/24	87/ 8			
VGRAPH 0554 31/	_					
VHAGR 0459 31/						
VHALF 0455 31/						
VHOME 001E 1#2						
VINC 0051 1#2						
VINL 0045 1#3						
VLD32 063E 16/4		57/49	54# 2			
VLDIR 0652 16/4		53/11	58/15	60/37	65# 2	
VLL 3030 1#4		27/16	44/ 7	44/23	44/38	46/ 5
55/		58/ 9	59/13	60/28	61/17	
VLDCK 0023 1#2	_		- /			
VNORM 0437 31/	5 38# 2	40/ 9	40/22	40/35		
VOUT80 055E 38/1		48/ 7	49/ 4	49/ 6	49# 9	49/52
VOUT85 0572 49/1	9 49#27					· · · · · -
VOUT90 0573 42/4	5 44/20	44/44	45/17	47/ 7	47/11	49/25
49#3		53/22	55/18	58/ 5		
VOUT96 0575 49#3	7 54/19					
VOUT97 0578 33/1	5 36/11	45/11	49#44	49/50	50/12	52/10
56/1	8					
VRTOFF EFEF 3#2	34/29	41/15	45/15	61/56	87/15	
VSAD 0053 1#2	32/3					
VSGH 0067 1#3	8 18/4	18/12	18/18	18/22	18/30	13/36
13/4	2 32/ 9					
VSHI 0029 1#3	4 32/11					
VSUL 006C 1#3	32/13					
VJNDER 0457 31/10	0 40# 6					
VUNGR 045B 31/1	L 40#13					
VUNHA 045F 31/1	2 40#19					
VUNHAG 0453 31/1	3 40#26					
VUNLK 0022 1#2						
WBDDT 029C 15/						
WBUSY DEB8 128/20		137/44	138/59	143/25	147# 2	
WRITE 0037 15/20						
MSEC 0C23 16/2	7 122# 2					

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 1
                                                         C:DCCRAM25.4SM
Osborne CP/M 2.2 CBIOS Rev 1.4
              0000 EFF0
       ⇔A3S
       #C3DE EFF0 0000
       DOOC OFFS ATAG¢
                :.Date: 6/4/82
                :.Author: Roger W. Chaoman
                :. Title: Osborne CP/M 2.2 C8IOS Rev 1.4
                :.Comments:
                *NOTE* FOR USE WITH OCCTXT6.AST ONLY
                                      MASTER .ASM
                        402007-00
                                      ASSY .ASM
                        202007-00
                                      LISTING .PRN
                       102007-00
                        401007-00
                                      MASTER .COM
                                      ASSY .COM
                        201007-00
                        ,....+
                                0 0 0
                               C 8 I 0 S
                       : by Roger W. Chapman !
                        Copyright 1982, Issorne.
                        This product is a copyright program product of
                        Osborne and is supplied for use with the Osborne.
                 ;
                VERS: = 22
     = 0016
                                            :Jump Table
                               DCCB1015.ASM
                        LINK
```

OCCBIO25.ASM

OCCBIO95.ASM

OCCBI035.ASM

DCC81045.45M

OCCBIOSS.ASM

DCCBID55.ASM

OCCBID75.ASM

DCCBID85.ASM

DCCRAM15.ASM

DCCRAM25.ASM

LINK

Key translation & initialization values

;CP/M disk tables

:ROM call interface

cold and warm boot

:Utility routines

:Non data transfer disk

Disk data transfer I/3

:Iobyte dispatch table

:Bios ram definitions

Common ran definitions

```
SDRCIM 803x Assembler ver 3.5E <:/55/7= =9:92 Page 2
Osborne CP/M 2.2 CBIOS Rev 1.4
                                                              C:00031015.454
     = 0033
                 MSIZE: =
                                 59
     = 0300
                 CCP:
                                 003004
                                                 flocation of cop
     = E130
                 3138:
                                 cca+1600n
     = D3D6
                 BDDS:
                                 ccp+806h
                                 *DDT R (relocation value) = *.1F304-3I3S
                         MSG
      *DOT R (relocation value) = 3E80*
                         MSG
                                 "Assemblying BIOS for LWA of ". LWAMEM."1."
     *Assemblying BIOS for LWA of FFFFh.*
                         CP/M to host disk constants
                                                  :Blocking/Deplocking buffer size
     = 0400
                 HSTSIZ: =
                                 1024
                                                  Sectors in floody disk block (Osborne single density block size = 2()
     = 0010
                 FPYSIB: =
                                 2043/128
                                                 ;Sectors in floopy disk plack (Osborne double density block size = 1K)
     = 0008
                 EPYDIB: =
                                 1024/128
                         CP/M disk control block equates which define the
                         disk types and maximum storage capability of each
                 ;
                         disk type.
                                         ;Single density ( 256). single sided.
      = 0005
                 > :12>2C
                                 5
                                 OCh
                                         Double density (1024), single sided.
     = 0000
                 oskbl: =
                                         Single density ( 123), single sided.
     = 0001
                 xerox: =
                                 1
                                         Double density ( 512), single sided.
     = 0008
                 184:
                                 B
     = 0008
                 DEC:
                                 ((40-3)*2*10)/FPYSI3
     = 002E
                 S1054: =
                                 ((40-3) $3$5 )/FPYDIB
     = 0039
                 D1054: =
                                 ((40-3)*1*18)/FPYDIB
                 xxosm: =
     = 0053
                 IBMDSM: =
                                 ((40-1)*4*8 )/FPYDIB
     = 0090
                                 ((40-2)*4*9 )/FPYDIB
                 DECDSM: =
     = ODAB
                         BDOS constants on entry to write
                 WRALL: =
                                                 write to allocated
     = 2000
                                 0
                                                 :write to directory
      = 0001
                 #RDIR: =
                                 1
                                                 write to unallocated
      = 0002
                 WRUAL: =
                                 2
                         ROM equates.
                                                 Port to enable RDM
      = 0000
                 ENROM: =
                                 0
                                                 :Port to disable ROM
      = 0001
                 DIROM: =
                                 1
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 3
Osborne CP/M 2.2 CBIOS Rev 1.4
                                                               C:00031315.45M
                          Macro for generating Control Blocks for disk drives
                          The format of these disk control blocks are as follows:
                         16 bits = -> translation table.
                         48 bits = Work area for CP/M.
                         16 bits = -> DIR3U=.
                         16 bits = -> Parameter block.
                         16 pits = -> check vector.
                         16 bits = -> allocation vector.
     = 0000
                 NOSK: SET
                                 a
                                                 Number of disk drives
     = 0000
                 NOFDD: SET
                                 n
                                                 :Number of floopy disk drives
     = 0000
                 ALVSZ: SET
                                 ٥
                                                 :Allocation vector size
     = 0000
                 CSVSZ: SET
                                 0
                                                 :Check vector size
                         LIST
                 DPHGEN MACRO
                                 TYPE, XLATE, DIRBUF, DPBADR
                 NDSK:
                         SET
                                 NDSK+1
                         D₩
                                 %2
                         DW
                                 0,0,0
                         DW
                                 %3
                         DW
                                 24
                         DW
                                 CSV+CSVS?
                         DW
                                 ALV+ALVSZ
                 NOFDO: SET
                                 NOFOD+1
                 CSVSZ: SET
                                 CSVSZ+(64/4)
                 ALVSZ: SET
                                 ALVSZ+(()1)SM+7)/8)
                         ENDM
                         Macro for generating the Disk Parameter Blocks.
                         Disk type definition blocks for each particular node.
                         The format of these areas are as follow:
                         8 bit = disk type code
                         16 bit = Sectors per track
                         8 bit = Block shift
                         3 bit = 35 mask
                         8 bit = Extent mask
                         16 bit = Disk size/1024 - 1.
                         16 bit = Directory size.
                        16 bit = Allocation for directory.
                        16 bit = check area size.
                        16 bit = offset to first track.
                 DPBGEN MACRO TYPE, SPT, BSH, BSM, EXM, DSM, DIRSIZ, ALVMSK, DFFSET
                         ЭB
                                 21
                         DW
                                 32
                         DB.
                                 33.24.25
                         DW
                                 26-1.27-1.REV (28)
                         DW
                                (27+3)/4
                         DW
                                 39
                         ENDM
```

SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 4 C:00031315.45M Osborne CP/M 2.2 C3IOS Rev 1.4 The following jumo table defines the entry points into the CBIOS for use by CP/M and other external routines: therfore the order of these jump cannot : be modified. The location of these jumps can only : be modified by 400h locations, which is a restriction ; of MOVCPM. ORG 2018 0000 = E100 :Cold boot JMP CROOT E100 C3EDE4 tcod π raw; E103 C313E5 JMP #BOOT (Console status (input) JMP CONST E106 C32EE7 JMP CONIN :Console input E109 C333E7 :Console outout JMP CONDUT E10C C338E7 :List output JMP LIST E10F C33FE7 :Punch output E112 C355E7 JMP PUNCH Reader input JMP READER E115 C35CE7 :Set track to zero. HOME E118 C33FE3 JMP :Select disk unit JMP SELDSK E118 C350E3 :Set track JMP SETTRK F11E C388E4 :Set sector JMP SETSEC E121 C3CEE4 :Set Disk Memory Address JMP SETOMA 5124 C3D3E4 Read from disk JMP READ E127 C331E5 :Write onto disk WRITE E12A C3CEE5 Jwp :Return LST: device status JMP LISTST 512D C353E7 :Sector translation routine JMP SECTRN E130 C30854 Extensions JMP. ROMRI E133 C3FEE2 RRI: E136 C319E3 JMP SONTHO :Rom resident call FMTJ: CALL ROMODE E139 CD12E3 ROMODE JAAC : CUA62 513C CD12E3 [EEE-488 vectors :Control Jut IEBIC: CALL ROMODE E13F CD12E3 :Status In ROMODE IE320: CALL E142 CD1253 :Go To Standby IEB30: CALL ROMODE E145 CD12E3 :Take Control IEB40: CALL ROMODE E148 C012E3 :Output Interface Message IEB50: CALL ROMODE E148 CD12E3 :Output Device Message IEB6C: CALL ROMODE E14E CD12E3 :Inout Device Message ROMODE 1E370: CALL E151 C012E3 IEBSC: CALL ROMODE Parallel Poll E154 CD12E3 :extensions ROMODE E157 CD12E3 CALL ROMODE : for CALL E15A CD12E3 cetiv beggar-yacmem ROMODE E150 CD12E3 CALL thook for serial command port write JMD ACICTL 5160 C33CE1 thook for serial status port read JMP ACISTAT E163 C383E8

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 5
Dsborne CP/M 2.2 CBIDS Rev 1.4 C:0CC3IO25.ASM

		;;;;;;;	:::::;	:::::::						
		;	the set	his area is reserved data storage area for he set-up program to install orinter drivers. unction keys, auto boot command, lobyte value. nd auto horizontal scroll flag						
		;	:::::::	:::::::	SMC					
E166	40	1031TE:	08	40h	<pre>;default to serial printer=40h ;</pre>					
E167	00	PRNTER:	ЭВ	00h	idefault to standard serial=0 Qume ETX/ACK =1 Diablo XOV/XOFF =2					
E168	FF	AHSENB:	DB	TRUE	auto horizontal scroll enable					
E169	55	BRATE:	SC	\$1.120	default baud rate = 1200					
E16A	80	SCRSZE:	DB	128	default screen size = 123					
				CNTOL O	ACT and through Applica					
E168	A5E1	XLT3L:	DW	CNTRLO	Fixed length table					
E160	46E1		D₩	CNTRL1	contains pointers					
E16F	A7E1		DW	CNTRL2	to strings					
E171	A8E1		DW	CNTRL3	ito decode					
F173	4961		DW DW	CNTRL4 CNTRL5	:function keys					
E175 E177	AAE1 ABE1		DM DM	CNTRL5						
E177	ACE1		DW WC	CNTRES						
E173	ADE1		DW MC	CNTRLB						
E170	AEE1		DW	CNTRL9						
E17F	AFE1		DW.	UP						
E181	B0E1		DW	RIGHT						
	31E1		DW	DOWN						
E185	8251		D₩	LEFT						
E187	3351		DW	EOTSL	end of table address					
E189	04	IEEEAD:	23	4	:IEEE device address					
E18A	20	PINTEG:	D8	0	Flag indicates if printer has been initialized					
E188	00	PINIT:	98	0	:Length of string					
E18C	= 0010		9S	16	Printer initialization string					
E190	01	ACMD:	CB	1	<pre>;auto command = 0 ignore auto poot ;</pre>					
E190	97	CAUTO:	DB	CAUTOL	Hength of auto command here					
E198	4155544F53		33	'AUTOST '	auto command goes here					
=	= 0007	:JCTUA:	=	*-CAUTO-1	•					

Jsbor	ne C8/M 2.2	SORCI CBIDS Re	M 808x V 1.4	Assembler ver	3.58 <:/55/7= =9:9? Page 6 C:0CC3IO25.45M
#145 #147 #148 #148 #148 #14C #14F #14F #180 #181		CNTRLO: CNTRL1: CNTRL2: CNTRL4: CNTRL6: CNTRL6: CNTRL6: CNTRL7: CNTRL3: CNTRL3: CNTRL3: CNTRL3: CNTRL3: CNTRL3: CNTRL3: CNTRL3: CNTRL5: CNTRL5	08 08 08 08 08 08 08 08 08 08	101 121 131 151 151 161 171 181 181 181 181 181 181 181 181 18	:Variable length table is placed here by set-up :program, with xittbl :pointing to the entries :Default values for the :control numerics :are the numbers on the keys :Default values :for the cusor ;keys are standard :values for DP/M
9183	= 8200	. 3.52	DR G	BIOS+256	ispace reseverd for full function key decoding and 16 byte auto boot command

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 7
Dsborne CP/M 2.2 CBIDS Rev 1.4 C:0CC3IO95.ASM

		;	Control	Blocks for disk drives	
F200		DPBASE:			
5200			DPHGEN	DSKD1.DDXLTS.DIRBUF.DPBD1+1	:Drive A:
	+= 0001	NDSK:	SET	NDSK+1	
E200	+0000		DW	DDXLTS	
E202	+0000000000		D₩	0,0,0	
5208	+80EE		ВW	DIRBUF	
E2DA	+9FE2		ЭW	DP BD1+1	
E20C	+3059		DW	CSV+CSVSZ	
E20E	+0CE9		DW.	ALV+ALVSZ	
	+= 0001	NOFOD:	SET	NDFDD+1	
	+= 0010	CSVSZ:	SET	CSVSZ+(64/4)	
	+= 0013	ALVSZ:	SET	ALVSZ+(()1)SM+7)/8)	
E210			DPHGEN	OSKD1,DDXLTS,DIRBUF,DPBD1+1	:Drive 3:
	+= 0002	NDSK:	SET	NDSK+1	
E210	+0000		WC	DDXLTS	
E212	+0000000000		D₩	0.0.0	
E218	+80EE		DW	DIRBUF	
E214	+9EE2		DW	DPBD1+1	
E210	+4CE9		DW	CSV+CSVSZ	
E21E	+2459		D₩	ALV+ALVSZ	
	+= 0002	NOFDD:	SET	NOFOD+1	
	+= 0020	CSVSZ:	SET	CSVSZ+(64/4)	
	+= 0030	ALVSZ:	SET	ALVSZ+(()1)SM+7)/8)	

Jsbor	ne CP/M 2•2			x Assemble	er ver	3.5E <		92		
F220		XTAB:	;Trai	nslation	table ad	dresses				
E220	2022		DW	DDXLT5	5	:Doug	le density	Osborne trani	ation table addre	ess
E222	2CE2		DW	XLTS		Sino	le density	Isporne		
E224	40E2		D₩	XXXLT	S			ion table addr	ess	
5226	0000		DW	IBMXL*	Г	; I 3M	translation	n table addres	s	
E228	52E2		DW	DECXL	r	; DEC	translation	n table addres	5	
	7652		DW	XTRXL		:User	defined t	ranslation tab	le address	
	= 0000	DDXLTS:	=	0		;Tran	nslation tal	ble for DOUBLE	DENSITY DSBORNE	2 to 1
E22C		XLTS:	:Tran	nslation 1	able 2	to 1				
E22C	0001040508		D B	0, 1,	4	, 5,	3, 9,	12,13,	16,17	
5236	020306070A		08	2, 3,	6	, 7,	10,11,	14.15.	18,19	
5240		XXXLTS:	:XER	X TRANSLA	AT NCITA	BL5 5 t	o 1			
5240	30350A3F		DВ	0,	5 •	10,	15			
E 244	02070011		ЭВ	2 •	7 •	12,	17			
E248	040908		ъв	4•	9.	14				
E248	01060310		DВ	1.	5,	11,	16			
E24F	030800		ЭВ	3•	3 ↔	13				
	= 0000	I3MXLT:	=	o		;184	TRANSLATIO	N TABLE, No tr	anslation 1 to 1	
E252		DECXLT:	; DEC	TRANSLATI	ON TABL	E 2 to	1			
E252	0001020308		29	0, 1,	2. 3.	8, 9	.10.11.	16,17,13,19,	24,25,26,27,	32,33,34,35
E 265	0405060700		ЭВ	4, 5,	6, 7,	12.13	14.15.	20,21,22,23,	23,29,30,31	
E276	= 0023	YTRXLT:	2C	40		;Spac	e for user	defined expans	sion	

= 0006

NUMDPB: =

(#-DPBSTART)/10H

SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 9

Dsborne CP/M 2.2 CBIDS Rev 1.4

C:0CCBID95.4SM

Disk type definition blocks for each particular mode. ; \$Start of Disk parameter blocks, used by select disk routine E29E DP8START: DPBD1: Osborne Double density, single sided E29E DSKD1,8#5 ,3, 7,0,D1DSM ,64,110000000000000008,3 DPSGEN F29E E29E +0C 98 DSKD1 8#5 DW E29F +2800 3,7,0 E2A1 +030700 DB D1DSM-1.64-1.REV (11000000000000000) DW E2A4 +B8003F00C0 E2AA +1000 DW (64+3)/4 E2AC +0300 DW 3 :Osborne Single density, single sided. DPBS1: EZAE DPBGEN DSKS1,2*10,4,15,1,S1DSM ,64,100000000000000003,3 EZAE E2AE +05 DВ DSKS1 2*10 E2AF +1400 DW DB 4.15.1 E2B1 +040F01 S1DSM-1.54-1.REV (10000000000000000) E284 +20003F0030 DW E2BA +1000 WG (64+3)/4 E2BC +0300 DW 3 DPBXD: E28E E2BE E28E +01 DB XEROX E2BF +1200 DW 1 * 1 8 E2C1 +030700 3.7.0 D8 XXDS4-1,32-1,REV (1000000000000000) E2C4 +52001F0080 DW E2CA +0800 D₩ (32+3)/4 E2CC +0300 DW 3 OPBI3M: EZCE E2CE DPBGEN IBM .4#8 .3. 7.0.IBMDSM.64.11000000000000003.1 08 IBM E2CE +08 E20E +2000 DW 4#8 E201 +030700 DΒ 3,7,0 E204 +98003F00C0 D₩ IBMDSM-1.64-1.REV (1100000000000000) 164+31/4 E2DA +1000 DW DW 1 E2DC +0100 DPBDEC: E2DE DP BG EN E2 DE E2DE +08 23 DEC E2DF +2400 ЭW 4#9 E2E1 +030700 DΒ 3,7,0 E2E4 +AA003F00C0 DW DECDS4-1,64-1,REV (11000000000000000) F2EA +1000 DW (64+3)/4 E2EC +0200 DW 2 DPBXTR: E2EE = 0010 DS 16

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 10
Dsborne CP/M 2.2 CBIDS Rev 1.4 C:0CCBID35.4SM

E2FE		ROMRI:	Exits RG	M resident Inter	rrupt routine.
E301 48 E302 E0 E304 F0 E306 09 E308 E0 E309 D0 E304 C0 E308 E1	079 \$ 051 \$ 051 \$ 1 1 1 1 0785FEF \$ 8	5 5	LD MGV OT,C POP POP POP POP POP ED LD RET	A+ROMRAM C+A A IY IX HL DE BC AF SP+IESTK	<pre>:port :set ROM or RAM enabled :reset to interrupt entry st</pre>

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 11
 Osborne CP/M 2.2 CBIOS Rev 1.4
                                                               C:OCCBID35-ASM
 E312
                  RBMCDE:
                  :
                          Calls ROM resident processor
                          Entry DE = resident processor to call biased
                                  by CBIOS jump vector.
                          NOTE: ROM jump vector must match CBIBS vector
                          Entry at ROMCD1 with low digit of CBIOS vector in reg E
E312 D1
                          POP
                                  DΕ
                                                  :Get calling address
E313 7B
                          VOM
                                  A,E
E314 D603
                          SUI
                                  3
E316 5F
                          VOM
                                  E,A
E317 1601
                  ROMCO1: LDK
                                  D.high (ROMVEC)
E319
                  ROMJMP:
                          Entry here to jump to ROM function code directly
                          Entry DE = ROM jump address
                                  BC, HL, IX = any parameters
E319 FDE5
                $
                          PUSH
                                                 Save user Index registers
E318 DDE5
                5
                          PUSH
                                 ΙX
E31D F3
                          DΙ
                                                 ;Set up local stack for ROM
E31E D9
                          EXX
E31F 210000
                          LDK
                                 HL.O
E322 39
                          ADD
                                 HL.SP
                                                 ;Old stack to HL
E323 3101EF
                          LDK
                                 SP.BIOSTK
E326 E5
                          PUSH
                                                 Save old stack pointer
E327 D9
                          EXX
E328 CDD7E8
                          CALL
                                 SWZROM
E328 CD3AE3
                          CALL
                                 GOROM
                                                 ;Go to RDM address (DE) and return to next instruction
E32E CDE2E8
                          CALL
                                 SW2RAM
E331 FDE1
                $
                          POP
                                 ΙY
                                                 Restore old stack pointer
E333 FDF9
                          VCM
                                 SP.IY
E335 DDE1
                $
                          POP
                                 ΙX
                                                 Restore user Index registers
E337 FDE1
                         POP
                                 ΙY
E339 C9
                         RET
E33A
                 GOROM:
                 ;
                         This routine is used to simulate a CALL (DE) instruction
533A D5
                         PUSH
                                 DΕ
                                                 YI of searche cmui MCR;
E33B FDE1
                         ЬÜЬ
                                 ΙY
E33D FDE9
                         JMP
                                 [IY]
                                                 Go to ROM, ROM will RET to next instruction
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 12 Deborne CP/M 2.2 CBIDS Rev 1.4

E33F		HOME: ; ;		disk to nome. This rout . The current host disk		
E33F E342	CDC1E6		CALL XRA	FLUSH A	: Flush	hast buffer
5343	3250EF		STO	A. HSTACT	:Clear	host active flag
E346	3252EF		STO	A+UNAC NT	:Clear	sector count
E349	3219EF		STO	A.SEKTRK		
E34C	321AEF		STO	A.SEKTRK+1		
E34F	C 9		RET			

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 13
Dsborne CP/M 2.2 CBIOS Rev 1.4 C:0CCBIO45.4SM

E350		•	SELDSK:				
		•	;	Selects	disk drive for	next transfar.	
		;	;				
		:	;	ENTRY	C = disk selec	tion value (015).	
		;	;		DE and 1 = 0, first call for this disk.		
		;					
		;		EXIT	HL = 0, if drive not selectable.		
		1	;		HL = DPH addres	s if drive is selected.	
E350				PROC			
E350	00E5	\$		PUSH	IX	**	
E352	79	•		VEM	A • C	Save user IX	
	FE02			CPI	NDSK		
E 3 5 5	D2A4E3						
E358	3213EF			JNC	SELD	If invalid drive number	
E358	59			STO	A. SEKDSK		
	2600			MOV	L.C		
E35E	29			MVI	H•0		
535F	29			ADD	HL. HL	; ÷ 2	
E360				ADD	HL,HL	\$ ~ 4	
E361	29 29			ADD	HL•HL	;*8	
E 362	7B			ADD	HL.HL	: *16	
				MOV	A+E	get initial bit	
E363	1100E2			LDK	DE. DP8ASE		
	19			ADD	HL.DE	:HL = DPH address	
E367	2206E9			CTS	HL.SAVDPH		
	5F			MOV	E+A	Restore initial bit	
E368	CDFAE3			CALL	CHKSEL	Check to see if density needs to be determined	
E36E	C28CE3			JNZ	SELER	:Unable to determine density. error return	
E371	110430						
	110AD0				DE • 10	form dob address	
E375	19			ADD	HL.DE	;to get type	
	5E				E,[HL]		
E376	23			INC	HL		
E377	56				D.[HL]	dpb address in DE	
5378	18				DE		
E379	14				A.[DE]	iget disk type	
E37A	325059			STD	A • SEKTYP	;and store value	
E370	24CCEF			LD	HL.SEQ	Get current sequence count	
E380	DD7500	\$			L . [I X + 0]		
E383	007401	\$			H+[IX+1]	Store seq # in LASTA or LASTB	
E386	2A06E9			LD	HL.SAVDP-1		
E389	DDE1	\$			IX	*Postore week IV	
E388	C 9	-		RET	10	;Restore user IX	
	• ,			X L 1			

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 14 Disborne CP/M 2.2 CBIDS Rev 1.4 C:0CC3ID45.4SM

		;	Select d	lisk error handli	ng
E38C E38F E391 E393	11D8E3 E601 2003 ^E396\$ 1132E3	SELER:	LDK ANI JRNZ LDK	DE.FORERR 1 SELERI DE.DENERR	:Is diskette unformatted? :Yes :No, get density error message
E396 E399 E398 E39E E3A1	3A1BEF C641 32D7E3 32F9E3 CD11E7	SELER1:	LD ADD STO STO CALL	A.SEKDSK A.*A* A.DRV A.DRV1 PRINT	:Indicate drive in message :Print appropriate message on console
E3A4 E3A6 E3A9 E3AC E3AD E3AE E3B1	DDE1 \$ 210000 3A0400 91 C0 320400 C9	SELD:	PCP LDK LDA SUB RNZ STO RET	IX HL.0 CDISK C	Restore user IX
E3B2 E3B3 E3D7	25 0D0A43515E = 0001 = 0025	DENERR: DRV: DENL:	DB DB DS =	DENL CR,LF,*Can**t re 1 *-DENERR-1	ecognize diskette on drive *
E3D8 E3D9 E3F9	21 3D0A555E66 = 0001 = 3021	FORERR: DRV1: FORL:	08 08 0S =	FORL CR+LF+*Unformat 1 #-FORERR-1	ted diskette on drive '

SORCIM 808x Assembler ver 3.50 <:/55/7= =9:92 Page 15
Disborne CP/M 2.2 CBIDS Rev 1.4 C:0CC3ID45.4SM

E3F4		CHKSEL:			
		;	Determi	nes if new DPB s	hould be astablished
		;	ENTRY	f = disk salaat	ion value (015)
		:	CHINI		st call for this disk
		;			St carrior this gran
		;	EXIT		drive sequence number
		;		Z status bit se	t. good return
		;		Z status bit cl	ear, error return
E3FA			PROC		
E3FA	£5		PUSH	HL	P acou our?*
E3F8	25		PUSH	BC	Save user H_
53FC	DD2100E9 1	ŧ.	LDK	IX.LASTA	10-4 1-4
E400	79	•	MOV		Get last count for selected drive
E401	B7		ORA	A • C	Current drive to A - reg
	2804 ^54089			A	:Is this drive A?
E404			JR Z	CHKSEQ	Yes, check sequence number
	0023		INC	IX	No. form address for 3
E406	DD23 9	b	INC	IX	•
E408	DD4E00 \$	CHKSEQ:	LD	C+[IX+0]	Get last sequence number for this drive
E408	004501 9	5	LD	B • [[X + 1]	12 12 12 12 12 12 12 12 12 12 12 12 12 1
E40E	2ACCEF		LD	4L.SEQ	Get current sequence number
E411	ED42 \$	•	SBC	HL.BC	Compare seg #'s
E 413	51		POP	ВС	voonpare seq # s
E414	DDE5 \$,	PUSH	IX	
E 416	CB 43 \$		BIT	O • E	First call for this disc?
E418	2800 ^6427\$		JRZ	:10	Yes, fill in DPB
E41A	7C		MOV	4 • H	No. check elasped time
E418	37		OR A	Α	:Elasped time < 4 sec
E41C	280E ^E42C\$		JRZ	GRET	Yes, good return
E41E	FE02		CPI	02	7.037 9553 15631 1
E420	3005 AE427\$		JR NC	:10	
E422	7D		MOV	A•L	
E423	FEAD		CPI	HCAO	;Elasped time > 5 sec
E425	3805 45420\$		JRC	GRET	;No, indicate good return
			0	ORET	Therears good ratury
E427	CD31E4	:10:	CALL	GDEN	
E42A	1801 ^E42D\$		JS	RETURN	
E42C	AF	GRET:	XRA	A	
E42D	DDE1 \$	RETURN:	POP	IX	
E42F	E1	(ETOKH*	POP	HL	
E430	59		RET	n L	
L 4.00	• /		NET		

Osbor	ne CP/M	SORC: 2.2 CBIOS R		Assembler ver	3.5E <:/55/7= =9:92 Page 17 C:OCCBIO45.4SM
E47F	007600	\$	LD	[C+XI] • A	
E482	77		STO	A.[HL]	
E 483	23		INX	ЧL	
E484	DD7E31	5	LD	A + [X + 1]	
5487	77		STD	A.[HL]	
E488	AF		XRA	A	;Indicate good return
E489	59		RET		•
		;	Error	return section	
E48A	3E01	SELD1:	4VI	A+1	;Indicate unformatted disk Z-flag = clear. A = 1
E48C	C 9	30001	RET	772	VINGTOUS SINGINGERED CITS LETTERS - Clear A - 1
548D	F632	SELD2:	DRI	02	;Indicate unrecognizable disk Z-flag = clear, A = 2
E48F	C 9		RET		Thereads in obeyments that I may be one in the

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 18
Disborne CP/M 2.2 CBIOS Rev 1.4 C:0CC3I045.ASM

E490		SETDEN:					
		;	Gets density of selected disk				
		;	ENTRY	SEKDSK = Current	t drive		
		:	EXIT	C = TYPE	7 5 5 4 3 2 1 0		
		•		Undef = 0 <			
		;		D			
		;		A 7 Mars 2			
		;		Density <			
		;		B = # of physics	al sectors per track		
		;		A = 0, good ret			
		;		A <> O+ error re			
		;		Z-bit set, good			
		;		Z-bit clear, er	ror return		
	= 0130	SENDEN:	=	130H			
E490			PROC		and the section		
E490			LD	A.SDISK	Save current value		
E493			STO	A+TEMDSK	iof SDISK and SAVTYP		
E496			LD	A.SAVTYP	(NACHARA SAVITY ARE USED by SENDEN):		
E499	32 J9E9		STO	A. TEMTYP			
549C	3A1BEF		LD	A.SEKDSK	Disk to be select		
E49F			STO	A.SDISK	in SDISK (parameter to SENDEN)		
E442	113001		LDK	DE . SENDE N	Call SENDEN		
	CD19E3		CALL	ROMJMP			
	340050		LD	A.TEMDSK	:Restore caller's value of SOISK		
E4A8	3A08E9 3217EF		STO	A.SDISK			
CTAD	321111		3,2				
EGAE	34D0EF		LD	A+SAVTYP	Exit TYPE parameter		
E481			VOM	C+A	;into C - Reg		
E482	3A09E9		LD	A.TEMTYP	Restore caller's SAVTYP		
E485	32D0EF		STO	A,SAVTYP			
				F2.2FF	Frror return. flag set by SENDEN		
E488	CO		RNZ	ERRET	SELLOI ISCOLIA LINA 350 35 SELDEN		
E4B9	ΔF		XRA	A	:Indicate good return		
	Ē9		RET				

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 19
 Osborne CP/M 2.2 CBIOS Rev 1.4
                                                                 C:00031345.454
 E488
                   SETTRK:
                           Sets track number. The track number is saved for later
                           use during a disk transfer operation.
                           ENTRY BC = track number.
 E488 ED4319EF $
                           STO
                                   BC.SEKTR<
                                                   :Set track
 E4BF 2A53EF
E4C2 7D
                           LHLD
                                   UNATRK
                           MOV
                                   A . L
E4C3 A9
                           XRA
 E4C4 4F
                           VCM
                                   C.A
 E4C5 7C
                           VOK
                                   A . H
E4C6 A8
                           XRA
                                   3
E4C7 B1
                           DRA
                                   С
E4C8 C8
                           RΖ
                                                   ; If same track
                           JMP
                                   CUNACT
E4C9
                   CUNACT:
                           Clear Unallocated block count (force pre-reads).
E4C9 AF
                           XRA
                                                   ; A = 0
E4CA 3252EF
                           STO
                                   A. UNACNT
                                                           :Clear unallocated block count
E4CD C9
                           RET
E4CE
                  SETSEC:
                          Set the sector for later use in the disk transfer. No
                          actual disk operations are perfored.
                          Entry 8C = sector number.
E4CE 79
                          MOV
                                  A . C
E4CF 3220EF
E4D2 C9
                          STD
                                  A, TEMSEC
                                                   sector to seek
                          RET
E4D3
                  SETDMA:
                          Sets Disk memory address for subsequent disk read or
                          write routines. This address is saved in DMAADR until
                          the disk transfer is performed.
                          ENTRY BC = Disk memory address.
                          EXIT
                                  DMAADR = BC.
E4D3 ED4311EF $ E4D7 C9
                          CT2
                                  SC,DMAADR
                          RET
```

Osborne CP/M	SORCIA 2.2 CBIDS Rev		Assembler ver 3.º	5E <:/55/7= =9:92 Page 20 0:00031045.ASM
E4D8	SECTRN:	Transl	ates sector number	from logical to physical.
	;	ENTRY	DE = translation	slation required• n table address• ber to translate•
	;	EXIT	HL = translated	sector.
E4D8 3A55EF E4DB 89 E4DC C4C9E4 E4DF 79 E4E0 3256EF E4E3 69 E4E4 60		LDA CMP CNZ MOV STO MOV MOV	UNASEC C CUNAST A+C A+LDGSEC L+C H+B	;If sectors do not match
E4E5 7B E4E6 32 E4E7 C8		MOV ORA RZ	A • E D	Check if translation is required None required, return
E4E8 19 E4E9 6E E4EA 2600 E4EC C9	TRAN:	ADD MOV MVI RET	HL.DE L.M H.O	:Translation required

;

Boot CP/M from disc.

The 1900T entry point gets control from the cold start loader and is responsible for the pasic system initialization. This includes outputting a sign-on message and initializing the following page zero locations:

0.1.2: Set to the warmstart jump vector.
3: Set to the initial IDBYTE value.
4: Default and logged on drive.
5.6.7: Set to a jump to 300S.

The NBODT entry point gets control when a warm start occurs, a ^C from the console, a jump to BDDS (function D), or a jump to location zero. The WBODT routine reads the CCP and BDDS from the appropriate disk sectors. WBDDT must also re-initialize locations D,1,2 and 5,6,7. The MBDDT routines exits with the 1 register set to the appropriate drive selection value. The exit address is to the CCP routine.

E4ED		CBOOT:			
E4ED	310008		LDK	SP+CCP	
E4F0	CDE2E8		CALL	SW2RAM	
E4F3	3A6651		LD	A.IOBITE	;get iobyte value
E4F6	320300		CT2		Set I/O byte to default
					, soc in a byte to deladit
E4F9 E4FC	3A69E1		LD	A.BRATE	
	4F		MOV	C + A	
E4FD	CD3CE1		CALL	CUABZ	set baud rate
E500	3A6AE1		LDA	SCRSZE	
E 5 03	326CEF		STA		set screen size
					3120
	3A89E1		LD		:Get IEEE device address
E509	32DBEF		CTS	A+IEADR	and save it in 3MRAM
E50C	AF		XRA	A	
E50D	320400		STO		Set current drive to 4
E510	3 C		INC	A	aget correst dlive to d
E511	180E ^E521\$		JR	SCCP	DO CP/M
E513		#800T:			:Warn boot
E513	3100CB		LDK	SP • CCP	Wal in boot
£516	CD3FE3		CALL	HOME	iflush any buffer
					•
	110301	BCPM:	LDK	DE•ROMVEC+3#1	Set RDM vector address
E51C	CD19E3		CALL	ROMJMP	
851F	3E02		MAI	A. 2	;indicate warm boot
					THE CAUSE WAY ME DOOL
E521		BCCP:	;Entry	A = 01, if cold	
		;		A = 02, if warm	boot
E521	F 5		PUSH	ΔF	16
E522	018000		LDK		Save entry
				3C 1 D 3 O F	:Set default data transfer address

```
SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 22
Osborne CP/M 2.2 CBIOS Rev 1.4
                                                              C:0CC3I055.4SM
E525 CDD3E4
                          CALL
                                 SETDMA
E528 2180EA
                                  HL, HSTBUF
                          LDK
                                  HL.DMADR
                                                 ;set ROM DMA address
E528 220FEF
                          STO
                          Clear console control ESC cell
E52E AF
                          XRA
                                 Δ
                                  A+ESCH
                                                 :clear ESC
E52F 3260EF
                          STO
                          Set-up low core pointer cells
                                  A+0C3h
E532 3EC3
                          LDK
                                                 :Store jumps in low memory
                          STD
                                 A . D
E534 320000
E537 320500
                          STO
                                  A . 5
E53A 2103E1
                                 HL.BIOS+3
                          LDK
E530 220100
                          STO
                                 HL • 1
                                 HL,BDOS
E540 210603
                          LDK
E543 220600
                          STO
                                 HL,6
                          LDK
                                  HL.CAUTO
E546 219DE1
E549 C1
                          235
                                  ВC
                                                 cold/warm indicator in a
E54A 3A9CE1
                          LD
                                  A.ACMD
E54D A0
                          AND
                          JRZ
                                 DONE
E54E 284A ^E59A$
E550 7E
                          LD
                                 A.[HL]
5551 B7
                          DRA
E552 2846 ^E59A$
                          JRZ
                                 DONE
E554 110708
                          LDK
                                 DE+CCP+7
E557 0600
                          LDK
                                 3.0
E559 4F
                          VCM
                                 C . A
                                                 :Move command line to buffer
E55A ED80
                          LDIR
E55C 110000
                          LDK
                                 DE+0
E55F 1847 ^E548$
                                 DONE1
                          JR
E551 38
                  SIGNON: DB
                                 SIGNL
                                                 :Length of signon message
                                 *Z*-40h
E562 1A
                          DВ
E563 4F73526F72
                          DΒ
                                  *Osborna Computer System*
E57A 000A
                          03
                                  *0* + CI bcm =XI2M.*O*+01\3XI2M
E57C 3539
                          38
                                  'k CP/M vers '.VERS/10+'0'.'.'.VERS mod 10 + '0'
E57E 6B2043502F
                          DB.
E580 000A434249
                          DВ
                                 CR.LF. *C3IOS 1.4*.CR.LF
                 SIGNL: =
                                 *-SIGNON-1
      = 0038
                 DONE: LDK
E59A 3E02
                                 A . 2
E59C 88
                         CMP
                                 В
E59D 2806 ^E5A5$
                         JRZ
                                 DONES
E59F 1161E5
                          LDK
                                 DE.SIGNON
E5A2 CD11E7
                         CALL
                                 PRINT
E5A5 110300
                 DONED: LDK
                                 DE . 3
                                 HL . CCP
                 DONE1: LDK
E548 21000B
E5AB 19
                                 HL . DE
                          ADD
E5AC 3A0400
                         LD
                                 A.CDISK
ESAF 4F
                          MOV
                                 C • A
E580 E9
                         JMP
                                 [HL]
```

SORCIM 803x Assembler ver 3.5E <:/55/7= =9:92 Page 23
Dsborne CP/M 2.2 C3IOS Rev 1.4 C:DCC3ID65.4SM

E581		R EAD:	a CP/M EXIT	A = 1, unsucess Z bit = 1, suce	ful read operation. sful read operation. pessful read operation. uccessful read operation.
E581 E584 E584 E585 E588 E580 E500 E500 E505 E506 E506 E507	CD06E7 AF 3252EF CD44E6 E1 01 018000 EDB0 3A22EF B7 C8 AF 3250EF F601 C9	\$	PROC CALL XRA STO CALL POP POP LOK LOIR LO ORA RZ XRA STO ORI RET	MVINFO A A+UNACNT FILL HL DE BC+128 A+ERFLAG A	<pre>:Move information for transfer :Set flag to force a read</pre>

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 24 Esborne CP/M 2.2 CBIDS Rev 1.4

E5 C E		WRITE:	the sole	ected 128 byte CP	/M sector•	
		;	CHC 3010			
		;	ENTRY	C = 0, write to	a previously allocated block.	
		;		C = 1. write to the directory. C = 2. write to the first sector of unallocated		
		;		data block.		
		:	FXIT	A = 0. write was	successful•	
		;	EVII	$\Delta = 1$, write was		
		;			was successful.	
		;		Z bit = 0, write	was unsucessful.	
ESCE			PR DC			
	CD05E7		CALL	MVINFO	:Move information for transfer	
E501	79		MOA	A • C	:Write type in c	
E5D2	32235F		CTS	A. WRTYPE		
E5D5	FE02		CPI	WRUAL	:If write to allocated	
E507	201A ^E5F3\$		JRNZ	WRIT2	II WITE US ATTOCAUGU	
E509	345CE9		LD	A,SEKTYP 5	Check for 2K block size	
E5DC	FE05		CPI LDK	A+2048/128		
E5DE	3E10		JRZ	WRIT1	:Type = Osporne single density (2K block size)	
E5E0 E5E2	2802 *E5E4\$ 3E08		LDK	A.1024/128	Otherwise 14 block size	
E 3 E 2	3503		-	4		
E554	32525F	WRIT1:	STO	TV SAVU A		
E5E7	2A19EF		LD	HL.SEKTRK HL.UNATRK	;JNATRK = SEKTRK	
E 5 E A	2253EF		STD LD	A.LOGSEC	July Met Six Survey Control of the C	
E5ED	3A56EF		INC	A 4 L 303 LC		
55F0 55F1	3C 1828 ^8615\$		JR	#RIT3		
EJFI	1320 10112					
E5F3	2152EF	MRIT2:	LDK	HL, UNA ONT		
55F6	7 E		LD	A,[hi]		
E5F7	37		DRA JZ	A WRIT4	;If no unallocated records	
E5F8	5A23⊞6 35		DEC	[n]]	dec unalloc record count	
E5FB	37				and the second second second	
E5FC	21F4E1		LDK		Get number of sectors per track	
£5FF	111000		FDK	DE • 16	;To point to next DPB	
5602	3A13EF		LD	A, SEKDSK		
E605	47		MOV INC	8•A 3		
E606	04		1,40	5		
E607	19	WRIT25:		HL •DE		
E608	10FD ^E607\$		DUNZ	WRIT25		
E60A	5E		LD	E+[HL]		
E603	23		INC	HL		
E600	56		LD	0,[HL]	.Number of sectors per track in A rea	
E60D	1 A		LD	A.[DE]	:Number of sectors per track in A reg	
560E	47		VOM	B.A.	:Increment logical sector	
E60F	3A555F		LD	A, UNAS EC		
E612	3 C		INC CMP	A 3		
E613	38 2008 ^5618\$		JRNZ	WRIT3	; If not end of track	
E614	2008 FE0169		LD	HL.UNATRK		
E616 E619	23		INC	HL		
E614	2253EF		STO	HL, UNATRK		

Osbor	ne CP/M ;	SORCI 2•2 CBIDS Re	M 808x	nsv neldmezzá	3.5E <:/55/7= =9:92 Page 25 C:0CC3ID65.4SM
5610	ΔF		XRA	Δ	
561€ 5621	32555F 35FF	ARIT3:	STO LDK	A+UNASEC A+OFFh	
E623 E626 E627 E628 E628	CD4456 D1 E1 D18000 EDB0	WRIT4:	CALL POP POP LDK LDIR	FILL DE HL 3C•128	·
E62D E62F E632 E635 E636	3E01 3251EF 3A22EF B7 C0		LDK STO LD DRA RNZ	A+1 A+HSTWRT A+ERFLAG A	:HSTWRT = 1 :If any errors occurred
E637 E634 E63C E63F E542 E643	3A23EF FE01 CCC1E6 3A22EF 37		LD SPI CZ LD GRA RET	A, MRTYPE WRDIR FLUSH A, ERFLAG A	<pre>;write type ;to directory? ;Force write of directory</pre>

```
SORCIM 808x Assembler ver 3.5E <:/5577= =9:92 Page 26
                                                               C:00031065.45M
Osborne CP/M 2.2 CBIOS Rev 1.4
                  FILL:
5644
                          Fills host buffer with approprite host sector.
                  ;
                  :
                          ENTRY A = 0. Read required if not in buffer.
                  :
                                  Otherwise read not required.
                                  On exit the stack will contain the following
                          EXIT
                                  values:
                                                  ;x = host record address.
                                POP
                                       ×
                                                  :y = caller's buffer address.
                                POP
                                        У
                          DFOC
E644
                                                  :Save read flag
                                  A.RDFLAG
                          STO
E644 3221EF
                                  A.SEKTYP
                          LD
E647 3A5CE9
                          RRC
E644 DF
E648 OF
                          RRC
                                  03
E64C E603
                          ANI
                                  B • A
                          MOV
E64E 47
                                                  initial offset
                          LDK
                                  DE.HSTBUF
564F 1180EA
                                                  :Get logical sector
                          LD
                                  A.SEKSEC
E652 3418EF
                                                  :128 byte records
                                  HL + 128
                          LDK
E655 ?18000
                                                  :Juno when sector size <> 128. no deblocking necessary
                          JR Z
                                  FILL35
E658 2808 *F6655
                                  DE.HL
                  FILL2: EX
E65A EB
                          RRC
E658 OF
                                                  ; If low bit not set
                                  FILL3
F65C 3001 ^E65F$
                          JRNC
                                                  :Add bias to offset
                                  HL.DE
                          ADD
E65E 19
                  FILL3: EX
                                  DE.HL
E65F E3
                          ADD
                                  HL, HL
E660 29
                                                  :Mask sector
                          ANI
                                  97Fh
E661 E67F
5663 10F5 *F65A$
                          SALC
                                  FILL2
                                                  :SEKSEC = ohysical sector - 1
                                  A.SEKSEC
                  FILL35: STO
E665 3218EF
                                  FGAAPG. JH
                          LD
E668 2411EF
                                                  ;Set return parameters
                          XTHL
5663 E3
                          PUSH
                                  DΕ
E66C 05
                                  HL
                                                  :Set return address
                          PUSH
E66D E5
                                  HL.HSTACT
                                                  thost active flag
E66E 2150EF
                          LDK
                                  A,[HL]
                          LD
E671 7E
                                                  talways becomes 1
                                  1,[HL]
E672 3601
                          STO
E674 37
                          ORA
                                  Δ
                                                  :If host ouffer inactive
                                  FILL6
F675 2810 ^E694$
                          JRZ
                                  HL+HSTTYP
E677 2150E9
                          LDK
                                  A.SEKTYP
                          LD
E674 3A5CE9
                          CMP
                                  (HL)
E670 BE
                          JRNZ
                                  FILL5
E67E 2011 ^E691$
                          LDK
                                  HL. HSTSEC
5680 211CEF
                          LDK
                                  DE.SEKSES
E683 1118EF
                          LDK
                                  B.SEKOSK-SEKSEC+1
5686 0604
                  FILL4: LD
                                  A.[DE]
E688 14
                                  [HL]
E689 3E
                          CMP
                                  FILL5
                                                  :If mis-match
E68A 2005 *E691$
                          JRNZ
                          INC
                                  HL
E68C 23
                                  DE
                          TNC
E68D 13
```

FILL4

DJNZ

E68E 10F8 ^E688\$

texperc ton attention if

		SURCI	4 808x	Assembler ver	3.55 <:/55/7=	=9:92 Page 27
Osbor	ne CP/M 2.2	CBIDS Re	v 1.4			C:00031065.45M
E690	29		RET			
5 691	CDC1E6	FILL5:	CALL	FLUSH	;Flush host	puffer
5694	341BEF	FILL5:	LD	A.SEKDSK	:Move disk	
E697	321FEF		STO	A. HSTDSK		
E69A	3217EF		STO	A. ACTOSK		
E690	2419EF		LD	HL.SEKTRK		
E6A0	221DEF		STO	HL, HSTTRK		
E6A3	2215EF		STO	HL, ACTTRK		
5646	3A18EF		LD	A.SEKSEC		
E6A9	3210EF		STO	A. HSTSEC		
E6AC	3214EF		STO	A.ACTSEC		
E6AF	3A5CE9		LD	A. SEKTYP		
E682	3250E9		STO	A+HSTTYP		
E685	32D0EF		STO	A · ACTTYP		
E638	3A21EF		LD	A.RDFLAG		
E6BB	37		OR A	A		
E680	CO		RNZ		;If no read	Faguirad
					71; NO 1 843	i syurr su
E6BD	3E00		LDK	A • O	:Read	
E68F	1822 ^E6E3:	Б	18	FINAL	***************************************	

SORCIM 808x Assembler ver 3.55 <:/5577= =9:92 Page 28 Disporne CP/M 2.2 CBIDS Rev 1.4

5601		FLUSH: ;	Writes	out active host	buffer onto disk•
E6C1			proc		
56C1	2151EF		LDK	HL . HSTWRT	
E6C4	7 E		LD	A.Ehll	
E605	87		A AC	Δ	
E6C6	2.8		٦ Z		:If host buffer already on disk
E6C7	3600		STO	0.[hl]	
E6C9	3A1FEF		LD	A. HSTDSK	:Move disk
E6CC	3217EF		STO	A+ AC TOSK	
E6CF	2A1DEF		LD,	HL+HSTTR<	
E6D2	2215EF		STO	HL.ACTTR<	
E6D5	3A1CEF		LD	A+ HSTSEC	
E6D8	32145F		CTS	A.ACTSEC	
			LD	A+HSTTYP	
E603	345DE9				
E6DE	3200EF		STO	A . ACTTYP	Allaine floor
E6E1	3503		LDK	A • 3	:Write flag
		;	JAB	FINAL	

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 29 Dsborne SP/M 2.2 C8IDS Rev 1.4 C:0C3ID65.4SM

E6E3		FINAL:	Prefor	ms final transfer	
		;		= 3 •• write	
		;	Calls:	Rom resident rousector only.	utine to read/write DNE
F6E3	5F		MOV	E • A	
E6E4	1600		LDK	D • 0	
E6E6	212701		LDK	HL.ROMVEC+3#13	
E6E9			ADD	HL + DE	
E6EA	220AE9		STO	HL.SAVADR	
E6ED	2114EF		LDK	HL.ACTSEC	
F6F0	34		INC	[hl]	;update sector+1
56F1	2 A O A E 9		LD	HL.SAVADR	
E6F4	EB		ΕX	DE,HL	
E6F5	0601		LDK	B•1	indicate one sector xfer
E6F7	CD19E3		CALL	ROMUMP	process read or write
E6FA	3222EF		STO	A . ER FLAG	set possible error flag
E6FD	2.8		RZ		If no errors
E6FE	2122EF		LDK	HL, ERFLAS	
E701	7E		LD	A.EHLI	
E702	F601		OR I	01h	
E704	77		STO	A,[HL] ;Set er	ror flag
E705	59		RET		

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 30 Osborne CP/M 2.2 CBIOS Rev 1.4

E 706		MVINFO:	Move	information	necessary f	or transfer.	
E70A E70D	AF 3222EF 3A23EF 3218EF C9		XRA STO LD STO RET	A A • ERFLAG A • TEMSEC A • SEKSEC		;Clear error	flag

```
Osborne CP/M 2.2 CBIGS Rev 1.4
                                                              C:OCCBIO75.ASM
                 PRINT:
Ē711
                         Print message string to CONSOLE device
E711 2138E7
                         LDK
                                 HL.CONDUT
E714 1803 ^E719$
                         J٦
                                 TUCSTZ
E716
                 PSTR:
                         Print message string to LIST device
E716 213FE7
                         LDK
                                 HL.LIST
                         JR
                                 STROUT
E719
                 STROUT:
                 ;
                         Print message terminated by zero byte.
                         ENTRY DE -> message buffer, first byte = length
                 ;
                                 DE -> DE + length
                         EXIT
                                 A = 0.
                                 Z bit set.
                         USES A. BC. DE. HL
E719
                         PRIDC
E719 1A
                         LO
                                 A.[DE]
                                                 Get a length of orint string
E71A B7
                         DR A
                                 Α
                                                 :If zero then terminate
E718 C8
                         RΖ
E71C 47
                         MOV
                                 8 . A
                                                 :Length to B reg
                 NEXTC: INC
E71D 13
                                 DΕ
                                 A. [DE]
                                                 Get character
E71E 1A
                         LD
E71F 4F
                         MOV
                                 C + A
                         PUSH
                                 DΕ
                                                 Save print string address
E720 D5
E721 C5
                         PUSH
                                                 Save loop counter
                                 BC
E722 E5
                         PUSH
                                 HL
                                                 ;Save output routine address
E723 1128E7
                         LDK
                                 DE, NEXT
                         PUSH
                                                 Return address to stack
5726 D5
                                 DΕ
E727 E9
                         JMP
                                 [HL]
                                                 :Output
                 NEXT:
                         POP
                                 HL
E728 E1
E729 C1
                         PDP
                                 ВÇ
E72A D1
                         POP
                                 DΕ
E728 10F0 ^E71D$
                         DJNZ
                                 NEXTO
                                                 :Print next character if not done
E72D 09
                         RET
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 31

SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 32 Dsborne CP/M 2.2 CBIDS Rev 1.4 C:0CCBI085.ASM

;	The following	routines	will	use '	the	IOSYTE	t o	transfer
_			·		- 4 -	*		

; control to the appropriate device driver

E72E :TRACO

Returns console status

E72€ proc

E72E 2179E7 E731 1808 ^E733\$ LDK HL.PTR_CSTAT Status table

JR GODISPEH :Call appropriate rtn

CONIN: **E733**

Reads input character from device

E733 proc

LDK HL.PTR_CINP :Table of input rths E733 2131E7

E736 1803 ^E73B\$ JR GDDISPCH

:TUCKOJ **E738**

Puts output character to device ;

C contains output character

E738 proc

HL.PTR_COUT E738 2189E7 LDK :Table of output rtns

SCODISPCH: 573B

inumber of shifts required to align 8 • 1 E73B 3631 LDK

CONSOLE field

DISPCH E73D 1829 ^E768\$

```
SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 33
Osborne CP/M 2.2 CBIOS Rev 1.4
                                                              C:00031385.45M
                 LIST:
E73F
                          List device character output
E73F
                          proc
                                                  :Set printer initialization flag
                                  HL.PINTEG
E73F 218AE1
                          LDK
E742 7E
                          LD
                                  A,[HL]
                          JR A
E743 B7
                                  Α
                                                  Printer previously initialized
E744 2003 ^E74E$
                          JRNZ
                                 LIST1
                          DEC
                                  [HL]
                                                  :Non-zero value to PINTEG
E746 35
                          PUSH
                                  вс
                                                  ;Save character
5747 C5
                          INC
                                  HL
5748 23
                                                  ;Get initialization string
E749 EB
                          ΕX
                                  4L.DE
                                                  ;and print it
E74A CD16E7
                          CALL
                                  PSTR
                                                  Restore character
                          PDP
E74D C1
E74E 3604
                  LIST1: LDK
                                  3 . 4
                                  HL.PTR_LIST
                                                  ;table of list routines
E750 2199E7
                          LDK
                                  DISPCH
E753 1813 ^E763$
                          JR
E755
                  PUNCH:
                          Sutput to ounch
E755
                          DFOC
E755 0606
                          LDK
                                  8+6
                                  HL.PTR_PNCH
                                                  :Punch routines
                          LDK
E757 2189E7
                                  DISPCH
E75A 180C ^E758$
                          JR
E75C
                  READER:
                          Reader input
E75C
                          proc
E75C 0608
                          LDK
                                  8 . 6
                                  HL.PTR_ROR
                                                  : reader routines
E75E 2181E7
                          LDK
                                  DISPCH
E761 1805 ^E768$
                          JR
                  LISTST:
E763
                          Return the ready status for the list device.
                                  A = 0 (zero). list device is not ready to
                  ;
                                  accept another character.
                                  A = FFh (255), list device is ready to accept
                                  a character.
                          ргос
E763
                                                  inumber of left shifts thru carry
                          LDK
                                  8 . 4
E763 0604
                                                  to align LIST field of IDBYTE
                                                  ; list status routines
                                  HL.PTR_LST
E765 2191E7
                          LDK
```

JR

HISPEH

Jsbor	ne CP/M 2.2			Assembler ver	3.5E <:/55/7= =9:92 Page 34 C:OCC3IO85.4SM	
E768		DISPCH:	require	ed to align t	s contains the left shift count the lobyte field to bit 1 position. a address of select table	,
E768 E758	3 A O 3 O O		proc LD	A.IOSYTE		
E76B E76B E76C E76E E770 E771 E773 E774	17 10FD ^E768\$ E506 5F 1600 19 5E 23 56		RAL DJNZ ANI MOV LDK DAD MOV INC MOV	DSPCH1 6 E+A D+O DE E+[HL] HL H+[HL]	<pre>;get select field*2 ;DE = iobyte field * 2 ;get the routine address ;ioto blood yeboogs with acc.</pre>	
E777 E778	68 E9		MOV JMP	[4L]	finto hi and xchange with pc	

SORCIM 803x Assembler ver 3.5E <:/55/7= =9:92 Page 35 Osborne CP/M 2.2 CBIDS Rev 1.4 C:0CCBID85.4SM

		;	Dispa	tch Table	
E779		PTR CST	ΔT:		
E779	A1E7		D₩	CNST	; keyboard status
E778	69E8		DW	SISTAT	serial port input status
E770	CBES		DW	PISTAT	; parallel input status
E77F	37E8		Ď₩	IEINSTAT	status of input device on IEEE port
E781		PT3_3D3	:		
E781		PTR CIN			
E781	AFE7		DW	KEYIVP	; get input from keyboard
E783	72E8		DW	SPINP	serial cort input
E785	CFES		DW	PARINP	parallel input
E787	SFE8		DW	IEINP	; ieee port inout
E789		PTR_PNC	u •		
E789		PTR COU			
E789	4CE8		DW	CRIDUT	; output character to ort
E78B	7658		DW	SPOUT	serial port output
E78D	0358		DW	PAROUT	; parallel output
E78F	C3E8		DW	IEBUT	ieee port output
E791		PTR LST			
E791	49E8	(1/_53)	DW .	CRSTAT	
E793	55E8		DW.	TATECS	serial output status
E795	C7E8		DW.	POSTAT	; parallel output status
E797	BBES		D₩	IEOSTAT	
L 1 7 1	3020		J 19	1503141	; ieee output status
E799		PTR_LIS	T:		
E799	4C E 8	_	DW.	CRIOUT	
E798	7AE8		DW	PRICUT	
E79D	D3E8		DH	PAROUT	
E79F	C3E8		DW.	IECUT	

SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 35 Dsborne CP/M 2.2 CBIOS Rev 1.4 C:0CC3ID35.4SM

E7A1		CNST:	санѕ	OL STATU	ı ş	
		•	This ro	uting samples th	e Console status and returns	tha
				ng values in the		6115
		;	EXIT	A = 0 (zero) m	eans no character	
		;		currently ready	to read.	
		;		4 = FFh (255).	means character	
		;		currently ready	to read.	
		;	check i	f any translated	keys are cending	
E7A1			ргос			
E7A1	3AC1 E7		LD	A. COUNT		
E7A4			DR A	Δ		
E7A5	2005 *=740\$		JRNZ	CNST5		
		:	if no x	lated keys pendi	ng, check keynit flag	
57A7	3A5EEF		LD	A+LKEY	Get Key hit flag	
ETAA	37		DR A	Δ		
E7AB	C 8		2 Z		:If data not available	
ETAC		CNST5:				
E 7AC	FSFF		OR I	OFFh		
E7AE	59		RET			

```
3sborne CP/M 2.2 CBIOS Rev 1.4
                                                               C:0CC3I385.4SM
E7AF
                  KEYINP:
                          Sets keystroke from ROM keyboard driver.
                          Translates the codes 80h to 8fh as per table.
                  ;
                  ;
                          EXIT
                                   A = translated code in ASCII
      = 3380
                  BASVLO: =
                                  80h
                                                          :lowest value of translatable keys
E7AF
                          proc
ETAF DDE5
                          PUSH
                                  ΙX
                                                          Save user IX
E781 CDF6E7
                  KINO:
                          CALL
                                  AHSCRL
E784 21C1E7
                                  HL.COUNT
                          LDK
E787 7E
                          LD
                                  A.[HL]
                                                          get number of xlated keys
E738 B7
                          DRA
E789 2808 *E7C6$
                          JRZ
                                  KIN10
                                                          ; if keys bending then
E738 DD2A5EE9 $
                          LD
                                  IX.XLTKEY
                                                          get base address in IX reg
E78F 007E00
                          LĐ
                                  A, [ | X+0]
                                                          isimulate LD A.(IX+COUNT)
      = E7C1
                  COUNT: =
                                  ≑-1
                                                          ito get next key from table
E7C2 34
                          INC
                                  [HL]
                                                          ;increment count
E7C3 DDE1
                $ KRET:
                          POP
                                  ΙX
                                                          Restore user IX
E7C5 C9
                          RET
E7C6
                  KIN10:
E7C6 1E09
                          LDK
                                  E • 09
E7C8 CD17E3
                          CALL
                                  ROMCO1
                          When console has returned this code will check
                          for function key and preform some translation
E7CB FEB0
                          CPI
                                  80h
                                                  function keys have value
E7CD 38F4 ^E7C3$
                          JRC
                                  KRET
                                                  ;80h-8dh
E7CF FE8E
                          CPI
                                  8Eh
                                                  ido a shift to make pointer
E7D1 30F0 ^E7C3$
                          JR NC
                                  KRET
                                                  finto table and return if not function key
E703 C827
               $
                          SLA
                                  Α
E7D5 5F
                          MCV
                                  E . A
E706 1600
                          LDK
                                  D • 0
E7D8 DD2168E1 $
                          LDK
                                 IX.XLTBL
E7DC 0019
                          ADD
                                 IX.DE
E7DE DD5E00
                          LD
                                 L.[IX+0]
E7E1 005601
                          LD
                                  H.[[X+1]
E7E4 DD5E02
                          LD
                                  E+[[X+2]
E7E7 005603
                $
                          LD.
                                 D.[[X+3]
E7EA ED535EE9 $
                          STO
                                  DE.XLTKEY
ETEE ED52
                          SBC
                                  HL,DE
E7F0 7D
                          MOV
                                 A . L
E7F1 32C1E7
                         STO
                                 A. COUNT
E7F4 1888 ^E781$
                          JR
                                 KINO
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 37

E83A E5

PUSH

HL

Osborne CP/M 2.2 CBIOS Rev 1.4

E7F6 AHSCRL: abscrl - does auto horizontal scroll if required. 57F6 proc E7F6 3A63E1 LD A+AHSEN8 OR E7F9 37 E7FA 28 ٦Z E7FB 2A5AEF LD HL.CURS :get cursor E7FE 29 CGA HL.HL check for cursor in home window E7FF 3E64 LDK A. 100 CMP E801 BD L JR C jump if cursor not in home window E802 3809 *E800\$ RHC icheck for screen at home A.PIAAD 5804 3A61EF LD SUB VFLO E807 D6EA screen at home E809 C8 ٦Z F8 AC83 XRA thome screen E808 1818 ^E825\$ JR SCRL RHC: E800 check right-hand margin a=horizontal screen position CAAIGAA 5800 3A515F LD E810 D6EA SUB VELD E812 5654 ADD A+100 :window size#2 (50) E814 3D CMP L 5815 DA22E8 JC :30 imove screen when cursor about to go off the right hand margin check left hand margin E818 D65A SUB 90 CMP check left margin 581A 8D L RC cursor in window return E818 08 VOM E81C 7D A.L **SU3** 10 E81D D604 E81F C8 ٩Z return if cusor at column 2 E820 1803 ^E825\$ J٦ SCRL E822 7D :30: MOV A.L E823 0664 SUB 100 SCRL: RAR E825 1F ADO Δ, * * E826 C620 HL+ESCSQ+3 LK 5828 2148E8 A.[HL] E828 77 STO A.PIABD E82C 3A52EF LD E82F E61F AND 1Fh 4. . . E831 0620 ADD DEC HL E833 23 E834 77 STO A.[HL] ;escsq+2 = vert. coords E835 2B DEC HL E836 23 DEC HL spoint to start of esc seq E837 0604 LK 8 . 4 :50: PUSH ВC E839 C5

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 38

C:0C031085.45M

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 39 Deborne CP/M 2.2 CBIDS Rev 1.4 C:0CCBID85.45M

E83B E83C	4E CD60E8		LD Call	C.[HL] CRT10	
E83F	E1		POP	HL	
5840	C1		POP	36	
E841	23		INC	HL	
5842	10F5 ^E839\$		DJNZ	: 50	
E844	C 9		RET		
E845	18	ESCSQ:	ЭB	ESC	set screen coord escape sequence
E846	53		DB	• 5 •	,
E847	00		ЭB	0	;≠≠ y coord
E848	00		08	0	troop x **;

```
SORCIM 803x Assembler ver 3.5E <:/55/7= =9:92 Page 40
                                                            C: DCCBID85.ASM
Osborna CP/M 2.2 CBIOS Rev 1.4
                 CRSTAT:
E849
                        Returns status of crt.
                        crt is always ready
                        ргос
5849
                                OFFh
                         OR I
E849 F5FF
                        RET
E848 C9
                 CRTOUT:
E84C
                 : ENTRY C = outout character
                                               :escape flag bit definitions
     = 0008
                 EF_ESC: =
                                8
     = 0001
                 EF_GR: =
                         proc
E84C
E84C 3A60EF
E84F E609
                                A, ESCH
                        LD
                        AND
                                EF_ESC+EF_GR
E851 2000 *E850$
                         JRNZ
                                CRT10
                         VOM
                                A . C
E853 79
E854 FE14
                         CPI
                                14h
                                CRTID
E856 2008 ^E860$
                         JRNZ
                                A. AHSENB
E858 3A68E1
                        LD
                         CMA
E85B 2F
E85C 326851
                        STO
                                A+AHSENS
                        RET
E85F C9
                 CRT10:
E860
                                                  :output to crt
                         LDK
                                E,OCh
E860 1E0C
                                ROMC D1
E862 C317E3
                         JMP
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 41
Osborne CP/M 2.2 CBIOS Rev 1.4
                                                             C:00031085.45M
E865
                  SOSTAT:
                         Sets status of output device attached to serial port
E865
                         ргос
E865 1E20
                         LOK
                                 E,2Dh
E867 1847 ^E830$
                         JR
                                 JMPROM
                                                 Call rom driver
E869
                  SISTAT:
                         Gets status of input device attached to serial port
E869
                         proc
E859 CDB3E8
                         CALL
                                 ACISTAT
E86C E601
                         ANI
                                 SI.RRDY
E86E C8
                         RΖ
                                                 return with not ready status
E86F F6FF
                         OR I
                                 TRUE
E871 C9
                         RET
E372
                 SPINP:
                         Inputs a character from the serial port
E872
                         proc
E872 1E15
                         LDK
                                 E,15h
E874 183A ^E830$
                         JR
                                 JMPR DM
E876
                 SPOUT:
                         Dutouts character in reg c to the serial port (list device)
E876
                         proc
E876 1E0F
                         LDK
                                 E,OFh
E878 1836 ^E830$
                         JR
                                 JMPROM
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 42 Osborne CP/M 2.2 CBIOS Rev 1.4

E87A		PRTCJT:							1 .
		;	routine	does LIST	output	and	prints	r prot	00015
		xov:	=	11h					
	= 0011	XOFF:	=	13h					
	= 0013		=	3					
	= 0003	ETX:	=	5					
	= 0006	ACK:	=						
E87A			proc					*	
E87A	CD76E8		CALL	SPOUT					
E870	3467E1		LD	A. PRNTER					
E880	B7		ORA	Δ					
E881	28		٩Z						
	E602		ANI	2					
E882	2013 *5899\$		JRNZ	XONXOF					
E884	3E0D		LDK	A . DDh					
E886			CMP	С					
E888	39		RNZ	_					
E889	CO		1102						
E88A	0E03		LDK	C.ETX					
E88C	CD7658		CALL	SPOUT					
E88F		PRT10:							
E88F	CD72E8		CALL	SPINP		_		:	ai+
E 8 92	267F		ANI	7Fh		imas	k out	parity	516
E394	FE06		CPI	ACK					
E896	20F7 ^E88F	•	JRNZ	PRT10					
E898	59		RET						
E899		XONX OF:							
E899	CD59E8		CALL	SISTAT					
E89C	B7		A AC	A					
E89D	83		RZ						
E89E	CD72E8		CALL	SPINP					hi+
E8A1	E67F		ANI	7Fh		imas	k out	Darity	016
E8A3	FE13		CPI	XCFF					
E8A5	CO		RNZ						
		DO T 20 -							
E846		PRT20:		SPINP					
E8A6	CD72E8		CALL	7Fh		:mas	k out	parity	pit
E8A9	E67F		ANI			ş -11 (A S	.,. 0.00	• •	
E8AB	FE11		CPI	XON PRT20					
GA83	20F7 ^E8A6	5	JRNZ	PKIZU					
EBAF	C 9		RET						

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 43 Dsborne CP/M 2.2 CBIOS Rev 1.4 C:0CCBID35.4SM

E8BO C317E3 JMPROM: JMP RDMCD1

= E13C ACICTL: = SBAUD

Outputs character in c to the ACIA CTL port.

E833 ACISTAT:

Returns usart status in A

E883 PRDC

E833 1E31 LDK E+81H \$Low order byte of ACISTAT routine in RDM 5Low order byte of ACISTAT routine in RDM

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 44
IDS Rev 1.4 C:000BID35.ASM
Osborne CP/M 2.2 CBIOS Rev 1.4
                  IEINSTAT:
E887
                          Returns status of IEEE input port
                          EXIT
                                 A = 0 character not available
                  ;
                                  A = FFH character available
E887
                          proc
E8B7 1E87
                          LDK
                                  E • 87H
E8B9 18F5 ^E880$
                          JR
                                  JMPROM
                  IEOSTAT:
E3B3
                          Returns status of ISEE output port
                  :
                  ;
                          EXIT A = 0 transmitter not ready
                                  A = FFH transmitter ready
E8BB
                          proc
E888 1E8A
                          LDK
                                  E . 8A4
E8BD 18F1 ^E880$
                          JR
                                  JMPR DM
E8BF
                  IEIN>:
                          Reads a character from IEEE port
                          LDK
                                  F + 8DH
E8BF 1E9D
E8C1 18ED ^E830$
                          JR
                                  JMPROM
E8C3
                 IEDUT:
                          Sutputs the character in reg C to IEEE port
E8C3
                          proc
```

LDK

JR

E8C3 1E90

E8C5 18E9 ^E880\$

E.90H

JMPR DM

```
SURCIM 808x Assembler ver 3.55 <:/55/7= =9:92 Page 45
 Osborne CP/M 2.2 CBIOS Rev 1.4
                                                               C: BCC31385.45M
 E8C7
                  POSTAT:
                          Sets status of the parallel (centronix) printer
                          attached to the leee port
 5807
                          proc
 E8C7 1E96
                          LDK
                                  E • 96H
E8C9 18E5 ^E880$
                          JR
                                  JMPROM
E8C8
                  PISTAT:
                          Gets status of the input device attached to the
                          parallel port
E8CB
                          proc
E8CB 1E93
                          LDK
                                  E+93H
E8CD 18E1 ^E8BO$
                          JR
                                  JMPROM
E8CF
                  PARINE:
                         Inputs a character from parallel port.
E8CF
                          proc
E8CF 1E99
                         LDK
                                 E•99H
E801 1800 ^E830s
                         JR
                                 JMPRDM
E803
                 PAROUT:
                         Dutouts the character in c to the IEEE port treating the
                         port as a parallel port.
E8D3
                         proc
E8D3 1E9C
                         LDK
                                 E,90H
E8D5 18D9 *E8BO$
                         JR
                                 JMPROM
```

SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 46 Dsborne CP/M 2.2 CBIDS Rev 1.4 C:0CCBID85.ASM

E8D7		SW2R3M:		s to rom II registers
E8D7 E8D7 E8D8 E8D9 E8DA E8DC E8DF E8E0 E8E1	F5 AF D3DD 3208EF F1 F8		PROC DI PUSH XRA OUT STO POP SI RET	AF A O A,ROMRAM AF
58E2		SWZRAM:		s to ram es all registers
E 3 E 2 E 8 E 2 E 8 E 3 E 8 E 4 E 8 E 6 E 8 E 8 E 8 E B E 8 E C E 8 E D	F5 3E01 0301 3208EF		PROC DI PUSH LDK OUT STO POP EI RET	AF A,1 1 A,ROMRAM AF

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 47
Jsborne CP/M 2.2 CBIDS Rev 1.4
                                                            C:OCCRAMI5.ASM
     = E8EE
                 xxx:
                                XXX > CC2 + 1E00H
     = 0000
                         IF
                         ERROR SYSTEM SIZE TOO LARGE
                         ENDIF
                         MSG
                              *SYSTEM SPACE AVAILABLE = *.1EDOH - (XXX - CCP)
     *SYSTEM SPACE AVAILABLE = 0012*
E8EE = E900
                        DR G
                                CCP + 1EOOH
                                               jused by occoin4?, # drives * 2
E900 = 0004
                 LASTA: DS
                                2
E904 = 0002
                 DPB:
E906 = 0002
                 SAVDPH: DS
                                2
                 TEMDSK: DS
                                1
E908 = 0001
                 TEMTYP: DS
E909 = 0001
                                1
E90A = 0002
                 SAVADR: DS
                                2
E90C = 0030
                 ALV:
                        DS
                                ALVSZ
                 csv:
                                CSVSZ
E93C = 0020
                        DS
E95C = 0001
                 SEKTYP: DS
                                1
E95D = 0001
                 HSTTYP: DS
                                1
E95E = 0002
                 XLTKEY: DS
     = 5960
                 YYY:
                        Ξ
                         IF
                                YYY > MRAM
     = 0000
                         ERROR
                                CODE HIT BARAM
                         ENDIF
```

OCCRAMZ.ASM

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 48
Monitor RAM Storage.
                                                             C: OCCRAM25.4SM
                         Used to assembly ROM resident and CBIOS
E960 = EA80
                         DRG
                                 MRAM
                         Host disk xfer buffer and...
                         Format track template holding buffer
                 HSTBUF:
FA80
EA80 = 0480
                                 1024+128
                         DS
                         Directory Buffer
     = EE80
                 DIRBUF: =
                                 HSTBUF+1024
EF00 = 0006
                 TEM
                         DS
                                 6
      = EF01
                 RNDV
                                 TEM+1 Frandom number seed
                         =
      = EF02
                 ERCNT
                                 RNDV+1 : DW ERCNT
                         =
      = EF04
                 RTRC
                         =
                                 ERCNT+2 :retry count
      = EF05
                 RTRY
                                 RTRC+1
EF06 = 0001
                                         prompt character
                 MPCHR
                         DS
                                 1
EF07 = 0001
                 ECHOP
                         DS
                                         :=0. list ehco off
                                 1
EF08 = 0001
                                         ;0= RAM. 1= ROM
                 ROMRAM DS
                                 1
EF09 = 0006
                 DSTS3
                         DS
                                         ;Disk status bytes
                                 6
                         Disk operation temps and control
EF0F = 0002
                 DMADR DS
                                 2
                                        :Address for read/write Disk
EF11 = 0002
                 DMAADR DS
                                         ;CBIOS, users DMA
                         Note order of xxxSEC+xxxTRK+xxxDSK must be maintained
                         along with length (1,2,1).
                                        ;Set for seek-restore command in ROM
                                1
EF13 = 0001
                 SEKDEL: DS
                                         idepends on disk type. Siemens = 3h. MPI = Oh
EF14 = 0001
                 SAVSEC DS
                                 1
                                         :last sector requested
EF15 = 0002
                 SAVTRK DS
                                 2
                                         :last track requested
EF17 = 0001
                 SDISK DS
                                 1
                                         ;Selected disk drive (0,1)
                                 DEFDOH :SELECTED TYPE (sector size)
                 SAVTYP =
                                 SAVSEC
     = EF14
                 ACTSEC =
                                 SAVTRK
     = EF15
                 ACTTRK =
     = EF17
                 ACTDSK =
                                 SDISK
EF18 = 0001
                 SEKSEC DS
                                 1
EF19 = 9002
                 SEKTRK DS
                                 2
                 SEKDSK DS
EF1B = 0001
                                 1
EF1C = 0001
                 ASTSEC DS
                                 1
                 HSTTRK DS
EF1D = 0002
                                 2
EF1F = 0001
                 HSTDSK DS
                                 1
EF20 = 0001
                 TEMSEC DS
                                         :Used in bios only
                                 1
EF21 = 0001
                 ROFLAG DS
                                        Read flag
                                1
EF22 = 0001
                 ERFLAG DS
                                        ;Error reporting
                                1
EF23 = 0001
                 WRTYPE DS
                                 1
                                         :Write operation type
                 :ALV:
                         DS
                                 ALVS
                 :CSV:
                         DS
                                 CSVS
EF24 = 000C
                         DS
                                 ALVS
EF30 = 0020
                                 CSVS
                         DS
```

BIOS blocking-deblocking flags

```
SDRCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 49
Monitor RAM Storage.
                                                               C: DCCRAM25.4SM
EF50 = 0001
                  HSTACT: DS
                                  1
                                          thost active flag
EF51 = 0001
                  HSTWRT: DS
                                  1
                                          :Host written flag
EF52 = 0001
                  UNACHT: DS
                                  1
                                          :Unailed red count
EF53 = 0002
                  JNATRK: DS
                                  2
                                          ;Track
EF55 = 0001
                  UNASEC: DS
                                  1
                                          ;Sector
EF56 = 0001
                  LOGSEC: DS
                                  1
                                          ;Logical sector
EF57 = 0002
                  LDADR OS
                                  2
'EF59 = 0001
                  KEYLOK DS
                                 1
                                          ¿Zero if locked keyboard
EF54 = 0002
                  CURS
                                  2
                                          current cursor position
                          Keyboard scan temporaries
EF5C = 0001
                  TKEY
                          DS
                                 1
                                          :Tem holding key
EF5D = 0001
                  HKCNT
                          DS
                                          Debounce key
EF5E = 0001
                  LKEY
                                          ;Last valid keystroke
                          DS
EF5F = 0001
                  CKEY
                          DS
                                          :Last control key
                                 1
EF60 = 0001
                  ESCH
                          DS
                                          SESC holding flag
                                 1
                  :PIAAD and PIABD must be kept sequential, PIAAD first
                  ;dependency in VC_HOME of 3MKEY.asm
EF61 = 0001
                  PIAAD: DS
                                1
                                         Holds last PIA-A data
EF62 = 0001
                  PIABD: DS
                                 1
                                         Holds last PIA-3 data
                          Calendar month, day year
EF63 = 0003
                  IDAY
                          ÐS
                                 3
      = EF64
                  = HTMCMI
                                  IDAY+1
      = EF65
                  IYR
                                  IDAY+2
                  ;
                          Wall clock time cells and disk active
                  ;
                          see UPTIM: in BMKEY.asm
EF66 = 0006
                  HOURS: DS
                                 6
      = EF67
                  MINS:
                                  HDURS+1
      = EF58
                  SECS:
                                  HOURS+2
      = EF69
                  SEC6:
                                  HOURS+3
                  ;
                          Used to deselect drive when there is NO activity
                  :
                          on drive for n seconds. See FDSK routine
      = EF6A
                 DACTVE: =
                                 HOURS+4 ;=0 by FDSK. Used by UPTIM
      = EF6B
                 BELCNT: =
                                 HDURS+5 ; ^G bell timer cell
EF6C = 3031
                 LLIMIT DS
                                         :max #columns in a logical line
                 ;
                          MSG
                                 "LLIMIT = ", LLIMIT, "h."
                          Disk drive current positions
EF5D = 0002
                 LDSEL: DS
                                 2
                                         :Last selected drive
      = FF5E
                 LDTRK
                                 LDSEL+1 ;Last track used for non-selected drive
                         =
EF6F = 0002
                 IESTK: DS
                                 2
                                         save current stk otr
                         Interrupt stack
EF71 = 0028
                         DS
                                 20#2
EF99 = 0000
                 ISTK:
                         26
                                 0
                         Stack entry
FF99 = 0028
                         DS
                                 20#2
EFC1
                 BIDSTK:
```

À.,

```
SORCIM 808x Assembler ver 3.55 <:/55/7= =9:92 Page 50
                                                              C:OCCRAM25.4SM
Monitor RAM Storage.
                 ROMSTK: DS
EFC1 = 0000
                                         ; last command byte written to ACIA
                 ACIAD: DS
EFC1 = 0001
                 R179x: DS
                                         :179x register save area
EFC2 = 0004
                                         ;keyboard debounce-delay cell
                 KBOLY: OS
EFC6 = 0001
                 isince CP/M CANNOT boot off 8:, this cell is used
                 ;to invert the names of the 2 drives:
                         =0. all normal. A=A:. 8=B:
                         =1. all inverted. A=B:. B=A:
EFC7 = 0001
                 DSKSWP DS
                         ALIGN 10h
                                 (#+(10H)-1)/(10H)#(10H)-#
EFC8 += 0008
                         20
                 SEQ:
                                 ∻-4
     = EFCC
                 ACTTYP:
EFD0
                 SAVTYP: DS
EFD0 = 0001
                                 1
                 RDT_WRTS: DS
EFD1 = 0001
                                 1
                 CCPADR: DS
                                 2
EFD2 = 0002
                 KEYLST: DS
EFD4 = 0006
                                 6
                 SERFLG: DS
                                 1
EFDA = 0001
                 IE_ADR: DS
                                 1
EFDB = 0001
                 IE_CHAR: DS
EFDC = 0001
                 PIACTL: DS
                                 1
EFDD = 0001
EFDE = 0001
                 PP.MODE: DS
                                 1
                         8080 Register Save Area.
                         ALIGN 10h
EFDF
                                 (*+(10H)-1)/(10H)*(10H)-*
                         26
EFDF += 0001
                 REGS:
EFEO
                                         :E Register save location
                 ESAVE: DS
EFE0 = 0001
                                         :D Register save location
EFE1 = 0001
                 SAVE: DS
                                         ;C Register save location
EFE2 = 0001
                 CSAVE: DS
                                         :B Register save location
                 BSAVE: DS
EFE3 = 0001
                                         FLAGS save location
                                 1
EFE4 = 0001
                 FSAVE: DS
                                         : A Register save location
EFE5 = 0001
                 ASAVE: DS
                                 1
                                         :L Register save location
                 LSAVE: DS
                                 1
EFE6 = 0001
                                         ;H Register save location
                 ASAVE: DS
                                 1
EFE7 = 0001
                                         :PGM COUNTER save location
                 PSAVE: DS
                                 2
EFE8 = 0002
                                         :USER STACK pointer save location
                 SSAVE: DS
EFEA = 0002
                                         :last breakpoint address
                 BKPA:
                         2.5
EFEC = 0002
                                         :Contents of bkp
                  BKPC:
EFEE = 0001
                                         ;LAST VERTICAL OFFSET TAKEN FROM COUT
                  VRTOFF DS
FFEF = 0001
                          Interrupt Jump Vector is between EFFB. EFFF.
                                MRAM
                          Endx
```

```
SORCIM 808x Assembler ver 3.58 <:/55/7= =9:92 Page 51
 Osborne CP/M 2.2 CBIOS Rev 1.4
 s afreq of 40
  n ACIAD EFC1
                    50# 3
    ACICTL E13C
                     4/49
                            43# 7
    ACISTA E883
                     4/50
                            41/16
                                    43#13
    ACK 0006
                    42# 8
                            42/27
    ACMD E19C
                     5#49
                            22/20
   ACTOSK EF17
                    27/ 7
                            28/12
                                    48#39
    ACTSEC EF14
                    27/13
                            28/16
                                    29/17
                                            48#37
    ACTTRK EF15
                    27/10
                            28/14
                                    48#38
   ACTTYP EFOO
                    27/15
                            28/13
                                    50#18
    AHSCRL E7F6
                            38# 2
                    37/12
    AHSENB E168
                    5#18
                            38/ 6
                                    40/25
                                            40/28
s ALIGN mac
                    50/15
                            50/35
    ALV
           E90C
                    7/12
                             7/24
                                    47#23
S ALVS
          0000
                    48/57
    ALVSZ
          0030
                    3#13
                             7/12
                                     7/15
                                             7#15
                                                     7/24
                                                             7/27
                                                                      7#27
                    47/23
 n ASAVE EFES
                   50#42
 n BASVLO DOBO
                   37# 8
   BCCP
          E521
                    21/45
                           21#56
 n BCPM
          E519
                   21#51
   BDDS
          D306
                    2# 4
                           22/15
 n BELCNT EF6B
                   49#41
   BIOS
        E100
                    2# 3
                            2/ 7
                                     4/ 9
                                             5/20
                                                   22/13
   BIOSTK EFC1
                   11/31
                           49#60
 n BKPA
         EFEC
                   50#48
 n BKPC
          EFEE
                   50#49
   BRATE E159
                    5#20
                           21/31
 n BSAVE EFE3
                   50#40
   CAUTO E19D
                    5#53
                             5/55
                                    22/18
   CAUTOL 2027
                    5/53
                            5#55
   CBOOT E4ED
                    4/11
                           21#23
   CCP
          0083
                    2# 2
                            2/ 3
                                    2/ 4
                                            21/24
                                                   21/48 22/28
                                                                   22/54
                   47/ 3
                           47/ 8
                                   47/13
 n CCPADR EFD2
                   50#21
s CDISK 0004
                   14/17
                           14/20
                                   21/42 22/56
   CHKSEL E3FA
                   13/29
                           15# 2
   CHKSEQ E408
                   15/18
                           15#22
 n CKEY EF5F
CNST E741
                   49#17
                   35/5
                           36# 2
   CNST5 ETAC
                   36/19
                           36#27
   CNTRLO E145
                    5/26
                            5#56
   CNTRL1 E1A6
                    5/27
                            6# 2
   CNTRL2 5147
                    5/28
                            6# 3
   CNTRL3 E1A8
                    5/29
                            6# 4
   CNTRL4 E1A9
                    5/30
                            6# 5
   CNTRL5 E1AA
                    5/31
                            6# 6
   CNTRL5 E1AB
                    5/32
                            6# 7
   CNTRL7 E1AC
                    5/33
                            6# 8
   CNTRL8 E1AD
                    5/34
                            6# 9
   CNTRL9 E14E
                    5/35
                            6#10
  CONIN E733
                           32#16
                    4/14
  CONDUT E738
                    4/15
                           31/5
                                   32#26
  CONST E72E
                    4/13
                           32# 6
  COUNT E701
                   35/17
                           37/13
                                   37#20
                                           37/50
s CR
          0000
                   14/24
                           14/29
                                   22/39
                                           22/42
                                                   22/42
  CRSTAT E849
                   35/25
                           40# 2
  CRT10 E860
                   39/ 2
                          40/22
                                   40/25
                                           40#31
  CRIOUT E840
                   35/19
                          35/31
                                   40#13
n CSAVE EFE2
                   50#39
```

7			SORCIM CBIOS Rev		Assembler	ver	3.5E	<:/55/7	7= =9:92 C:00	Page 52 RAM25.45M
JSC	orne Cr									
s	CSV CSVS	593C 0020	7/11 48/58	7/23	47#24					
•	CSVSZ	0020	3#14	7/11	7/14	7#1	4	7/23	7/26	7#26
	CUNACT	F4C9	47/24 19#22	20/12	2					
	CURS	EF5A	38/10	49#11						
	DIDSM	0039	2#28	7/19	7/27	9/1	11			
n	DACTVE	EF6A	49#39							
3	DBUF	0080	21/60	7.11	8/4	3#1				
	DOXLTS		7/ 7 2#25	7/19		37.				
	DEC DECDSM	0008	2#31	9/4						
	DECXLT		8/8	8#28						
	DENERR		14/ 7	14#2						
	DENL	0025	14/23	14#26						
	DIRBUF		7/ 9	7/2	1 48#11					
n	DIROM	2021	2#45	22/1	33/30	33/	4.1	34# 2		
	POGETC	2768 2080	32/39	33/1	9 55/55	,,,,	· ·	J 1 - L		
S	DMA DMAADR		19/54	26/3	7 48#26					
	DMADR	EFOF	22/ 3	43#2	5					
	DONE	E59A	22/22	22/2						
	CANCO	E 5 A 5	22/47	22#5						
	DONEI	5548	22/34	22#5 6#1						
	POWN	E181 E934	5/38 15/40	16/6						
	DPB DPBASE		7# 4	13/2						
	DPB01	E29E	7/10	7/2						
ก	DPBDEC		9#42					0.135	9/44	
	DPBSEN	nac	3#48	9/	8 9/17	9/	26	9/35	4/44	
	DaBIBA		9#33							
n	52851	EZAE	9#15 9# 4	9/5	6 15/27					
_	DPBST4	E28E	9#24	,,,						
	DPBXTR		9#51							
٠.	DPHSEN		3#17	7/						
	DRV	E307	14/11	14#2						
	DRV1	E3F9	14/12	14#3	O					
n	DSAVE	EFE1	50#38 2#22	9/	3					
	DSKD1 DSKS1	2025	2#21	9/1						
0	DSKSWP		50#12							
	DSPCH1		34#13	34/1	2					
	DSTSB	EF09	48#22							
n	ECHOP	EF07	48#20	40/2	1					
	EFESC	0008 0001	40#15 40#17	40/2						
_	EFGR ENROM	0000	2#44	.0, .	•					
•	EDT3L	E133	5/40	6#1	5					
	ERCNT	EF02	48#16	48/1				22427	30/ 6	43#51
	ERFLAS		23/18	25/1	4 25/21	29/	24	29/27	537 5	T5#J1
	ESAVE	EFE0	50#37							
5	ESC	0013 EF50	39/ 9 22/ 7	40/2	0 49#13					
	ESCSQ	E845	38/48	39#						
	ETX	2023	42# 7	42/2						
s	FALSE	2000								
s	FCB	005C			. 2.11.3					
	FILL	E644	23/13	25/						
	FILL2	E65A	26#26	26/3	•					

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 53
                                                               C:OCCRAM25.ASM
Osborne CP/M 2.2 CBIOS Rev 1.4
                           26#31
                   26/28
   FILL3 E65F
                   25/24
                           26#36
   FILL35 E665
                   26#55
                           26/60
   FILL4 E638
                                   27# 3
   FILL5 E691
                   26/50
                           26/57
                   25/46
                           27# 5
   FILL6 E694
                   27/22
                           29# 2
   FINAL E6E3
                                   27/ 3
                                           28# 2
                   12/8
                           25/20
   FLUSH E6C1
 n FMTJ E139
                    4#32
                                   14/31
   FORERR E308
                           14#28
                   14/ 4
                           14#31
   FORL 0021
                   14/23
                                                    2/31
                            2/28
                                    2/29
                                            2/30
   FPYDIB 0008
                    2#15
                    2#14
                            2/27
   FPYSI3 0010
                   50#41
 n FSAVE EFE4
S FWAVM FOOO
                   15/41
                           15# 2
   GDEN 5431
   GETDEN E490
                   15/13
                           18# 2
                                   32#36
                   32/11
                           32/21
   GDDISP E738
                   11/36
                           11#50
   GOROM E33A
                                   15#44
   GRET E42C
                   15/34
                           15/39
s H.IEEE 2900
s H.SID 2400
                   49#15
 n HKCNT EF5D
                                   21/49
                    4/19
                           12# 2
   HOME E33F
                                                           49/41
                                           49/35
                                                   49/39
                           49/33
                                   49/34
                   49#32
   HOURS EF66
                   50#44
 n HSAVE EFET
                                           48#61
                                   26/42
                   12/10
                           23/23
   HSTACT EF50
                                           48/11
                                   43# 7
                   22/ 2
                           26/21
   HSTBUF EA30
   HSTOSK EF1F
                   27/ 5
                           28/11
                                   48#47
                                           48#45
                   26/51
                           27/12
                                   28/15
   HSTSEC EFIC
                    2#13
 n HSTSIZ 0400
                                    48#46
                           28/13
   HSTTRK EF1D
                   27/ 9
                                   28/17
                                            47#27
                           27/15
                   26/47
   HSTTYP E950
                           28/ 6
                                    49# 2
                   25/13
   HSTWRT EF51
                            9/35
   134
          0008
                    2#24
                            9/38
   IBMDS4 DO9C
                    2#30
                    8/ 7
                            8#26
   IBMXLT DODO
                   49#25
                            49/27
                                    49/28
   IDAY EF53
                   21/39
   IEADR EFOB
                           50#25
                    4#36
 n IEB1C E13F
                     4#37
 n IEB2C E142
 n IEB3C E145
                     4#38
 n IEB4C E148
                     4#39
  n IEB5C E14B
                     4#40
                     4#41
  n IEB6C E14E
  n IE87C E151
                     4#42
                    4#43
  n IE38C E154
                    50#26
  n IECHAR EFDC
    IEEEAD E189
                    5#42
                            21/33
                            44#28
    IEINP E83F
                    35/15
    IEINST E887
                    35/ 8
                            44# 2
    IEOSTA E888
                    35/28
                            44#15
   IEDUT E8C3
IESTK EF5F
                                    44#37
                    35/22
                            35/34
                    13/14
                            49#51
                    49#27
  n IMONTH EF64
                            21/28
                    5#11
    IDBITE E166
                            34/ 8
                    21/29
 s 133YTE 3003
                    49#56
  n ISTK EF99
         EF 55
                    49#28
  n IYR
                                                            44/10
                                                                    44/23
                                            43# 2
                                                    43/18
                                    41/40
    JMPROM E830
                    41/ 7
                            41/30
                                           45/19
                                                    45/29
                                                            45/40
                    44/32
                            44/42
                                    45/ 3
```

```
SORCIM 808x Assembler ver 3.5E <:/55/7= =9:92 Page 54
Osporne CP/M 2.2 CBIBS Rev 1.4
                                                              C:DCCRAM25.4SM
 n KBDLY EFC6
                   50# 5
   KEYINP ETAF
                          37# 2
                   35/12
 n KEYLCK EF59
                   49#10
 n KEYLST EF34
                  50#22
   KINO =731
                          37/51
                  37#12
   KIN10 E706
                  37/15
                          37#27
   KRET E703
                          37/35
                  37#24
                                  37/37
   LASTA E900
                  15/15
                          47#15
 n LDADR EF57
                  49# 9
  LDSEL EF5D
                  49#48
                          49/49
 n LOTRK EF6E
                  49#49
  LEFT
          E132
                   5/39
                           6#14
s LF
          ACOC
                  14/24
                          14/29
                                  22/39
                                          22/42 22/42
  LIST
        E73F
                   4/15
                          31/14
                                  32#40
  LIST1 E74E
                  33/ 8
                          33#17
   LISTST E753
                   4/25
                          33#45
  LKEY EF5E
                  35/23
                          49#16
   LLIMIT BESC
                  21/35
                          49#44
  LOGSEC EF56
                  23/14
                          24/30
                                  49# 5
 n LSAVE EFE6
                  50#43
s LVMEM 1000
S LWAMEM FEEF
                   2/ 9
 n MINS EF 57
                  49#33
n MPCHR EFD6
                  48#19
S MRAM EA80
                  47/37
                          48/ 3
  MSIZE 0038
                   1#50
                          22/40
                                  22/40
  MVINED E706
                  23/10
                          24/15
                                  30# 2
  NOSK 0002
                   3#11
                          7/ 6
                                  7# 6
                                           7/13
                                                  7#18 13/14
  NEXT E728
                  31/45
                          31#49
  NEXTS E710
                  31#37
                          31/53
  NOFOD 0002
                   3#12
                          7/13
                                   7#13
                                           7/25
                                                  7#25
  NUMBER 3006
                   9#56
                          16/26
s NVDL 0018
  PARINE ESCE
                  35/14
                          45#24
  PAROUT E803
                  35/21
                          35/33
                                  45#34
  PIAAD EF51
                  33/13
                          38/27
                                 49#22
  PIA3D EF52
                  38/50
                          49#23
n PIACTL EFOD
                  50#28
n PINIT E13B
                   5#46
  PINTES E18A
                         33/ 5
                   5#44
  PISTAT EBC3
                  35/ 7
                         45#13
  POSTAT EBC7
                  35/27
                         45# 2
n PP.MOD EFDE
                  50#29
  PRINT E711
                  14/13
                         22/50
                                 31# 2
  PRNTER E167
                  5#14
                         42/12
  PRT10 E83F
                  42#24
                         42/28
  PRT20 =846
                  42#43
                         42/44
  PRIDUT ESTA
                 35/32
                         42# 2
n PSAVE EFE8
                  50#45
  PSTR E716
                 31#11
  PTRCIN E781
                 32/20
                        35#11
  PTROOU E739
                 32/31 35#18
  PTROST E779
                 32/10
                        35# 4
  PTRLIS E799
                 33/18
                        35#30
  PTRLST 8791
                 33/57
                        35#24
  PTRPNC E789
                 33/29
                        35#17
  PTRRDR E781
                 33/40
                         35#10
  PUNCH E755
                  4/17
                         33#24
n R179X EFC2
                 50# 5
  RDFLAS EF21
                 25/14
                        27/17
                                 48#50
```

Os	borne S	P/M 2.2	SORCIM CBIDS Rev		Assembler	ver	3.5E <:/		9:92 Page 55 D:000RAM25.ASM
n	RDTWRT	EFD1	50#20						
	READ	E581	4/24	22#59	,				
	READER		4/18	33#35	5				
n	REGS	EFEO	50#36						
	RETURY		15/42	15#46					
	RHC RIGHT	E80D E130	38/17 5/37	38#24 5#12					
	RNDV	EF01	48#15	48/16					
	ROMCDI		11#15	37/29		43/	2		
	ROMEDE		4/32	4/33		4/3		4/39	4/40
			4/41	4/42	4/43	4/4		4/47	11# 2
	ROMJMP		4/31	11#18		21/5		3	
	ROMRAM		10/5	46/11		48#2	1		
_	ROMRI ROMSTK	E2FE	4/30	10# 2					
, rı	ROMVEC		49#61 11/16	21/51	29/13				
	RRI	E133	4#30	(1/)1	27713				
	RTRC	EF04	48#17	48/18	1				
n	RTRY	EF05	48#18						
	SIDSM		2#27	9/20					
	SAVADR		29/15	29/20					
	SAVDPH		13/26	13/45		47#1	7		
	SAVSEC		48#32 48#33	48/37					
	SAVTYP		18/25	18/37		50#19	5		
	SBAUD		4#33	21/33		2071	,		
	SCRL	E825	38/22	38/41					
	SCRSZE		5#22	21/35					
	SDISK	EF17	18/23	18/29	18/35	48#34	48/39		
	SEC 6	EF69	49#35						
n	SECS	EF58	49#34						
_	SECTRN		4/27	19#56					
13	SEKDSK		48#30 13/16	14/ 9	18/28	24/42	2 26/53	27/ 5	48#43
	SEKSEC		26/22	26/36		26/53			
	SEKTRK		12/12	12/13		24/28			
	SEKTYP	E95C	13/39	24/21	26/16	25/48	3 27/14	47#26	
	SELD	E344		14#15					
	SELD1	E4BA	16/14	17#14					
	SELDS SELDSK	E48D		17#17 13# 2					
	SELER	E38C		14# 4					
	SELER1			14# 9					
	SENDEN			18/31					
	SEQ	EFCC	13/41	15/24	50#17				
n	SERFLG		50#24						
	SETDMA			19#45	21/61				
	SETSEC SETTRK			19#32					
5	SI-120		4/21 5/20	19# 2					
5	SI-RRD		41/17						
5	\$1.\$16								
s	\$1.564								
	SIGNL	0038		22#43					
	SIGNON			22/43	22/49				
	SISTAT			41#12	42/32				
	SOSTAT			41# 2	42425	(2/2-	,		
	SPIN? SPOUT	E872 E876		41#25 41#35	42/25 42/11	42/35 42/22			
n	SSAVE	EFEA	50#46	74733	72/11	46166			
•••									

					Assembler	ver 3,5E	<:/55/	7= =9:92 Page 5	
)s	borne CP/M	2.2 CB1	IJS Rev	1.4				C:DCCRA425.AS	4
	STROUT ET	19 3	31/5	31#20					
S	SVER DO	DE							
	SWZRAM E8	52 1	1/37	21/26	46#19				
	SW2RDM E8	107 1	11/35	46# 2					
5	SYS 00	05							
s	SYSDAT DO	10							
s	SYSL DO	06							
		00 4	43#14	48/15					
	TEMDSK E9		18/24	18/34	47#18				
	TEMSES EF		19/39	30/ 7	48#49				
	TEMTYP E9		18/26	18/40	47#19				
_	*		49#14	10, 10					
			20#22						
s		FF	5/18	41/19					
3					22/12	24/27	34134	49# 3	
	UNACHT EF		L2/11 20/10	19/26 24/54	23/12 25/ 3	49# 5	24/34	49# 3	
	UNATRK EF		19/9	24/29	24/58	24/60	49# 4		
					24/ 30	24700	47# 4		
		AF	5/36	6#11	22441				
			1#33	22/41	22/41				
			38/19	38/28					
s		34							
n	VRTOFF EF		50#51						
		13	4/12	21#47					
n		000	2#35						
		71	2#35	25/19			•		
			24/24	24#27					
			24/20	24#34					
	WRIT25 E6		24#46	24/47					
			24/32	24/57	25# 3				
			24/37	25# 6					
	WRITE ES	CE	4/25	24# 2					
	WRTYPE EF	23 2	24/18	25/18	48#52				
	WRUAL DO	32	2#37	24/19					
	XERDX 00	01	2#23	9/26					
	XLTBL E1	58	5#25	37/41					
	XLTKEY E9	5E 3	37/17	37/47	47#29				
	XLTS E2	20	8/ 5	8#13					
	XOFF 00	13 4	42# 6	42/37					
			42# 5	42/43					
	XONXOF E8		+2/16	42#31					
		20	8# 2	16/29					
	XTRXLT E2		8/ 9	8#32				•	
		53	2#29	9/29					
			7# 2	47/ 3	47/8				
	XXXLTS E2		8/ 6	8#18					
			¥7#36	47/37					
		'		1					